# Wired / Wireless Internet Fiber Router

# FRT-401 / FRT-401S15 / FRT-405

# FRT-401N / FRT-401NS15 / FRT-405N

Quick Installation Guide

# **Table of Contents**

1.	Package Contents	3
2.	Overview	4
3.	Hardware Installation	8
4.	Access Your Fiber Router	11
5.	Further Information	12

# 1. Package Contents

- FRT-40x / FRT-40xN Series Unit x 1
- Power Adapter x 1
- User's Manual CD x 1
- Quick Installation Guide x 1
- Antennas x 2 (For wireless models)

If any of above items are damaged or missing, please contact your dealer immediately.

# 2. Overview

## FRT-401 / FRT-401S15 / FRT-405

## Front Panel

PLANET			LAN		Internet Fiber Router
FRT-401	PWR •	WAN LNK/ACT ●	$1 2 3$ $\bullet \bullet \bullet$	4 • LNK/ACT	
	EDT	. 401 / EDT	101015		
	FRI	-401/ FRI	401315		
PLANET			LAN		Internet Fiber Router
FRT-405	PWR •	WAN LNK/ACT ●	1 2 3 ● ● ●	4 ● LNK/ACT	

FRT-405

## Front Panel LED definition

LED	State	Description
PWR	ON	When the router is powered on, and in ready state.
	OFF	When the router is powered off.
	Flashing	Data is being transmitted or received via the fiber connection.
WAN	ON	The optical fiber connection connected successfully.
LAN1-4	Flashing	Data is being transmitted or received via the corresponding LAN port.
	ON	The port is up.

### **Rear Panel**



#### FRT-401 / FRT-401S15



FRT-405

### **Rear Panel Port and Button Definition**

Connector	Description	
12V DC	Power connector with 12V DC, 1.0A	
RESET	Press more than 3 seconds for reset to factory default setting.	
LAN (1-4)	Router is successfully connected to a device through the corresponding port (1, 2, 3, or 4). If the LED light of LNK/ACT is flashing, the Router is actively sending or receiving data over that port.	
WAN One Fiber-optic Interface, SC or SFP connector-		

## FRT-401N / FRT-401NS15 / FRT-405N

### Front Panel



FRT-405N

### Front Panel LED definition

LED	State	Description
PWR	ON	When the router is powered on, and in ready state
	OFF	When the router is powered off
	ON	WPS client registration is successful
WDS	Flashing	WPS client registration window is currently open
WFS	OFF	WPS is not available, or WPS is not enabled or initialized
	ON	WLAN radio is on
WLAN	Flashing	Data is being transmitted through WLAN
	OFF	WLAN radio is off
Convitu	ON	Enable WLAN encryption
Security	OFF	Disable WLAN encryption
	Flashing	Data is being transmitted or received via the fiber connection
WAN	ON	The optical fiber connection connected successfully

LAN1-4	Flashing	Data is being transmitted or received via the corresponding LAN port
	ON	The port is up

## **Rear Panel**



#### FRT-401N / FRT-401NS15



#### FRT-405N

## **Rear Panel Port and Button Definition**

Connector	Description		
12V DC Power connector with 12V DC, 1.0A.			
RESET	Press more than 3 seconds for reset to factory default setting.		
LAN (1-4)	Router is successfully connected to a device through the corresponding port (1, 2, 3, or 4). If the LED light of LNK/ACT is flashing, the Router is actively sending or receiving data over that port.		
WPS	WPS on or off switch.		
WAN	One Fiber-optic Interface, SC or SFP connector-type.		

## 3. Hardware Installation

This section describes how to install your Internet Fiber Router and make connections to the Fiber Network. Please read the following topics and perform the procedures in the order being presented. The hardware installation of PLANET Fiber Router do not need software configuration. To install your Fiber Router on a desktop or shelf, simply complete the following steps.

In the following steps, terms of Fiber Router will mean the two series - FRT-40x / FRT-40xN unless model number is specified; and photo of FRT-401N will be used as the photo example.

**STEP 1:** Locat the FRT-401N on an optimum place, install and adjust the antenna for the best coverage.



**STEP 2:** Connect the Power Adapter to Fiber Router. Check the PWR LED on the front panel is on accordingly.



**STEP 3:** Connect the PC to LAN port. Check the LAN LED on the front panel is on accordingly.



Connect the Fiber-optic cable to WAN port. Check the WAN LED on the front panel is on accordingly.

The Fiber types of PLANET Wired / Wireless Fiber Router as the following:

- FRT-401 / FRT-401N: 100Base-FX (SC, MM, 2Km)
- FRT-401S15 / FRT-401NS15: 100Base-FX (SC, SM, 15Km)
- FRT-405 / FRT-405N: 100Base-FX SFP (LC, MM/SM)



FRT-401 / FRT-401N / FRT-401S15 / FRT-401NS15



# 4. Access Your Fiber Router

Now that the physical connection between your PC and Fiber Router has been established, you must login in order to access Web Management. The Fiber Router supports Web-based configuration. From this chapter, we will describe how to access Web Management of PLANET FRT-40x Series.

### **First Time Login**

Launch a web browser (for example: IE, Firefox etc.) and type the IP address in the address bar. The default address is "http://192.168.1.1".

Type in an authorized username and password and then click the button "Apply". The default username is "admin", and its password is "admin" all in lower case.

PLANET		Internet Fiber Rou	ner
Fiber Router > Operation Mode Internet Settings	Router Status		
<ul> <li>Wireless Settings</li> <li>Firewall</li> </ul>	System Info		
Fiber/OAM Setting	Firmware Version	Beta100319	
<ul> <li>Administration</li> </ul>	System Up Time	0 day, 20 hour, 17 min, 36 sec	
	Operation Mode	Gateway Mode	
	Internet Configurations		
	Connected Type	STATIC	
	WAN IP Address	210.66.155.74	
	Subnet Mask	255.255.255.224	
	Default Gateway	210.66.155.94	
	Primary Domain Name Server	61.64.127.1	
	Secondary Domain Name Server	168.95.1.1	
	MAC Address	00:30:4F:11:22:37	
	Local Network		
	Local IP Address	192.168.1.1	
	Local Netmask	255.255.255.0	
	MAC Address	00:30:4F:11:22:30	

# 5. Further Information

For further detail configurations and information of Operation Mode, WAN, LAN, Firewall, Fiber/OAM, Wireless can be found in the user's manual CD. If you have other questions, please contact the local dealer where you purchasing this product.