

## ► Contents

DVR-462

CD Disk

I/O Cable

Battery x 2

Remote Controller

Power Adapter

Quick Installation Guide

SATA cable

HDD Screw x 4


## ► Hard Disk Installation

**Note:** Before HDD installation, please make sure there is no pre-configured partition in this HDD.  
If yes, please delete all the partition before install.


### STEP 1: Remove the 3 screws from DVR-462



### STEP 2: Follow the direction to remove the upper case

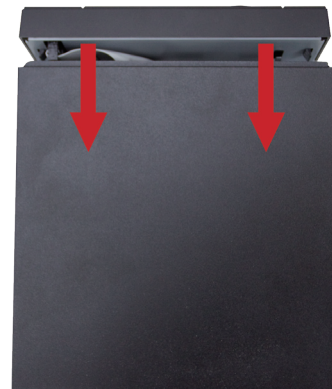


### STEP 3: Place the HDD on the HDD plate of the removed case and connect the power and the SATA cable

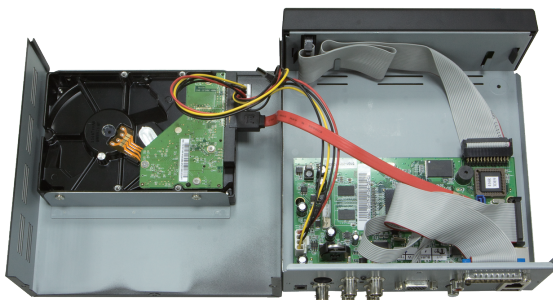

### STEP 4: Put back the upper case and tight the three screws



## ► Hardware Connection

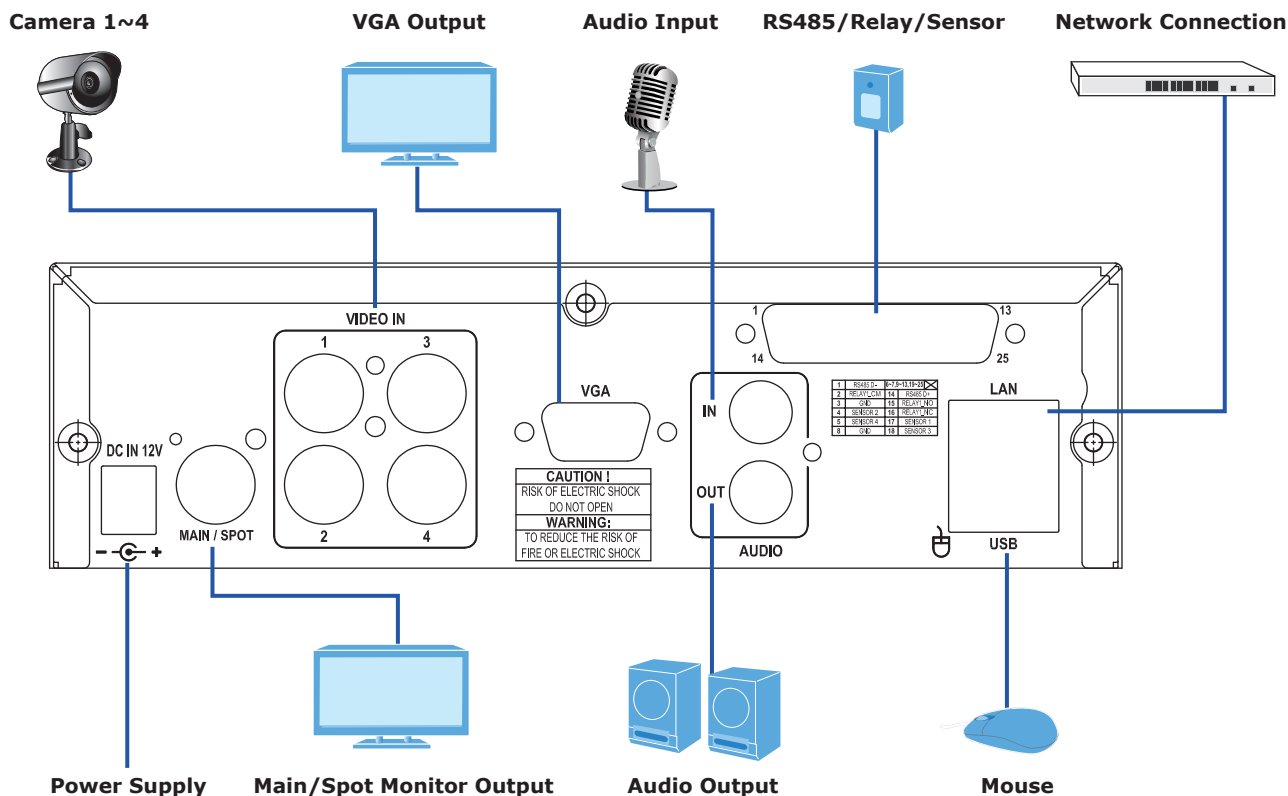

Please follow the sequence from 1 to 9 to connect the equipments to DVR-462.

Item	Description
1	DC 12V Socket for a DC 12V power input.
2	MAIN / SPOT MONITOR BNC port for the main monitor connected and display full screen image of all installed cameras in sequence.
3	VIDEO IN BNC input ports for cameras, 4 in total.
4	VGA Connect your PC monitor to this connector. If the MAIN port is connected, VGA port will lost function. You have to choose the VGA or MAIN for monitoring.
5	AUDIO IN RCA input port for an audio signal.
6	AUDIO OUT RCA output port for an audio signal.
7	EXTERNAL I/O EXTERNAL I/O port.
8	LAN Network port. Connect to your switch or PC directly.
9	USB Connect your USB mouse to control this DVR.

For detailed information about DVR-462, please refer to the User's Manual in the CD disk.