

► Contents

DVR-872 / DVR-1672

Battery x 2

Quick Installation Guide

Power adapter

CD Disk

Remote control

SATA cable x 2


HDD rack x 6

Screw kit x 1


► Hard Disk Installation

Note: Before hardware HDD installation, please make sure there is no pre-configured partition in this HDD.
If yes, please delete all the partition before install.

STEP 1: Remove the upper case

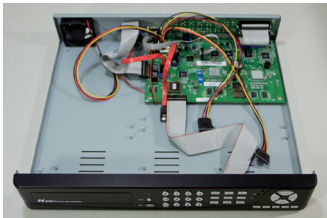


STEP 3: Insert the SATA and power cable onto the SATA HDD

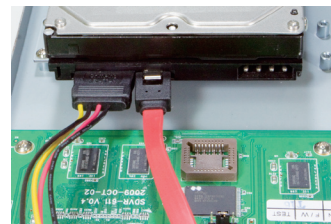

STEP 2: Lock the HDD holder symmetrically onto both sides of the HDD

2-1

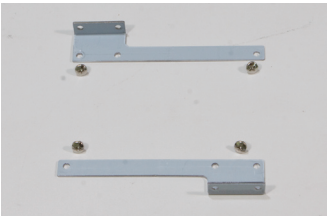

2-2



2-3



Lock the screw

STEP 4: Place the HDD on the HDD plate




STEP 5: Make sure that the HDD has been installed properly.



STEP 6: The installation has completed

DVR-1672

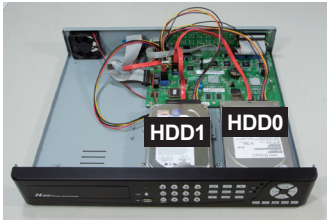


DVR-872



► Hardware Connection

16-CH - DVR-1672

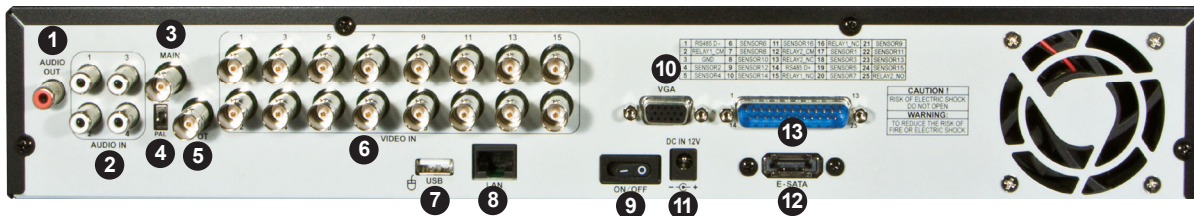

8-CH - DVR-872



| Item | Description |
|------|---|
| 1 | AUDIO OUT RCA output port for an audio signal. |
| 2 | AUDIO IN RCA input port for an audio signal. |
| 3 | MAIN MONITOR BNC port for the main monitor. (available only to DVR-1672) |
| 4 | NTSC/PAL SWITCH Switch between NTSC and PAL format. (available only to DVR-1672) |
| 5 | SPOT MONITOR BNC port to display full screen image of all installed cameras in sequence. |
| 6 | VIDEO IN BNC input ports for cameras, 8/16 in totals. |
| 7 | USB For mouse connection. |
| 8 | LAN Network port. |
| 9 | ON/OFF Power switch. (available only to DVR-1672) |
| 10 | VGA Output port for the VGA monitor. |
| 11 | DC 12V Socket for a DC 12V input. |
| 12 | E-SATA External SATA interface. (available only to DVR-1672) |
| 13 | EXTERNAL I/O EXTERNAL I/O port. For more information, please refer to the user manual. |

Note: For more detailed information, please refer to the User's Manual in the CD disk.