


User's Manual

ICA-HM351

**2 Mega-Pixel 35M IR Outdoor
Box PoE IP Camera**

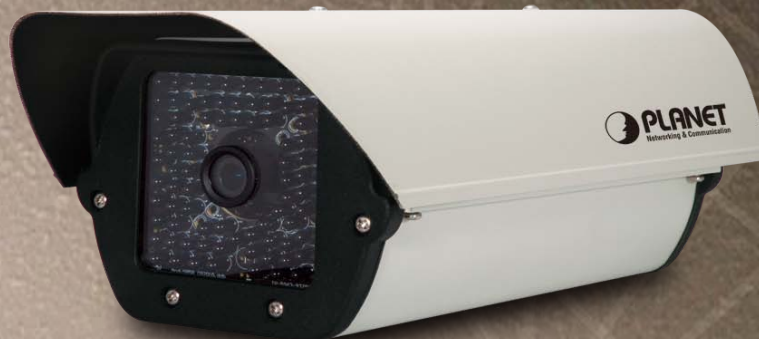

Copyright

Copyright © 2011 by PLANET Technology Corp. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of PLANET.

PLANET makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Any software described in this manual is sold or licensed "as is". Should the programs prove defective following their purchase, the buyer (and not PLANET, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software. Further, PLANET reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.

All brand and product names mentioned in this manual are trademarks and/or registered trademarks of their respective holders.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio technician for help.

FCC Caution

To assure continued compliance. (example-use only shielded interface cables when connecting to computer or peripheral devices). Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the Following two conditions: (1) This device may not cause harmful interference, and (2) this Device must accept any interference received, including interference that may cause undesired operation.

Federal Communication Commission (FCC) Radiation Exposure Statement

This equipment complies with FCC radiation exposure set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 20 cm (8 inches) during normal operation.

Safety

This equipment is designed with the utmost care for the safety of those who install and use it. However, special attention must be paid to the dangers of electric shock and static electricity when working with electrical equipment. All guidelines of this and of the computer manufacture must therefore be allowed at all times to ensure the safe use of the equipment.

CE Mark Warning

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

WEEE Regulation



To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

Revision

User's Manual for PLANET 2 Mega-Pixel 35M IR Outdoor Box PoE IP Camera
Model: ICA-HM351
Rev: 1.0 (August. 2011)
Part No. EM-ICAHM351

Table of Content

1. Introduction	6
1.1 Overview	6
1.2 Features	6
1.3 Package Contents	7
2. Basic Setup	8
2.1 System Requirements	8
2.2 Physical Description	9
2.2.1 Identification of ICA-HM351 cable	9
2.3 Hardware Installation	11
2.3.1 Physical Installation	11
2.4 Initial Utility Installation	12
2.5 Preparation	14
2.5.1 Search and View by PLANET IPWizard	14
2.6 Using UPnP of Windows XP, Vista or Win7	16
2.6.1 Windows XP	16
2.6.2 Windows Vista	21
2.6.3 Windows 7	22
2.7 Install the Device behind a NAT Router	23
2.8 Setup ActiveX to use the Internet Camera	24
2.8.1 Internet Explorer 6 for Windows XP	24
2.8.2 Internet Explorer 7 for Windows XP	25
2.8.3 Internet Explorer 8 for Windows XP	28
3. Web-based Management	27
3.1 Introduction	27
3.2 Connecting to Internet Camera	27
3.3 Live View	29
3.4 ActiveX Control	32
3.4.1 Digital Zoom	32
3.4.2 Record	33
3.4.3 Snapshot	33
3.4.4 Voice	34
3.4.5 Statistics	34
3.4.6 About	35
3.5 System Setting	36
3.5.1 Network	37
3.5.2 HTTPS	39
3.5.3 DDNS server	40
3.5.4 PPPoE	41
3.5.5 Streaming	42
3.5.6 UPnP	44
3.5.7 Bonjour	45
3.5.8 Onvif	46
3.5.9 IP Filter	47
3.5.10 IP Notification	48
3.6 Camera Configuration	50
3.6.1 Picture	50

3.6.2 Privacy Mask	52
3.6.3 PTZ Setting	53
3.6.4 Preset Setting	54
3.6.5 Tour Setting	54
3.7 System	56
3.7.1 System	56
3.7.2 Date & Time	57
3.7.3 Maintenance	58
3.8 Video	60
3.8.1 Common	60
3.8.2 Video Profile	61
3.8.3 ROI	62
3.9 Audio Configuration	63
3.10 User Privilege Access Configuration	64
3.11 E-Mail Configuration	65
3.12 Object Detection	66
3.13 Event Server Configuration	67
3.13.1 FTP Server	67
3.13.2 TCP Server	68
3.13.3 HTTP Server	69
3.13.4 SAMBA Server	70
3.14 Event Schedule Configuration	71
3.15 Record Configuration	75
Appendix A: Alarm I/O Connector	76
Appendix B: PING IP Address	78
Appendix C: 3GPP Access	79
Appendix D: Bandwidth and Video Size Estimation	80
Appendix E: DDNS Application	81
Appendix F: Configure Port Forwarding Manually	86
Appendix G: Troubleshooting & Frequently Asked Questions	89
Appendix H: Product Specification	94

1. Introduction

Thank you for purchasing the 2 Mega-Pixel series IP Camera, the ICA-HM351 bring users high resolution surveillance both at day and night in outdoor. The ICA-HM351, the 2 Mega-Pixel (1920 x 1080) 35 meters IR Outdoor PoE IP Camera, supports the highest video compression – H.264, which provides small video size and save you lots of bandwidth usage. The new video compression is the best solution for Internet video transmission. The ICA-HM351 supports Multi-Profile Streaming function to generate H.264, MPEG-4 and M-JPEG streaming simultaneously to differentiate users in different resolutions and frame rates. This state-of-the-art design is considerable to fit in various network environments.

The ICA-HM351 provides 2-Way audio function for surveillance. It can remotely talk to anyone at the ICA-HM351 site with additional speaker connected to the camera. Via two ICA-HM351, users can easily communicate to each other for surveillance control. The ICA-HM351 Compliant with IEEE 802.3af PoE standard can be located in any place where there is no power outlet available. Through Power over Ethernet, the installers are fearless for the power breakdown at the remote site because the network devices can be powered from the central station where UPS is installed.

The ICA-HM351 infrared Internet camera performs reliable operation in any environment. With the Aluminum rugged all-weather housing enclosure, the ICA_HM351 maintains the reliable operation in any environment. Moreover, it has built-in fan and heater to prevent the machine overheated or sub cooling.

The ICA-HM351 follows the ONVIF v1.01 and v1.02 standard SDK for users to integrate with the third party software. The ICA-HM351 can also work with PLANET Cam Viewer 3 Lite / Pro Management software and Network Video Recorder products for video surveillance application and provides monitoring, recording and event management functions to secure your property and life.

1.1 Overview

This user's guide explains how to operate this camera from a computer. User should read this manual completely and carefully before you operate the device

1.2 Features

- H.264, MPEG4 and MJPEG simultaneously (Tri-encoders)
- High Quality FullHD 1080p Resolution
- Built-in IR LED and visible distance up to 35 meters
- IR-Cut filter brings better video quality in the daytime and nighttime
- Compliant with IEEE 802.3af PoE interface
- 2-Way audio supported with external speaker and microphone
- Support 3GPP for iPhone and Android phone for remote view
- DDNS, PPPoE and FTP uploading offers more alternatives in surveillance network
- 10 Motion Detection feature can monitor any suspicious movement in a specific area
- Easy configuration and management via Windows-Based utility or web browser
- Supports ONVIF v1.0 and v1.02 / v1.01 Standard
- Industrial design with -30 to 60 Degree C operating temperature

1.3 Package Contents

User can find the following items in the package:

ICA-HM351 x 1

Power Adapter x 2

Wall Mounting Kit x 1

User's Manual CD x 1

Quick Installation Guide x 1

- NOTE:**
1. If any of the above items are missing, please contact your dealer immediately.
 2. Using the power supply that is not the one included in Internet camera packet will cause damage and void the warranty for this product.

2. Basic Setup

This chapter provides details of installing and configuring the internet camera


2.1 System Requirements

CPU	Intel Dual Core 2.0GHz or higher
RAM	2GB (above Recommended)
Video RAM	128MB (above Recommended)
Display Resolution	1024 x 768 24bits or above
Operating System	Windows XP / Vista / Win7
DirectX	9.0c above
Network	Wired Ethernet 100Base-TX

NOTE: The listed information is minimum system requirements only. Actual requirement will vary depending on the nature of your environment.

2.2 Physical Description

2.2.1 Identification of ICA-HM351 cable

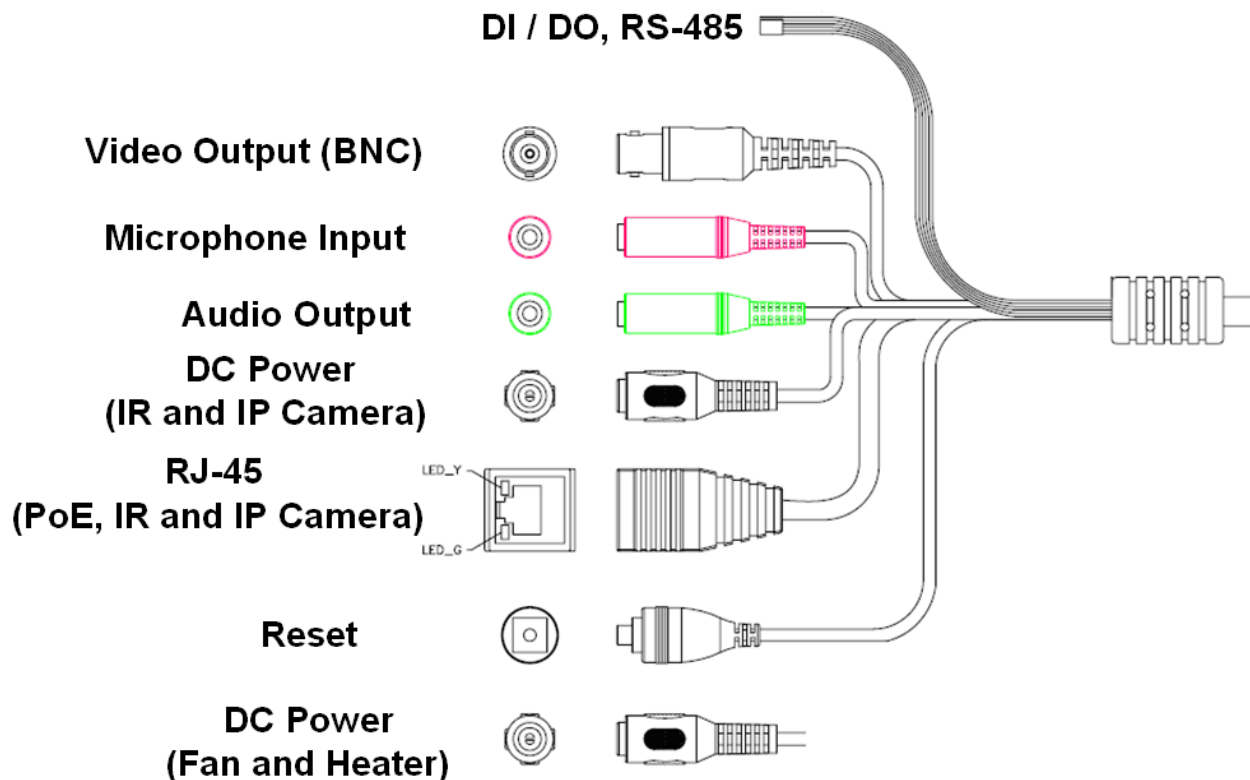

Interface	Description
DC Power (Power Jack, IR and IP Camera)	<p>The input power is DC 12V, 1A.</p> <p>Note : ONLY use package power adapter supplied with the internet. Otherwise, the product may be damaged.</p>
RJ-45 (LAN socket, PoE, IR and IP Camera)	<p>Connect to PC or Hub/Switch. For connect to 10Base-T Ethernet or 100Base-TX Fast Ethernet cabling. This Ethernet port built auto-negotiation protocol can detect or negotiate the transmission speed of the network automatically. Please use CAT-5 cable to connect the Network Camera to a 100Mbps Fast Ethernet network switch or hub.</p> <p>LAN LED (green color) This LED will be flashing while network accessing via Ethernet.</p> <p>Power LED (orange color) This LED is used to indicate whether DC power is on or not. In addition, this LED will be flashing while the wireless accessing of the Camera.</p>

	Note : ONLY use one power source, either from DC or from 802.3af Power over Ethernet.
Audio Output (Green, Line Out)	Connect a loud speaker to the IP Camera. This is for voice alerting and two-way audio.
Microphone Input (Pink, Audio In)	Connect a microphone to the IP Camera.
Video Output (BNC)	The Network Camera also provides composite video output. The video output function is only for easy installation to check view angle and focus. Furthermore, only "720p Mode" supports this function.
Reset (Factory Default)	<p>This button is used to restore the all factory default settings. Sometimes restarting the device will make the system back to a normal state. However, if the system still got problems after restart, user can restore the factory default settings and install it again.</p> <p>Restore the device:</p> <ul style="list-style-type: none"> a.) Press the button down continuously. b.) Hold the button at least 5 seconds and release it. Then the device has been restored to default settings and reboot again. <p>Note: Restoring the factory default setting will lose the all previous settings included IP address forever. User needs to run the IPWizard program to search the device and configure it to let the device work properly again.</p>
DI/DO, RS-485	Connect RS-485 to external scanner and connect to sensor in and alarm out devices.
DC Power (Power Jack, Fan and Heater)	<p>The input power is DC 12V, 1A for Fan and Heater.</p> <p>Note : That supplies the power to the built-in heater with the power adapter included in package.</p>

Terminal block for I/O connectors:

Name	Cable Color	Function
12VDC	Brown/White	DC 12V (50mA maximum)
GND	Blue/White	GND
D+	Purple/White	RS485 data +
D-	Gray	RS485 data -
DI	Green/White	Digital signal input
DO	Orange/White	Digital signal output

2.3 Hardware Installation

2.3.1 Physical Installation

1. Fix IR camera to desired location with wall mount fixture

2. Plug-in Ethernet Cable into RJ-45 connector

Connect an Ethernet cable to the LAN socket located on the Network Camera's back panel and attach it to the network.

NOTE: If there has an IEEE 802.3af PoE switch in your network, you can connect the camera LAN cable to this PoE switch to obtain power. The power adapter is unnecessary when internet camera is connected to a PoE switch.

3. Connect RS485 D+ and D- (if you need to control PT scanner)

4. Attach the power supply

Connect the attached power adapters to camera and heater and plug-in these adapters into power outlet

NOTE:

1. Only use the power adapter supplied with internet camera. Otherwise, the product may be damaged.
2. The power adapter is unnecessary when internet camera is connected to a PoE switch. Otherwise, the product may be damaged when internet camera is connected to a PoE switch and power adapter simultaneously.

5. Attach BNC connector (option)

Connect the video BNC connector to a monitor set if necessary check camera viewing angle and focus.

6 Attach Speaker to camera (option)

If user needs not only video stream but also audio stream, then the speaker should be attached to camera.


7. Done

2.4 Initial Utility Installation

This chapter shows how to quick set up your IP camera. The camera is with the default settings. However to help you find the networked camera quickly the windows utility PLANET IPWizard can search the cameras in the network that shall help you to configure some basic setting before you started advanced management and monitoring.

1. Insert the bundled CD into the CD-ROM drive to launch the auto-run program. Once completed, a welcome menu screen will appear.
2. Click the "IPWizard II" hyperlink; you will see the dialog box as below.


NOTE: If the welcome screen does not appear, click "Start" at the taskbar. Then, select "Run" and type "D:\Utility\IPWizard II\setup.exe", assume D is your CD-ROM drive.

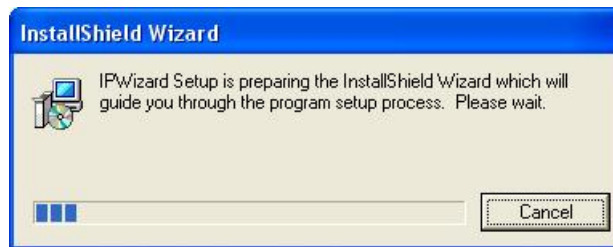


3. The "Welcome to the InstallShield Wizard for PLANET IPWizard II" prompt will display on the screen and click "**Next**" to continue.



4. Please click "**Next**" to install with original settings, or you may click "**Change...**" button to modify the install folder then press "Next" to continue.

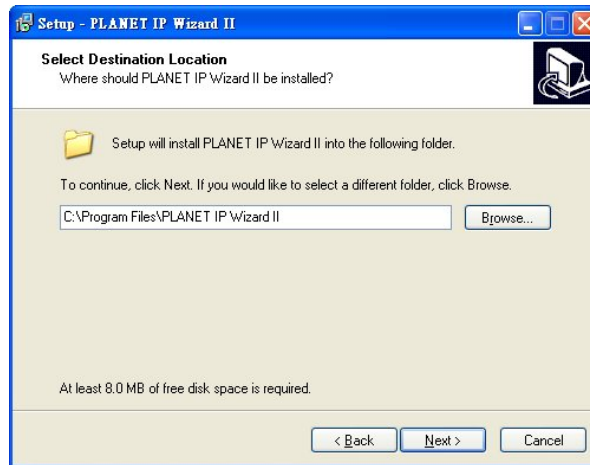

5. Please click **"Install"** to start the installation.

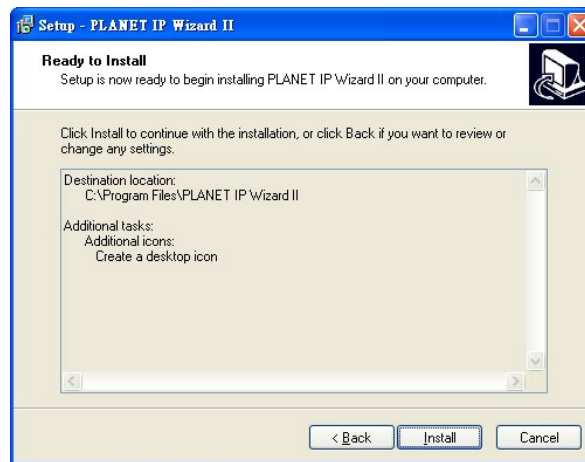

6. Please click **"Finish"** to complete the installation and launch program immediately.




2.5 Preparation

When you installed the camera on a LAN environment, you may execute PLANET IPWizard to discover camera's IP address and set up related parameters in the camera.


2.5.1 Search and View by PLANET IPWizard

When you installed the Camera on a LAN environment, you have two easy ways to search your Cameras by PLANET IPWizard II or UPnP discovery. Here is the way to execute PLANET IPWizard II to discover Camera's IP address and set up related parameter in a Camera.

Search

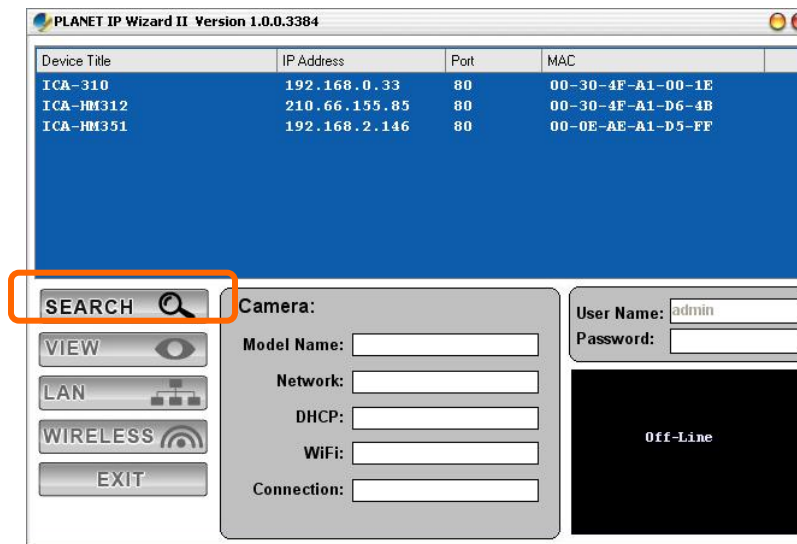

When launch the PLANET IPWizard II, a searching window will pop up. PLANET IPWizard II is starting to search Network Cameras on the LAN. The existed devices will be listed as below.

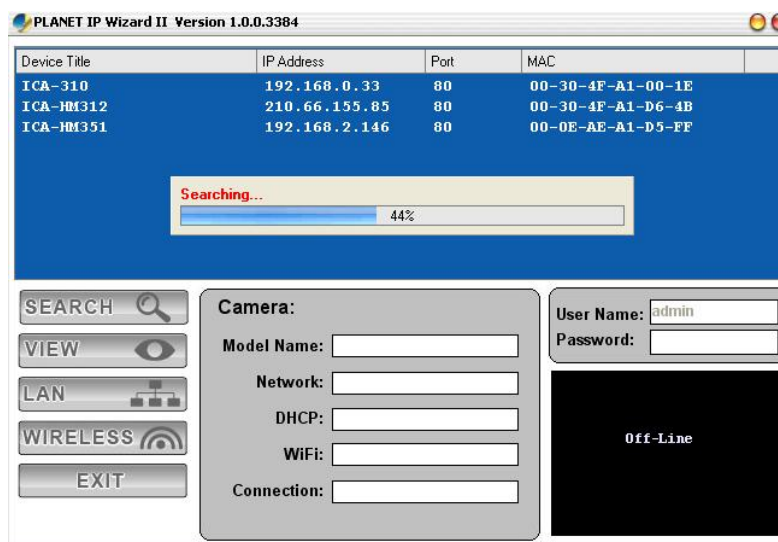

View

If PLANET IPWizard II finds network devices, **View** button will be available. Please select the device you want to view and click the **View** button. Then you could see the video from camera directly. Furthermore you could double click the left button of mouse to link to the network device by browser.

2.5.2 Configure Network by PLANET IPWizard

In case you want to change the IP related parameters of wired interface, please select the device you want to configure and click the **LAN** button. Relative settings will be carried out as below.

Device Title	IP Address	Port	MAC
ICA-310	192.168.0.33	80	00-30-4F-A1-00-1E
ICA-IM312	210.66.155.85	80	00-30-4F-A1-D6-4B
ICA-IM331	192.168.2.146	80	00-0E-AE-A1-D5-FF

SEARCH [magnifying glass icon]
VIEW [eye icon]
LAN [network icon]
WIRELESS [wifi icon]
EXIT

LAN:
Network: ☒ Static IP ☐ DHCP IP
IP Address: 192.168.0.146
Subnet Mask: 255.255.255.0
Gateway: 192.168.0.1
DNS1: 168.95.1.1
DNS2: 168.95.1.2
User Name: admin
Password:
Off-Line


You could modify the relative settings of the selected device. Click “<<” button will quit the LAN setting procedure and click “>>” button will move to next page as below.

Device Title	IP Address	Port	MAC
ICA-310	192.168.0.33	80	00-30-4F-A1-00-1E
ICA-IM331	192.168.0.146	80	00-0E-AE-A1-D5-FF

SEARCH [magnifying glass icon]
VIEW [eye icon]
LAN [network icon]
WIRELESS [wifi icon]
EXIT

User:
☐ Change Password
User Name: admin
Password:
Off-Line

In case, you do not want to change username and/or password, then just click “**Submit**” button to perform your setting accordingly. Click “<<” button will go back to previous page. If you like to change username and/or password of the device, just click the check button. Then, the related fields will show up as below.

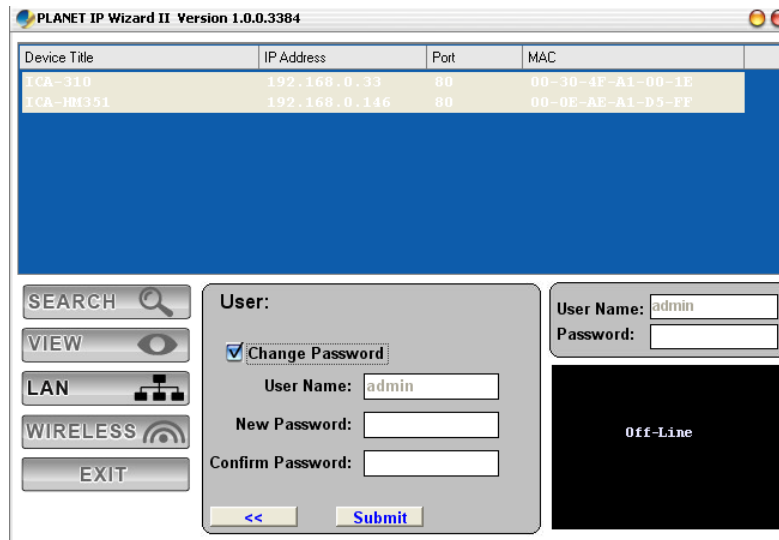

After keying in new username and password, click “**Submit**” button to perform your setting accordingly. Click “<<” button will go back to previous page.


2.6 Using UPnP of Windows XP, Vista or Win7

2.6.1 Windows XP

UPnP™ is short for Universal Plug and Play, which is a networking architecture that provides compatibility among networking equipment, software, and peripherals. This device is an UPnP enabled device. If the operating system, Windows XP, of your PC is UPnP enabled, the device will be very easy to configure. Use the following steps to enable UPnP settings only if your operating system of PC is running Windows XP.


NOTE: Windows 2000 does not support UPnP feature.

Go to **Start > Settings**, and Click **Control Panel**

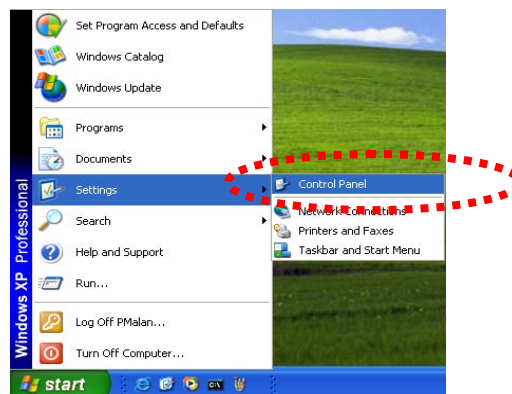


The “**Control Panel**” will display on the screen and double click “**Add or Remove Programs**” to

continue

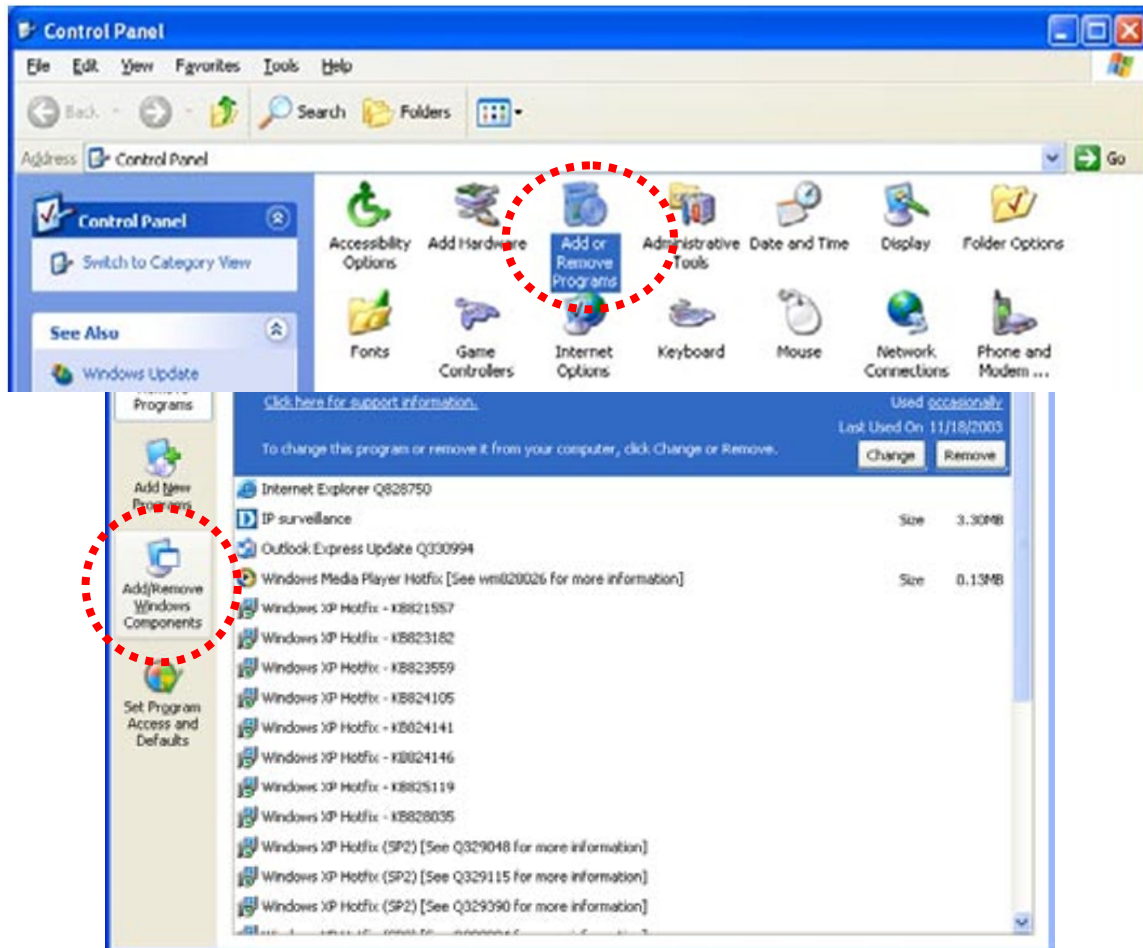


The following screen will appear, select **“Networking Services”** and click **“Details”** to continue

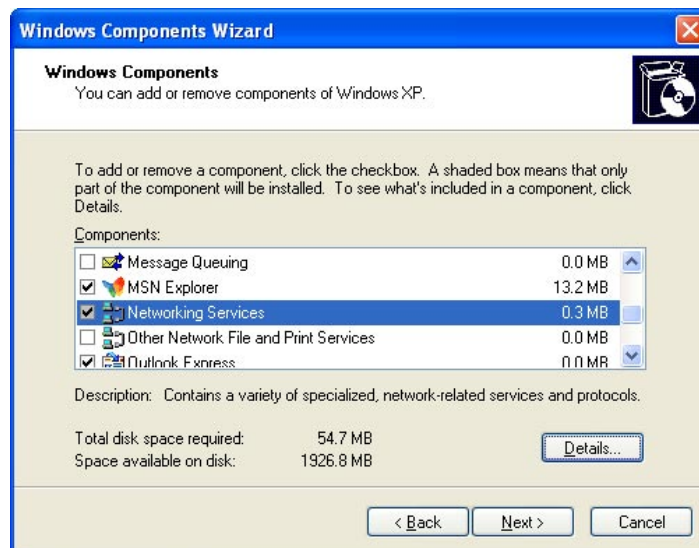


The “Networking Services” will display on the screen, select **“Universal Plug and Play”** and click

“OK” to continue.

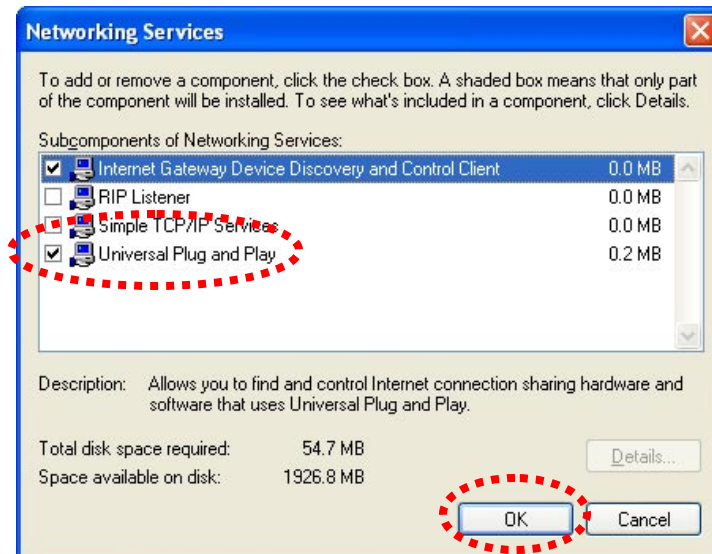


Please click “Next” to continue

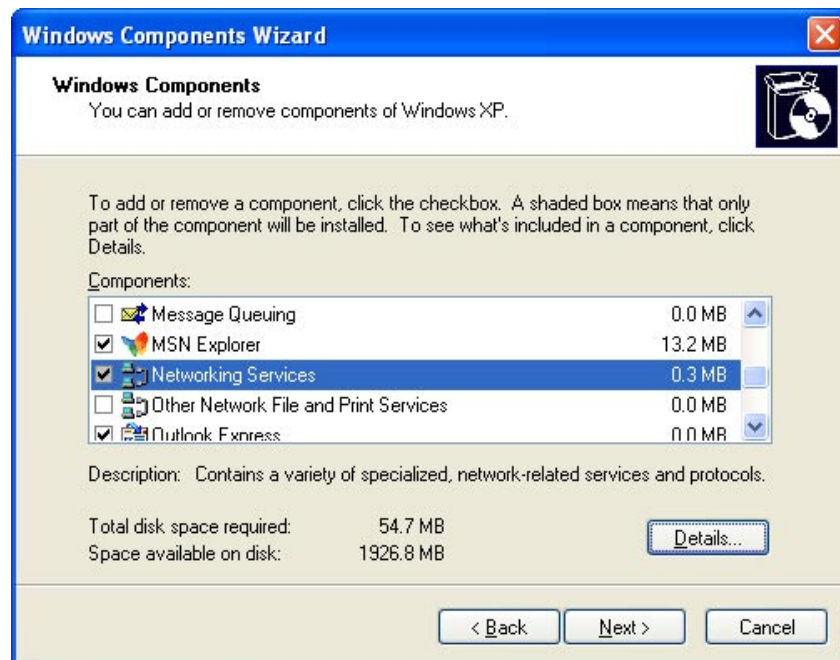

The program will start installing the UPnP automatically. You will see the below pop-up screen,


please wait while Setup configures the components.

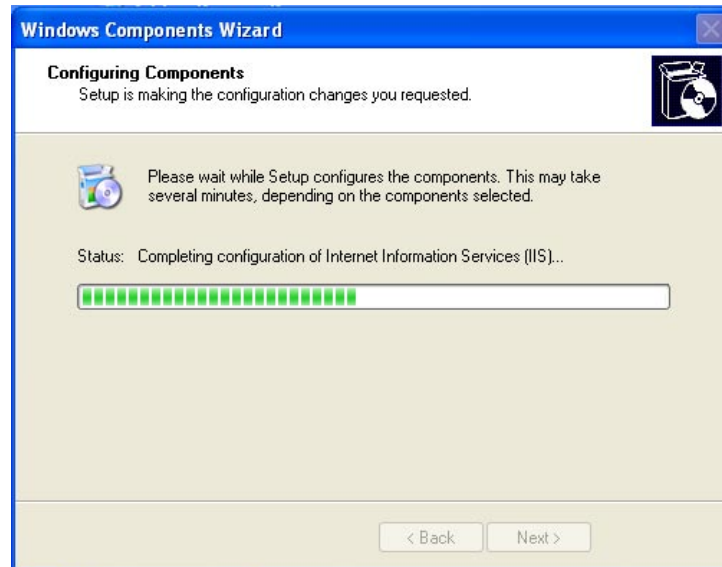

Please click **Finish** to complete the UPnP installation




Double-click **My Network Places** on the desktop, the "My Network Places" will display on the screen and double-click the UPnP icon with Internet camera to view your device in an internet browser.

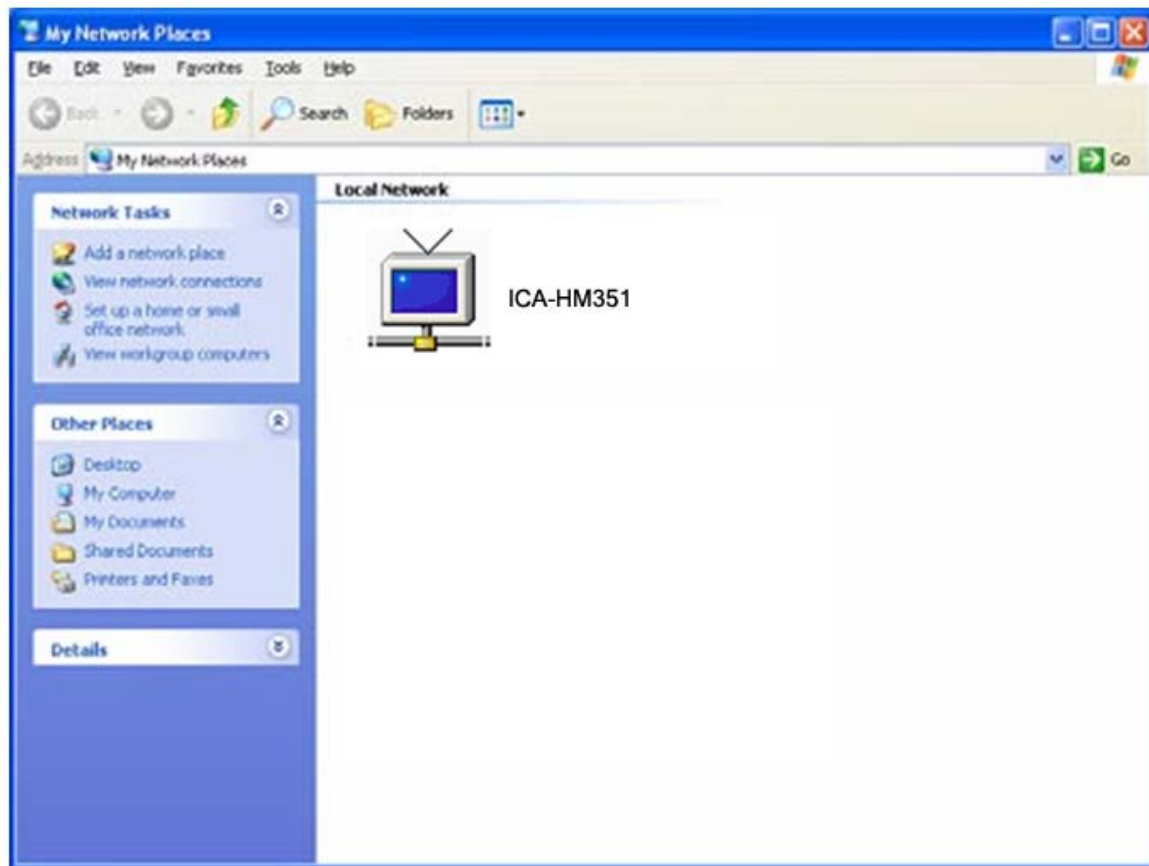


2.6.2 Windows Vista

UPnP™ is short for Universal Plug and Play, which is a networking architecture that provides compatibility among networking equipment, software, and peripherals. This device is an UPnP enabled device. If the operating system, Windows Vista, of your PC is UPnP enabled, the device will be very easy to configure. Use the following steps to enable UPnP settings only if your operating system of PC is running Windows Vista.


Go to **Start > Control Panel > Network and Internet > Network and Sharing Center**, and turn on **“Network Discovery”**.

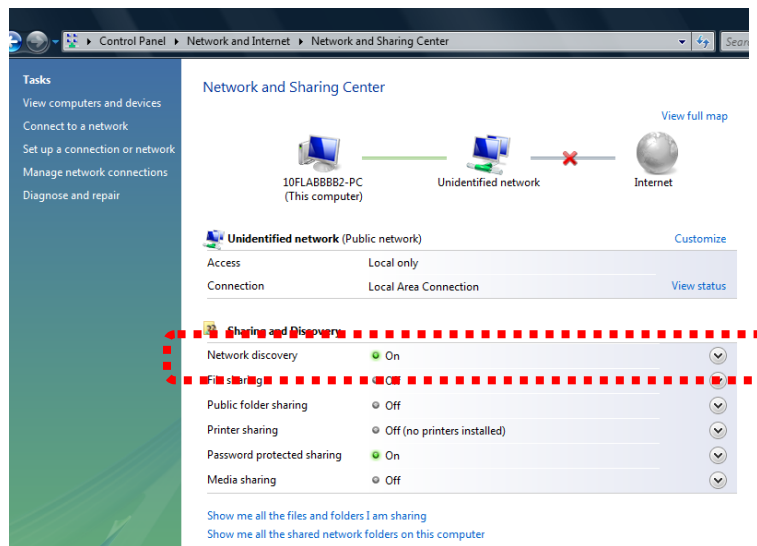


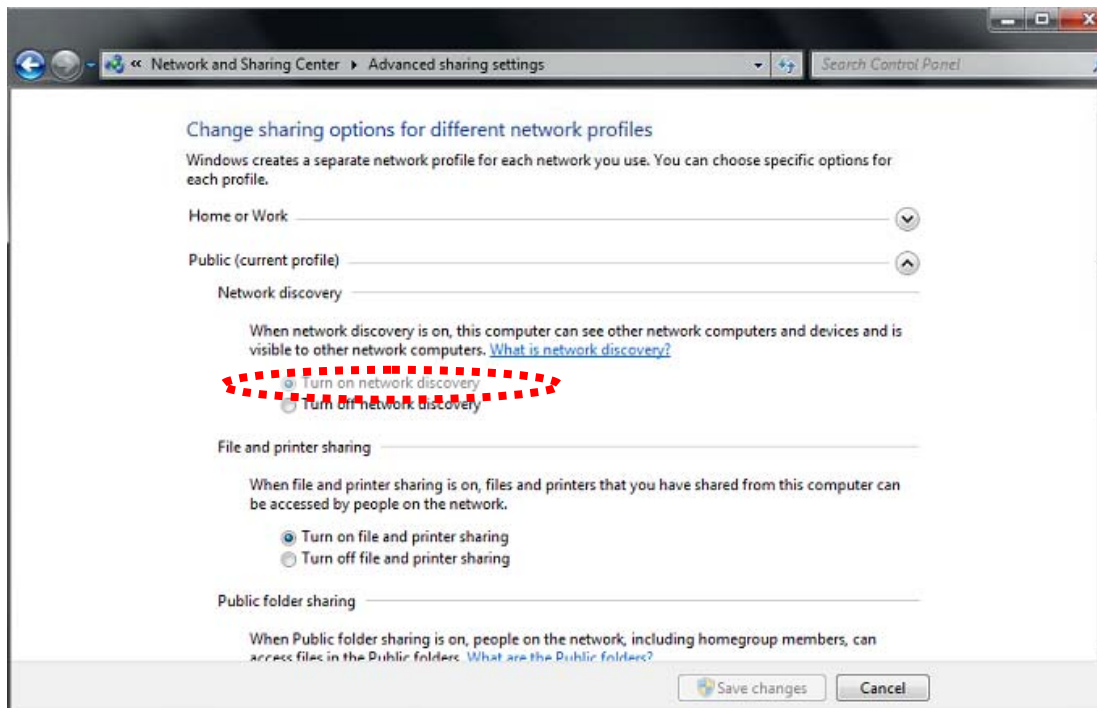
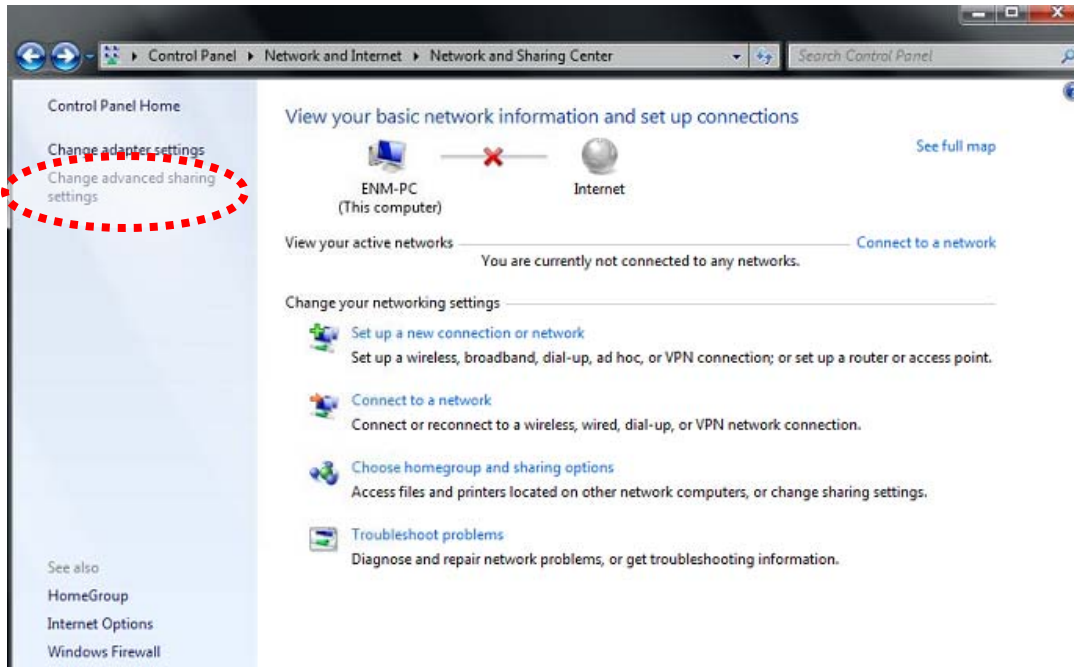
Double-click **“My Network Places”** on the desktop, the “My Network Places” will display on the screen and double-click the UPnP icon with Internet camera to view your device in an internet browser.

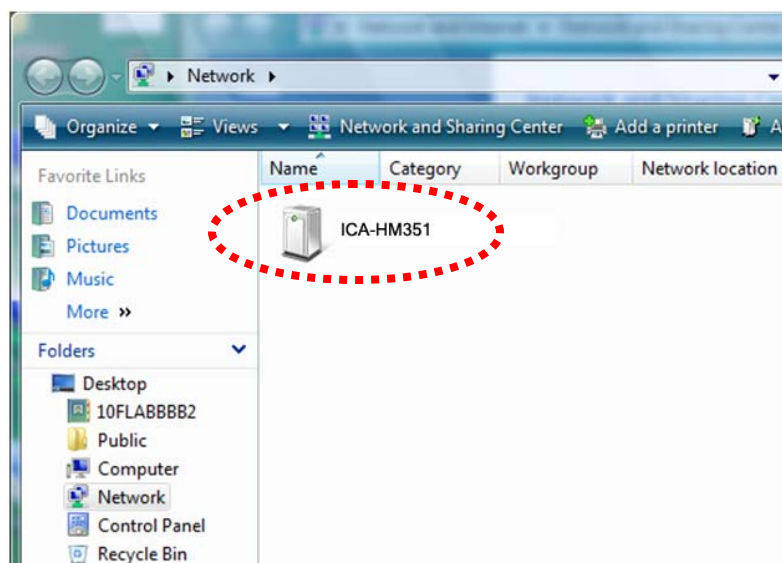

2.6.3 Windows 7

Go to **Start > Control Panel > Network and Internet > Network and Sharing Center**, if network discovery is off; click the arrow button  to expand the section.

Click Turn on network discovery, and then click Apply.  If you are prompted for an administrator password or confirmation, type the password or provide confirmation.



2.7 Install the Device behind a NAT Router

Once installed, the device is accessible on your LAN. To access the device from the Internet you must configure your broadband router to allow incoming data traffic to the device. If the device is installed on the LAN with a router, then it may get a dynamic IP address from the DHCP server. However, if the device wants to be accessed from the WAN, its IP address needs to be setup as fixed IP, also the port forwarding or Virtual Server function of router needs to be setup.

However, if your NAT router supports UPnP feature, it can be very easy to achieve NAT traversal automatically. To do this, enable the NAT-traversal feature, which will attempt to automatically configure the router to allow access to the camera.

Installing the device with an UPnP router on your network is an easy 3–step procedure:

- (1) Enable UPnP option of your NAT router
- (2) Enable UPnP NAT traversal option of the Network Camera (default)
- (3) Access your Network Camera by DIPS

(1) Enable UPnP option of your NAT router

To use UPnP IGD function (NAT traversal), you need to make sure the UPnP function is enabled in your router. Most new home routers should support this function. Some of routers are default enable and others are not. Please check user's manual of your NAT router for detail.

(2) Enable UPnP NAT traversal option of the Network Camera

Refer to **Setting → Network → UPnP** page for detail NAT traversal setting. Note that this option is default enabled.

(3) Access your Network Camera by DIPS

Refer to **Setting → System → System** page for detail DIPS information

2.8 Setup ActiveX to use the Internet Camera


The Internet camera web pages communicate with the Internet camera using an ActiveX control. The ActiveX control must be downloaded from the Internet camera and installed on your PC. Your Internet Explorer security settings must allow for the web page to work correctly. To use the Internet camera, user must setup his IE browser as follows:

2.8.1 Internet Explorer 6 for Windows XP

From your IE browse → "Tools" → "Internet Options..." → "Security" → "Custom Level...", please setup your "Settings" as follow.

Set the first 3 items

- Download the signed ActiveX controls
- Download the unsigned ActiveX controls
- Initialize and script the ActiveX controls not masked as safe to Prompt

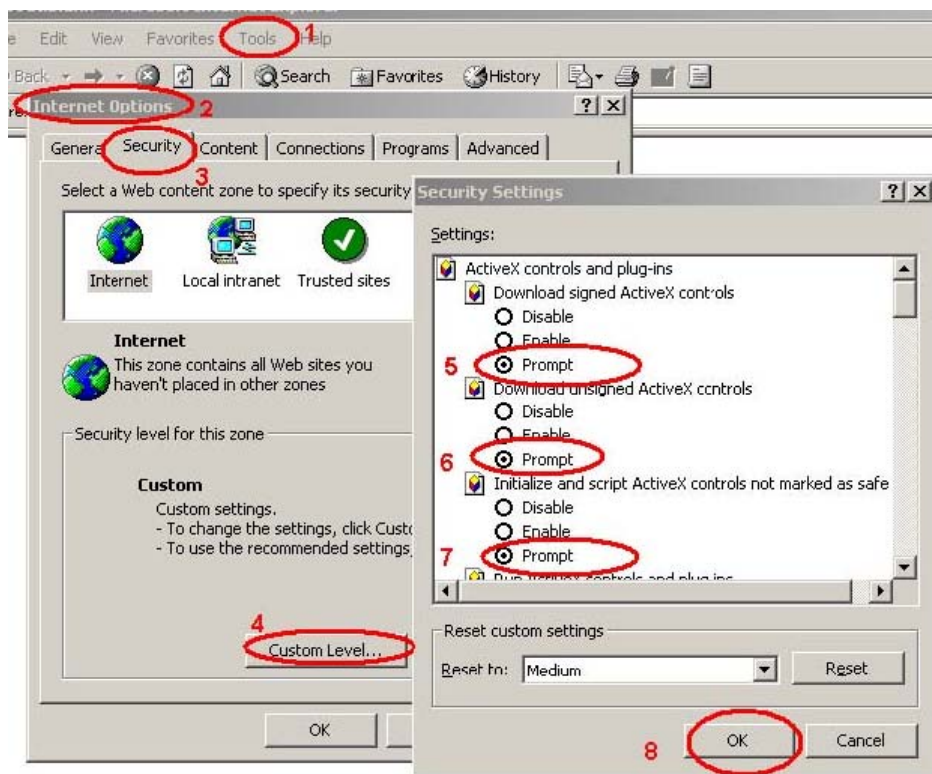


By now, you have finished your entire PC configuration for Internet camera.

2.8.2 Internet Explorer 7 for Windows XP

From your IE browse → "Tools" → "Internet Options..." → "Security" → "Custom Level...", please setup your "Settings" as follow.

Set the first 3 items

- *Allow previously unused ActiveX control to run...*
- *Allows Script lets*
- *Automatic prompting for ActiveX controls*

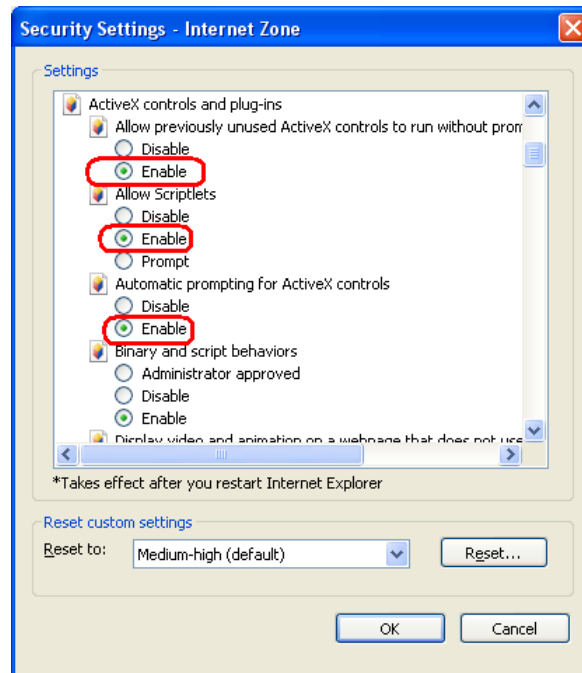


By now, you have finished your entire PC configuration for Internet camera.

2.8.3 Internet Explorer 7 for Windows Vista and Win7


From your IE browse → "Tools" → "Internet Options..." → "Security" → "Internet" → "Custom Level...", please setup your "Settings" as follow.

- Enable "Automatic prompting for ActiveX controls"
- Prompt "Initialize and script active controls not marked..."

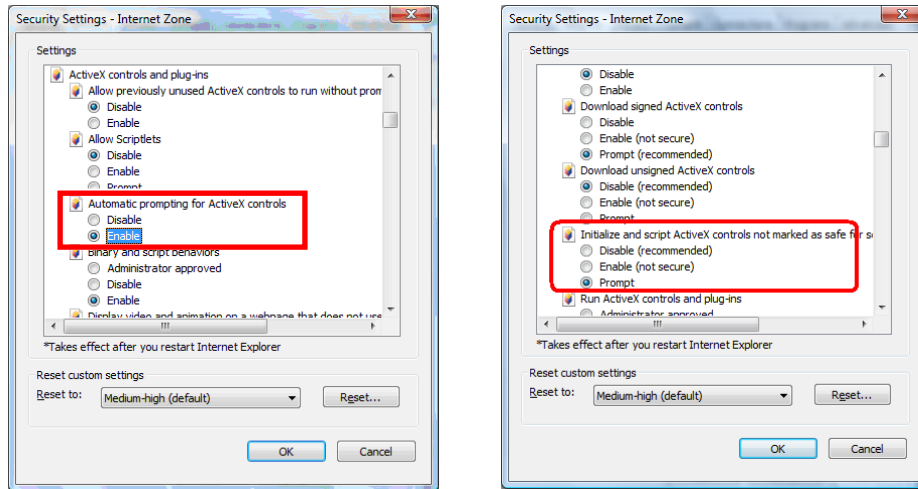

From your IE browse → "Tools" → "Internet Options..." → "Security" → "Trusted Sites" → "Custom Level...", please setup your "Settings" as follow.

- Enable "Automatic prompting for ActiveX controls"
- Prompt "Initialize and script active controls not marked..."

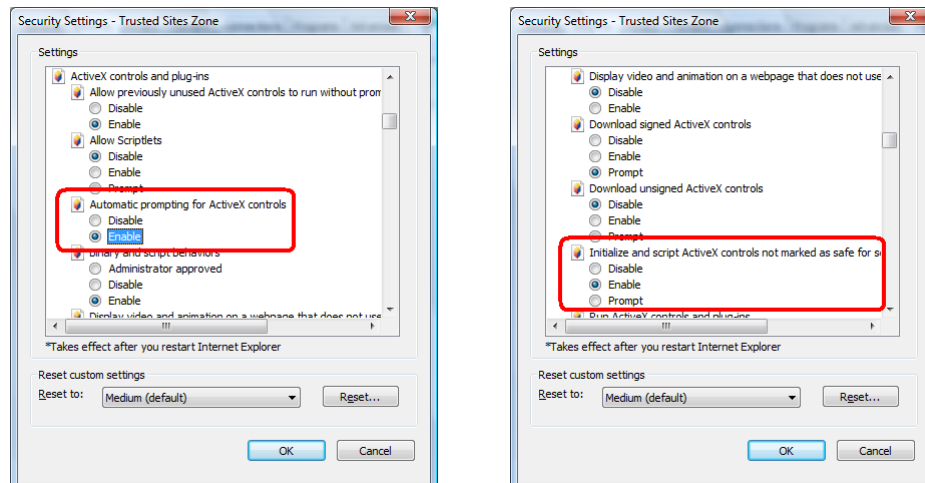

By now, you have finished your entire PC configuration for Internet camera.

3 Web-based Management

This chapter provides setup details of the Internet camera's Web-based Interface.

3.1 Introduction

The internet camera can be configured with your Web Browser. Before configure, please make sure your PC is under the same IP segment with Internet camera.

3.2 Connecting to Internet Camera

- Use the following procedure to establish a connection from your PC to the camera.
- Once connected, you can add the camera to your Browser's Favorites or Bookmarks.

Start the web browser on the computer and type the IP address of the camera. The Default IP: "<http://192.168.0.20>"




The login window of Internet camera will appear, Default login **username/password** is: **admin/ <no password>**



NOTE: If the User name and Password have been changed with PLANET IPWizard II, please enter the new User name and Password here.

Web browser may display the “Security Warning” window, select “Yes” to install and run the ActiveX control into your PC.

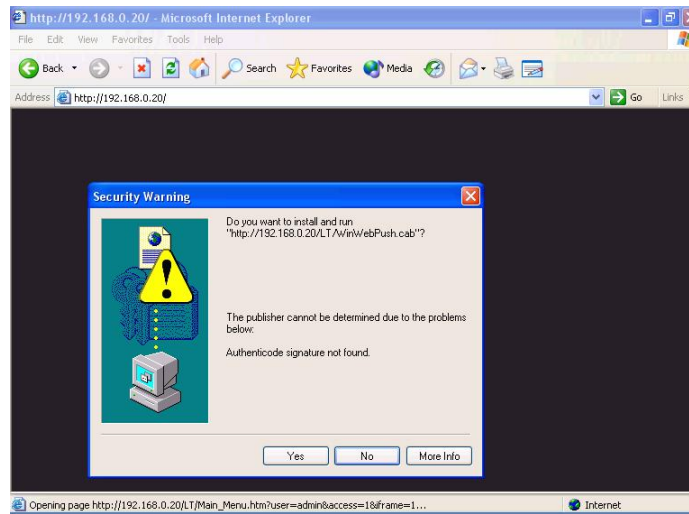


After the ActiveX control was installed and run, the first image will be displayed.





NOTE: If you log in the camera as an ordinary user, setting function will be not available. If you log in the camera as the administrator, you can perform all the settings provided within the device.

3.3 Live View

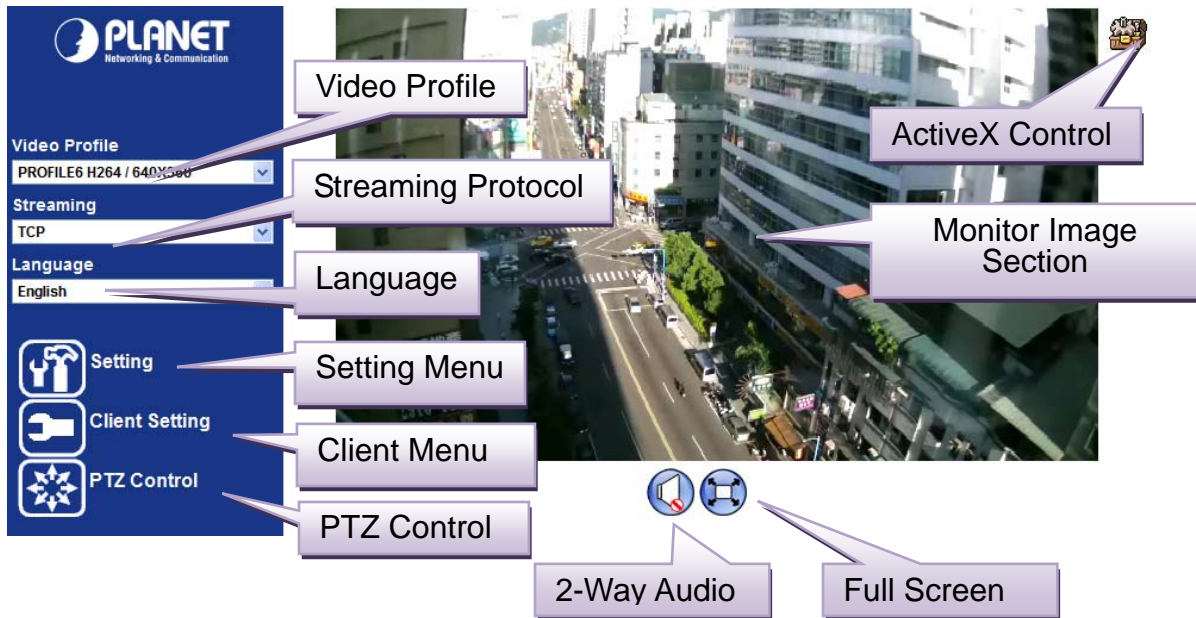Start-up screen will be as follow no matter an ordinary users or an administrator.




Monitor Image Section	The image shot by the camera is shown here. The date and time are displayed at the top of the window.
Video Profile	The camera support multi-profile for three compressions H264, MPEG-4 and M-JPEG simultaneously. User can chose the proper and/or preferred profile here.
Full Screen	Click this button to display the image in full-screen mode (uses every available space to display the image captured by this camera).
2-Way Audio	<p>The Internet camera supports 2-way audio function. User can chose to enable or disable this function by toggling the icon below</p> <p>  : Disable audio uploading function.  : Enable audio uploading function. </p>
ActiveX Control	The plug-in ActiveX control supports a lot of functions by clicking the left mouse button. Note that this feature only supports on the ActiveX control within Microsoft® Internet Explorer.
Setting Menu	<u>This function is detail setting for the camera that only available</u>

for user logged into camera as administrator.

Item	Action
Network	Configure Network settings such as Wireless, DHCP, DDNS, 3GPP, PPPoE and UPnP.
Camera	Adjust camera parameters.
System	Configure system information, date & time, maintenance, and view system log file.
Video	Configure bit rate and frame rate of video profiles.
Audio	Configure audio parameters.
User	Setup user name, password and login privilege.
E-Mail	Setup E-Mail configuration.
FTP	This device is a client site and configure information to upload images to server.
Object Detection	Setup Object detection.
Event Schedule	Configure the schedule while event triggered.

Streaming Protocol	User can select proper streaming protocol according to networking environment.
Language	The device could provide multiple languages to meet customer's requirement.
Video Information	Display video information including video format, resolution, frame rate and bit rate.
Client Setting	Click this button to display the client extra control panel for 2-way Audio and Full Screen.
PTZ Control	Click to display the following control panel:

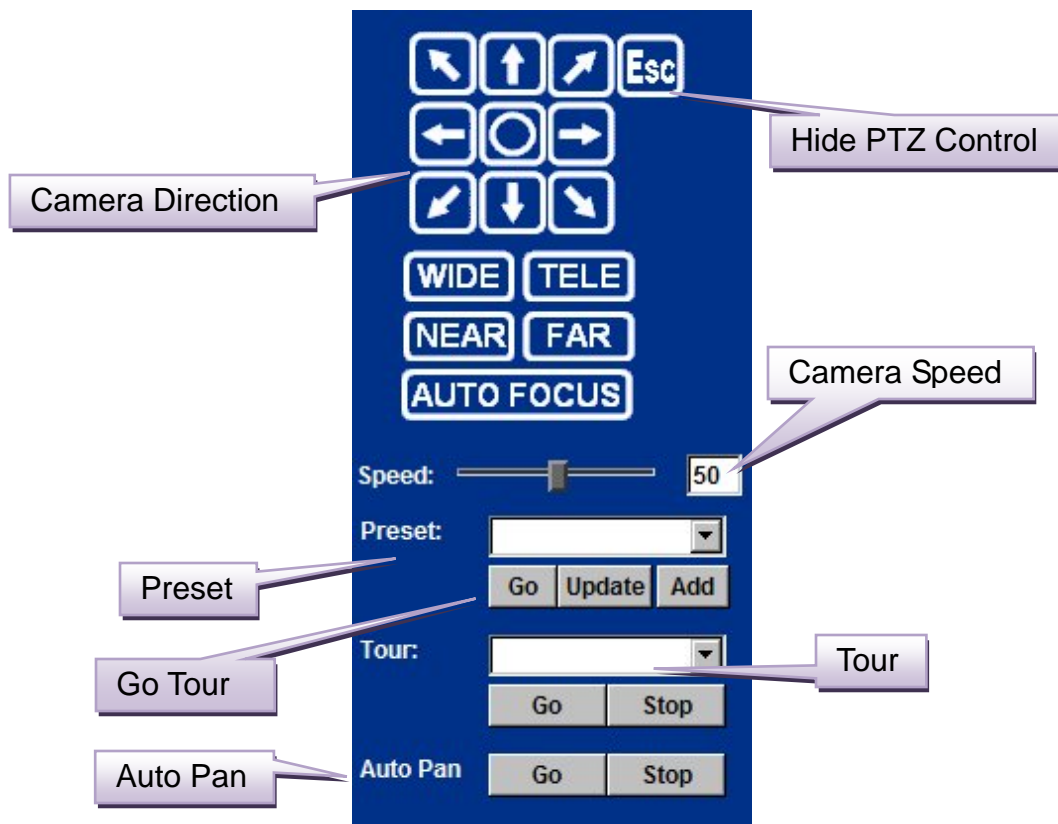

Hide PTZ Control Click the icon will hide the PTZ control function.

Camera Direction Control camera up/down/left/right and home position.

Camera Speed Choose the speed of Pan and Tilt.

Preset Add/Update the preset positions or go to one of these positions.

Tour Select one of the camera tours. Camera tour is comprised by series of preset locations.

Go Tour Execute the selected camera tour.

Auto Pan Execute the auto pan of camera. While auto pan is running, the camera will swing the camera automatically. Note that the speed of auto pan is fixed and cannot be adjustable.

NOTE: If you want to use the PTZ function, it must be connected an external PTZ via RS485 interface. The PTZ function can be enabled. If not then the PTZ function is disabled.

3.4 ActiveX Control

The plug-in ActiveX control supports a lot of functions by clicking the left mouse button. Note that this feature only supports on the ActiveX control within Microsoft® Internet Explorer.


On the ActiveX control icon, click the Left Mouse Button, then a menu pop-up. This menu provides features that are unique to the ActiveX control. These features include:

- Record,
- Snapshot,
- Voice,
- Statistics,
- About



3.4.1 Digital Zoom

Click **Digital Zoom** to activate this function as above. User can drag or scale the box over the video to adjust zoom ratio and position.

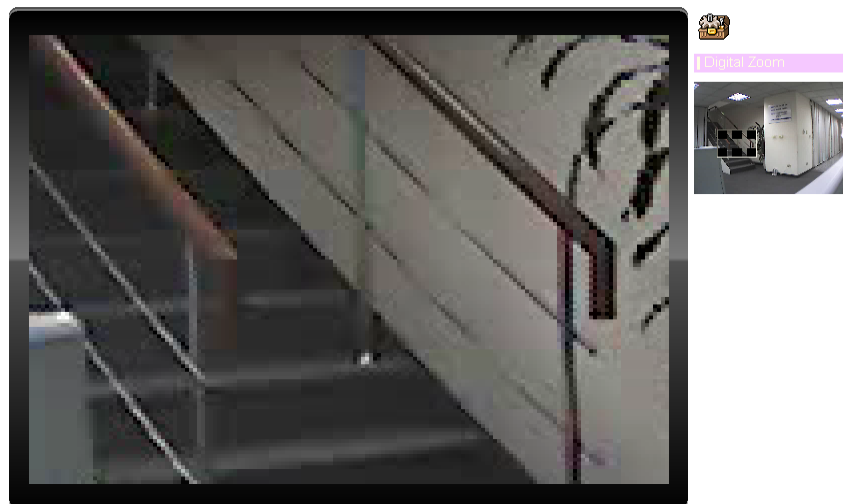


3.4.2 Record

Click **Record** to activate this function. Press **Record** button to start recording. The video file is saved as ASF format into your local PC. While you want to stop it, press **Stop** to stop recording. Select **Browser**, the pop-up window to select the save path and file name prefix, select **OK** to continue.

After stop recording, list the files, this file is named as Video_yyyymmddhhmmss.asf

The ASF files can be display by the standard Windows Media Player, but it needs the DixectX 9.0 or later version to be installed.

NOTE: Default save path is "C:\Documents and Settings\All user\Desktop"

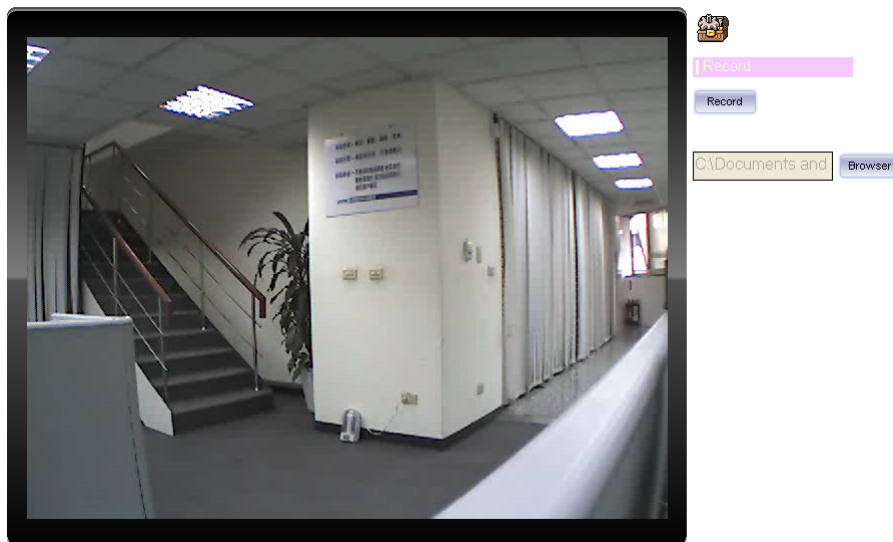


3.4.3 Snapshot

Click **Snapshot** to activate this function. Press **Snapshot** button to take a picture. The image file is saved as JPEG format into your local PC. Select **Browser**, the pop-up window to select the save path and file name prefix, select **OK** to continue.


If you like to retrieve the saved image, select the file to display the saved image by using any one of graph editing tools.

NOTE: Default save path is "C:\Documents and Settings\All user\Desktop"

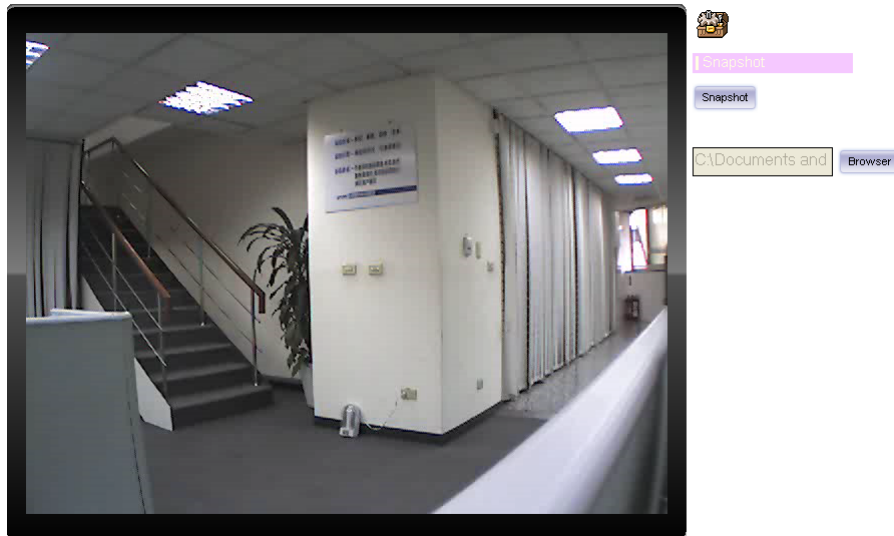

3.4.4 Voice


Click Volume to activate this function. These have two control bars for speaker and microphone volume. Scroll this control bar to adjust the audio attribute. Check the volume mute will mute the speaker output.

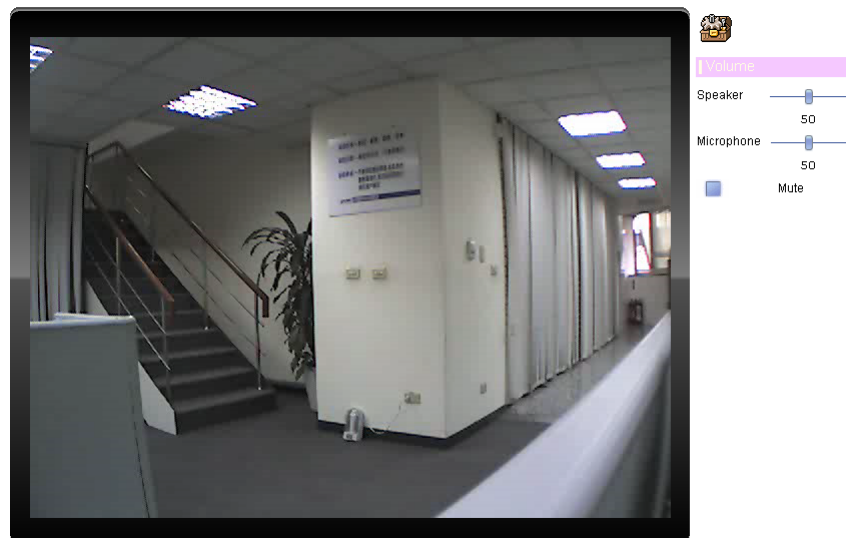

3.4.5 Statistics


Click **Statistics** to activate this function. A window will be popup to show the statistics information of the streaming status.

NOTE: That this information is the statistics between the device and your local PC.

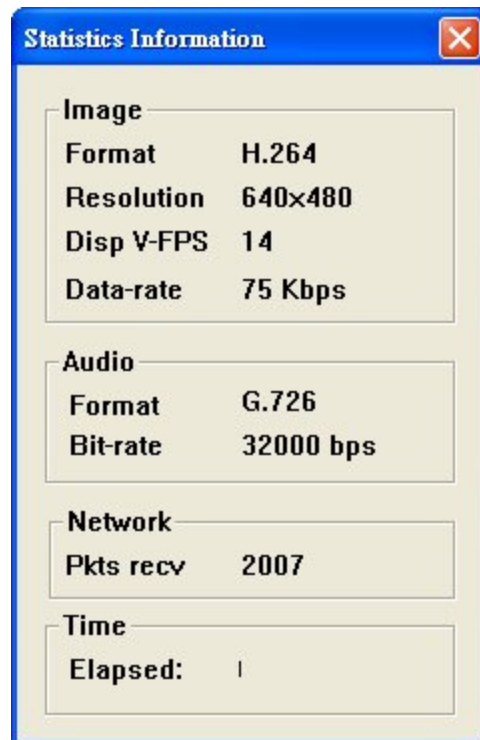

3.4.6 About

Click **About** to show the ActiveX information

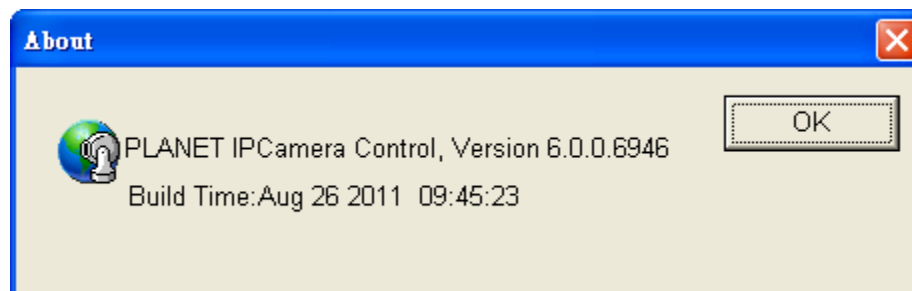

3.5 System Setting

Use this menu to configure the network to connect the device and the clients.

This function is only available for user logged into Camera as administrator.

Click on each menu name to display its setting page.

Item	Action
Network	Configure Network settings such as DHCP, DDNS, 3GPP, PPPoE and UPnP.
Camera	Adjust camera parameters, position, and set camera tour.
System	Configure system information, date & time, maintenance, and view system log file.
Video	Configure bit rate and frame rate of video profiles.
Audio	Configure audio parameters.
User	Setup user name, password and login privilege.
E-Mail	Setup E-Mail configuration.
Object Detection	Setup Object detection.
Event Server	Setup FTP/TCP/HTTP server for event.
Event Schedule	Configure the schedule while event triggered.

3.5.1 Network

This section provides the menu of connecting the device through Ethernet cable.

Network

HTTPS

DDNS

PPPoE

Streaming

UPnP

Bonjour

ONVIF

IP Filter

IP Notification

MAC Address

00:30:4F:A1:D6:4B

☐ Obtain IP address automatically (DHCP)

IP Address

210.66.155.85

Test

Subnet Mask

255.255.255.224

Gateway

210.66.155.94

☒ Obtain DNS from DHCP

Primary DNS

168.95.1.1

Secondary DNS

168.95.1.2

HTTP Port

80

(1 ~ 65535)

Test

MAC address	Display the Ethernet MAC address of the device. Note that user cannot change it.
--------------------	--

Obtain an IP address automatically (DHCP)	<p>Enable this checked box when a DHCP server is installed on the network to issue IP address assignment. With this setting, the IP address is assigned automatically. If this device cannot get an IP address within limited tries, the device will assign a default IP address for 192.168.0.20.</p> <p>If you do not select “Obtain an IP address automatically”, then you need to enter these network parameters by yourself.</p>
--	---

IP Address	This address is a unique numbers that identifies a computer or device on the WAN or LAN. These numbers are usually shown in groups separated by periods, for example: 192.168.0.200
-------------------	---

Subnet Mask	Subnets allow network traffic between hosts to be separated based on the network's configuration. In IP networking, traffic takes the form of packets. IP subnets advance network security and performance to some level by organizing hosts into logical groups. Subnet masks contain four bytes and usually appear in the same "dotted decimal" data. For example, a very common subnet mask in its binary
--------------------	--

demonstration 11111111 11111111 11111111 00000000 will usually be shown in the corresponding, more readable form as 255.255.255.0.

Gateway	A gateway is a piece of software or hardware that passes information between networks. You'll see this term most often when you either log in to an Internet site or when you're transient email between different servers.
----------------	---

Obtain DNS from DHCP	Enable this checked box when a DHCP server is installed on the network and provide DNS service.
-----------------------------	---

Primary DNS	When you send email or position a browser to an Internet domain such as xxxxx.com, the domain name system translates the names into IP addresses. The term refers to two things: the conventions for naming hosts and the way the names are control across the Internet.
--------------------	--

Secondary DNS	The same function as DNS1. It is option not necessary
----------------------	---

HTTP Port	<p>The device supports two HTTP ports. The first one is default port 80 and this port is fixed. This port is very useful for Intranet usage. The second HTTP port is changeable. Users could assign the second port number of http protocol, and the WAN users should follow the port number to login. If the http port is not assigned as 80, users have to add the port number in back of IP address. For example: http://192.168.0.20:8080.</p>
------------------	---

Therefore, the user can access the device by either <http://xx.xx.xx.xx/>, or <http://xx.xx.xx.xx:xxxx/> to access the device.

If multiple devices are installed on the LAN and also required to be accessed from the WAN, then the **HTTP Port** can be assigned as the virtual server port mapping to support multiple devices.

NOTE	When the configuration is finish, please click “ OK ” to save and enable the setting.
-------------	--

3.5.2 HTTPS

HTTPS: Stands for Hypertext Transfer Protocol Secure

HTTPS is a combination of the Hypertext Transfer Protocol with the SSL/TLS protocol to provide encrypted communication and secure identification of a network web server. HTTPS connections are often used for sensitive transactions in corporate information systems. The main idea of HTTPS is to create a secure channel over an insecure network. This ensures reasonable protection from eavesdroppers and man-in-the-middle attacks, provided that adequate cipher suites are used and that the server certificate is verified and trusted.

Network **HTTPS** DDNS PPPoE Streaming UPnP Bonjour ONVIF IP Filter IP Notification

HTTPS ☐ Disable ☒ Enable

Port (1 ~ 65535)

HTTPS

To enable or disable the HTTPS service here. Note that the HTTPS function of this device is not only encrypted the web content but also audio/video data.

Port

Choose the HTTPS port. The default value is 443.

3.5.3 DDNS server

DDNS: Stands for Dynamic Domain Name Server

The device supports DDNS. If your device is connected to xDSL directly, you might need this feature. However, if your device is behind a NAT router, you will not need to enable this feature. Because DDNS allows the device to use an easier way to remember naming format rather than an IP address. The name of the domain is like the name of a person, and the IP address is like his phone number. On the Internet we have IP numbers for each host (computer, server, router, and so on), and we replace these IP numbers to easy remember names, which are organized into the domain name. As to xDSL environment, most of the users will use dynamic IP addresses. If users want to set up a web or a FTP server, then the Dynamic Domain Name Server is necessary. For more DDNS configuration, please consult your dealer.

Your Internet Service Provider (ISP) provides you at least one IP address which you use to connect to the Internet. The address you get may be static, meaning it never changes, or dynamic, meaning it's likely to change periodically. Just how often it changes, depends on your ISP. A dynamic IP address complicates remote access since you may not know what your current WAN IP address is when you want to access your network over the Internet. The solution to the dynamic IP address problem comes in the form of a dynamic DNS service.

The Internet uses DNS servers to lookup domain names and translates them into IP addresses. Domain names are just easy to remember aliases for IP addresses. A dynamic DNS service is unique because it provides a means of updating your IP address so that your listing will remain current when your IP address changes. There are several excellent DDNS services available on the Internet and best of all they're free to use. One such service you can use is www.DynDNS.org. You'll need to register with the service and set up the domain name of your choice to begin using it. Please refer to the home page of the service for detailed instructions or refer to Appendix E for more information.

Network HTTPS **DDNS** PPPoE Streaming UPnP Bonjour ONVIF IP Filter IP Notification

DDNS ☐ Disable ☒ Enable

Server Name **dyndns.org** ▼

DDNS Host (1 ~ 30 Digits)

User Name (< 22 Digits)

Password (< 22 Digits)

OK Cancel

DDNS	To enable or disable the DDNS service here.
Server name	Choose the built-in DDNS server.
DDNS Host	The domain name is applied of this device.
User Name	The user name is used to log into DDNS.
Password	The password is used to log into DDNS.

3.5.4 PPPoE

PPPoE: Stands for Point to Point Protocol over Ethernet

A standard builds on Ethernet and Point-to-Point network protocol. It allows Internet camera connects to Internet with xDSL or cable connection; it can dial up your ISP and get a dynamic IP address. For more PPPoE and Internet configuration, please consult your ISP.

It can directly connect to the xDSL, however, it should be setup on a LAN environment to program the PPPoE information first, and then connect to the xDSL modem. Power on again, then the device will dial on to the ISP connect to the WAN through the xDSL modem.

The procedures are

- Connect to a LAN by DHCP or Fixed IP
- Access the device, enter **Setting** → **Network** → **PPPoE** as below

PPPoE	To enable or disable the PPPoE service here.
User Name	Type the user name for the PPPoE service which is provided by ISP.
Password	Type the password for the PPPoE service which is provided by ISP.
IP Address / Subnet Mask / Gateway	Shows the IP information got from PPPoE server site.
Status	Shows the Status of PPPoE connection.

3.5.5 Streaming

RTSP is a streaming control protocol, and a starting point for negotiating transports such as RTP, multicast and Unicast, and for negotiating codecs. RTSP can be considered a "remote control" for controlling the media stream delivered by a media server. RTSP servers typically use RTP as the protocol for the actual transport of audio/video data.

The screenshot shows a configuration window with a blue header bar containing several tabs: Network, HTTPS, DDNS, PPPoE, Streaming (selected), UPnP, Bonjour, ONVIF, IP Filter, and IP Notification. The main area is a large blue rectangle. At the top left of this area, there are two rows of input fields. The first row is labeled 'RTSP Port' and contains a text box with '554', a range '(554 ~ 65535)', and a 'Test' button. The second row is labeled 'RTP Port' and contains two text boxes: the first has '50000' and the second has '50999', followed by a range '(1024 ~ 65535)'. At the bottom of the window, there are two buttons: 'OK' and 'Cancel'.

RTSP Port	Choose the RTSP port. The RTSP protocol allows a connecting client to start a video stream. Enter the RTSP port number to use. The default value is 554.
RTP Port	Specify the range of transmission port number of video stream. The default range is 50000 to 50999. User can specify a number between 1024 and 65535.
NOTE	<ol style="list-style-type: none"> 1. To use the 3GPP function, in addition to previous section, you might need more information or configuration to make this function work. 2. The camera must be set as Multi-profile mode, not Mega-pixel mode. Otherwise this device cannot serve 3GPP stream. 3. To use the 3GPP function, it strongly recommends installing the Networked Device with a public and fixed IP address without any firewall protection. 4. Port 554 is the default for RTSP service. However, sometimes, some service providers change this port number for some reasons. If so, user needs to change this port accordingly.
Dialing procedure	<ol style="list-style-type: none"> 1. Choose a verified player (PacketVideo, QuickTime or Real player currently) 2. Use the following URL to access: rtsp://host/mpeg4/media.3gp Where host is the host name or IP address of the camera.
Compatible 3G mobile phone	Please contact your dealer to get the approved list of compatible 3G phone.

3.5.6 UPnP

UPnP is short for Universal Plug and Play, which is a networking architecture that provides compatibility among networking equipment, software, and peripherals. This device is an UPnP enabled Network Camera. If your operating system is UPnP enabled, the device will automatically be detected and a new icon will be added to “My Network Places.” If you do not want to use the UPnP functionality, it can be disabled

In addition, this device also provides UPnP IGD function for NAT traversal easily. Use NAT traversal when your device is located on an intranet (LAN) and you wish to make it available from the other (WAN) side of a NAT router. With NAT traversal properly configured, all HTTP traffic to an external HTTP port in the NAT router will be forwarded to the device.

NetworkHTTPSDDNSPPPoEStreamingUPnPBonjourONVIFIP FilterIP Notification

UPnP

Disable

Enable

Friendly Name

AM2590D - 000EAEA001FD

(readonly)

UPnP NAT Traversal

Disable

Enable

Port Range

32768

-

65535

(1 ~ 65535)

External IP Address

AddPortMapping(32768, 32768, 192.168.0.199) failed

(readonly)

OK

Cancel

UPnP	To enable or disable the UPnP service here.
Friendly Name	Shows the friendly name of this device here.
UPnP NAT Traversal	When enabled, the device will attempt to configure port mapping in a NAT router on your network, using UPnP™. Note that UPnP™ must be enabled in the NAT router first.
Port Range	The port range will open in NAT router.
External IP address	Show the IP address and port for WAN access through Internet. If NAT traversal is configured successfully, user can use this IP address and port to access this device.

3.5.7 Bonjour

Bonjour, also known as zero-configuration networking, enables automatic discovery of computers, devices, and services on IP networks. Bonjour uses industry standard IP protocols to allow devices to automatically discover each other without the need to enter IP addresses or configure DNS servers. Specifically, Bonjour enables automatic IP address assignment without a DHCP server, name to address translation without a DNS server, and service discovery without a directory server. Bonjour is an open protocol which Apple has submitted to the IETF as part of the ongoing standards-creation process.

Network HTTPS DDNS PPPoE Streaming UPnP **Bonjour** ONVIF IP Filter IP Notification

Bonjour ☐ Disable ☒ Enable

Friendly Name ICA-HM312 - 00304FA1D64B (readonly)

Bonjour

To enable or disable the Bonjour service here.

Friendly Name

To show the friendly name of this device here.

3.5.8 Onvif

ONVIF is a global and open industry forum with the goal to facilitate the development and use of a global open standard for the interface of physical IP-based security products. Or in other words, to create a standard for how IP products within video surveillance and other physical security areas can communicate with each other.



ONVIF	To enable or disable the ONVIF interface here.
Version	Currently, the V1.0 or V1.01/1.02 is available.

3.5.9 IP Filter

You can enter different user's IP address which are allowing enter or denying by the device.

The screenshot shows a web interface with a top navigation bar containing tabs: Network, HTTPS, DDNS, PPPoE, Streaming, UPnP, Bonjour, ONVIF, IP Filter (selected), and IP Notification. The main content area has a blue background. It includes two sections: 'IP Filter' with radio buttons for 'Disable' (selected) and 'Enable'; and 'IP Filter Policy' with radio buttons for 'Deny' and 'Allow' (selected). Below these is a 'Save' button. A large empty white box is on the left. To its right is a 'Filter IP List' section containing a 'Filter IP' input field and three buttons: 'Add', 'Delete', and 'DeleteAll'.

IP Filter

To enable or disable the IP filter function here.

IP Filter Policy

Choose the filter policy where is denying or allowing.

3.5.10 IP Notification

In case the IP address is changed, system is able to send out an email to alert someone if the function is enabled.

Network HTTPS DDNS PPPoE Streaming UPnP Bonjour ONVIF IP Filter IP Notification

SMTP Notification(email) ☐ Disable ☒ Enable

Send To (< 129 Digits)

Subject IP notification (< 65 Digits)

TCP Notification ☐ Disable ☒ Enable

TCP Server (< 65 Digits)

TCP Port (1 ~ 65535)

Message (< 65 Digits)

HTTP Notification ☐ Disable ☒ Enable

URL http:// (< 61 Digits)

HTTP Login Name (< 22 Digits)

HTTP Login Password (< 22 Digits)

Proxy Address (< 129 Digits)

Proxy Port (1 ~ 65535)

Proxy Login Name (< 22 Digits)

Proxy Login Password (< 22 Digits)

OK Cancel

SMTP Notification (e-mail)

If enable this function, then the “**Send to**” and “**Subject**” field need to be filled.

Send To

Type the receiver’s e-mail address. This address is used for reply mail.

Subject

Type the subject/title of the E-mail.

TCP Notification

If enable this function, then the “**TCP Server**“, “**TCP Port**“, and “**Message**” fields need to be filled.

TCP Server

Type the server name or the IP address of the TCP server.

TCP Port

Set port number of TCP server.

Message

The message will be sent to FTP server.

HTTP Notification

If enable this function, then the fields below need to be filled.

URL


Type the server name or the IP address of the HTTP server

HTTP Login name	Type the user name for the HTTP server.
HTTP Login Password	Type the password for the HTTP server.
Proxy Address	Type the server name or the IP address of the HTTP Proxy.
Proxy Port	Set port number of Proxy.
Proxy Login name	Type the user name for the HTTP Proxy.
Proxy Login Password	Type the password for the HTTP Proxy.
Custom parameter	User can set specific parameters to HTTP server.
Message	The message will be sent to HTTP server.

3.6 Camera Configuration


Use this menu to set the function of the camera of Internet camera

3.6.1 Picture

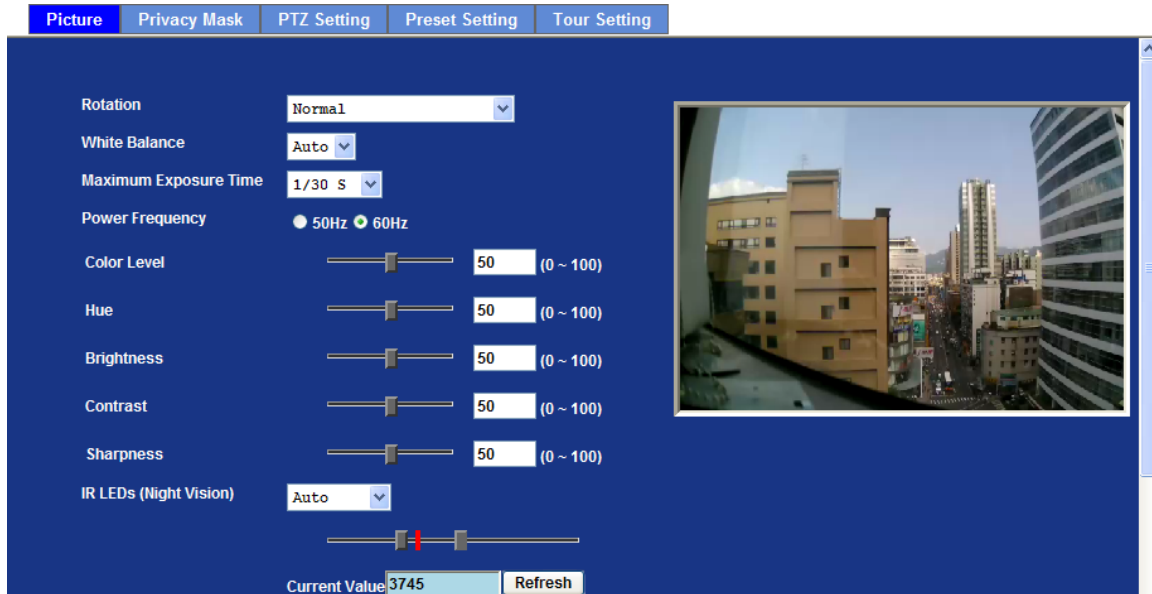

Rotation

Turn the "Mirror" and "Vertical Flip" On or OFF. The image will be overturned as below.

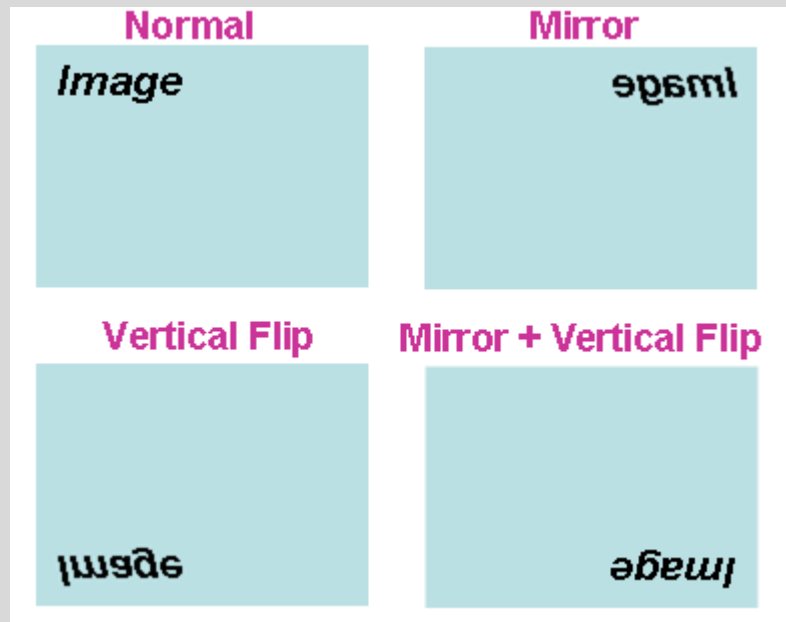

White Balance:


Auto: will adjust the white balance automatically.

Hold: will hold the white balance.

Power Frequency	Frequency of power line: 50 or 60Hz
Color Level	Large value will be colorful.
Hue	Change the value will result to color tuning.
Brightness	Large value will brighten camera.
Contrast	Large value will contrast camera heavily.
Sharpness	Large value will sharpen camera.
IR LEDs (Night Vision)	<p>User can turn Auto/Off/On/Schedule of the night mode. This function is very useful under low illumination environment.</p> <p>This is an optional function by model. In case, the camera is built-in ICR, user can configure these parameters to control ICR function. There are 4 modes of ICR: Night, Day, Auto and Schedule. In case the Auto mode is selected, user needs to specify 3 parameters in advance:</p> <p>Night Mode Threshold (0~10000): this value set the threshold to activate night mode. It should be lower or equal to Day Mode Threshold.</p> <p>Day Mode Threshold (0~10000): this value set the threshold to activate day mode. It should be higher or equal to Night Mode Threshold.</p> <p>Delay Time: The delay time between ICR switching.</p> <p>Note that Current Value is the current luminance from the captured video. It's a useful reference to set Day/Night Mode Threshold.</p>
De-Noise	De-Noise can remove or lower unwanted noise and preserve fine details and edges.
Default Settings	Restore to factory image settings.

3.6.2 Privacy Mask

Use this page to specify privacy mask window 1 to window 8 and set the name and gray level for selected window.

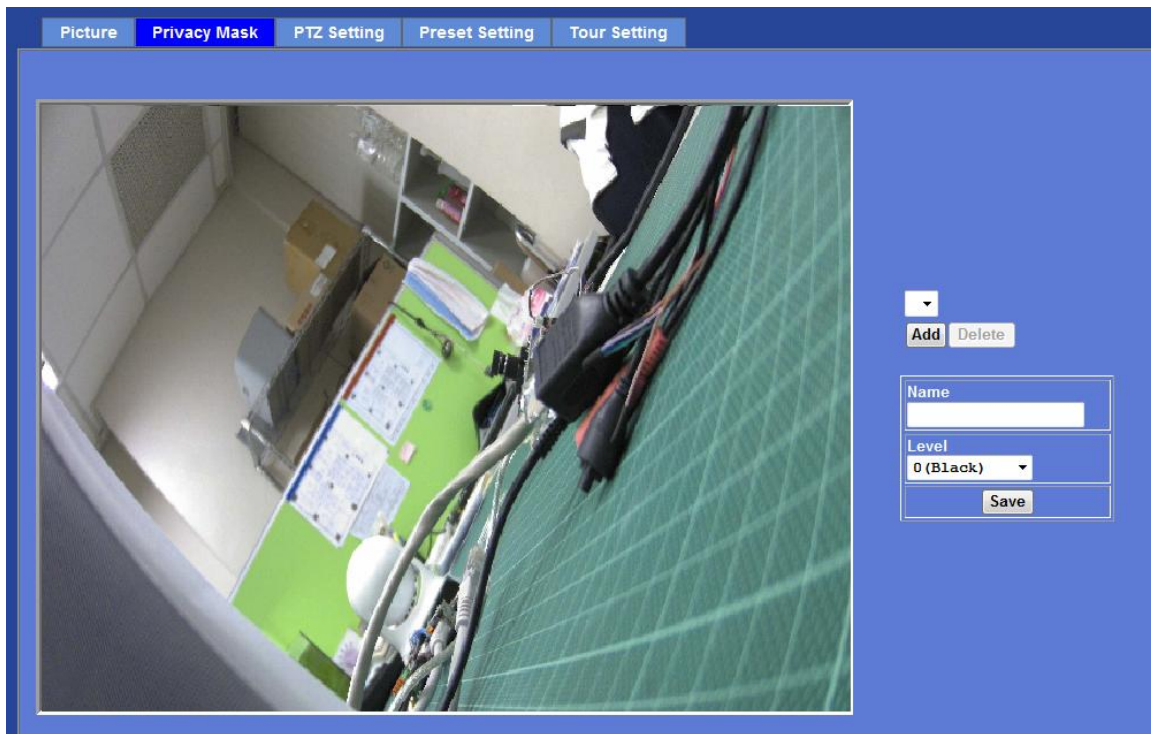

Add and Delete

To add or delete the privacy mask windows, user can specify up to 7 windows to mask the video captured by this device. By dragging mouse on the image, you can change the position and size of the selected window accordingly.

Name


Name of the specified privacy window

Level

To define the gray level of mask block. The smaller value will be darker.

3.6.3 PTZ Setting

This page allow user to modify the RS-485 interface according to the P/T scanner.

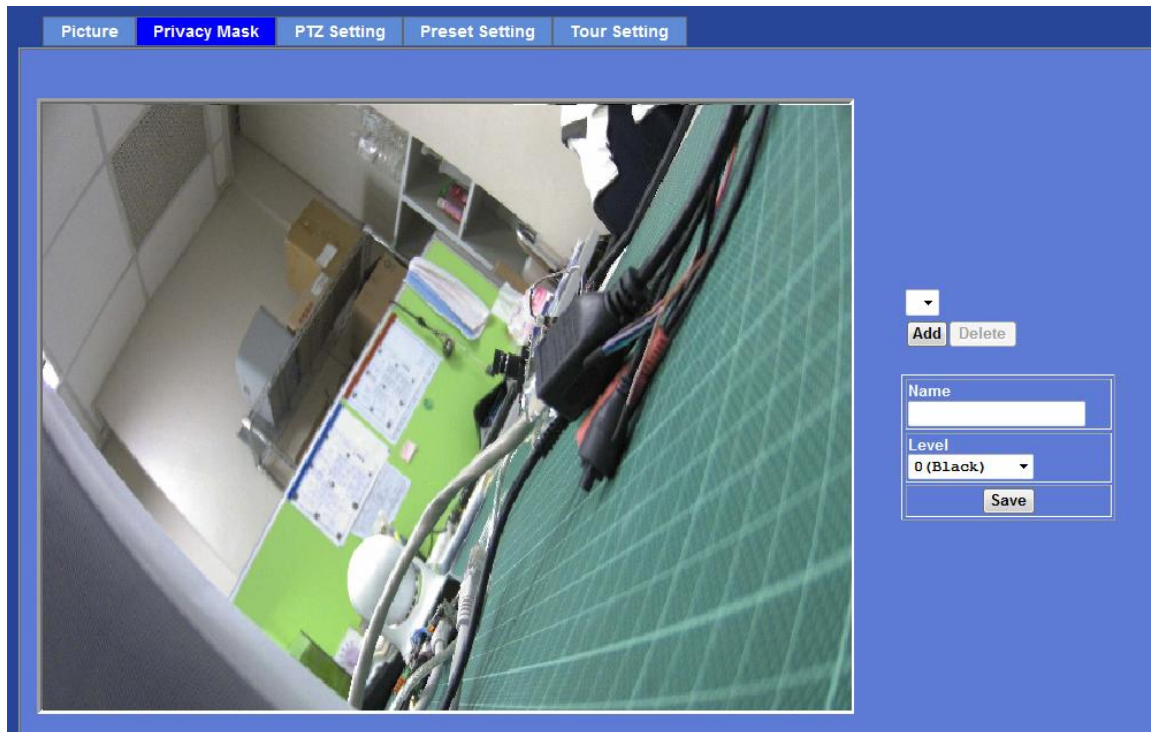

Camera Protocol	This device can connect to a PTZ camera or speed dome camera and controls them thru RS-485 interface.
------------------------	---

Camera Address	<p>This is the camera ID set in PTZ camera or speed dome camera.</p> <p>Note that please DO NOT changes the default value if unnecessary. If so, user needs to check and set value properly for both sides.</p>
-----------------------	--

Baud rate	This is the communication speed between network module and P/T scanner.
------------------	---

NOTE	If need to change these parameters, user needs to check and set value properly for both, network module and P/T scanner.
-------------	--

3.6.4 Preset Setting

This page provides the edit tool to modify or delete the “Preset Setting” item by item.

PicturePrivacy MaskPTZ SettingPreset SettingTour Setting

Preset Number	Preset Name	Home Position
---------------	-------------	---------------

Preset List		
Preset Number		
Preset Name		
Home Position	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	
<div>ModifyDelete</div>		

3.6.5 Tour Setting

Up to 64 positions can be preset, and the camera can be programming to move to the preset position sequentially.

PicturePrivacy MaskPTZ SettingPreset SettingTour Setting

Tour Number	Tour Name	Running
-------------	-----------	---------

Sequence	Preset Name	Wait Time
----------	-------------	-----------

Tour Name

Running

☒ Enable ☐ Disable

Add

Modify

Delete

Modify

Tour Name	The group name of the sequence of camera tour. The maximum number of camera tour is 16.
Running	Enable or disable this camera tour.
Preset	Set the sequence of the tour. Maximum 16 points can be assigned. The selected preset position is added in the Sequence list from 1 to 16.
Wait Time	Type a period of time during which the camera is to stay at each preset point, between 0 to 36000 seconds.
NOTE	To use the camera tour function, user must preset some camera positions first. The maximum number of preset points is 64.

3.7 System

Use this menu to perform the principal settings of Internet camera.

3.7.1 System

System Date & Time Maintenance

Device Title (0 ~ 30 Digits)

Software Version 6.D.2.6834

Network LED ☒ Enable ☐ Disable

Power LED ☒ Enable ☐ Disable

Log

```
Sep 9 05:57:04 ICA-HM351 user.debug rtsp-svr: session count 1
Sep 9 05:57:04 ICA-HM351 user.err venc: profile[0] running 0
Sep 9 05:57:04 ICA-HM351 user.err venc: graph 0-0 , enabled = 0
Sep 9 05:57:04 ICA-HM351 user.warn kernel: ##### Transfer Group 1 Done,118ms!
Sep 9 05:57:05 ICA-HM351 user.debug rtsp-svr: accepted connection from 60.250.139.9
Sep 9 05:57:05 ICA-HM351 user.debug rtsp-svr: client request: 'DESCRIBE' 'rtsp://210.6
Sep 9 05:57:05 ICA-HM351 user.debug rtsp-svr: describing streams under 'rtsp://210.
Sep 9 05:57:05 ICA-HM351 user.debug rtsp-svr: find videoNo=1, audio=1
Sep 9 05:57:05 ICA-HM351 user.debug rtsp-svr: find path [/media.amp?streamprofile=F
Sep 9 05:57:05 ICA-HM351 user.debug rtsp-svr: client request: 'SETUP' 'rtsp://210.6
```

Device title	You can enter the name of this unit here. It's very useful to identify the specific device from multiple units.
---------------------	---

Software version	This information shows the software version in the device.
-------------------------	--

Network LED	Switch the LED light of this Internet camera on or off, that Network LEDs will stop working, in case you don't want other people know the camera is transferring data.
--------------------	--

Power LED	Switch the LED light of this Internet camera on or off.
------------------	---

Log	User can check the system log information of the device, including the Main Info, Appended Info, Operator IP, and so on ...
------------	---

Reload	Click this button; user can refresh the log information of the device.
---------------	--

3.7.2 Date & Time

You can setup the time setting of Internet camera, make it synchronized with PC or remote NTP server. Also, you may select the correct time zone of your country.

Server Date & Time	Displays the date and time of the device
-------------------------------	--

PC Time	Displays the date and time of the connected PC
----------------	--

Adjust	Synchronize with PC	Click this option to enable time synchronization with PC time
	Manual setting	Click this option to set time and date manually
	Synchronize with NTP	Click this option if you want to synchronize the device's date and time with those of time server called NTP server (Network Time Protocol)

NTP server name	Type the host name or IP address or domain name of the NTP server.
------------------------	--

NTP sync. Interval	Select an interval between 1 and 23 hours at which you want to adjust the device's time referring to NTP server
---------------------------	---

Time zone	Set the time difference from Greenwich Mean Time in the area where the device is installed.
------------------	---

Daylight saving	Check this item to enable daylight saving adjustment.
Daylight Saving Start Time	Sets up the date and time of daylight saving start time.
Daylight Saving Stop Time	Sets up the date and time of daylight saving stop time.
Daylight Saving Offset	Sets up the date of daylight saving offset.

3.7.3 Maintenance

Default Settings (Include the network setting)	Recall the device hard factory default settings. Note that click this button will reset all device's parameters to the factory settings (including the IP address).
Default Settings (Except the network setting)	The unit is restarted and most current settings are reset to factory default values. This action will not reset the network setting.
Backup Setting	To take a backup of all of the parameters, click this button. If necessary, it will then be possible to return to the previous settings, if settings are changed and there is unexpected behavior.

Restore Setting

Click the “Browse” button to locate the saved backup file and then click the “Restore Setting” button. The settings will be restored to the previous configuration.

Firmware upgrade

The device supports new firmware upgrade.

1. Close all other application programs which are not necessary for firmware update.
2. Make sure that only you access this device at this moment
3. Disable Motion Detection function.
4. Select “**Firmware name**”
5. Select the Firmware binary file.

Note!! That it must make sure that the Firmware only applies to this device, once update, it will be burned into FLASH ROM of system.

6. Once the firmware file was selected, select “Upgrade”.
7. The upgrade progress information will be displayed on the screen.
8. A message will be shown while the firmware upgraded. Once the upgrading process completed, the device will reboot the system automatically.
9. Please wait for 80 seconds, and then you can use PLANET IPWizard II to search the device again.

Warning!!! The download firmware procedure cannot be interrupted. If the power and/or network connection are broken during the download procedure, it might possibly cause serious damage to the device.

Please be aware that you should not turn off the power during updating the firmware and wait for finish message.

Furthermore, do not try to upgrade new firmware if it's not necessary.

System Restart

The device is restarted without changing any of the settings.

3.8 Video

This device provides 2 modes of video profile. The first one is Mega-pixel mode which supports video resolution up to Mega-pixel. However the maximum frame rate of this mode is up to 15fps only. The second one is VGA mode which supports video resolution up to VGA but frame rate can be up to 30fps. User only can select either Mega-pixel or VGA mode to operate the camera. Switching Mega-pixel and VGA, the device will take time to reboot system.

3.8.1 Common

Video Profile

User can only choose either 720p or 2 Mega modes. 720p mode can serve H.264, MPEG4, and JPEG streams up to 1280x720 resolutions maximum. On the other hand, 2 Mega mode, it can streams up to 1080p or 1600x1200 resolution (depend on model) maximum.

Note that this camera supports local video output for TV monitor. It's very useful to check view angle or focus during camera installation. However, the local video output is only available at "720p" mode. If user needs this function, must switch this camera to "720p" mode first.

Text Overlay Setting

There are some important information can be embedded into image, including date, time, and/or text.

3.8.2 Video Profile

It's H.264 encoder mode in this profile.

Common		Video Profile		ROI				
Name	Video Type	Resolution	Rate Control	Quality	Bitrate	Max Frame Rate	GOP Control	ROI
Profile1	h264	1080p	EVBR	90	-	30	30	no
Profile2	h264	1080p	EVBR	90	-	30	30	no
Profile3	mjpeg	1080p	VBR	90	-	6	1	no
Profile4 (ROI)	h264	640x352	EVBR	90	-	30	30	yes
Profile5 (ROI)	h264	640x352	EVBR	90	-	30	30	yes
Profile6	h264	640x352	EVBR	90	-	30	30	no
Profile7	h264	640x352	EVBR	90	-	30	30	no
Profile8	h264	640x352	EVBR	90	-	30	30	no
Profile9	mpeg4	640x352	EVBR	90	-	30	30	no
Profile10	mjpeg	640x352	VBR	90	-	6	1	no

Name	Profile7
Video Type	h264
Resolution	640x352
ROI	<input type="radio"/> Yes <input checked="" type="radio"/> No
Rate Control	EVBR
	Quality 90
	Max Bitrate 5000 K bps 384 ~ 6144
Max Frame Rate	30
GOP Control	30

Name To assign a name to the selected profile.

Video Type Video codec of the selected profile.

Resolution Resolution of the selected profile.

ROI Assign the selected profile as a ROI stream or not. (Only available for the profiles with max resolution)

Rate Control Defines the rate control method of this profile. There are four options: Constant Bit Rate (CBR), Variable Bit Rate (VBR), Enhanced Constant Bit Rate (ECBR), and Enhanced Variable Bit Rate (EVBR).

For CBR, the video bit rate is between low to high bandwidth based on different resolutions. User can set the desired bit rate to match the limitation of bandwidth.

For VBR, user should choose the quality level to set the video quality rather than bit rate. The quality level is between 1 and 100. The higher value can reach the better quality but of course will consume higher bandwidth.

For ECBR, the video bitrates is based on normal CBR mode. However, the target bitrates can be increased to max target bitrate while lots of motion in video. The max target bitrates will keep a pre-defined time period and then back to normal CBR bitrates.


For EVBR, the video bitrates is based on normal VBR mode. However, the target bitrates can be increased to max target bitrates while lots of motion in video. The max target bitrates will keep a pre-defined time period and then back to normal VBR mode.

Max Frame Rate	Defines the targeted frame rate of this profile. For example, set the frame rate to 15 fps, then the image will be updated for 15 frames per second. User can set the desired max frame rate versus video quality under the limited bandwidth.
-----------------------	--

GOP Control	Defines the Intra/Inter-frame (I/P) ratio of this profile. For example, set the GOP to 30, then the video stream will have one Intra-frame every 30 frames.
--------------------	---


3.8.3 ROI

ROI means Region of Interest. Use this page to specify location of ROI windows. Only the maximum resolution profiles can be defined as ROI. In this model, the default ROI windows are profile 4 and 5.

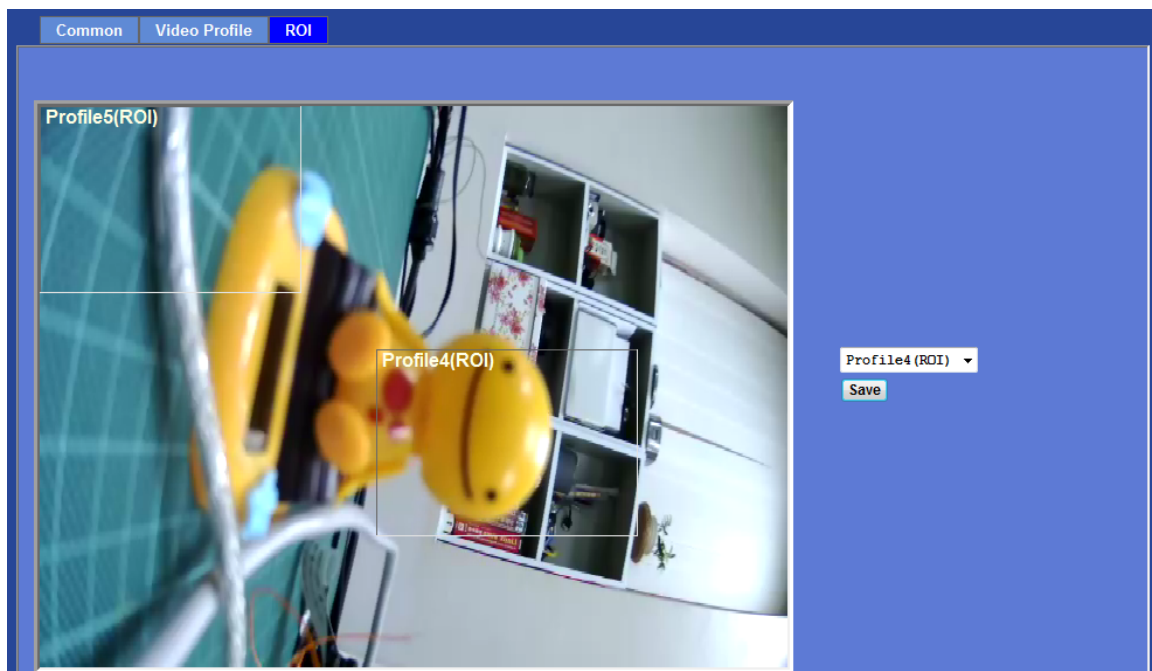

3.9 Audio Configuration

It's M-JPEG mode in this profile.

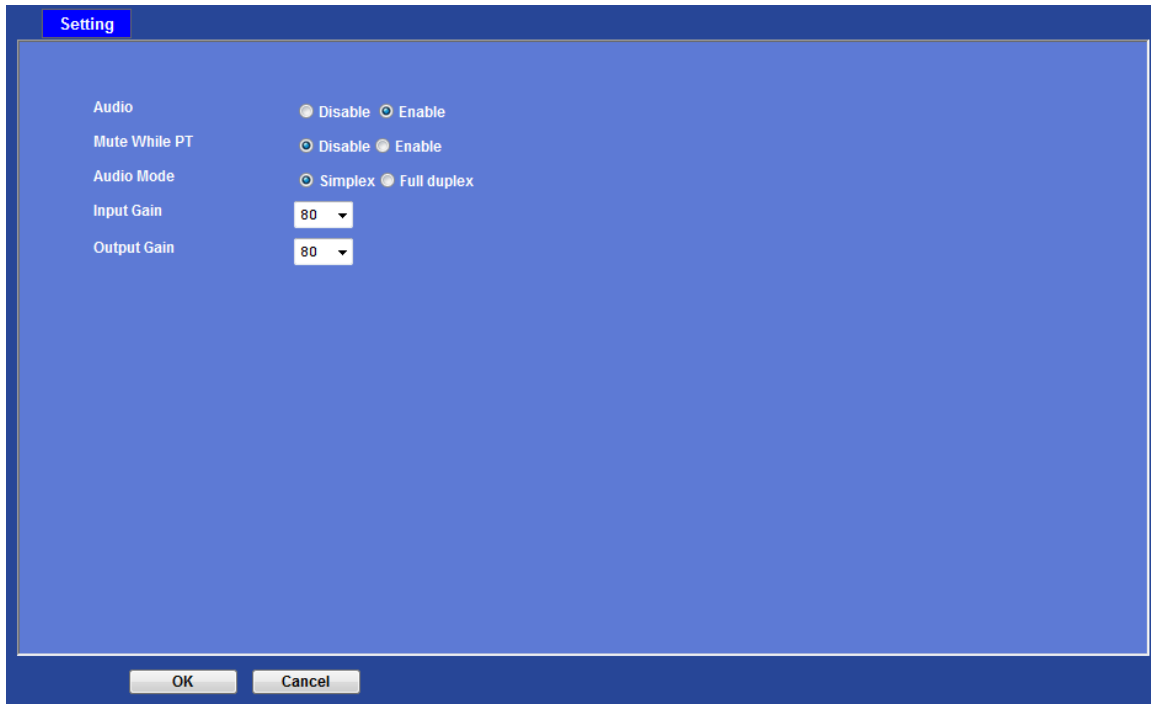

Audio	To enable or disable audio function
Mute While PT	Mute the audio while pan and/or tilt motion
Audio Mode	To select Simplex or Full duplex (2-way audio) mode.
Input Gain	To adjust gain of input audio
Output Gain	To adjust gain of output audio

3.10 User Privilege Access Configuration

Use this menu to set the user names and password of the Administrator and up to 10 users, and access right of each user.

Setting

Viewer Login ☒ Anonymous ☐ Only users in database

User Name	Access Right	PTZ Control
admin	administrator	yes
root	administrator	yes

User List	
User Name	<input type="text"/> (1 ~ 20 Digits)
Password	<input type="password"/> (0 ~ 20 Digits)
Verify Password	<input type="password"/> (0 ~ 20 Digits)
Access Right	<input checked="" type="radio"/> Administrator <input type="radio"/> Viewer
PTZ Control	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
<input type="button" value="Add"/> <input type="button" value="Modify"/> <input type="button" value="Delete"/>	

Viewer login

Select "Anonymous" to allow any one viewing the video once connected. Otherwise, only users in database can view the video after login.

Access right

Administrator can access every function in this device. However, Viewers only can view the video and access limited function.

PTZ Control

Authorize this user to control PTZ function or not.

Add, update, and remove of Users account

Manage the user's account of viewer user.

3.11 E-Mail Configuration

You may setup SMTP mail parameters for further operation of Event Schedule. That's, if users want to send the alarm message out, it will need to configure parameters here and also add at least one event schedule to enable event triggering.

Setting

SMTP Server (< 129 Digits) **Test**

SMTP Port (1 ~ 65535)

SSL ☐ Disable ☒ Enable

SMTP Authentication ☐ Disable ☒ Enable

Authentication User Name (< 65 Digits)

Authentication Password (< 22 Digits)

E-mail From (< 129 Digits)

E-mail To (< 129 Digits)

E-mail Subject (< 65 Digits)

OK Cancel

SMTP Server	Type the SMTP server name or the IP address of the SMTP server.
--------------------	---

Test	Send a test mail to mail server to check this account is available or not.
-------------	--

SMTP Port	Set port number of SMTP service.
------------------	----------------------------------

SSL	Enable SSL function or not.
------------	-----------------------------

	Select the authentication required when you send an e-mail.
SMTP Authentication	Disable: If no authentication is required when an e-mail is send. Enable: If authentication is required when an e-mail is sent.

Authentication Name	User Type the user name for the SMTP server if Authentication is Enable.
----------------------------	---


Authentication Password	Type the password for the SMTP server if Authentication is Enable.
--------------------------------	--

E-mail From	Type the sender's E-mail address. This address is used for reply
--------------------	--

	e-mails.
E-mail To	Type the receiver's e-mail address.
E-mail Subject	Type the subject/title of the e-mail.

3.12 Object Detection

Use this menu to specify motion detection window 1 to window 4 and set the conditions for detection while observing a captured image.

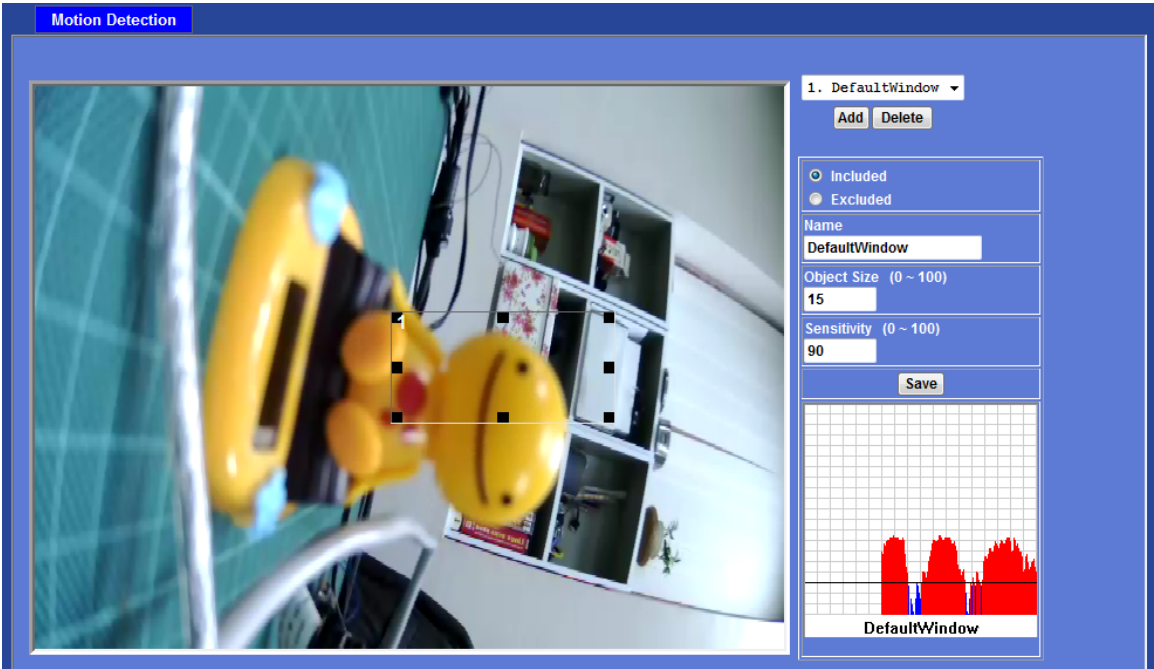

Add and Del	To add or delete the motion windows. User can specify up to 4 Included and/or Excluded windows to monitor the video captured by this device. By dragging mouse on the image, you can change the position and size of the selected motion window accordingly.
Included or Excluded Window	<p>These windows can be specified as Included or Excluded type.</p> <p>Included: Windows target specific areas within the whole video image</p> <p>Excluded: Windows define areas within an Include window that should be ignored (areas outside Include windows are automatically ignored)</p>
Name	Name of the specified motion window.

Object Size	Defines the object size of motion detection. The higher object size will only larger objects trigger motion detection. The lower object size will even small objects trigger motion detection too. Generally speaking, the smaller size will be easier to trigger event.
--------------------	--

Sensitivity	Defines the sensitivity value of motion detection. The higher value will be more sensitivity.
--------------------	---

3.13 Event Server Configuration

3.13.1 FTP Server

You may setup FTP parameters for further operation of Event Schedule. That's, if users want to send the alarm message to an FTP server, it will need to configure parameters here and also add at least one event schedule to enable event triggering as SMTP.

FTP Server
TCP Server
HTTP Server
SAMBAserver

Name	FTP Server	FTP Port	FTP Path

Name	<input style="width: 90%;" type="text"/> (<21 Digits)
FTP Server	<input style="width: 90%;" type="text"/> Test
FTP Login Name	<input style="width: 90%;" type="text"/> (<21 Digits)
FTP Login Password	<input style="width: 90%;" type="password"/> (<21 Digits)
FTP Port	<input style="width: 90%;" type="text" value="21"/> (1 ~ 65535)
FTP Path	<input style="width: 90%;" type="text"/> (<64 Digits)
FTP Passive Mode	<input checked="" type="radio"/> Disable <input type="radio"/> Enable

Name	User can specify multiple FTP paths as wish. Therefore, user needs to specify a name for each FTP setting.
-------------	--

FTP Server	Type the server name or the IP address of the FTP server.
-------------------	---

Test	Check the FTP server whether this account is available or not.
-------------	--

FTP Login name	Type the user name for the FTP server.
-----------------------	--

FTP Login Password	Type the password for the FTP server.
FTP Port	Set port number of FTP service.
FTP Path	Set working directory path of FTP server.
FTP Passive Mode	Select passive or active mode connecting to FTP server.

3.13.2 TCP Server

In addition to send video file to FTP server, the device also can send event message to specified TCP server.

Name		TCP Server	TCP Port
Name	<input type="text"/>	(<21 Digits)	
TCP Server	<input type="text"/>	Test	
TCP Port	<input type="text"/>	(1 ~ 65535)	

Name	User can specify multiple TCP servers as wish. Therefore, user needs to specify a name for each TCP server setting.
TCP Server	Type the server name or the IP address of the TCP server.
TCP Port	Set port number of TCP server.

3.13.3 HTTP Server

The device also can send event message to specified HTTP server.


Name	HTTP Server	Proxy Address
------	-------------	---------------

Name	<input type="text"/>	(<21 Digits)
URL	<input type="text" value="http://"/>	(<60 Digits) <input type="button" value="Test"/>
HTTP Login Name	<input type="text"/>	(<21 Digits)
HTTP Login Password	<input type="text"/>	(<21 Digits)
Proxy Address	<input type="text"/>	
Proxy Login Name	<input type="text"/>	(<21 Digits)
Proxy Login Password	<input type="text"/>	(<21 Digits)
Proxy Port	<input type="text"/>	(1 ~ 65535)

Name	User can specify multiple HTTP servers as wish. Therefore, user needs to specify a name for each HTTP server setting.
URL	Type the server name or the IP address of the HTTP server.
Test	Check the HTTP server whether it is available or not.
HTTP Login name	Type the user name for the HTTP server.
HTTP Login Password	Type the password for the HTTP server.
Proxy Address	Type the server name or the IP address of the HTTP Proxy.
Proxy Login name	Type the user name for the HTTP Proxy.
Proxy Login Password	Type the password for the HTTP Proxy.
Proxy Port	Set port number of Proxy.

3.13.4 SAMBA Server

The device also can send video stream to specified SAMBA server. Most of the time, the SAMBA server will be another PC or NAS server.

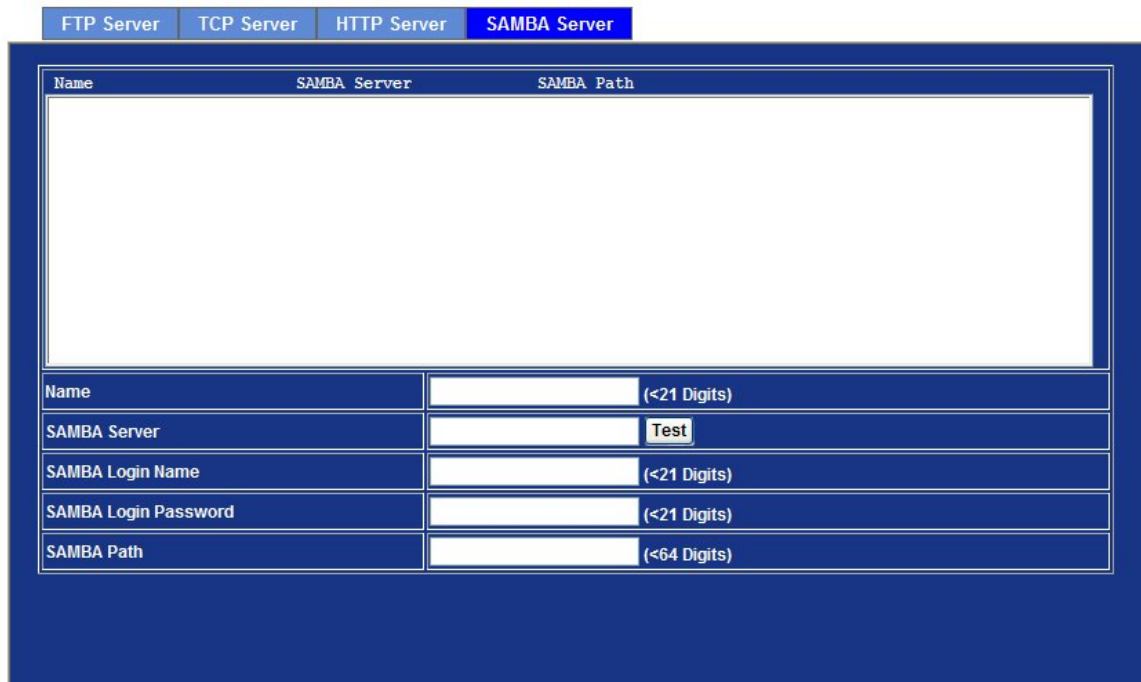

Name	SAMBA Server	SAMBA Path
------	--------------	------------

Name	<input type="text"/>	(<21 Digits)
SAMBA Server	<input type="text"/>	<input type="button" value="Test"/>
SAMBA Login Name	<input type="text"/>	(<21 Digits)
SAMBA Login Password	<input type="password"/>	(<21 Digits)
SAMBA Path	<input type="text"/>	(<64 Digits)

Name	User can specify multiple HTTP servers as wish. Therefore, user needs to specify a name for each HTTP server setting.
SAMBA Server	Type the server name or the IP address of the SAMBA server.
Test	Check the SAMBA server whether this account is available or not.
SAMBA Login name	Type the user name for the SAMBA server.
SAMBA Login Password	Type the password for the SAMBA server.
SAMBA Path	Set working directory path of SAMBA server.

3.14 Event Schedule Configuration

This menu is used to specify the schedule of Events and activate the some actions provided by this device.

Setting
Record

Name	Enable	Type	Weekday	Start	Duration	Trigger by	Action
Name	<input type="text"/>						
Enable	<input checked="" type="radio"/> Yes <input type="radio"/> No						
Type	<input checked="" type="radio"/> Event Trigger <input type="radio"/> Schedule Trigger, Interval <input type="text" value="1"/> (Minute)						
Enable Time	<input checked="" type="checkbox"/> Sun <input checked="" type="checkbox"/> Mon <input checked="" type="checkbox"/> Tue <input checked="" type="checkbox"/> Wed <input checked="" type="checkbox"/> Thu <input checked="" type="checkbox"/> Fri <input checked="" type="checkbox"/> Sat Start from <input type="text" value="0"/> : <input type="text" value="0"/> , Duration <input type="text" value="24"/> : <input type="text" value="0"/> (max 168:00 hours)						
Trigger by	<input type="checkbox"/> Sensor <input type="text" value="Active"/> <input type="checkbox"/> Motion Area <input type="text" value=""/>						
Action	<input type="checkbox"/> Go <input checked="" type="radio"/> Preset <input type="text" value=""/> <input type="radio"/> Tour <input type="text" value=""/> <input type="checkbox"/> Voice Alert, Duration <input type="text" value="5"/> (Seconds) <input type="checkbox"/> Alarm Out, Duration <input type="text" value="5"/> (Seconds) <input type="checkbox"/> Send FTP <input type="text" value=""/> <input type="checkbox"/> Send TCP <input type="text" value=""/> <input type="checkbox"/> Send HTTP <input type="text" value=""/> <input type="checkbox"/> Send E-Mail <input type="checkbox"/> Send Samba <input type="text" value=""/>						

Name Name of the Event or Schedule.

Enable Enable or disable this Event or Schedule.

Type Schedule start with Event trigger or Schedule trigger.

Enable Time Define the feasible time slot.

Trigger by Select the triggered sources with event trigger.

Action Define the actions once event triggered.

Example1.

SettingRecord

Name	Enable	Type	Weekday	Start	Duration	Trigger by	Action
Send_to_FTP	yes	Event	1111111	0:0	24:0	x,x	FTP

Name

Send_to_FTP

Enable

☒ Yes
☐ No

Type

☒ Event Trigger
☐ Schedule Trigger, Interval (Minute)

Enable Time

☒ Sun
☒ Mon
☒ Tue
☒ Wed
☒ Thu
☒ Fri
☒ Sat
Start from : , Duration : (max 168:00 hours)

Trigger by

☐ Sensor
☐ Motion Area

Action

☐ Go
☒ Preset
☐ Tour
☐ Voice Alert, Duration (Seconds)
☐ Alarm Out, Duration (Seconds)
☒ Send FTP
☐ Send TCP
☐ Send HTTP
☐ Send E-Mail
☐ Send Samba

Send file to FTP server by motion triggered always:

1. Select event trigger
2. Enable time: start from 00:00 to 24:00 every day
3. Trigger by: Motion Area (Added in Object Detection page)
4. Action : Send FTP (Add in Event Server -> FTP Server page)

Example2.

The screenshot shows a software interface with two tabs: 'Setting' and 'Record'. The 'Setting' tab is active, displaying a table with the following data:

Name	Enable	Type	Weekday	Start	Duration	Trigger by	Action
Send_to_email	yes	Event	1111111	0:0	24:0	xx,x	SMTP

Below the table, the configuration for the 'Send_to_email' entry is shown in a form:

- Name:** Send_to_email
- Enable:** ☒ Yes ☐ No
- Type:** ☒ Event Trigger ☐ Schedule Trigger, Interval 1 (Minute)
- Enable Time:**
 - Weekdays: ☒ Sun ☒ Mon ☒ Tue ☒ Wed ☒ Thu ☒ Fri ☒ Sat
 - Start from: 0, Duration: 24 (max 168:00 hours)
- Trigger by:** ☐ Motion Area ☒ Preset
- Action:**
 - ☐ Go ☒ Preset ☐ Tour
 - ☐ Voice Alert, Duration: (Seconds)
 - ☐ Send FTP: Internet_FTP
 - ☐ Send TCP
 - ☐ Send HTTP
 - ☒ Send E-Mail
 - To email address: kaceic@gmail.com

Send file to E-Mail server by motion triggered from Friday 18:00 to Saturday 06:00

1. Select event trigger.
2. Enable time: start from Friday 18:00 and keep work in 12 hours, so it will stop on Saturday 06:00.
3. Trigger by : Motion Area (Added in Object Detection page)
4. Action : Send e-mail (Add in E-Mail page)
 - i. To email address: You need to input the receiver email address.
 - ii. Subject: You could specify the email subject.
 - iii. Message: You could specify the email content.

Example3.

SettingRecord

Name	Enable	Type	Weekday	Start	Duration	Trigger by	Action
Trigger_Voice_Al...no		Schedule	1111111	18:0	6:0	x,M0	VOICE

Name

Trigger_Voice_Alert

Enable

☒ Yes
 ☐ No

Type

☐ Event Trigger
 ☒ Schedule Trigger, Interval (Minute)

Enable Time

☒ Sun
 ☒ Mon
 ☒ Tue
 ☒ Wed
 ☒ Thu
 ☐ Fri
 ☐ Sat
 Start from : , Duration : (max 168:00 hours)

Trigger by

☐ Sensor
☒ Motion Area

Action


☐ Go
 ☒ Preset
 ☐ Tour
 ☒ Voice Alert, Duration (Seconds)
 ☐ Alarm Out, Duration (Seconds)
 ☐ Send FTP
 ☐ Send TCP
 ☐ Send HTTP
 ☐ Send E-Mail
 ☐ Send Samba

Send file to E-Mail server by motion triggered from Friday 18:00 to 24:00 from Monday to Friday.

1. Type: Select schedule trigger and interval is 10-minute.
2. Enable Time: Select Monday to Friday, and set start time from 18:00 and keep work in 6 hours.
3. Trigger by: You do not need to choose it, because this will be triggered every minute.
4. Action: Voice Alert.

3.15 Record Configuration

User can choose the type of record file for event or schedule application.

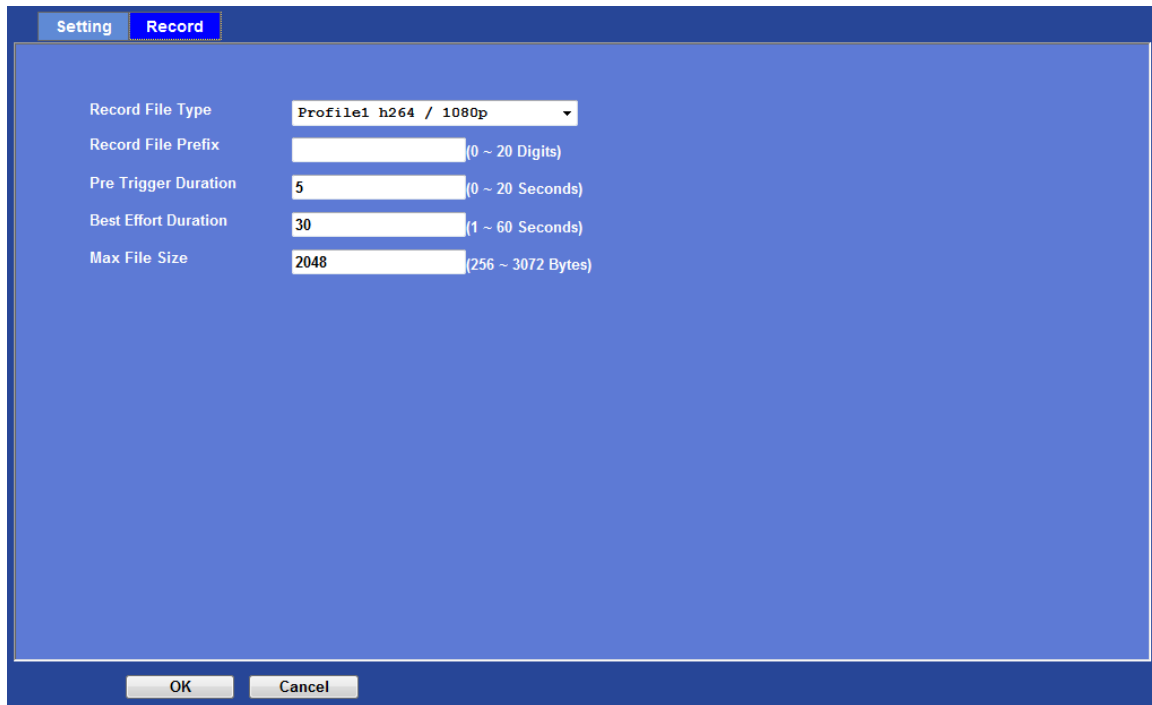

The image shows a 'Record Configuration' dialog box with a blue background. At the top, there are two tabs: 'Setting' and 'Record', with 'Record' being the active tab. The dialog contains five configuration items, each with a label and a corresponding input field or dropdown menu. The 'Record File Type' is a dropdown menu showing 'Profile1 h264 / 1080p'. The 'Record File Prefix' is a text input field. The 'Pre Trigger Duration' is a numeric input field with the value '5'. The 'Best Effort Duration' is a numeric input field with the value '30'. The 'Max File Size' is a numeric input field with the value '2048'. Each input field has a small text label to its right indicating the range of possible values. At the bottom of the dialog, there are two buttons: 'OK' and 'Cancel'.

Configuration Item	Value	Range
Record File Type	Profile1 h264 / 1080p	-
Record File Prefix		(0 ~ 20 Digits)
Pre Trigger Duration	5	(0 ~ 20 Seconds)
Best Effort Duration	30	(1 ~ 60 Seconds)
Max File Size	2048	(256 ~ 3072 Bytes)

Record File Type	Choose AVI or JPEG file format for record file.
-------------------------	---

Record File Prefix	Define the prefix of recorded filename.
---------------------------	---

Pre-Trigger Duration	Define the maximum duration of pre-alarm.
-----------------------------	---

Best Effort Duration	Define the best effort duration of post-alarm.
-----------------------------	--

Max File Size	Define the maximum buffer size of record file.
----------------------	--

Appendix A: Alarm I/O Connector

Some features of the Camera can be activated by the external sensor that senses physical changes in the area Camera is monitoring. These changes can include intrusion detection or certain physical change in the monitored area. For examples, the external sensor can be a door switch or an infrared motion detector. These devices are customer provided, and are available from dealers who carry surveillance and security products. Electrically, they must be able to provide a momentary contact closure.


This Camera provides wires for general I/O terminal and RS-485 interface as below:

Cable for I/O connectors:

Name	Cable Color	Function
12VDC	Brown/White	DC 12V (50mA maximum)
GND	Blue/White	GND
D+	Purple/White	RS-485 data +
D-	Gray	RS-485 data -
DI	Green/White	Digital signal input
DO	Orange/White	Digital signal output

User can refer to the schematic below to make a proper connection between I/O connector and external sensor and output device.

Explanation of External I/O Circuit Diagram:

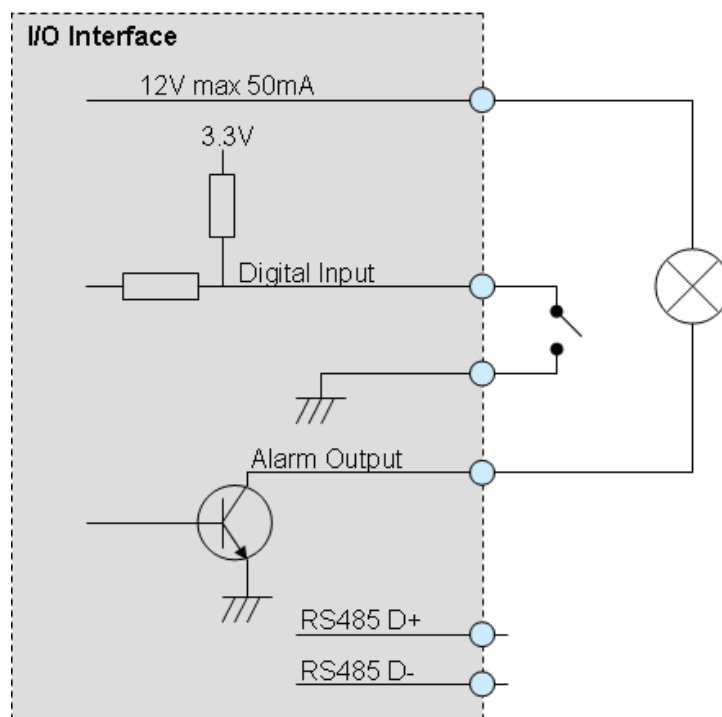

CAUTION!

- ✓ The low voltage/current circuits and high voltage/current circuits are in the network camera circuit. The qualified electrician should do the wiring not by yourself incorrect wiring could damage network camera. You could receive the fatal electric shock.
- ✓ The external I/O is not capable of connecting directly to devices that require large amounts of current. In some cases, a custom interface circuit (customer provided) may have to be used. Serious damage to network camera may result if a device is connected to the external I/O that exceeds its electrical capability.


Appendix B: PING IP Address

The PING (stands for Packet Internet Groper) command is used to detect whether a specific IP address is accessible by sending a packet to the specific address and waiting for a reply. It's also a very useful tool to confirm Internet camera installed or if the IP address conflicts with any other devices over the network.

If you want to make sure the IP address of Internet camera, utilize the PING command as follows:

- Start a DOS window.
- Type ping x.x.x.x, where x.x.x.x is the IP address of the Internet camera.

The replies, as illustrated below, will provide an explanation to the problem.

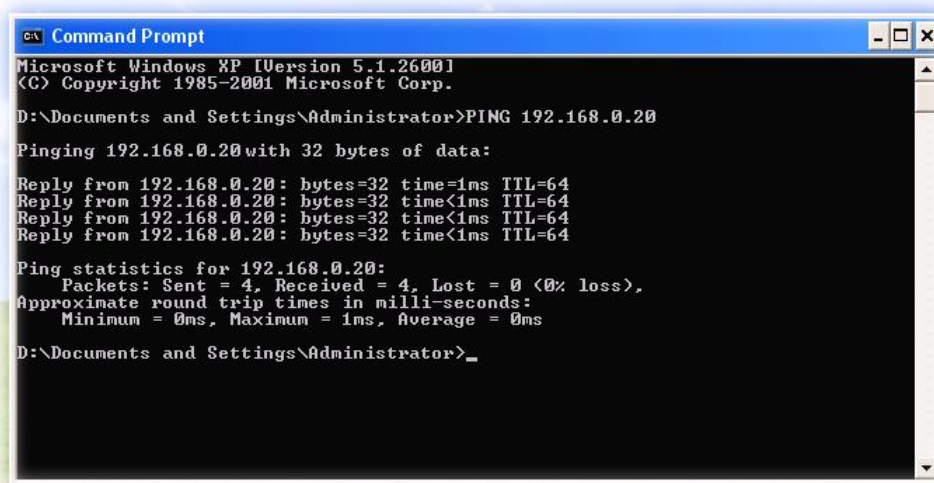

```
Command Prompt
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

D:\Documents and Settings\Administrator>PING 192.168.0.20

Pinging 192.168.0.20 with 32 bytes of data:

Reply from 192.168.0.20: bytes=32 time=1ms TTL=64
Reply from 192.168.0.20: bytes=32 time<1ms TTL=64
Reply from 192.168.0.20: bytes=32 time<1ms TTL=64
Reply from 192.168.0.20: bytes=32 time<1ms TTL=64

Ping statistics for 192.168.0.20:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 1ms, Average = 0ms

D:\Documents and Settings\Administrator>_
```

If you want to detect any other devices conflicts with the IP address of Internet camera, also can utilize the PING command but you must disconnect the Internet camera from the network first.

Appendix C: 3GPP Access

To use the 3GPP function, in addition to previous section, you might need more information or configuration to make this function work.

Note	That to use the 3GPP function, it strongly recommends to install the Networked Device with a public and fixed IP address without any firewall protection.
-------------	---

RTSP Port:

Port 554 is the default for RTSP service. However, sometimes, some service providers change this port number for some reasons. If so, user needs to change this port accordingly.

Dialing procedure:

1. Choose a verified player (PacketVideo or Realplayer currently)
2. Use the following URL to access:

`rtsp://host/mpeg4/media.3gp`

Where *host* is the host name or IP address of the camera.

Compatible 3G mobile phone:

Please contact your dealer to get the approved list of compatible 3G phone.

Note	Besides IP camera and 3G mobile phone. You will also need to make sure the ISP and company has provided the 3GPP service to you.
-------------	--

Appendix D: Bandwidth and Video Size Estimation

The frame rate of video transmitted from the Internet camera depends on connection bandwidth between client and server, video resolution, codec type, and quality setting of server. Here is a guideline to help you roughly estimate the bandwidth requirements for your Internet camera.

The required bandwidth depends on content of video source. The slow motion video will produce smaller bit rate generally and fast motion will produce higher bit rate vice versa. Actual results generated by the Internet camera may be varying.

Image Resolution	Average range of data sizes for M-JPEG mode	Average bit rate for MPEG-4 mode	Average bit rate for H.264 mode
160 x 120 (QQVGA)	3 ~ 6k byte per frame	64kbps~256kbps @ 30fps	32kbps~192kbps @ 30fps
320 x 240 (QVGA)	8 ~ 20k byte per frame	256kbps~768kbps @ 30fps	192kbps~512kbps @ 30fps
640 x 480 (VGA)	20 ~ 50K byte per frame	512kbps~2048kbps @ 30fps	384kbps~1536kbps @ 30fps
1280x1024 (SXGA)	100 ~ 200k byte per frame	NA	512kbps~3076kbps @ 15fps

NOTE Audio streaming also takes bandwidth around 5 kbps to 64kbps. Most xDSL/Cable modem upload speeds may not even reach up to 128 kbps. Thus, you may not be able to receive any video while streaming audio on a 128 kbps or lower connection. Even though the upload speed is more than 128kbps, for optimal video performance, disabling audio streaming will get better video performance.

Appendix E: DDNS Application

1. Preface

If you have a Cable modem or xDSL, this is a great way to host your own Networked Device or other TCP/IP Service. Get your own domain like www.yourname.com, www.yourname.com.tw etc. (Note: This domain must be registered with Internic via registration authorities such as Network Solutions, DirectNIC, Register.com etc). Your domain name's dynamic IP address is automatically tracked by a DDNS server.

Host your own Networked Device and much more no matter what your computer's IP address may be and even if you have dialup, DSL or cable modem internet connection where your computer's IP address changes all the time!! DDNS service supports all top level domain names including but not limited to .com, .net, .org, .to, .uk etc.

2. Ethernet Network Environment

Normally, DDNS service is only necessary for the users that could only obtain dynamic IP addresses. As to the users that could obtain the static valid IP address, they do not usually have to apply the DDNS service. Before we decide if DDNS is necessary for the users, we have to check what kind of Ethernet network environment we have to install our Networked Device on.

(1) Environment of Fixed Valid IP Network

If users could obtain valid IP addresses, they could save the effort to apply DDNS service. Because the IP address in this environment is fixed, users could input the IP address or domain name of demo site directly in the IE browser.

(2) Environment of Dynamic IP Network

If users is under an environment of dynamic IP network (Dial-up xDSL), they have to apply a domain name in advance. Then apply DDNS service. Finally setup the necessary information of DDNS and PPPoE of the Networked Device in order to let the outside administrator be able to access through internet.


3. Application Steps – DDNS & Domain Name

(1). Visit the following web site: <http://www.dyndns.org/>

(2). Click “Account”



(3). After the columns show up at the left side, click “[Create Account](#)”.

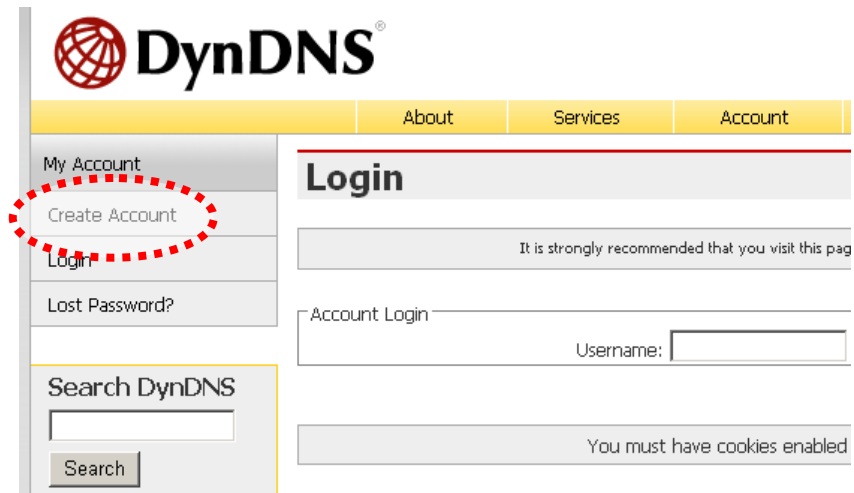

DynDNS

About Services Account

My Account
Create Account
Login
Lost Password?

Search DynDNS
Search

Login

It is strongly recommended that you visit this page


Account Login

Username:

You must have cookies enabled

(4). Fill the application agreement and necessary information.

- Username
- E-mail address and confirmation
- Password and confirmation
- Submit all the input information and finish creating an account

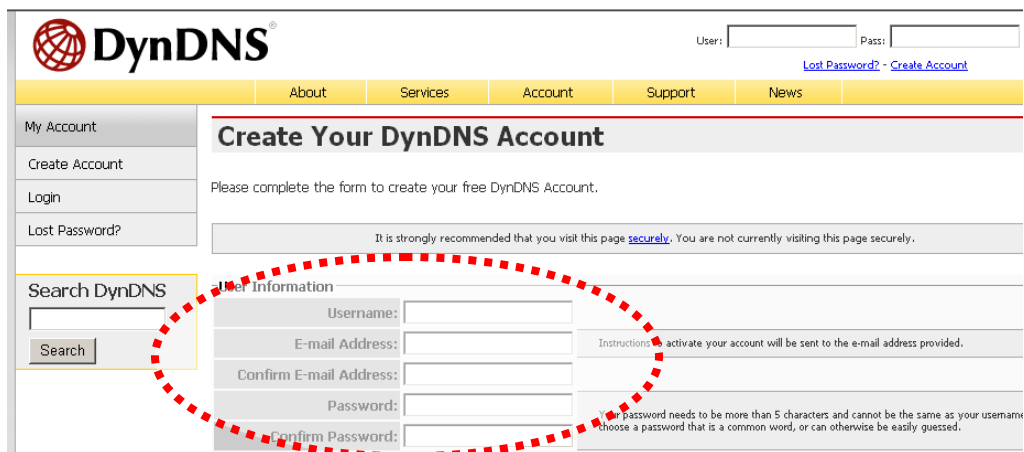

DynDNS

User: Pass:

[Lost Password?](#) - [Create Account](#)

About Services Account Support News

My Account
Create Account
Login
Lost Password?

Create Your DynDNS Account

Please complete the form to create your free DynDNS Account.

It is strongly recommended that you visit this page [securely](#). You are not currently visiting this page securely.

User Information

Username:

E-mail Address:

Confirm E-mail Address:

Password:

Confirm Password:

Instructions: An activate your account will be sent to the e-mail address provided.

Your password needs to be more than 5 characters and cannot be the same as your username. Choose a password that is a common word, or can otherwise be easily guessed.

Terms of Service

Please read the acceptable use policy (AUP) and accept it prior to creating your account. Also acknowledge that you may only have one (1) free account, and that creation of multiple free accounts will result in the deletion of all of your accounts.

Policy Last Modified: February 6, 2006

1. ACKNOWLEDGMENT AND ACCEPTANCE OF TERMS OF SERVICE

All services provided by Dynamic Network Services, Inc. ("DynDNS") are provided to you (the "Member") under the Terms and Conditions set forth in this Acceptable Use Policy ("AUP") and any other operating rules and policies set forth by DynDNS. The AUP comprises the entire agreement between the Member and DynDNS and supersedes all prior agreements between the parties regarding the subject matter contained herein. BY COMPLETING THE REGISTRATION PROCESS AND CLICKING THE "Accept" BUTTON, YOU ARE INDICATING YOUR AGREEMENT TO BE BOUND BY ALL OF THE TERMS AND CONDITIONS OF THE AUP.

2. DESCRIPTION OF SERVICE

I agree to the AUP: ☐

I will only create one (1) free account: ☐

Click these two options

Next Step

After you click "Create Account", we will create your account and send you an e-mail to the address you provided. Please follow the instructions in that e-mail to confirm your account. You will need to confirm your account within 48 hours or we will automatically delete your account. (This helps prevent unwanted robots on our systems)

Create Account

- (5). Check your e-mail mailbox. There will be an e-mail with a title "Your DynDNS Account Information". Click the hyperlink address to confirm the DDNS service that you just applied. Then DDNS you applied activated.

Click to confirm


Your DynDNS Account 'kkkkk' has been created. You need to visit the confirmation address below within 48 hours to complete the account creation process:

https://www.dyndns.com/account/confirm/oDDGDYN75qTJk_ICGba6vQ

Our basic service offerings are free, but they are supported by our paid services. See <http://www.dyndns.com/services/> for a full listing of all of our available services.

If you did not sign up for this account, this will be the only communication you will receive. All non-confirmed accounts are automatically deleted after 48 hours, and no addresses are kept on file. We apologize for any inconvenience this correspondence may have caused, and we assure you that it was only sent at the request of someone visiting our site requesting an account.

Sincerely,
The DynDNS Team

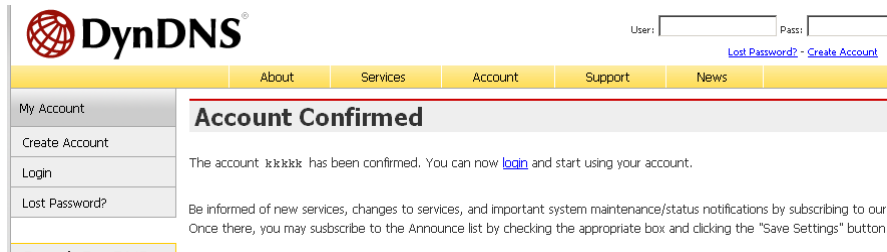


- (6). Enter the web page <http://www.dyndns.org/> again. Input your username and password that you just applied to login administration interface of DDNS server.




- (7). If the correct username and password are input, you can see the following picture at the top-right of the login page.


- (8). Click the "Services".

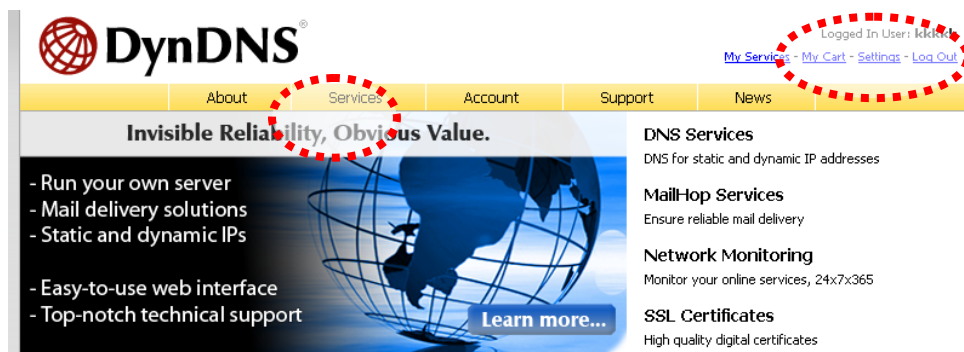

(9). Click the “[Dynamic DNS](#)”.

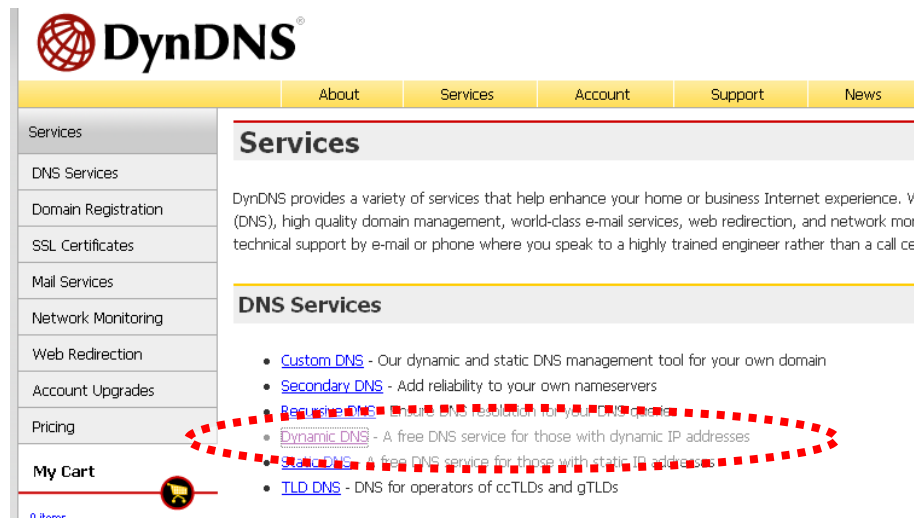

(10). Click the “[Create Hosts](#)”.

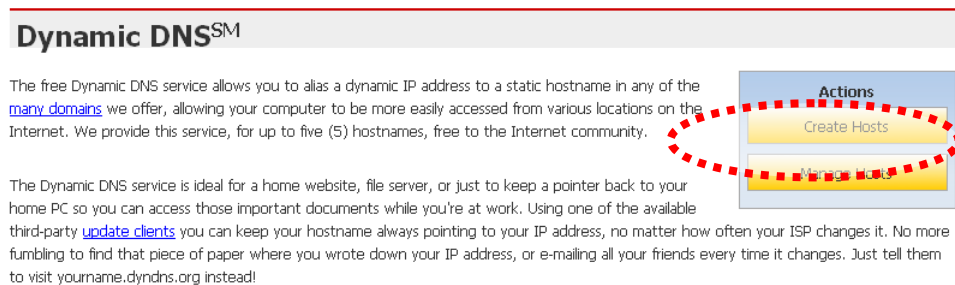

(11). We could create a domain name without any charge at this step. First, we input the host name. (No.1) Then we pick a domain that is easy to remember. Finally (No.2), click the “Add Host” to submit the domain name information. (No.3)

The screenshot shows the 'New Dynamic DNS Host' form. It has four input fields: 'Hostname:', 'IP Address:', 'Enable Wildcard:', and 'Mail Exchanger (optional):'. A dropdown menu is open next to the 'IP Address' field, showing a list of domain options. Red annotations are present: a red arrow labeled '1' points to the 'Hostname' field; a red arrow labeled '2' points to the domain list; and a red arrow labeled '3' points to the 'Add Host' button. The 'Add Host' button is located at the bottom right of the form, next to a 'Reset Form' button.

4. Setup the DDNS and PPPoE of Network Device

At last, users have to enter the web page of Networked Device and setup the necessary information of DDNS and PPPoE after the application of DDNS service. Please check the user manual to access the DDNS and PPPoE pages. After saving the modification, restart the device. The external users could browse the Networked Device by the input of their domain name.

Appendix F:

Configure Port Forwarding Manually

The device can be used with a router. If the device wants to be accessed from the WAN, its IP address needs to be setup as fixed IP address, also the port forwarding or Virtual Server function of router needs to be setup. This device supports UPnP traversal function. Therefore, user could use this feature to configure port forwarding of NAT router first. However, if user needs to configure port forwarding manually, please follow the steps as below:

Manually installing the device with a router on your network is an easy 3–step procedure as following:

1. Assign a local/fixed IP address to your device
2. Access the Router with Your Web browser
3. Open/Configure Virtual Server Ports of Your Router


1. Assign a local/fixed IP address to your device

The device must be assigned a local and fixed IP Address that allows it to be recognized by the router. Manually setup the device with a fixed IP address, for example, *192.168.0.100*.

2. Access the Router with Your Web browser

The following steps generally apply to any router that you have on your network. The PLANET WNRT-620 is used as an example to clarify the configuration process. Configure the initial settings of the router by following the steps outlined in the router's **Quick Installation Guide**.

If you have cable or DSL service, you will most likely have a dynamically assigned WAN IP Address. 'Dynamic' means that your router's WAN IP address can change from time to time depending on your ISP. A dynamic WAN IP Address identifies your router on the public network and allows it to access the Internet. To find out what your router's WAN IP Address is, go to the **Status** screen on your router and locate the WAN information for your router. As shown on the following page the WAN IP Address will be listed. This will be the address that you will need to type in your web browser to view your camera over the Internet. Be sure to uncheck the **Reset IP address at next boot** button at the top of the screen after modifying the IP address. Failure to do so will reset the IP address when you restart your computer.

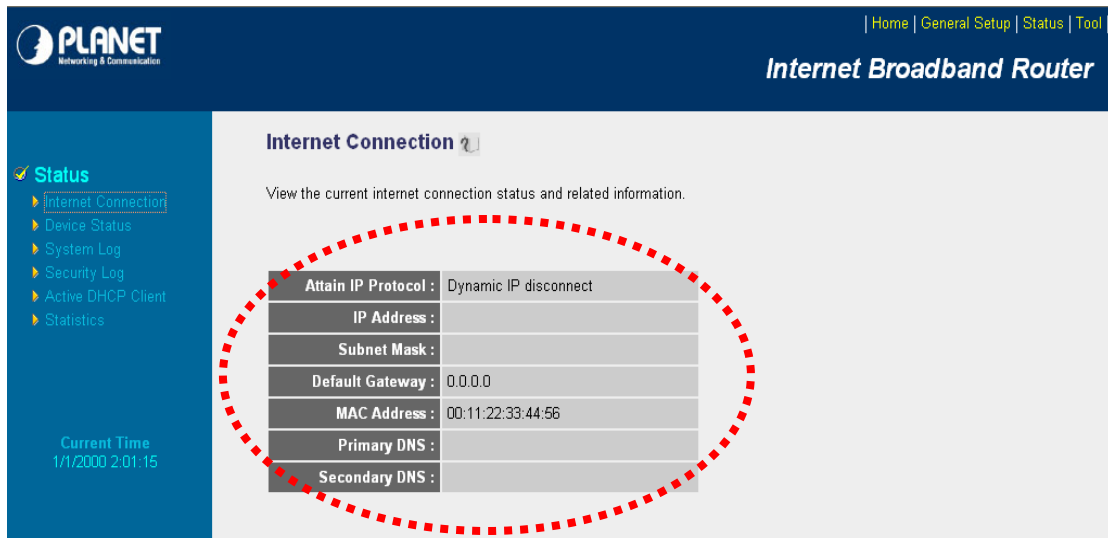

Your WAN IP Address will be listed here.

3. Open/set Virtual Server Ports to enable remote image viewing


The firewall security features built into the router and most routers prevent users from accessing the video from the device over the Internet. The router connects to the Internet over a series of numbered ports. The ports normally used by the device are blocked from access over the Internet. Therefore, these ports need to be made accessible over the Internet. This is accomplished using the **Virtual Server** function on the router. The Virtual Server ports used by the camera must be opened through the router for remote access to your camera.

Follow these steps to configure your router's Virtual Server settings

- Click **Enabled**.
- Enter a unique name for each entry.
- Select **Both** under **Protocol Type** (TCP and UDP)
- Enter your camera's local IP Address (e.g., **192.168.0.100**, for example) in the **Private IP** field.
- If you are using the default camera port settings, enter **80** into the **Public** and **Private Port** section, click **Add**.

A check mark appearing before the entry name will indicate that the ports are enabled.

NOTE Some ISPs block access to port 80. Be sure to check with your ISP so that you can open the appropriate ports accordingly. If your ISP does not pass traffic on port 80, you will need to change the port the camera uses from 80 to something else, such as 8080. Not all routers are the same, so refer to your user manual for specific instructions on how to open ports.


Home | General Setup | Status | Tool

Internet Broadband Router

- System
- WAN
- LAN
- Wireless
- QoS
- NAT
 - Port Forwarding
 - Virtual Server
 - Special applications
 - UPnP Setting
 - ALG Settings
- Firewall

Virtual Server ?

You can configure the Broadband router as a Virtual Server so that remote users accessing services such as the Web or FTP at your local site via Public IP Addresses can be automatically redirected to local servers configured with Private IP Addresses. In other words, depending on the requested service (TCP/UDP) port number, the Broadband router redirects the external service request to the appropriate internal server (located at one of your LAN's Private IP Address).

☒ Enable Virtual Server

Private IP	Private Port	Type	Public Port	WAN Port	Comment
<input type="text"/>	<input type="text"/>	Both <input type="button" value="v"/>	<input type="text"/>	WAN1 <input type="button" value="v"/>	<input type="text"/>

Current Virtual Server Table:

Private IP	Private Port	Type	Public Port	WAN Port	Comment	Select
192.168.0.100	80	TCP+UDP	80	WAN1	ICA-HM230	<input type="checkbox"/>

Enter valid ports in the **Virtual Server** section of your router. Please make sure to check the box on this line to enable settings. Then the device can be access from WAN by the router's WAN IP Address.

By now, you have finished your entire PC configuration for this device.

Appendix G:

Troubleshooting & Frequently Asked Questions

Features	
The video and audio codec is adopted in the device.	<p>The device utilizes H.264, MPEG-4 and M-JPEG triple compression to providing high quality images. Where H.264 and MPEG-4 are standards for video compression and M-JPEG is a standard for image compression.</p> <p>The audio codec is defined as AMR for 3GPP and G.711/G.726 for RTSP streaming.</p>
The maximum number of user accesses the device simultaneously.	<p>The maximum number of users is limited to 20. However, it also depends on the total bandwidth accessed to this device from clients. The maximum data throughput of the device is around 20~25Mbps for UDP mode and 10Mbps for HTTP mode. Therefore, the actual number of connected clients is varying by streaming mode, settings of resolution, codec type, frame rate and bandwidth. Obviously, the performance of the each connected client will slow down when many users are logged on.</p>
The device can be used outdoors or not.	<p>The device is not weatherproof. It needs to be equipped with a weatherproof case for outdoors using. However, equipped with a weatherproof case might disable the audio function of the device.</p>
Install this device	
Status LED does not light up.	<ul style="list-style-type: none"> Check and confirm that the DC power adaptor, included in packaged, is used. Secure the power connector and re-power it on again. If the problem is not solved, the device might be faulty. Contact your dealer for further help.
The network cabling is required for the device.	<p>The device uses Category 5 UTP cable allowing 10 and/or 100 Base-T networking.</p>
The device will be installed and work if a firewall exists on the network.	<p>If a firewall exists on the network, port 80 is open for ordinary data communication. The HTTP port and RTSP port need to be opened on the firewall or NAT router.</p>
The username and password for the first time or after factory default reset	<p>Username = admin and leave password blank.</p> <p>Note that it's all case sensitivity.</p>
Forgot the username and password	<p>Follow the steps below.</p> <ol style="list-style-type: none"> Restore the factory default setting by press pressing and holding down more than 3 seconds on the device.

	2. Reconfigure the device.
Forgot the IP address of the device.	Check IP address of device by using the IPWizard program or by UPnP discovery or set the device to default by Reset button.
IPWizard program cannot find the device.	<ul style="list-style-type: none"> • Re-power the device if cannot find the unit within 1 minutes. • Do not connect device over a router. IPWizard program cannot detect device over a router. • If IP address is not assigned to the PC which running IPWizard program, then IPWizard program cannot find device. Make sure that IP address is assigned to the PC properly. • Antivirus software on the PC might interfere with the setup program. Disable the firewall of the antivirus software during setting up this device. • Check the firewall setting of your PC or Notebook.
Internet Explorer does not seem to work well with the device	Make sure that your Internet Explorer is version 6.0 or later. If you are experiencing problems, try upgrading to the latest version of Microsoft's Internet Explorer from the Microsoft webpage.
IPWizard program fails to save the network parameters.	Network may have trouble. Confirm the parameters and connections of the device.
UPnP NAT Traversal	
Can not work with NAT router	Maybe NAT router does not support UPnP function. Please check user's manual of router and turn on UPnP function.
Some IP cameras are working but others are failed	Maybe too many IP cameras have been installed on the LAN, and then NAT router is out of resource to support more cameras. You could turn off and on NAT router to clear out of date information inside router.
Access this device	
Cannot access the login page and other web pages of the Network Camera from Internet Explorer	<ul style="list-style-type: none"> • Maybe the IP Address of the Network Camera is already being used by another device or computer. To confirm this possible problem, disconnect the Network Camera from the network first, and then run the PING utility to check it out. • Maybe due to the network cable. Try correcting your network cable and configuration. Test the network interface by connecting a local computer to the Network Camera via a crossover cable. • Make sure the Internet connection and setting is ok. • Make sure enter the IP address of Internet Explorer is correct. If the Network Camera has a dynamic address, it may have changed since you last checked it. • Network congestion may prevent the web page appearing quickly. Wait for a while.

	<p>The IP address and Subnet Mask of the PC and Network Camera must be in the same class of the private IP address on the LAN.</p> <ul style="list-style-type: none"> • Make sure the http port used by the Network Camera, default=80, is forward to the Network Camera's private IP address. • The port number assigned in your Network Camera might not be available via Internet. Check your ISP for available port. • The proxy server may prevent you from connecting directly to the Network Camera, set up not to use the proxy server. • Confirm that Default Gateway address is correct. • The router needs Port Forwarding feature. Refer to your router's manual for details. • Packet Filtering of the router may prohibit access from an external network. Refer to your router's manual for details. • Access the Network Camera from the Internet with the global IP address of the router and port number of Network Camera. • Some routers reject the global IP address to access the Network Camera on the same LAN. Access with the private IP address and correct port number of Network Camera. • When you use DDNS, you need to set Default Gateway and DNS server address. • If it's not working after above procedure, reset Network Camera to default setting and installed it again.
Image or video does not appear in the main page.	<ul style="list-style-type: none"> • The first time the PC connects to Network Camera, a pop-up Security Warning window will appear to download ActiveX Controls. When using Windows XP, or Vista, log on with an appropriate account that is authorized to install applications. • Network congestion may prevent the Image screen from appearing quickly. You may choose lower resolution to reduce the required bandwidth.
How to check the device's ActiveX is installed on your computer	<p>Go to C:\Windows\Downloaded Program Files and check to see if there is an entry for the file "IPCamera Control". The status column should show "Installed". If the file is not listed, make sure your Security Settings in Internet Explorer are configured properly and then try reloading the device's home page. Most likely, the ActiveX control did not download and install correctly. Check your Internet Explorer security settings and then close and restart Internet Explorer. Try to browse and log in again.</p>
Internet Explorer displays the following message: "Your current security settings prohibit downloading ActiveX controls".	<p>Setup the IE security settings or configure the individual settings to allow downloading and scripting of ActiveX controls.</p>
The device work locally but not externally.	<ul style="list-style-type: none"> • Might be caused from the firewall protection. Check the Internet firewall with your system or network administrator. The firewall may need to have some settings changed in order for the device

	<p>to be accessible outside your LAN.</p> <ul style="list-style-type: none"> ● Make sure that the device isn't conflicting with any other web server running on your LAN. ● Check the configuration of the router settings allow the device to be accessed outside your local LAN. ● Check the bandwidth of Internet connection. If the Internet bandwidth is lower than target bit rate, the video streaming will not work correctly.
The unreadable characters are displayed.	Use the operating system of the selected language. Set the Encoding or the Character Set of the selected language on the Internet Explorer.
Frame rate is slower than the setting.	<ul style="list-style-type: none"> ● The traffic of the network and the object of the image affect the frame rate. The network congestion causes frame rate slower than the setting. ● Check the bandwidth of Internet connection. If the Internet bandwidth is lower than target bit rate, the video streaming will not work correctly. ● Ethernet switching hub can smooth the frame rate.
Blank screen or very slow video when audio is enabled.	<ul style="list-style-type: none"> ● Your connection to the device does not have enough bandwidth to support a higher frame rate for the streamed image size. Try reducing the video streaming size to 160x120 or 320x240 and/or disabling audio. ● Audio will consume 32 kbps. Disable audio to improve video. Your Internet connection may not have enough bandwidth to support streaming audio from the device.
Image Transfer on e-mail or FTP does not work.	<ul style="list-style-type: none"> ● Default Gateway and DNS server address should be set up correctly. ● If FTP does not work properly, ask your ISP or network administrator about the transferring mode of FTP server.
Video quality of the device	
The focus on the Camera is bad.	The lens is dirty or dust is attached. Fingerprints, dust, stain, etc. on the lens can degrade the image quality.
The color of the image is poor or strange.	<ul style="list-style-type: none"> ● Adjust White Balance. ● To insure the images you are viewing are the best they can be, set the Display property setting (color quality) to 16bit at least and 24 bit or higher if possible within your computer. ● The configuration on the device image display is incorrect. You need to adjust the image related parameters such as brightness, contrast, hue and sharpness properly.
Image flickers.	<ul style="list-style-type: none"> ● Wrong power line frequency makes images flicker. Make sure the

	<p>50 or 60Hz format of your device.</p> <ul style="list-style-type: none"> • If the object is dark, the image will flicker. Make the condition around the Camera brighter.
Miscellaneous	
Can not play the recorded ASF file	Please installed Microsoft®'s DirectX 9.0 or later and uses the Windows Media Player 11.0 or later to play the AVI filed recorded by the Device.

Appendix H: Product Specification

Product	ICA-HM351
Video Specification	
Image Sensor	1/2.7" 2 Mega-pixel Progressive CMOS
Lens	4mm fixed lens with Fixed Iris
Sensitivity	0.5 Lux @ F1.4
View Angle	H: 66 Degree / V: 52 Degree
Video Encoder	H.264 / MPEG-4 / M-JPEG
Rate Control	CBR (Constant Bit Rate) / VBR (Variable Bit Rate)
Video Resolution	1920 x 1080 / 1280 x 720 / 640 x 360 / 320 x 180 / 160 x 90
Frame Rate	Up to 30fps for all resolutions (2M Real-time)
Image Control	AE, AWB 3D Noise reduction Color, Brightness, Sharpness, Contrast, Hue Mirror/Flip 8 Privacy Masks Text, time and date overlay
Audio Specification	
Audio Codec	RTSP: G.711 64kbps, G.726 32kbps 3GPP: AMR
Audio Streaming	One-Way or Two-Way
Microphone(Audio Input)	External microphone input, Phone Jack
Audio Output	Adjustable audio output gain, Phone Jack
Network and Configuration	
Network Interface	1 x RJ-45
Network Standard	IEEE 802.3 / IEEE 802.3u / IEEE 802.3af
Network Protocol	IPv4, TCP, UDP, HTTP, HTTPS, SMTP, FTP, NTP, DNS, DDNS, DHCP, DIPS, ARP, Bonjour, UPnP, RTSP, RTP, RTCP, IGMP, PPPoE, 3GPP, Samba, ICMP
Browser / Software	Microsoft® Internet Explorer 6.0 or later PLANET Cam Viewer 3 Lite/Pro
Motion Detection	10 areas definable
Environment Specifications	
Power Requirement	12V DC, 1A
PoE	IEEE 802.3af (PoE is for IP cam & IR LED only, Heater & fan require external adaptor 12V/1A)
Dimension (W x D x H)	141 x 310 x 120 mm
Weight	1335 g
Power Consumption	Max. 8W for camera and IR LEDs Max. 5W for heater only

Illumination LED	88pcs IR LED, 35M IR Distance	
Heater & Fan	Heater ON: 15 Degree C OFF:25 Degree C	Blower ON: 37 Degree C OFF:25 Degree C
Protection Class	IP-66 classification with Weather proof	
Operating Temperature	-30 ~ 60 Degree C	
Operating Humidity	0 ~ 95% (non-condensing)	
Emission	CE, FCC	