

**VERIFY THE CONTENTS INSIDE PACKAGE BOX**

The package should contain the items plus ICA-HM126 / ICA-HM126R. If any item is missing or damaged, please contact the seller immediately.



Quick Installation Guide



CD-ROM



Lens




Focus Adjuster



Power Adapter

**Camera Rear Panel**

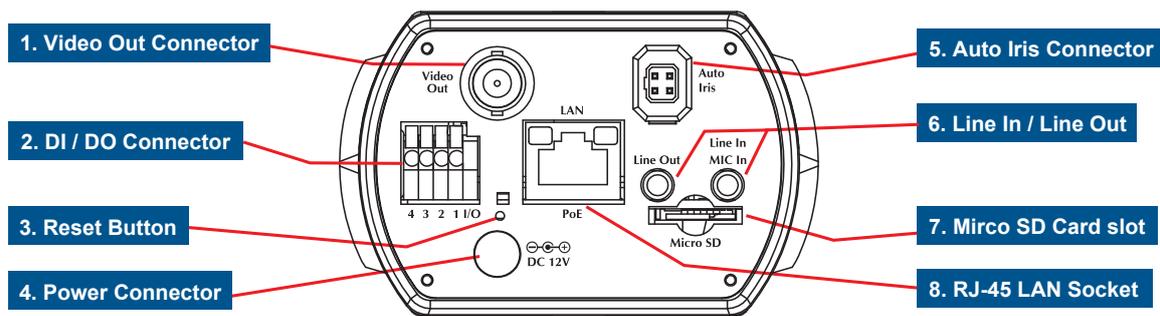

Item	Description										
1. Video Out Connector	The internet camera also provides composite video output. User can use BNC video cable to connect the internet camera with a TV monitor or VCR.										
2. DI / DO Connector	Connect connects to external sensor in and alarm out devices. <table border="1" style="margin-left: 20px;"> <thead> <tr> <th>Pin</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Output +</td> </tr> <tr> <td>2</td> <td>Output -</td> </tr> <tr> <td>3</td> <td>Input +</td> </tr> <tr> <td>4</td> <td>Input -</td> </tr> </tbody> </table>	Pin	Function	1	Output +	2	Output -	3	Input +	4	Input -
Pin	Function										
1	Output +										
2	Output -										
3	Input +										
4	Input -										
3. Reset Button	Restore to default setting, press the button with a proper tool.										
4. Power Connector	The input power is 12V DC. <b>Note:</b> ONLY use package power adapter supplied with the product. Otherwise, the product may be damaged.										
5. Auto Iris Connector	The connector can drive CCTV auto iris lens.										
6. Line In / Line Out	Connect a microphone / speaker to the network camera.										
7. Micro-SD Card slot	For video and snapshots storage.										
8. RJ-45 LAN Socket	The LAN socket is a RJ-45 connector for connections to 10/100Base-TX Fast Ethernet cabling. The LAN socket is compliant with IEEE802.3af standard PoE and IP Camera is necessary supplied power through PoE Switch/Hub device.										

### Step 1. Connecting Lens

Fasten the Lens with IP Camera



### Step 2a : Connecting Network



**NOTE :** Use only the power adapter shipped with the unit to ensure correct functionality

ICA-HM126/HM126R

### Step 2b : Connecting Power via PoE interface and Network

In the ICA-HM126 / ICA-HM126R can be configured without external power, if connecting to an IEEE powered Ethernet switch.



ICA-HM126/HM126R

### Step 3 : Computer Network Setup

Set your computer's IP address to 192.168.0.x, where x is a number between 1 to 253 (except 20 where is being used for the camera by default). If you don't know how to do this, please ask your network administrator.

### Step 4 : Login Prompt

Use web browser (Internet Explorer 6.0 or above) to connect to **192.168.0.20** (type this address in the address bar of web browser).  
You'll be prompted to input user name and password: **admin** / null (without password).



### Further Configuration

For detail configuration, please check user's manual on the bundled CD.

If you have any other questions, please contact the dealer where you purchased this product or you can contact PLANET directly at the following email address: support\_ica@planet.com.tw