


VIP-5060PT


<section-header><section-header><section-header><section-header><complex-block><complex-block>

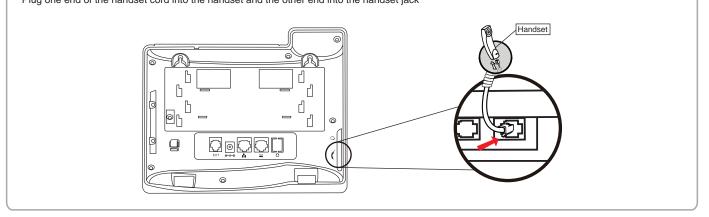

Step 2. Connecting Power System


The VIP-5060PT can be powered either by external AC/DC adapter or by connecting to an IEEE802.3af/at PSE device such as 802.3af Injector / Hub or 802.3af/at POE switch.

Once the VIP-5060PT is powered, the LCD screen will prompt for POST.

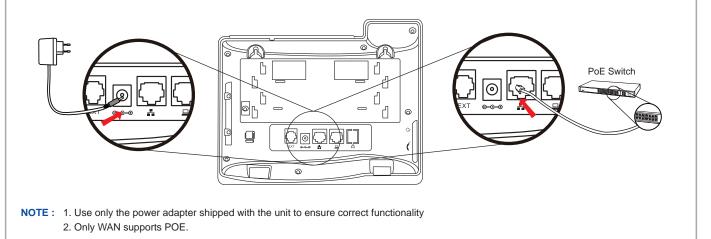




Step 3. Connecting Network

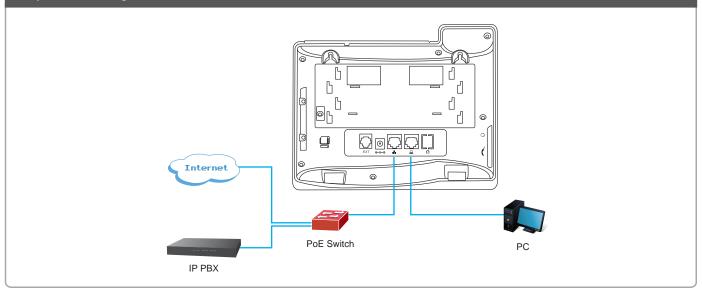

Step 4. Computer Network Setup

Set your computer's IP address to 192.168.0.x, where x is a number between 2 to 254 (except 1 where is being used for the phone by default). If you don't know how to do this, please ask your network administrator. Connect your PC to VIP-5060PT PC port.

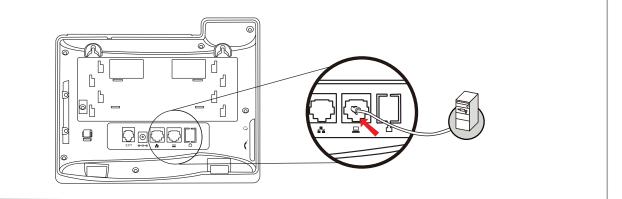

Step 5. Login Prompt

Use web browser (Internet Explorer 6.0 or above) to connect to 192.168.0.1 (type this address in the address bar of web browser).

You'll be prompted to input user name and password: admin and 123

User:	admin	
Password:	•••	
Language:	English 💙	

Further Configuration

For detailed configuration, please check user's manual on the bundled CD.

If you have any other question, please contact the dealer where you purchased this product or you can contact PLANET directly at the following: Email address: support@planet.com.tw

Quick Guide

2011-D10510-000

PLANET Technology Corporation 11F., No.96, Minquan Rd., Xindian Dist., New Taipei City 231, Taiwan (R.O.C.) Tel: 886-2-2219-9518 Email: support@planet.com.tw

Fax: 886-2-2219-9528 www.planet.com.tw



ght to change specifications without prior notice. All brand names and trademarks are property of Copyright © 2013 PLANET Technology Corp. All rights reserved.

VIP-5060PT