

Command Guide



Layer 3 Multi-Port Full Gigabit Stackable Managed Switch

- ▶ SGS-6340-24T4S/SGS-6340-48T4S
SGS-6340-24P4S/SGS-6340-20S4C4X
SGS-6340-16XR



Table of Contents

CHAPTER 1 COMMANDS FOR BASIC SWITCH CONFIGURATION	1-42
1.1 COMMANDS FOR BASIC CONFIGURATION	1-42
1.1.1 Authentication line	1-42
1.1.2 banner	1-43
1.1.3 boot img.....	1-44
1.1.4 boot startup-config.....	1-45
1.1.5 clock set.....	1-46
1.1.6 config.....	1-47
1.1.7 debug ssh-server.....	1-47
1.1.8 disable	1-48
1.1.9 enable.....	1-48
1.1.10 enable password	1-49
1.1.11 end.....	1-50
1.1.12 exec-timeout	1-50
1.1.13 exit.....	1-51
1.1.14 help.....	1-52
1.1.15 hostname.....	1-52
1.1.16 ip host.....	1-53
1.1.17 ipv6 host	1-54
1.1.18 ip http server.....	1-55
1.1.19 language.....	1-55
1.1.20 login.....	1-56
1.1.21 password	1-56
1.1.22 privilege	1-57
1.1.23 reload	1-58
1.1.24 service password-encryption	1-59
1.1.25 service terminal-length	1-59
1.1.26 sysContact.....	1-60
1.1.27 sysLocation.....	1-61
1.1.28 set default.....	1-61
1.1.29 setup.....	1-62
1.1.30 show clock.....	1-62
1.1.31 show cpu usage.....	1-63
1.1.32 show cpu utilization	1-64
1.1.33 show memory usage	1-64
1.1.34 show privilege.....	1-65

1.1.35 show privilege mode LINE	1-66
1.1.36 show tech-support	1-66
1.1.37 show version.....	1-67
1.1.38 username.....	1-67
1.1.39 web language	1-69
1.1.40 write.....	1-69
1.1.41 write running-config	1-70
1.2 COMMANDS FOR TELNET	1-70
1.2.1 aaa authorization config-commands.....	1-70
1.2.2 accounting exec.....	1-71
1.2.3 accounting command	1-72
1.2.4 authentication enable	1-73
1.2.5 authentication ip access-class	1-74
1.2.6 authentication ipv6 access-class	1-74
1.2.7 authentication line login	1-75
1.2.8 authentication securityip	1-76
1.2.9 authentication securityipv6	1-77
1.2.10 authorization.....	1-78
1.2.11 authorization line vty command	1-79
1.2.12 clear line vty <0-31>	1-80
1.2.13 crypto key clear rsa	1-80
1.2.14 terminal length.....	1-80
1.2.15 terminal monitor.....	1-81
1.2.16 telnet.....	1-82
1.2.17 telnet server enable	1-83
1.2.18 telnet-server max-connection	1-83
1.2.19 ssh-server authentication-retries	1-84
1.2.20 ssh-server enable	1-85
1.2.21 ssh-server host-key create rsa	1-85
1.2.22 ssh-server max-connection.....	1-86
1.2.23 ssh-server timeout	1-87
1.2.24 show crypto key.....	1-88
1.2.25 show ssh-server	1-88
1.2.26 show telnet login.....	1-88
1.2.27 show users	1-89
1.2.28 who.....	1-90
1.3 COMMANDS FOR CONFIGURING SWITCH IP	1-90
1.3.1 interface vlan	1-90

1.3.2 ip address.....	1-91
1.3.3 ipv6 address	1-92
1.3.4 ip bootp-client enable	1-93
1.3.5 ip dhcp-client enable.....	1-94
1.4 COMMANDS FOR SNMP.....	1-95
1.4.1 debug snmp mib	1-95
1.4.2 debug snmp kernel	1-95
1.4.3 rmon enable.....	1-96
1.4.4 show private-mib oid.....	1-96
1.4.5 show snmp	1-97
1.4.6 show snmp engineid.....	1-98
1.4.7 show snmp group	1-99
1.4.8 show snmp mib.....	1-100
1.4.9 show snmp status.....	1-100
1.4.10 show snmp user	1-101
1.4.11 show snmp view	1-101
1.4.12 snmp-server community	1-102
1.4.13 snmp-server enable.....	1-103
1.4.14 snmp-server enable traps.....	1-104
1.4.15 snmp-server engineid	1-105
1.4.16 snmp-server group	1-105
1.4.17 snmp-server host.....	1-106
1.4.18 snmp-server securityip	1-108
1.4.19 snmp-server securityip	1-108
1.4.20 snmp-server trap-source	1-109
1.4.21 snmp-server user.....	1-110
1.4.22 snmp-server view	1-111
1.5 COMMANDS FOR SWITCH UPGRADE	1-112
1.5.1 copy (FTP)	1-112
1.5.2 copy (TFTP)	1-114
1.5.3 ftp-dir	1-115
1.5.4 ftp-server enable.....	1-116
1.5.5 ftp-server timeout.....	1-116
1.5.6 ip ftp.....	1-117
1.5.7 show ftp	1-118
1.5.8 show tftp	1-118
1.5.9 tftp-server enable.....	1-119
1.5.10 tftp-server retransmission-number.....	1-120

1.5.11 tftp-server transmission-timeout.....	1-121
--	-------

CHAPTER 2 FILE SYSTEM COMMANDS..... 2-122

2.1 CD	2-122
2.2 COPY	2-122
2.3 DELETE	2-124
2.4 DIR.....	2-124
2.5 FORMAT	2-125
2.6 MKDIR	2-126
2.7 PWD.....	2-126
2.8 RENAME	2-127
2.9 RMDIR	2-128

CHAPTER 3 COMMANDS FOR CLUSTER..... 3-129

3.1 CLEAR CLUSTER NODES	3-129
3.2 CLUSTER AUTO-ADD.....	3-129
3.3 CLUSTER COMMANDER.....	3-130
3.4 CLUSTER IP-POOL	3-131
3.5 CLUSTER KEEPALIVE INTERVAL	3-132
3.6 CLUSTER KEEPALIVE LOSS-COUNT.....	3-133
3.7 CLUSTER MEMBER	3-134
3.8 CLUSTER MEMBER AUTO-TO-USER.....	3-135
3.9 CLUSTER RESET MEMBER.....	3-135
3.10 CLUSTER RUN.....	3-136
3.11 CLUSTER UPDATE MEMBER.....	3-137
3.12 DEBUG CLUSTER.....	3-138
3.13 DEBUG CLUSTER PACKETS	3-139
3.14 SHOW CLUSTER	3-140
3.15 SHOW CLUSTER MEMBERS	3-141

3.16 SHOW CLUSTER CANDIDATES.....	3-142
3.17 SHOW CLUSTER TOPOLOGY	3-142
3.18 RCOMMAND COMMANDER.....	3-144
3.19 RCOMMAND MEMBER	3-145
CHAPTER 4 COMMANDS FOR NETWORK PORT CONFIGURATION	4-146
4.1 COMMANDS FOR ETHERNET PORT CONFIGURATION.....	4-146
4.1.1 bandwidth	4-146
4.1.2 clear counters interface	4-147
4.1.3 description	4-148
4.1.4 flow control	4-148
4.1.5 interface ethernet.....	4-149
4.1.6 loopback.....	4-150
4.1.7 mdi.....	4-151
4.1.8 media-type.....	4-151
4.1.9 negotiation.....	4-152
4.1.10 port-rate-statistics interval.....	4-153
4.1.11 port-scan-mode.....	4-154
4.1.12 rate-violation	4-155
4.1.13 show interface	4-156
4.1.14 shutdown	4-159
4.1.15 speed-duplex.....	4-160
4.1.16 storm-control.....	4-161
4.1.17 virtual-cable-test	4-162
4.1.18 switchport discard packet	4-163
CHAPTER 5 COMMANDS FOR PORT ISOLATION FUNCTION	5-165
5.1 ISOLATE-PORT GROUP.....	5-165
5.2 ISOLATE-PORT GROUP SWITCHPORT INTERFACE	5-166
5.3 SHOW ISOLATE-PORT GROUP.....	5-167
CHAPTER 6 COMMANDS FOR PORT LOOPBACK DETECTION FUNCTION	6-168
6.1 DEBUG LOOPBACK-DETECTION.....	6-168
6.2 LOOPBACK-DETECTION CONTROL	6-168
6.3 LOOPBACK-DETECTION CONTROL-RECOVERY TIMEOUT.....	6-169

6.4 LOOPBACK-DETECTION INTERVAL-TIME	6-170
6.5 LOOPBACK-DETECTION SPECIFIED-VLAN	6-171
6.6 SHOW LOOPBACK-DETECTION	6-172

CHAPTER 7 COMMANDS FOR ULDP 7-173

7.1 DEBUG ULDP	7-173
7.2 DEBUG ULDP ERROR	7-173
7.3 DEBUG ULDP EVENT	7-174
7.4 DEBUG ULDP FSM INTERFACE ETHERNET	7-175
7.5 DEBUG ULDP INTERFACE ETHERNET	7-176
7.6 DEBUG ULDP PACKET	7-176
7.7 ULDP AGGRESSIVE-MODE	7-177
7.8 ULDP ENABLE	7-178
7.9 ULDP DISABLE	7-178
7.10 ULDP HELLO-INTERVAL	7-179
7.11 ULDP MANUAL-SHUTDOWN	7-180
7.12 ULDP RECOVERY-TIME	7-180
7.13 ULDP RESET	7-181
7.14 SHOW ULDP	7-182

CHAPTER 8 COMMANDS FOR LLDP FUNCTION 8-183

8.1 CLEAR LLDP REMOTE-TABLE	8-183
8.2 DEBUG LLDP	8-183
8.3 DEBUG LLDP PACKETS	8-184
8.4 LLDP ENABLE	8-185
8.5 LLDP ENABLE (PORT).....	8-186
8.6 LLDP MODE.....	8-186
8.7 LLDP MSGTxHOLD	8-187
8.8 LLDP NEIGHBORS MAX-NUM	8-188

8.9 LLDP NOTIFICATION INTERVAL	8-189
8.10 LLDP TOOMANYNEIGHBORS	8-189
8.11 LLDP TRANSMIT DELAY	8-190
8.12 LLDP TRANSMIT OPTIONAL TLV.....	8-191
8.13 LLDP TRAP	8-192
8.14 LLDP TX-INTERVAL	8-192
8.15 SHOW DEBUGGING LLDP.....	8-193
8.16 SHOW LLDP	8-194
8.17 SHOW LLDP INTERFACE ETHERNET.....	8-195
8.18 SHOW LLDP NEIGHBORS INTERFACE ETHERNET	8-196
8.19 SHOW LLDP TRAFFIC	8-196
CHAPTER 9 COMMANDS FOR PORT CHANNEL	9-198
9.1 DEBUG PORT-CHANNEL	9-198
9.2 INTERFACE PORT-CHANNEL	9-199
9.3 LACP PORT-PRIORITY	9-199
9.4 LACP SYSTEM-PRIORITY	9-200
9.5 LACP TIMEOUT	9-201
9.6 LOAD-BALANCE	9-201
9.7 PORT-GROUP	9-202
9.8 PORT-GROUP MODE	9-203
9.9 SHOW PORT-GROUP	9-204
CHAPTER 10 COMMANDS FOR MTU.....	10-206
10.1 MTU	10-206
CHAPTER 11 COMMANDS FOR EFM OAM.....	11-207
11.1 CLEAR ETHERNET-OAM.....	11-207
11.2 DEBUG ETHERNET-OAM ERROR.....	11-207

11.3	DEBUG ETHERNET-OAM FSM	11-208
11.4	DEBUG ETHERNET-OAM PACKET.....	11-209
11.5	DEBUG ETHERNET-OAM TIMER	11-209
11.6	ETHERNET-OAM	11-210
11.7	ETHERNET-OAMETHERNET-OAM ERRORED-FRAME THRESHOLD HIGH	11-211
11.8	ETHERNET-OAM ERRORED-FRAME THRESHOLD LOW	11-211
11.9	ETHERNET-OAM ERRORED-FRAME WINDOW	11-212
11.10	ETHERNET-OAM ERRORED-FRAME-PERIOD THRESHOLD HIGH	11-213
11.11	ETHERNET-OAM ERRORED-FRAME-PERIOD THRESHOLD LOW	11-214
11.12	ETHERNET-OAM ERRORED-FRAME-PERIOD WINDOW.....	11-214
11.13	ETHERNET-OAM ERRORED-FRAME-SECONDS THRESHOLD HIGH	11-215
11.14	ETHERNET-OAM ERRORED-FRAME-SECONDS THRESHOLD LOW.....	11-216
11.15	ETHERNET-OAM ERRORED-FRAME-SECONDS WINDOW	11-217
11.16	ETHERNET-OAM ERRORED-SYMBOL-PERIOD THRESHOLD HIGH	11-217
11.17	ETHERNET-OAM ERRORED-SYMBOL-PERIOD THRESHOLD LOW.....	11-218
11.18	ETHERNET-OAM ERRORED-SYMBOL-PERIOD WINDOW.....	11-219
11.19	ETHERNET-OAM LINK-MONITOR	11-220
11.20	ETHERNET-OAM MODE.....	11-220
11.21	ETHERNET-OAM PERIOD	11-221
11.22	ETHERNET-OAM REMOTE-FAILURE.....	11-222
11.23	ETHERNET-OAM TIMEOUT.....	11-223
11.24	SHOW ETHERNET-OAM.....	11-223
11.25	SHOW ETHERNET-OAM EVENTS	11-228
11.26	SHOW ETHERNET-OAM LINK-EVENTS CONFIGURATION	11-230
CHAPTER 12 COMMANDS FOR PORT SECURITY.....		12-231
12.1	CLEAR PORT-SECURITY	12-231
12.2	SHOW PORT-SECURITY	12-232

12.3 SWITCHPORT PORT-SECURITY.....	12-233
12.4 SWITCHPORT PORT-SECURITY AGING	12-233
12.5 SWITCHPORT PORT-SECURITY MAC-ADDRESS.....	12-234
12.6 SWITCHPORT PORT-SECURITY MAC-ADDRESS STICKY	12-235
12.7 SWITCHPORT PORT-SECURITY MAXIMUM.....	12-236
12.8 SWITCHPORT PORT-SECURITY VIOLATION	12-237
CHAPTER 13 COMMANDS FOR DDM	13-1
13.1 CLEAR TRANSCEIVER THRESHOLD-VIOLATION	13-1
13.2 DEBUG TRANSCEIVER.....	13-1
13.3 SHOW TRANSCEIVER	13-2
13.4 SHOW TRANSCEIVER THRESHOLD-VIOLATION	13-3
13.5 TRANSCEIVER-MONITORING	13-4
13.6 TRANSCEIVER-MONITORING INTERVAL.....	13-5
13.7 TRANSCEIVER THRESHOLD.....	13-5
CHAPTER 14 COMMANDS FOR LLDP-MED	14-7
14.1 CIVIC LOCATION	14-7
14.2 {DESCRIPTION-LANGUAGE PROVINCE-STATE CITY COUNTY STREET LOCATIONNUM LOCATION FLOOR ROOM POSTAL OTHERINFO}	14-8
14.3 ECS LOCATION.....	14-9
14.4 LLDP MED FAST COUNT.....	14-9
14.5 LLDP MED TRAP	14-10
14.6 LLDP TRANSMIT MED TLV ALL.....	14-11
14.7 LLDP TRANSMIT MED TLV CAPABILITY	14-12
14.8 LLDP TRANSMIT MED TLV EXTENDPOE.....	14-12
14.9 LLDP TRANSMIT MED TLV INVENTORY	14-13
14.10 LLDP TRANSMIT MED TLV NETWORKPOLICY	14-14
14.11 NETWORK POLICY	14-15

14.12 SHOW LLDP	14-16
14.13 SHOW LLDP [INTERFACE ETHERNET <IFNAME>]	14-17
14.14 SHOW LLDP NEIGHBORS	14-18
CHAPTER 15 COMMANDS FOR BPDU-TUNNEL.....	15-19
15.1 BPDU-TUNNEL DMAC	15-19
15.2 BPDU-TUNNEL STP	15-20
15.3 BPDU-TUNNEL GVRP	15-21
15.4 BPDU-TUNNEL ULDP.....	15-21
15.5 BPDU-TUNNEL LACP.....	15-22
15.6 BPDU-TUNNEL DOT1X.....	15-23
CHAPTER 16 COMMANDS FOR EEE ENERGY-SAVING.....	16-24
16.1 EEE ENABLE	16-24
CHAPTER 17 VLAN CONFIGURATION	17-25
17.1 COMMANDS FOR VLAN CONFIGURATION.....	17-25
17.1.1 debug gvrp event.....	17-25
17.1.2 debug gvrp packet	17-26
17.1.3 dot1q-tunnel enable	17-27
17.1.4 dot1q-tunnel selective enable	17-28
17.1.5 dot1q-tunnel selective s-vlan	17-28
17.1.6 dot1q-tunnel tpid.....	17-29
17.1.7 garp timer join.....	17-30
17.1.8 garp timer leave.....	17-31
17.1.9 garp timer leaveAll.....	17-31
17.1.10 gvrp (Global).....	17-32
17.1.11 gvrp (Port).....	17-33
17.1.12 no garp timer	17-33
17.1.13 name	17-34
17.1.14 private-vlan	17-35
17.1.15 private-vlan association	17-36
17.1.16 show dot1q-tunnel	17-37
17.1.17 show garp timer	17-38
17.1.18 show gvrp fsm information.....	17-38

17.1.19 show gvrp leaveAll fsm information	17-39
17.1.20 show gvrp leavetimer running information	17-40
17.1.21 show gvrp port-member.....	17-41
17.1.22 show gvrp port registerd vlan.....	17-42
17.1.23 show gvrp timer running information.....	17-43
17.1.24 show gvrp vlan registerd port.....	17-44
17.1.25 show vlan.....	17-45
17.1.26 show vlan-translation.....	17-46
17.1.27 switchport access vlan.....	17-47
17.1.28 switchport forbidden vlan	17-47
17.1.29 switchport hybrid allowed vlan	17-48
17.1.30 switchport hybrid native vlan.....	17-49
17.1.31 switchport interface.....	17-50
17.1.32 switchport mode	17-51
17.1.33 switchport mode trunk allow-null.....	17-52
17.1.34 switchport trunk allowed vlan.....	17-53
17.1.35 switchport trunk native vlan	17-54
17.1.36 vlan.....	17-54
17.1.37 vlan internal	17-55
17.1.38 vlan ingress enable.....	17-56
17.1.39 vlan-translation	17-57
17.1.40 vlan-translation enable	17-58
17.2 COMMANDS FOR MULTI-TO-ONE VLAN TRANSLATION	17-58
17.2.1 vlan-translation n-to-1	17-58
17.2.2 show vlan-translation n-to-1.....	17-59
17.3 COMMANDS FOR DYNAMIC VLAN CONFIGURATION.....	17-60
17.3.1 dynamic-vlan mac-vlan prefer.....	17-60
17.3.2 dynamic-vlan subnet-vlan prefer.....	17-61
17.3.3 mac-vlan	17-62
17.3.4 mac-vlan vlan	17-63
17.3.5 protocol-vlan	17-63
17.3.6 show dynamic-vlan prefer.....	17-64
17.3.7 show mac-vlan.....	17-65
17.3.8 show mac-vlan interface	17-66
17.3.9 show protocol-vlan.....	17-66
17.3.10 show subnet-vlan.....	17-67
17.3.11 show subnet-vlan interface	17-68
17.3.12 subnet-vlan	17-68

17.3.13 switchport mac-vlan enable	17-69
17.3.14 switchport subnet-vlan enable	17-70
17.4 COMMANDS FOR VOICE VLAN CONFIGURATION	17-71
17.4.1 show voice-vlan	17-71
17.4.2 switchport voice-vlan enable.....	17-71
17.4.3 voice-vlan	17-72
17.4.4 voice-vlan vlan.....	17-73

CHAPTER 18 COMMANDS FOR MAC ADDRESS TABLE CONFIGURATION 18-75

18.1 COMMANDS FOR MAC ADDRESS TABLE CONFIGURATION	18-75
18.1.1 clearCollisionMacTable	18-75
18.1.2 clear mac-address-table dynamic.....	18-75
18.1.3 mac-address-learning cpu-control	18-76
18.1.4 mac-address-table aging-time	18-77
18.1.5 mac-address-table static static-multicast blackhole	18-78
18.1.6 showCollisionMacTable	18-79
18.1.7 show mac-address-table.....	18-79
18.2 COMMANDS FOR MAC ADDRESS BINDING CONFIGURATION.....	18-80
18.2.1 clear port-security dynamic.....	18-80
18.2.2 show port-security	18-81
18.2.3 show port-security address.....	18-82
18.2.4 show port-security interface.....	18-83
18.2.5 switchport port-security.....	18-84
18.2.6 switchport port-security mac-address	18-85
18.2.7 switchport port-security maximum	18-85
18.2.8 switchport port-security violation.....	18-86
18.3 COMMANDS FOR MAC NOTIFICATION	18-87
18.3.1 clear mac-notification statistics	18-87
18.3.2 mac-address-table notification.....	18-88
18.3.3 mac-address-table notification history-size.....	18-88
18.3.4 mac-address-table notification interval	18-89
18.3.5 mac-notification	18-90
18.3.6 show mac-notification summary	18-90
18.3.7 snmp-server enable traps mac-notification.....	18-91

CHAPTER 19 COMMANDS FOR MSTP..... 19-93

19.1 COMMANDS FOR MSTP.....	19-93
------------------------------------	--------------

19.1.1 abort	19-93
19.1.2 exit	19-93
19.1.3 instance vlan	19-94
19.1.4 name	19-95
19.1.5 no	19-95
19.1.6 revision-level	19-96
19.1.7 show	19-97
19.1.8 spanning-tree	19-97
19.1.9 spanning-tree cost	19-98
19.1.10 spanning-tree digest-snooping	19-99
19.1.11 spanning-tree format	19-100
19.1.12 spanning-tree forward-time	19-101
19.1.13 spanning-tree hello-time	19-102
19.1.14 spanning-tree link-type p2p	19-103
19.1.15 spanning-tree maxage	19-103
19.1.16 spanning-tree max-hop	19-104
19.1.17 spanning-tree mcheck	19-105
19.1.18 spanning-tree mode	19-106
19.1.19 spanning-tree mst configuration	19-106
19.1.20 spanning-tree mst cost	19-107
19.1.21 spanning-tree cost-format	19-109
19.1.22 spanning-tree mst loopguard	19-110
19.1.23 spanning-tree mst port-priority	19-111
19.1.24 spanning-tree mst priority	19-111
19.1.25 spanning-tree mst rootguard	19-112
19.1.26 spanning-tree portfast	19-113
19.1.27 spanning-tree port-priority	19-114
19.1.28 spanning-tree priority	19-115
19.1.29 spanning-tree rootguard	19-115
19.1.30 spanning-tree tflush (Global mode)	19-116
19.1.31 spanning-tree tflush (Port mode)	19-117
19.1.32 spanning-tree transmit-hold-count	19-118
19.2 COMMANDS FOR MONITOR AND DEBUG	19-119
19.2.1 debug spanning-tree	19-119
19.2.2 show mst-pending	19-119
19.2.3 show spanning-tree	19-120
19.2.4 show spanning-tree mst config	19-123

CHAPTER 20 COMMANDS FOR QOS..... 20-124

20.1 ACCOUNTING	20-124
20.2 CLASS	20-125
20.3 CLASS-MAP	20-125
20.4 CLEAR MLS QOS STATISTICS	20-126
20.5 DROP	20-127
20.6 MATCH	20-128
20.7 MLS QOS COS	20-129
20.8 MLS QOS MAP	20-130
20.9 MLS QOS QUEUE ALGORITHM	20-131
20.10 MLS QOS QUEUE WRR WEIGHT	20-132
20.11 MLS QOS QUEUE WDRR WEIGHT	20-133
20.12 MLS QOS QUEUE BANDWIDTH	20-133
20.13 MLS QOS TRUST	20-134
20.14 POLICY	20-135
20.15 POLICY AGGREGATE	20-137
20.16 POLICY-MAP	20-138
20.17 SERVICE-POLICY INPUT	20-139
20.18 SERVICE-POLICY INPUT VLAN	20-140
20.19 SET	20-140
20.20 SHOW CLASS-MAP	20-141
20.21 SHOW POLICY-MAP	20-142
20.22 SHOW MLS QOS INTERFACE	20-143
20.23 SHOW MLS QOS MAPS	20-146
20.24 SHOW MLS QOS VLAN	20-148
20.25 TRANSMIT	20-149

CHAPTER 21 COMMANDS FOR FLOW-BASED REDIRECTION..... 21-151

21.1 ACCESS-GROUP REDIRECT TO INTERFACE ETHERNET	21-151
--	--------

21.2 SHOW FLOW-BASED-REDIRECT	21-152
CHAPTER 22 COMMANDS FOR FLEXIBLE QINQ	22-153
22.1 MATCH	22-153
22.2 SERVICE-POLICY	22-154
22.3 SET	22-155
CHAPTER 23 COMMANDS FOR LAYER 3 MANAGEMENT	23-157
23.1 COMMANDS FOR LAYER 3 INTERFACE.....	23-157
23.1.1 description	23-157
23.1.2 interface vlan	23-1
23.1.3 show ip route	23-1
23.2 COMMANDS FOR IPV4/V6 CONFIGURATION.....	23-3
23.2.1 clear ip traffic	23-3
23.2.2 clear ipv6 neighbor	23-3
23.2.3 debug ip icmp	23-4
23.2.4 debug ip packet	23-5
23.2.5 debug ipv6 packet	23-6
23.2.6 debug ipv6 icmp	23-6
23.2.7 debug ipv6 nd	23-7
23.2.8 ip address	23-8
23.2.9 ip default-gateway	23-9
23.2.10 ip route.....	23-10
23.2.11 ipv6 address	23-11
23.2.12 ipv6 default-gateway.....	23-12
23.2.13 ipv6 nd dad attempts	23-13
23.2.14 ipv6 nd ns-interval	23-13
23.2.15 ipv6 neighbor	23-14
23.2.16 show ip interface.....	23-15
23.2.17 show ip traffic.....	23-15
23.2.18 show ipv6 interface	23-17
23.2.19 show ipv6 route	23-19
23.2.20 show ipv6 neighbors	23-21
23.2.21 show ipv6 traffic.....	23-22
23.3 COMMANDS FOR ARP CONFIGURATION	23-23
23.3.1 arp	23-23
23.3.2 clear arp-cache.....	23-24

23.3.3 clear arp traffic.....	23-24
23.3.4 debug arp	23-25
23.3.5 show arp.....	23-25
23.3.6 show arp traffic	23-27

CHAPTER 24 COMMANDS FOR RIP..... 24-28

24.1 ACCEPT-LIFETIME.....	24-28
24.2 CLEAR IP RIP ROUTE.....	24-29
24.3 DEBUG RIP.....	24-30
24.4 DEBUG RIP REDISTRIBUTE MESSAGE SEND	24-31
24.5 DEBUG RIP REDISTRIBUTE ROUTE RECEIVE.....	24-31
24.6 DEFAULT-INFORMATION ORIGINATE.....	24-32
24.7 DEFAULT-METRIC	24-32
24.8 DISTANCE	24-33
24.9 DISTRIBUTE-LIST.....	24-34
24.10 IP RIP AGGREGATE-ADDRESS.....	24-35
24.11 IP RIP AUTHENTICATION KEY-CHAIN	24-36
24.12 IP RIP AUTHENTICATION MODE.....	24-36
24.13 IP RIP AUTHENTICATION STRING	24-37
24.14 IP RIP AUTHENTICATION CISCO-COMPATIBLE	24-38
24.15 IP RIP RECEIVE-PACKET	24-39
24.16 IP RIP RECEIVE VERSION	24-40
24.17 IP RIP SEND-PACKET.....	24-41
24.18 IP RIP SEND VERSION.....	24-41
24.19 IP RIP SPLIT-HORIZON.....	24-42
24.20 KEY.....	24-43
24.21 KEY CHAIN.....	24-44
24.22 KEY-STRING.....	24-44
24.23 MAXIMUM-PREFIX.....	24-45

24.24 NEIGHBOR	24-46
24.25 NETWORK.....	24-47
24.26 OFFSET-LIST	24-48
24.27 PASSIVE-INTERFACE.....	24-48
24.28 RECV-BUFFER-SIZE	24-49
24.29 REDISTRIBUTE	24-50
24.30 ROUTE	24-51
24.31 ROUTER RIP.....	24-51
24.32 SEND-LIFETIME	24-52
24.33 SHOW DEBUGGING RIP	24-53
24.34 SHOW IP PROTOCOLS RIP	24-54
24.35 SHOW IP RIP	24-55
24.36 SHOW IP RIP DATABASE	24-56
24.37 SHOW IP RIP INTERFACE	24-57
24.38 SHOW IP RIP AGGREGATE	24-57
24.39 TIMERS BASIC	24-58
24.40 VERSION.....	24-59

CHAPTER 25 COMMANDS FOR OSPF..... 25-61

25.1 AREA AUTHENTICATION	25-61
25.2 AREA DEFAULT-COST.....	25-62
25.3 AREA FILTER-LIST	25-62
25.4 AREA NSSA.....	25-63
25.5 AREA RANGE	25-64
25.6 AREA STUB	25-65
25.7 AREA VIRTUAL-LINK	25-66
25.8 AUTO-COST REFERENCE-BANDWIDTH.....	25-67
25.9 COMPATIBLE RFC1583	25-68

25.10 CLEAR IP OSPF PROCESS	25-69
25.11 DEBUG OSPF EVENTS	25-69
25.12 DEBUG OSPF IFSM.....	25-70
25.13 DEBUG OSPF LSA.....	25-71
25.14 DEBUG OSPF NFSM	25-71
25.15 DEBUG OSPF NSM	25-72
25.16 DEBUG OSPF PACKET	25-72
25.17 DEBUG OSPF ROUTE	25-73
25.18 DEBUG OSPF REDISTRIBUTE MESSAGE SEND	25-73
25.19 DEBUG OSPF REDISTRIBUTE ROUTE RECEIVE.....	25-74
25.20 DEFAULT-INFORMATION ORIGINATE	25-75
25.21 DEFAULT-METRIC	25-76
25.22 DISTANCE	25-76
25.23 DISTRIBUTE-LIST.....	25-77
25.24 FILTER-POLICY.....	25-78
25.25 HOST AREA.....	25-79
25.26 IP OSPF AUTHENTICATION	25-80
25.27 IP OSPF AUTHENTICATION-KEY.....	25-81
25.28 IP OSPF COST	25-81
25.29 IP OSPF DATABASE-FILTER.....	25-82
25.30 IP OSPF DEAD-INTERVAL.....	25-83
25.31 IP OSPF DISABLE ALL	25-84
25.32 IP OSPF HELLO-INTERVAL	25-84
25.33 IP OSPF MESSAGE-DIGEST-KEY	25-85
25.34 IP OSPF MTU	25-86
25.35 IP OSPF MTU-IGNORE	25-87
25.36 IP OSPF NETWORK	25-88

25.37 IP OSPF PRIORITY	25-88
25.38 IP OSPF RETRANSMIT-INTERVAL	25-89
25.39 IP OSPF TRANSMIT-DELAY	25-90
25.40 KEY.....	25-91
25.41 KEY CHAIN.....	25-92
25.42 LOG-ADJACENCY-CHANGES DETAIL	25-92
25.43 MAX-CONCURRENT-DD	25-93
25.44 NEIGHBOR	25-94
25.45 NETWORK AREA.....	25-94
25.46 OSPF ABR-TYPE	25-95
25.47 OSPF ROUTER-ID.....	25-96
25.48 OVERFLOW DATABASE	25-97
25.49 OVERFLOW DATABASE EXTERNAL	25-98
25.50 PASSIVE-INTERFACE.....	25-98
25.51 REDISTRIBUTE	25-99
25.52 REDISTRIBUTE OSPF	25-100
25.53 ROUTER OSPF.....	25-101
25.54 SHOW IP OSPF	25-101
25.55 SHOW IP OSPF BORDER-ROUTERS.....	25-103
25.56 SHOW IP OSPF DATABASE.....	25-104
25.57 SHOW IP OSPF INTERFACE	25-105
25.58 SHOW IP OSPF NEIGHBOR	25-106
25.59 SHOW IP OSPF REDISTRIBUTE	25-107
25.60 SHOW IP OSPF ROUTE	25-108
25.61 SHOW IP OSPF VIRTUAL-LINKS	25-109
25.62 SHOW IP ROUTE PROCESS-DETAIL.....	25-110
25.63 SHOW IP PROTOCOLS	25-111

25.64 SUMMARY-ADDRESS.....	25-112
25.65 TIMERS SPF	25-113
CHAPTER 26 IPV4 MULTICAST PROTOCOL	26-1
26.1 ANTI-ARPSCAN ENABLE.....	26-1
26.2 ANTI-ARPSCAN PORT-BASED THRESHOLD.....	26-1
26.3 ANTI-ARPSCAN IP-BASED THRESHOLD.....	26-2
26.4 ANTI-ARPSCAN TRUST	26-3
26.5 ANTI-ARPSCAN TRUST IP	26-4
26.6 ANTI-ARPSCAN RECOVERY ENABLE	26-5
26.7 ANTI-ARPSCAN RECOVERY TIME.....	26-5
26.8 ANTI-ARPSCAN LOG ENABLE.....	26-6
26.9 ANTI-ARPSCAN TRAP ENABLE	26-7
26.10 SHOW ANTI-ARPSCAN.....	26-8
26.11 DEBUG ANTI-ARPSCAN	26-9
CHAPTER 27 COMMANDS FOR PREVENTING ARP SPOOFING	27-11
27.1 IP ARP-SECURITY UPDATEPROTECT	27-11
27.2 IP ARP-SECURITY LEARNPROTECT.....	27-11
27.3 IP ARP-SECURITY CONVERT	27-12
27.4 CLEAR IP ARP DYNAMIC	27-13
27.5 CLEAR IPV6 ND DYNAMIC	27-13
CHAPTER 28 COMMAND FOR ARP GUARD	28-15
28.1 ARP-GUARD IP	28-15
CHAPTER 29 COMMANDS FOR GRATUITOUS ARP CONFIGURATION	29-16
29.1 IP GRATUITOUS-ARP	29-16
29.2 SHOW IP GRATUITOUS-ARP	29-17
CHAPTER 30 COMMANDS FOR DHCP	30-18

30.1 COMMANDS FOR DHCP SERVER CONFIGURATION	30-18
30.1.1 bootfile	30-18
30.1.2 clear ip dhcp binding	30-18
30.1.3 clear ip dhcp conflict	30-19
30.1.4 clear ip dhcp server statistics	30-20
30.1.5 client-identifier	30-21
30.1.6 debug ip dhcp client	30-21
30.1.7 debug ip dhcp relay	30-22
30.1.8 debug ip dhcp server	30-22
30.1.9 Admin Mode.default-router	30-23
30.1.10 dns-server	30-23
30.1.11 domain-name	30-24
30.1.12 hardware-address	30-25
30.1.13 host	30-25
30.1.14 ip dhcp conflict logging	30-26
30.1.15 ip dhcp disable	30-27
30.1.16 ip dhcp excluded-address	30-28
30.1.17 ip dhcp pool	30-28
30.1.18 ip dhcp conflict ping-detection enable	30-29
30.1.19 ip dhcp ping packets	30-30
30.1.20 ip dhcp ping timeout	30-31
30.1.21 lease	30-31
30.1.22 max-lease-time	30-32
30.1.23 netbios-name-server	30-33
30.1.24 netbios-node-type	30-34
30.1.25 network-address	30-34
30.1.26 next-server	30-35
30.1.27 option	30-36
30.1.28 service dhcp	30-37
30.1.29 show ip dhcp binding	30-37
30.1.30 show ip dhcp conflict	30-38
30.1.31 show ip dhcp relay information option	30-39
30.1.32 show ip dhcp server statistics	30-39
30.2 COMMANDS FOR DHCP RELAY CONFIGURATION	30-41
30.2.1 ip dhcp broadcast suppress	30-41
30.2.2 ip dhcp relay share-vlan <vlanid> sub-vlan <vlanlist>	30-42
30.2.3 ip forward-protocol udp bootps	30-42
30.2.4 ip helper-address	30-43
30.2.5 show ip forward-protocol	30-44

30.2.6 show ip helper-address 30-44

CHAPTER 31 COMMANDS FOR DHCPV6 31-2

31.1 CLEAR IPV6 DHCP BINDING	31-2
31.2 CLEAR IPV6 DHCP CONFLICT.....	31-2
31.3 CLEAR IPV6 DHCP STATISTICS.....	31-3
31.4 DEBUG IPV6 DHCP CLIENT PACKET	31-4
31.5 DEBUG IPV6 DHCP DETAIL.....	31-4
31.6 DEBUG IPV6 DHCP RELAY PACKET	31-5
31.7 DEBUG IPV6 DHCP SERVER	31-5
31.8 DNS-SERVER	31-6
31.9 DOMAIN-NAME	31-7
31.10 EXCLUDED-ADDRESS	31-7
31.11 IPV6 ADDRESS	31-8
31.12 IPV6 DHCP CLIENT PD.....	31-9
31.13 IPV6 DHCP CLIENT PD HINT	31-10
31.14 IPV6 DHCP POOL.....	31-11
31.15 IPV6 DHCP RELAY DESTINATION	31-12
31.16 IPV6 DHCP SERVER	31-13
31.17 IPV6 GENERAL-PREFIX	31-13
31.18 IPV6 LOCAL POOL	31-14
31.19 LIFETIME	31-15
31.20 NETWORK-ADDRESS	31-16
31.21 PREFIX-DELEGATION	31-17
31.22 PREFIX-DELEGATION POOL	31-18
31.23 SERVICE DHCPV6.....	31-19
31.24 SHOW IPV6 DHCP	31-19
31.25 SHOW IPV6 DHCP BINDING	31-20

31.26 SHOW IPV6 DHCP CONFLICT.....	31-21
31.27 SHOW IPV6 DHCP INTERFACE.....	31-21
31.28 SHOW IPV6 DHCP POOL	31-22
31.29 SHOW IPV6 DHCP STATISTICS.....	31-22
31.30 SHOW IPV6 GENERAL-PREFIX	31-25
31.31 SHOW IPV6 LOCAL POOL	31-25

CHAPTER 32 COMMANDS FOR DHCP OPTION 82..... 32-26

32.1 DEBUG IP DHCP RELAY PACKET	32-26
32.2 IP DHCP RELAY INFORMATION OPTION.....	32-26
32.3 IP DHCP RELAY INFORMATION OPTION DELIMITER	32-27
32.4 IP DHCP RELAY INFORMATION OPTION REMOTE-ID	32-28
32.5 IP DHCP RELAY INFORMATION OPTION REMOTE-ID FORMAT	32-29
32.6 IP DHCP RELAY INFORMATION OPTION SELF-DEFINED REMOTE-ID	32-30
32.7 IP DHCP RELAY INFORMATION OPTION SELF-DEFINED REMOTE-ID FORMAT	32-31
32.8 IP DHCP RELAY INFORMATION OPTION SELF-DEFINED SUBSCRIBER-ID	32-31
32.9 IP DHCP RELAY INFORMATION OPTION SELF-DEFINED SUBSCRIBER-ID FORMAT	32-32
32.10 IP DHCP RELAY INFORMATION OPTION SUBSCRIBER-ID.....	32-33
32.11 IP DHCP RELAY INFORMATION OPTION SUBSCRIBER-ID FORMAT	32-34
32.12 IP DHCP RELAY INFORMATION POLICY	32-35
32.13 IP DHCP SERVER RELAY INFORMATION ENABLE	32-36
32.14 SHOW IP DHCP RELAY INFORMATION OPTION.....	32-36

CHAPTER 33 IPV4 MULTICAST PROTOCOL 33-38

33.1 OPTION 43 ASCII LINE	33-38
33.2 OPTION 43 HEX WORD.....	33-39
33.3 OPTION 43 IP A.B.C.D	33-39
33.4 OPTION 60 ASCII LINE	33-40
33.5 OPTION 60 HEX WORD.....	33-41

33.6 OPTION 60 IP A.B.C.D33-42

CHAPTER 34 COMMANDS FOR DHCPV6 OPTION37, 38 34-43

34.1 COMMANDS FOR DHCPV6 OPTION37, 3834-43

34.1.1 address range..... 34-43

34.1.2 class 34-44

34.1.3 ipv6 dhcp class 34-44

34.1.4 ipv6 dhcp relay remote-id 34-45

34.1.5 ipv6 dhcp relay remote-id option..... 34-46

34.1.6 ipv6 dhcp relay subscriber-id 34-47

34.1.7 ipv6 dhcp relay subscriber-id option 34-47

34.1.8 ipv6 dhcp relay subscriber-id select delimiter 34-48

34.1.9 ipv6 dhcp server remote-id option 34-49

34.1.10 ipv6 dhcp server select relay-forw 34-50

34.1.11 ipv6 dhcp server subscriber-id option 34-51

34.1.12 ipv6 dhcp snooping remote-id..... 34-51

34.1.13 ipv6 dhcp snooping remote-id option 34-52

34.1.14 ipv6 dhcp snooping remote-id policy 34-53

34.1.15 ipv6 dhcp snooping subscriber-id 34-54

34.1.16 ipv6 dhcp snooping subscriber-id option 34-55

34.1.17 ipv6 dhcp snooping subscriber-id policy 34-55

34.1.18 ipv6 dhcp snooping subscriber-id select delimiter 34-56

34.1.19 ipv6 dhcp use class 34-57

34.1.20 remote-id subscriber-id 34-58

34.2 COMMANDS FOR MONITORING AND DEBUGGING 34-59

34.2.1 debug ipv6 dhcp detail..... 34-59

34.2.2 debug ipv6 dhcp relay packet 34-60

34.2.3 debug ipv6 dhcp snooping packet 34-61

34.2.4 show ipv6 dhcp relay option 34-62

34.2.5 show ipv6 dhcp snooping option..... 34-62

CHAPTER 35 COMMANDS FOR DHCP SNOOPING 35-64

35.1 DEBUG IP DHCP SNOOPING BINDING 35-64

35.2 DEBUG IP DHCP SNOOPING EVENT 35-64

35.3 DEBUG IP DHCP SNOOPING PACKET 35-65

35.4 DEBUG IP DHCP SNOOPING PACKET INTERFACE..... 35-65

35.5	DEBUG IP DHCP SNOOPING UPDATE	35-66
35.6	ENABLE TRUSTVIEW KEY	35-66
35.7	IP DHCP SNOOPING.....	35-67
35.8	IP DHCP SNOOPING ACTION.....	35-68
35.9	IP DHCP SNOOPING ACTION MAXNUM.....	35-69
35.10	IP DHCP SNOOPING BINDING	35-69
35.11	IP DHCP SNOOPING BINDING DOT1X.....	35-70
35.12	IP DHCP SNOOPING BINDING USER.....	35-71
35.13	IP DHCP SNOOPING BINDING USER-CONTROL	35-72
35.14	IP DHCP SNOOPING BINDING USER-CONTROL MAX-USER.....	35-73
35.15	IP DHCP SNOOPING INFORMATION ENABLE.....	35-74
35.16	IP DHCP SNOOPING INFORMATION OPTION ALLOW-UNTRUSTED (REPLACE])	35-75
35.17	IP DHCP SNOOPING INFORMATION OPTION DELIMITER	35-75
35.18	IP DHCP SNOOPING INFORMATION OPTION REMOTE-ID	35-76
35.19	IP DHCP SNOOPING INFORMATION OPTION SELF-DEFINED REMOTE-ID	35-77
35.20	IP DHCP SNOOPING INFORMATION OPTION SELF-DEFINED REMOTE-ID FORMAT	35-78
35.21	IP DHCP SNOOPING INFORMATION OPTION SELF-DEFINED SUBSCRIBER-ID	35-78
35.22	IP DHCP SNOOPING INFORMATION OPTION SELF-DEFINED SUBSCRIBER-ID FORMAT	35-79
35.23	IP DHCP SNOOPING INFORMATION OPTION SUBSCRIBER-ID	35-80
35.24	IP DHCP SNOOPING INFORMATION OPTION SUBSCRIBER-ID FORMAT	35-81
35.25	IP DHCP SNOOPING LIMIT-RATE	35-82
35.26	IP DHCP SNOOPING TRUST	35-83
35.27	IP USER HELPER-ADDRESS	35-83
35.28	IP USER PRIVATE PACKET VERSION TWO	35-84
35.29	SHOW IP DHCP SNOOPING.....	35-85
35.30	SHOW IP DHCP SNOOPING BINDING ALL	35-88
35.31	SHOW TRUSTVIEW STATUS.....	35-90

CHAPTER 36 COMMANDS FOR DHCP SNOOPING OPTION 82..... 36-91

36.1 IP DHCP SNOOPING INFORMATION ENABLE.....36-91

CHAPTER 37 IPV4 MULTICAST PROTOCOL 37-92

37.1 COMMANDS FOR DCSCM..... 37-92

37.1.1 access-list (Multicast Destination Control) 37-92

37.1.2 access-list (Multicast Source Control) 37-93

37.1.3 ip multicast destination-control access-group 37-94

37.1.4 ip multicast destination-control access-group (sip) 37-95

37.1.5 ip multicast destination-control access-group (vmac) 37-96

37.1.6 ip multicast policy 37-96

37.1.7 ip multicast source-control 37-97

37.1.8 ip multicast source-control access-group 37-98

37.1.9 multicast destination-control 37-99

37.1.10 show ip multicast destination-control 37-100

37.1.11 show ip multicast destination-control access-list 37-101

37.1.12 show ip multicast policy 37-101

37.1.13 show ip multicast source-control 37-102

37.1.14 show ip multicast source-control access-list 37-103

37.2 COMMANDS FOR IGMP SNOOPING 37-104

37.2.1 clear ip igmp snooping vlan 37-104

37.2.2 clear ip igmp snooping vlan <1-4094> mrouter-port 37-104

37.2.3 debug igmp snooping all/packet/event/timer/mfc 37-105

37.2.4 ip igmp snooping 37-105

37.2.5 ip igmp snooping proxy 37-106

37.2.6 ip igmp snooping vlan 37-107

37.2.7 ip igmp snooping vlan immediate-leave 37-107

37.2.8 ip igmp snooping vlan l2-general-querier 37-108

37.2.9 ip igmp snooping vlan l2-general-querier-source 37-109

37.2.10 ip igmp snooping vlan l2-general-querier-version 37-110

37.2.11 ip igmp snooping vlan limit 37-110

37.2.12 ip igmp snooping vlan interface (ethernet | port-channel) IFNAME limit 37-111

37.2.13 ip igmp snooping vlan mrouter-port interface 37-112

37.2.14 ip igmp snooping vlan mrouter-port learnpim 37-113

37.2.15 ip igmp snooping vlan mrpt 37-114

37.2.16 ip igmp snooping vlan query-interval 37-114

37.2.17 ip igmp snooping vlan query-mrsp 37-115

37.2.18 ip igmp snooping vlan query-robustness 37-116

37.2.19 ip igmp snooping vlan report source-address	37-117
37.2.20 ip igmp snooping vlan specific-query-mrsp	37-117
37.2.21 ip igmp snooping vlan static-group	37-118
37.2.22 ip igmp snooping vlan suppression-query-time.....	37-119
37.2.23 show ip igmp snooping	37-120

CHAPTER 38 IPV6 MULTICAST PROTOCOL 38-122

38.1 COMMANDS FOR MLD SNOOPING CONFIGURATION.....38-122

38.1.1 clear ipv6 mld snooping vlan	38-122
38.1.2 clear ipv6 mld snooping vlan <1-4094> mrouter-port	38-122
38.1.3 debug mld snooping all/packet/event/timer/mfc	38-123
38.1.4 ipv6 mld snooping.....	38-124
38.1.5 ipv6 mld snooping vlan	38-124
38.1.6 ipv6 mld snooping vlan immediate-leave	38-125
38.1.7 ipv6 mld snooping vlan l2-general-querier	38-126
38.1.8 ipv6 mld snooping vlan limit.....	38-127
38.1.9 ipv6 mld snooping vlan mrouter-port interface.....	38-127
38.1.10 ipv6 mld snooping vlan mrouter-port learnpim6.....	38-128
38.1.11 ipv6 mld snooping vlan mrpt	38-129
38.1.12 ipv6 mld snooping vlan query-interval	38-129
38.1.13 ipv6 mld snooping vlan query-mrsp	38-130
38.1.14 ipv6 mld snooping vlan query-robustness.....	38-131
38.1.15 ipv6 mld snooping vlan static-group.....	38-132
38.1.16 ipv6 mld snooping vlan suppression-query-time.....	38-132
38.1.17 show ipv6 mld snooping	38-133

CHAPTER 39 COMMANDS FOR MULTICAST VLAN 39-136

39.1 MULTICAST-VLAN39-136

39.2 MULTICAST-VLAN ASSOCIATION.....39-136

39.3 MULTICAST-VLAN ASSOCIATION INTERFACE39-137

CHAPTER 40 COMMANDS FOR ACL 40-139

40.1 ABSOLUTE-PERIODIC/PERIODIC.....40-139

40.2 ABSOLUTE START.....40-140

40.3 ACCESS-LIST (IP EXTENDED).....40-141

40.4 ACCESS-LIST (IP STANDARD)40-143

40.5 ACCESS-LIST(MAC EXTENDED).....	40-143
40.6 ACCESS-LIST(MAC-IP EXTENDED).....	40-144
40.7 ACCESS-LIST(MAC STANDARD)	40-146
40.8 CLEAR ACCESS-GROUP STATISTIC.....	40-147
40.9 FIREWALL.....	40-148
40.10 IP ACCESS EXTENDED.....	40-149
40.11 IP ACCESS STANDARD	40-149
40.12 IPV6 ACCESS-LIST.....	40-150
40.13 IPV6 ACCESS STANDARD	40-151
40.14 IPV6 ACCESS EXTENDED.....	40-152
40.15 {IP IPV6 MAC MAC-IP} ACCESS-GROUP.....	40-152
40.16 MAC ACCESS EXTENDED.....	40-153
40.17 MAC-IP ACCESS EXTENDED.....	40-154
40.18 PERMIT DENY (IP EXTENDED).....	40-155
40.19 PERMIT DENY(IP STANDARD)	40-156
40.20 PERMIT DENY(IPV6 EXTENDED)	40-157
40.21 PERMIT DENY(IPV6 STANDARD)	40-158
40.22 PERMIT DENY(MAC EXTENDED)	40-159
40.23 PERMIT DENY(MAC-IP EXTENDED)	40-160
40.24 SHOW ACCESS-LISTS	40-162
40.25 SHOW ACCESS-GROUP	40-164
40.26 SHOW FIREWALL	40-165
40.27 SHOW IPV6 ACCESS-LISTS	40-165
40.28 SHOW TIME-RANGE	40-166
40.29 TIME-RANGE	40-167
CHAPTER 41 COMMANDS FOR 802.1X	41-168
41.1 DEBUG DOT1X DETAIL	41-168

41.2	DEBUG DOT1X ERROR	41-169
41.3	DEBUG DOT1X FSM	41-169
41.4	DEBUG DOT1X PACKET	41-170
41.5	DOT1X ACCEPT-MAC	41-171
41.6	DOT1X EAPOR ENABLE.....	41-172
41.7	DOT1X ENABLE	41-172
41.8	DOT1X IPV6 PASSTHROUGH	41-173
41.9	DOT1X GUEST-VLAN.....	41-174
41.10	DOT1X MACFILTER ENABLE	41-175
41.11	DOT1X MACBASED PORT-DOWN-FLUSH	41-176
41.12	DOT1X MAX-REQ.....	41-176
41.13	DOT1X USER ALLOW-MOVEMENT	41-177
41.14	DOT1X USER FREE-RESOURCE.....	41-178
41.15	DOT1X MAX-USER MACBASED	41-178
41.16	DOT1X MAX-USER USERBASED	41-179
41.17	DOT1X PORTBASED MODE SINGLE-MODE.....	41-180
41.18	DOT1X PORT-CONTROL	41-181
41.19	DOT1X PORT-METHOD	41-182
41.20	DOT1X PRIVATECLIENT ENABLE	41-183
41.21	DOT1X PRIVATECLIENT PROTECT ENABLE.....	41-183
41.22	DOT1X RE-AUTHENTICATE	41-184
41.23	DOT1X RE-AUTHENTICATION	41-185
41.24	DOT1X TIMEOUT QUIET-PERIOD	41-185
41.25	DOT1X TIMEOUT RE-AUTHPERIOD.....	41-186
41.26	DOT1X TIMEOUT TX-PERIOD.....	41-187
41.27	DOT1X UNICAST ENABLE	41-187
41.28	SHOW DOT1X.....	41-188

CHAPTER 42 COMMANDS FOR THE NUMBER LIMITATION FUNCTION OF MAC AND IP IN PORT, VLAN	42-191
42.1 DEBUG IP ARP COUNT.....	42-191
42.2 DEBUG IPV6 ND COUNT.....	42-192
42.3 DEBUG SWITCHPORT ARP COUNT	42-192
42.4 DEBUG SWITCHPORT MAC COUNT	42-193
42.5 DEBUG SWITCHPORT ND COUNT.....	42-194
42.6 DEBUG VLAN MAC COUNT	42-195
42.7 IP ARP DYNAMIC MAXIMUM.....	42-195
42.8 IPV6 ND DYNAMIC MAXIMUM.....	42-196
42.9 MAC-ADDRESS QUERY TIMEOUT.....	42-197
42.10 SHOW ARP-DYNAMIC COUNT	42-198
42.11 SHOW MAC-ADDRESS DYNAMIC COUNT.....	42-199
42.12 SHOW ND-DYNAMIC COUNT.....	42-199
42.13 SWITCHPORT ARP DYNAMIC MAXIMUM	42-200
42.14 SWITCHPORT MAC-ADDRESS DYNAMIC MAXIMUM	42-201
42.15 SWITCHPORT MAC-ADDRESS VIOLATION	42-202
42.16 SWITCHPORT ND DYNAMIC MAXIMUM.....	42-203
42.17 VLAN MAC-ADDRESS DYNAMIC MAXIMUM.....	42-204
 CHAPTER 43 COMMANDS FOR AM CONFIGURATION	 43-206
43.1 AM ENABLE	43-206
43.2 AM PORT	43-206
43.3 AM IP-POOL	43-207
43.4 AM MAC-IP-POOL	43-208
43.5 NO AM ALL.....	43-209
43.6 SHOW AM	43-209
 CHAPTER 44 COMMANDS FOR SECURITY FEATURE	 44-211

44.1 DOSATTACK-CHECK SRCIP-EQUAL-DSTIP ENABLE	44-211
44.2 DOSATTACK-CHECK TCP-FLAGS ENABLE	44-211
44.3 DOSATTACK-CHECK SRCPORT-EQUAL-DSTPORT ENABLE	44-212
44.4 DOSATTACK-CHECK ICMP-ATTACKING ENABLE.....	44-213
44.5 DOSATTACK-CHECK ICMPV4-SIZE	44-214
CHAPTER 45 COMMANDS FOR TACACS+.....	45-215
45.1 TACACS-SERVER AUTHENTICATION HOST.....	45-215
45.2 TACACS-SERVER KEY	45-216
45.3 TACACS-SERVER NAS-IPV4.....	45-216
45.4 TACACS-SERVER TIMEOUT	45-217
45.5 DEBUG TACACS-SERVER	45-218
CHAPTER 46 COMMANDS FOR RADIUS.....	46-219
46.1 AAA ENABLE.....	46-219
46.2 AAA-ACCOUNTING ENABLE.....	46-219
46.3 AAA-ACCOUNTING UPDATE	46-220
46.4 DEBUG AAA PACKET.....	46-221
46.5 DEBUG AAA DETAIL ATTRIBUTE	46-222
46.6 DEBUG AAA DETAIL CONNECTION	46-222
46.7 DEBUG AAA DETAIL EVENT	46-223
46.8 DEBUG AAA ERROR	46-224
46.9 RADIUS NAS-IPV4.....	46-224
46.10 RADIUS NAS-IPV6.....	46-225
46.11 RADIUS-SERVER ACCOUNTING HOST	46-226
46.12 RADIUS-SERVER AUTHENTICATION HOST	46-227
46.13 RADIUS-SERVER DEAD-TIME	46-228
46.14 RADIUS-SERVER KEY.....	46-229
46.15 RADIUS-SERVER RETRANSMIT.....	46-230

46.16 RADIUS-SERVER TIMEOUT.....	46-231
46.17 RADIUS-SERVER ACCOUNTING-INTERIM-UPDATE TIMEOUT	46-231
46.18 SHOW AAA AUTHENTICATED-USER	46-232
46.19 SHOW AAA AUTHENTICATING-USER	46-233
46.20 SHOW AAA CONFIG.....	46-234
46.21 SHOW RADIUS AUTHENTICATED-USER COUNT	46-235
46.22 SHOW RADIUS AUTHENTICATING-USER COUNT	46-236
46.23 SHOW RADIUS COUNT.....	46-236
CHAPTER 47 COMMANDS FOR SSL CONFIGURATION.....	47-238
47.1 IP HTTP SECURE-SERVER.....	47-238
47.2 IP HTTP SECURE-PORT	47-238
47.3 IP HTTP SECURE- CIPHERSUITE	47-239
47.4 SHOW IP HTTP SECURE-SERVER STATUS	47-240
47.5 DEBUG SSL.....	47-241
CHAPTER 48 COMMANDS FOR IPV6 SECURITY RA.....	48-242
48.1 IPV6 SECURITY-RA ENABLE.....	48-242
48.2 IPV6 SECURITY-RA ENABLE.....	48-243
48.3 SHOW IPV6 SECURITY-RA	48-243
48.4 DEBUG IPV6 SECURITY-RA	48-244
CHAPTER 49 COMMANDS FOR MAB	49-245
49.1 AUTHENTICATION MAB	49-245
49.2 CLEAR MAC-AUTHENTICATION-BYPASS BINDING.....	49-246
49.3 DEBUG MAC-AUTHENTICATION-BYPASS	49-246
49.4 MAC-AUTHENTICATION-BYPASS BINDING-LIMIT.....	49-247
49.5 MAC-AUTHENTICATION-BYPASS ENABLE.....	49-248
49.6 MAC-AUTHENTICATION-BYPASS SPOOFING-GARP-CHECK	49-249

49.7 MAC-AUTHENTICATION-BYPASS TIMEOUT OFFLINE-DETECT	49-249
49.8 MAC-AUTHENTICATION-BYPASS TIMEOUT QUIET-PERIOD.....	49-250
49.9 MAC-AUTHENTICATION-BYPASS TIMEOUT STALE-PERIOD	49-251
49.10 MAC-AUTHENTICATION-BYPASS USERNAME-FORMAT.....	49-252
49.11 SHOW MAC-AUTHENTICATION-BYPASS.....	49-252

CHAPTER 50 COMMANDS FOR PPPOE INTERMEDIATE AGENT 50-255

50.1 DEBUG PPPOE INTERMEDIATE AGENT PACKET {RECEIVE SEND} INTERFACE ETHERNET <INTERFACE-NAME>	50-255
50.2 PPPOE INTERMEDIATE-AGENT	50-256
50.3 PPPOE INTERMEDIATE-AGENT (PORT)	50-256
50.4 PPPOE INTERMEDIATE-AGENT CIRCUIT-ID	50-257
50.5 PPPOE INTERMEDIATE-AGENT DELIMITER.....	50-258
50.6 PPPOE INTERMEDIATE-AGENT FORMAT	50-259
50.7 PPPOE INTERMEDIATE-AGENT REMOTE-ID.....	50-259
50.8 PPPOE INTERMEDIATE-AGENT TRUST	50-260
50.9 PPPOE INTERMEDIATE-AGENT TYPE SELF-DEFINED CIRCUIT-ID	50-261
50.10 PPPOE INTERMEDIATE-AGENT TYPE SELF-DEFINED REMOTE-ID	50-262
50.11 PPPOE INTERMEDIATE-AGENT TYPE TR-101 CIRCUIT-ID ACCESS-NODE-ID.....	50-262
50.12 PPPOE INTERMEDIATE-AGENT TYPE TR-101 CIRCUIT-ID IDENTIFIER-STRING OPTION DELIMITER.....	50-263
50.13 PPPOE INTERMEDIATE-AGENT VENDOR-TAG STRIP	50-264
50.14 SHOW PPPOE INTERMEDIATE-AGENT ACCESS-NODE-ID.....	50-265
50.15 SHOW PPPOE INTERMEDIATE-AGENT IDENTIFIER-STRING OPTION DELIMITER.....	50-266
50.16 SHOW PPPOE INTERMEDIATE-AGENT INFO	50-267

CHAPTER 51 COMMANDS FOR WEB PORTAL CONFIGURATION 51-268

51.1 CLEAR WEBPORTAL BINDING	51-268
51.2 DEBUG WEBPORTAL BINDING	51-269
51.3 DEBUG WEBPORTAL ERROR.....	51-269

51.4	DEBUG WEBPORTAL EVENT	51-270
51.5	DEBUG WEBPORTAL PACKET	51-271
51.6	IP DHCP SNOOPING BINDING WEBPORTAL	51-272
51.7	SHOW WEBPORTAL	51-272
51.8	SHOW WEBPORTAL BINDING	51-273
51.9	WEBPORTAL BINDING-LIMIT	51-274
51.10	WEBPORTAL ENABLE	51-275
51.11	WEBPORTAL ENABLE (PORT)	51-276
51.12	WEBPORTAL NAS-IP	51-277
51.13	WEBPORTAL REDIRECT.....	51-277

CHAPTER 52 COMMANDS FOR VLAN-ACL 52-279

52.1	CLEAR VACL STATISTIC VLAN	52-279
52.2	SHOW VACL VLAN	52-279
52.3	VACL IP ACCESS-GROUP	52-281
52.4	VACL IPV6 ACCESS-GROUP	52-282
52.5	VACL MAC ACCESS-GROUP	52-283
52.6	VACL MAC-IP ACCESS-GROUP	52-283

CHAPTER 53 COMMANDS FOR SAVI 53-285

53.1	COMMANDS FOR SAVI.....	53-285
53.1.1	ipv6 cps prefix.....	53-285
53.1.2	ipv6 cps prefix check enable.....	53-286
53.1.3	ipv6 dhcp snooping trust.....	53-286
53.1.4	ipv6 nd snooping trust	53-287
53.1.5	savi check binding	53-288
53.1.6	savi enable	53-289
53.1.7	savi ipv6 binding num	53-290
53.1.8	savi ipv6 check source binding	53-290
53.1.9	savi ipv6 check source ip-address mac-address	53-292
53.1.10	savi ipv6 {dhcp-only slaac-only dhcp-slaac} enable.....	53-292
53.1.11	savi ipv6 mac-binding-limit.....	53-293

53.1.12 savi max-dad-dalay	53-294
53.1.13 savi max-dad-prepare-delay	53-295
53.1.14 savi max-slaac-life	53-295
53.1.15 savi timeout bind-protect.....	53-296
53.2 COMMANDS FOR MONITOR AND DEBUG	53-297
53.2.1 debug ipv6 dhcp snooping binding	53-297
53.2.2 debug ipv6 dhcp snooping event	53-298
53.2.3 debug ipv6 dhcp snooping packet	53-298
53.2.4 debug ipv6 nd snooping binding	53-299
53.2.5 debug ipv6 nd snooping event.....	53-300
53.2.6 debug ipv6 nd snooping packet	53-300
53.2.7 show savi ipv6 check source binding.....	53-301

CHAPTER 54 COMMANDS FOR MRPP 54-303

54.1 CONTROL-VLAN	54-303
54.2 CLEAR MRPP STATISTICS	54-304
54.3 DEBUG MRPP	54-304
54.4 ENABLE.....	54-305
54.5 ERRP DOMAIN	54-306
54.6 FAIL-TIMER	54-307
54.7 HELLO-TIMER.....	54-307
54.8 MRPP EAPS COMPATIBLE	54-308
54.9 MRPP ENABLE.....	54-309
54.10 MRPP ERRP COMPATIBLE	54-310
54.11 MRPP POLL-TIME.....	54-311
54.12 MRPP RING	54-311
54.13 MRPP RING PRIMARY-PORT	54-312
54.14 MRPP RING SECONDARY-PORT	54-313
54.15 NODE-MODE	54-313
54.16 SHOW MRPP	54-314
54.17 SHOW MRPP STATISTICS	54-315

CHAPTER 55 COMMANDS FOR ULPP	55-316
55.1 CLEAR ULPP FLUSH COUNTER INTERFACE	55-316
55.2 CONTROL VLAN.....	55-316
55.3 DEBUG ULPP ERROR	55-317
55.4 DEBUG ULPP EVENT	55-318
55.5 DEBUG ULPP FLUSH CONTENT INTERFACE	55-319
55.6 DEBUG ULPP FLUSH {SEND RECEIVE} INTERFACE	55-320
55.7 DESCRIPTION.....	55-320
55.8 FLUSH DISABLE ARP.....	55-321
55.9 FLUSH DISABLE MAC	55-322
55.10 FLUSH DISABLE MAC-VLAN	55-323
55.11 FLUSH ENABLE ARP.....	55-323
55.12 FLUSH ENABLE MAC.....	55-324
55.13 FLUSH ENABLE MAC-VLAN.....	55-325
55.14 PREEMPTION DELAY	55-326
55.15 PREEMPTION MODE	55-326
55.16 PROTECT VLAN-REFERENCE-INSTANCE	55-327
55.17 SHOW ULPP FLUSH COUNTER INTERFACE	55-328
55.18 SHOW ULPP FLUSH-RECEIVE-PORT	55-329
55.19 SHOW ULPP GROUP.....	55-329
55.20 ULPP CONTROL VLAN	55-330
55.21 ULPP FLUSH DISABLE ARP	55-331
55.22 ULPP FLUSH DISABLE MAC.....	55-332
55.23 ULPP FLUSH DISABLE MAC-VLAN	55-333
55.24 ULPP FLUSH ENABLE ARP	55-333
55.25 ULPP FLUSH ENABLE MAC	55-334
55.26 ULPP FLUSH ENABLE MAC-VLAN	55-335

55.27 ULPP GROUP	55-335
55.28 ULPP GROUP MASTER	55-336
55.29 ULPP GROUP SLAVE	55-337
CHAPTER 56 IPV4 MULTICAST PROTOCOL	56-338
56.1 DEBUG ULSM EVENT.....	56-338
56.2 SHOW ULSM GROUP	56-338
56.3 ULSM GROUP	56-339
56.4 ULSM GROUP {UPLINK DOWNLINK}	56-340
CHAPTER 57 COMMANDS FOR MIRRORING CONFIGURATION.....	57-341
57.1 MONITOR SESSION SOURCE INTERFACE.....	57-341
57.2 MONITOR SESSION SOURCE INTERFACE ACCESS-LIST.....	57-342
57.3 MONITOR SESSION DESTINATION INTERFACE	57-342
57.4 SHOW MONITOR	57-343
CHAPTER 58 COMMANDS FOR SFLOW.....	58-345
58.1 SFLOW AGENT-ADDRESS	58-345
58.2 SFLOW ANALYZER	58-345
58.3 SFLOW COUNTER-INTERVAL.....	58-346
58.4 SFLOW DATA-LEN.....	58-347
58.5 SFLOW DESTINATION	58-348
58.6 SFLOW HEADER-LEN	58-348
58.7 SFLOW PRIORITY.....	58-349
58.8 SFLOW RATE.....	58-350
58.9 SHOW SFLOW	58-351
CHAPTER 59 COMMANDS FOR RSPAN CONFIGURATION	59-353
59.1 REMOTE-SPAN	59-353
59.2 MONITOR SESSION REMOTE VLAN	59-354

59.3 MONITOR SESSION REFLECTOR-PORT.....	59-354
CHAPTER 60 COMMANDS FOR ERSPAN.....	60-356
60.1 MONITOR SESSION	60-356
60.2 MONITOR SESSION DESTINATION TUNNEL	60-357
CHAPTER 61 COMMANDS FOR SNTP.....	61-358
61.1 CLOCK TIMEZONE.....	61-358
61.2 DEBUG SNTP.....	61-358
61.3 SNTP POLLTIME.....	61-359
61.4 SNTP SERVER	61-360
61.5 SHOW SNTP	61-361
CHAPTER 62 COMMANDS FOR NTP	62-362
62.1 CLOCK TIMEZONE.....	62-362
62.2 DEBUG NTP ADJUST	62-362
62.3 DEBUG NTP AUTHENTICATION	62-363
62.4 DEBUG NTP EVENTS	62-364
62.5 DEBUG NTP PACKET	62-365
62.6 DEBUG NTP SYNC.....	62-365
62.7 NTP ACCESS-GROUP	62-366
62.8 NTP AUTHENTICATE	62-367
62.9 NTP AUTHENTICATION-KEY	62-367
62.10 NTP BROADCAST SERVER COUNT.....	62-368
62.11 NTP DISABLE.....	62-369
62.12 NTP ENABLE	62-370
62.13 NTP IPV6 MULTICAST CLIENT.....	62-370
62.14 NTP MULTICAST CLIENT	62-371
62.15 NTP SERVER	62-372

62.16 NTP TRUSTED-KEY	62-373
62.17 SHOW NTP STATUS	62-373
62.18 SHOW NTP SESSION	62-374
CHAPTER 63 COMMANDS FOR SUMMER TIME	63-376
63.1 CLOCK SUMMER-TIME ABSOLUTE	63-376
63.2 CLOCK SUMMER-TIME RECURRING	63-377
63.3 CLOCK SUMMER-TIME RECURRING	63-378
CHAPTER 64 COMMANDS FOR DNSV4/V6	64-379
64.1 CLEAR DYNAMIC-HOST	64-379
64.2 DEBUG DNS	64-379
64.3 DNS-SERVER	64-380
64.4 DNS LOOKUP	64-381
64.5 SHOW DNS NAME-SERVER	64-382
64.6 SHOW DNS DOMAIN-LIST.....	64-383
64.7 SHOW DNS HOSTS.....	64-383
64.8 SHOW DNS CONFIG.....	64-384
64.9 SHOW DNS CLIENT	64-385
64.10 IP DOMAIN-LOOKUP.....	64-385
64.11 IP DOMAIN-LIST	64-386
64.12 IP DNS SERVER	64-387
64.13 IP DNS SERVER QUEUE MAXIMUM	64-388
64.14 IP DNS SERVER QUEUE TIMEOUT	64-388
CHAPTER 65 COMMANDS FOR SHOW	65-390
65.1 CLEAR HISTORY ALL-USERS.....	65-390
65.2 CLEAR LOGGING	65-390
65.3 HISTORY ALL-USERS MAX-LENGTH	65-391

65.4 LOGGING	65-391
65.5 LOGGING EXECUTED-COMMANDS	65-392
65.6 LOGGING LOGHOST SEQUENCE-NUMBER	65-393
65.7 PING.....	65-394
65.8 PING6.....	65-395
65.9 SHOW BOOT-FILES	65-397
65.10 SHOW DEBUGGING	65-398
65.11 SHOW FLASH	65-399
65.12 SHOW HISTORY	65-399
65.13 SHOW HISTORY ALL-USERS.....	65-400
65.14 SHOW LOGGING BUFFERED	65-401
65.15 SHOW LOGGING EXECUTED-COMMANDS STATE	65-402
65.16 SHOW LOGGING SOURCE	65-403
65.17 SHOW MEMORY	65-403
65.18 SHOW RUNNING-CONFIG	65-404
65.19 SHOW RUNNING-CONFIG CURRENT-MODE	65-405
65.20 SHOW STARTUP-CONFIG	65-406
65.21 SHOW SWITCHPORT INTERFACE	65-406
65.22 SHOW TCP	65-407
65.23 SHOW TCP IPV6.....	65-408
65.24 SHOW TELNET LOGIN.....	65-409
65.25 SHOW TECH-SUPPORT.....	65-409
65.26 SHOW UDP.....	65-410
65.27 SHOW UDP IPV6	65-410
65.28 SHOW VERSION.....	65-411
65.29 TRACEROUTE	65-411
65.30 TRACEROUTE6	65-412

CHAPTER 66 COMMANDS FOR RELOAD SWITCH AFTER SPECIFIED TIME ... 66-414

66.1 RELOAD AFTER66-414

66.2 RELOAD CANCEL66-415

66.3 SHOW RELOAD.....66-415

**CHAPTER 67 COMMANDS FOR DEBUGGING AND DIAGNOSIS FOR PACKETS
RECEIVED AND SENT BY CPU..... 67-417**

67.1 CLEAR CPU-RX-STAT PROTOCOL67-417

67.2 CPU-RX-RATELIMIT PROTOCOL.....67-417

67.3 CPU-RX-RATELIMIT TOTAL.....67-418

67.4 DEBUG DRIVER67-419

67.5 SHOW CPU-RX PROTOCOL67-420

CHAPTER 68 COMMANDS FOR POE 68-421

68.1 COMMANDS FOR PoE CONFIGURATION68-421

68.1.1 power inline dynamic detect enable..... 68-421

68.1.2 power inline dynamic detect interval <30-300>..... 68-422

68.1.3 power inline enable (Global)..... 68-422

68.1.4 power inline enable (Port)..... 68-423

68.1.5 power inline high-inrush..... 68-424

68.1.6 power inline legacy 68-425

68.1.7 power inline max (Global)..... 68-425

68.1.8 power inline max (Port)..... 68-426

68.1.9 power inline police 68-427

68.1.10 power inline priority..... 68-428

68.2 COMMANDS FOR PoE MONITORING AND DEBUGGING68-429

68.2.1 Monitoring and Debugging Information..... 68-429

Chapter 1 Commands for Basic Switch Configuration

1.1 Commands for Basic Configuration

1.1.1 Authentication line

Command:

```
authentication line {console | vty | web} login {local | radius | tacacs}
no authentication line {console | vty | web} login
```

Function:

Configure VTY (login with Telnet and SSH), Web and Console, so as to select the priority of the authentication mode for the login user. The no form command restores the default authentication mode.

Default:

No configuration is enabled for the console login method by default. Local authentication is enabled for the VTY and Web login method by default.

Command Mode:

Global Mode.

Usage Guide:

The authentication method for Console, VTY and Web login can be configured respectively. And authentication method can be any one or combination of Local, RADIUS and TACACS. When login method is configuration in combination, the preference goes from left to right. If the users have passed the authentication method, authentication method of lower preferences will be ignored. To be mentioned, the user can login as long as a authentication method is passed. AAA function and RADIUS server should be configured before the RADIUS authentication can be used.

The **authentication line console login** command is exclusive with the **login** command. The **authentication line console login** command configures the switch to use the Console login method. And the **login** command makes the Console login to use the passwords configured by the **password** command for authentication.

If local authentication is configured while no local users are configured, users will be able to login the switch via the Console method.

Example:

Configure the Telnet and ssh login method to Local and RADIUS authentication method.

```
Switch(config)# authentication line vty login local radius
```

Relative Command:

aaa enable, radius-server authentication host, tacacs-server authentication host, tacacs-server key

1.1.2 banner

Command:

```
banner motd <LINE>  
no banner motd
```

Function:

This command is used to configure the information displayed when the login authentication of a telnet or console user is successful, the no command configures that the information is not displayed when the authentication is successful.

Parameters:

<LINE>: The information displayed when the authentication is successful, length limit from 1 to 100 characters.

Default:

Do not show the information when the authentication is successful.

Command mode:

Global mode.

Example:

```
Switch(config)#banner motd Welcome
```

1.1.3 boot img

Command:

```
boot img <img-file-url> {primary | backup}
```

Function:

Configure the first and second img files used in the next boot of the switch.

Parameters:

Primary means to configure the first IMG file, backup means to configure the second IMG file, <img-file-url> is the full path of the booting IMG file, the format of which is as follows:

1. The file path comprises of three parts: device prefix used as the root directory (flash:/), sub-directory, and the file name. No space is allowed in each part or between two parts.
2. The suffix of all file names should be .img.
3. The length of the full file path should not be longer than 128 characters, while the file name cannot be longer than 80 characters.

Command Mode:

Admin Mode.

Default:

The factory original configuration only specifies the first booting IMG file, it is nos.img file in the FLASH, without the second booting IMG file.

Usage Guide:

The first and second img files can only use **.img** files stored in switch.

Example:

Set flash:/nos.img as the second booting IMG file used in the next booting of the switch.

```
Switch#boot img flash:/nos.img backup
```

1.1.4 boot startup-config

Command:

```
boot startup-config {NULL | <file-url> }
```

Function:

Configure the CFG file used in the next booting of the switch.

Parameters:

The NULL keyword means to use the factory original configuration as the next booting configuration. Setting the CFG file used in the next booting as NULL equals to implementing set default and write commands. **<file-url>** is the full path of CFG file used in the next booting. The format of which is as follows:

1. The file path comprises of three parts: device prefix used as the root directory (flash:/), sub-directory, and the file name. No space is allowed in each part or between two parts.
2. The suffix of all file names should be .cfg.
3. The length of the full file path should not be longer than 128 characters, while the file name cannot be longer than 80 characters.

Command Mode:

Admin Mode.

Default Settings:

None.

Usage Guide:

Configure the CFG file used in the next booting can only use .cfg files stored in the switch.

Example:

Set flash:/ startup.cfg as the CFG file used in the next booting of the switch.

```
Switch# boot startup-config flash:/ startup.cfg
```

1.1.5 clock set

Command:

`clock set <HH:MM:SS> <YYYY.MM.DD>`

Function:

Set system date and time.

Parameter:

`<HH:MM:SS>` is the current time, and the valid scope for *HH* is 0 to 23, *MM* and *SS* 0 to 59; `<YYYY.MM.DD>` is the current year, month and date, and the valid scope for *YYYY* is 1970~2038, *MON* meaning month, and *DD* between 1 to 31.

Command mode:

Admin Mode.

Default:

upon first time start-up, it is defaulted to 2006.1.1 0: 0: 0.

Usage guide:

The switch cannot continue timing with power off, hence the current date and time must be first set at environments where exact time is required.

Example:

To set the switch current date and time to 2002.8.1 23: 0: 0:

```
Switch#clock set 23:0:0 2002.8.1
```

Relative

Command: show clock

1.1.6 config

Command:

config [terminal]

Function:

Enter Global Mode from Admin Mode.

Parameter:

[terminal] indicates terminal configuration.

Command mode:

Admin Mode

Example:

Switch#config

1.1.7 debug ssh-server

Command:

debug ssh-server
no debug ssh-server

Function:

Display SSH server debugging information; the “**no debug ssh-server**” command stops displaying SSH server debugging information.

Default:

This function is disabled by default.

Command mode:

Admin Mode.

1.1.8 disable

Command:

Disable

Function:

Disable admin mode.

Parameter:

None.

Default:

None.

Command mode:

Admin Mode.

Usage Guide:

None.

Example:

```
Switch#disable  
Switch>
```

1.1.9 enable

Command:

enable [<1-15>]

Function:

Use **enable** command to enter Admin Mode from User Mode, or change the privilege level of the users.

Command mode:

User Mode/ Admin Mode.

Default:

None.

Usage Guide:

To prevent unauthorized access of non-admin user, user authentication is required (i.e. Admin user password is required) when entering Admin Mode from User Mode. If the correct Admin user password is entered, Admin Mode access is granted; if 3 consecutive entry of Admin user password are all wrong, it remains in the User Mode. When the user's privilege is changed from the low level to the high level, it needs to authenticate the password of the corresponding level, or else it will not authenticate the password. Set the Admin user password under Global Mode with "**enable password**" command.

Example:

```
Switch>enable  
Switch#
```

1.1.10 enable password

Command:

```
enable password [level <1-15>] [0 | 7] <password>  
no enable password [level <1-15>]
```

Function:

Configure the password used for enter Admin Mode from the User Mode,
The "**no enable password**" command deletes this password.

Parameter:

level <1-15> is used to specify the privilege level, the default level is 15. **<password>** is the password for the user. If input option 0 on password setting, the password is not encrypted; if input option 7, the password is encrypted.

Command mode:

Global Mode

Default:

This password is empty by system default

Usage Guide:

Configure this password to prevent unauthorized entering Admin Mode. It is recommended to set the password at the initial switch configuration. Also, it is recommended to exit Admin Mode with "**exit**" command when the administrator needs to leave the terminal for a long time.

Example:

Configure the command for general users to enter the admin mode by rule as test.

```
Switch(config)#enable password 0 test
```

1.1.11 end

Command:

```
End
```

Function:

Quit current mode and return to Admin mode when not at User Mode/ Admin Mode.

Command mode:

Except User Mode/ Admin Mode

Example:

Quit VLAN mode and return to Admin mode.

```
Switch(config-vlan1)#end
```

```
Switch#
```

1.1.12 exec-timeout

Command:

```
exec-timeout <minutes> [<seconds>]
```

```
no exec-timeout
```

Function:

Configure the timeout of exiting admin mode. The “**no exec-timeout**” command restores the default value.

Parameters:

<minute> is the time value shown in minute and ranges between 0~35791. <seconds> is the time value shown in seconds and ranges between 0~59.

Command mode:

Global mode

Default:

Default timeout is 10 minutes.

Usage guide:

To secure the switch, as well to prevent malicious actions from unauthorized user, the time will be count from the last configuration the admin had made, and the system will exit the admin mode at due time. It is required to enter admin code and password to enter the admin mode again. The timeout timer will be disabled when the timeout is set to 0.

Example:

Set the admin mode timeout value to 6 minutes.

```
Switch(config)#exec-timeout 6
```

Set the admin mode timeout value to 5 minutes, 30 seconds.

```
Switch(config)#exec-timeout 5 30
```

1.1.13 exit

Command:

Exit

Function:

Quit current mode and return to its previous mode.

Command mode:

All Modes

Usage Guide:

This command is to quit current mode and return to its previous mode.

Example:

Quit global mode to its previous mode

```
Switch#exit
```

```
Switch#
```

1.1.14 help

Command:

Help

Function:

Output brief description of the command interpreter help system.

Command mode:

All configuration modes.

Usage Guide:

An instant online help provided by the switch. Help command displays information about the whole help system, including complete help and partial help. The user can type in '?' any time to get online help.

Example:

```
switch(config)#help
```

CLI provides advanced help feature. When you need help, anytime at the command line please press '?'.

If nothing matches, the help list will be empty and you must backup until entering a '?' shows the available options.

Two styles of help are provided:

1. Full help is available when you are ready to enter a command argument (e.g. 'show ?') and describes each possible argument.
2. Partial help is provided when an abbreviated argument is entered and you want to know what arguments match the input (e.g. 'show ve?').

1.1.15 hostname

Command:

hostname <hostname>

no hostname

Function:

Set the prompt in the switch command line interface. The no operation cancels the configuration.

Parameter:

<hostname> is the string for the prompt, up to 64 characters are allowed.

Command mode:

Global Mode

Default:

The default prompt is relative with the switch.

Usage Guide:

With this command, the user can set the CLI prompt of the switch according to their own requirements.

Example:

Set the prompt to "Test".

```
Switch(config)#hostname Test
```

```
Test(config)#
```

1.1.16 ip host

Command:

```
ip host <hostname> <ip_addr>  
no ip host {<hostname>|all}
```

Function:

Set the mapping relationship between the host and IP address; the "no ip host" parameter of this command will delete the mapping.

Parameter:

<hostname> is the host name, up to 64 characters are allowed; **<ip_addr>** is the corresponding IP address for the host name, takes a dot decimal format; **all** is all of the host name.

Command mode:

Global Mode

Usage Guide:

Set the association between host and IP address, which can be used in commands like "ping **<host>**".

Example:

Set IP address of a host with the hostname of "beijing" to 200.121.1.1.

```
Switch(config)#ip host beijing 200.121.1.1
```

Command related: telnet, ping, traceroute

1.1.17 ipv6 host

Command:

```
ipv6 host <hostname> <ipv6_addr>
```

```
no ipv6 host { <hostname> / all}
```

Function:

Configure the mapping relationship between the IPv6 address and the host; the no command deletes this mapping relationship.

Parameter:

<hostname> is the name of the host, containing max 64 characters; **<ipv6_addr>** is the IPv6 address corresponding to the host name. **all** is all the host address.

Command Mode:

Global Mode

Usage Guide:

Configure a fixed corresponding relationship between the host and the IPv6 address, applicable in commands such as **traceroute6 <host>**, etc.

Example:

Set the IPv6 address of the host named beijing to 2001:1:2:3::1.

```
Switch(config)#ipv6 host beijing 2001:1:2:3::1
```

Command related: ping6, traceroute6

1.1.18 ip http server

Command:

`ip http server`
`no ip http server`

Function:

Enable Web configuration; the “**no ip http server**” command disables Web configuration

Command mode:

Global mode

Usage guide:

Web configuration is for supplying an interface configured with HTTP for the user, which is straight and visual, easy to understand.

Example:

Enable Web Server function and enable Web configurations.
Switch(config)#ip http server

1.1.19 language

Command:

`language {chinese | english}`

Function:

Set the language for displaying the help information.

Parameter:

chinese for Chinese display; **english** for English display.

Command mode:

Admin and Config Mode.

Default:

The default setting is English display.

Usage Guide:

Switch provides help information in two languages, the user can select the language according to their preference. After the system restart, the help information display will revert to English.

1.1.20 login

Command:

Login
no login

Function:

login enable password authentication, no login command cancels the login configuration.

Command mode:

Global mode

Default:

No login by default

Usage guide:

By using this command, users have to enter the password set by password command to enter normal user mode with console; no login cancels this restriction.

Example:

Enable password
Switch(config)#login

1.1.21 password

Command:

password [0 | 7] <password>
no password

Function:

Configure the password used for enter normal user mode on the console. The “**no password**” command deletes this password.

Parameter:

password is the password for the user. If input option 0 on password setting, the password is not encrypted; if input option 7, the password is encrypted.

Command mode:

Global mode

Default:

This password is empty by system default

Usage guide:

When both this password and login command are configured, users have to enter the password set by password command to enter normal user mode on console.

Example:

```
Switch(config)#password 0 test
```

```
Switch(config)#login
```

1.1.22 privilege

Command:

```
privilege mode level <1-15> LINE
```

```
no privilege mode level <1-15> LINE
```

Function:

Configure the level for the specified command, the no command restores the original level of the command.

Parameters:

mode: register mode of the command, 'Tab' or '?' is able to show all register modes

<1-15> is the level, its range between 1 and 15

LINE: the command needs to be configured, it supports the command abbreviation

Command Mode:

Global mode

Usage Guide:

This function cannot change the command itself. LINE must be the whole command format, the command with the abbreviation format must be analyzed successfully. For half-baked command, false command about writing and command that abbreviation cannot be analyzed successfully, the configuration is failure. For changing the command line with the parameter, it should fill in the parameter which is able to be selected discretionarily according to the required format. However, level of the no command is able to be set optionally and it does not affect the result. When using no command, LINE must be the configured command line. If the command line with the parameter, the parameter must be matched with the configured command.

Example:

Change the level of **show ip route** command to level 5.

```
Switch(config)#privilege exec level 5 show ip route
```

Change the level of **peer A.B.C.D** command to level 6.

```
Switch(config)#privilege router-msdp level 6 peer 1.2.3.4
```

Restore the original level for **show ip route** command.

```
Switch(config)#no privilege exec level 5 show ip route
```

Restore the original level for **peer A.B.C.D** command.

```
Switch(config)#no privilege router-msdp level 6 peer 1.2.3.4
```

1.1.23 reload

Command:

Reload

Function:

Warm reset the switch.

Command mode:

Admin Mode.

Usage Guide:

The user can use this command to restart the switch without power off.

1.1.24 service password-encryption

Command:

service password-encryption
no service password-encryption

Function:

Encrypt system password. The “**no service password-encryption**” command cancels the encryption.

Command mode:

Global Mode

Default:

No service password-encryption by system default

Usage guide:

The current unencrypted passwords as well as the coming passwords configured by password, enable password, ip ftp and username command will be encrypted by executed this command. no service password-encryption cancels this function however encrypted passwords remain unchanged.

Example:

Encrypt system passwords
Switch(config)#service password-encryption

1.1.25 service terminal-length

Command:

service terminal-length <0-512>
no service terminal-length

Function:

Configure the columns of characters displayed in each screen on terminal (vty). The “**no service terminal-length**” command cancels the screen shifting operation.

Parameter:

Columns of characters displayed on each screen of vty, ranging between 0-512.

Command mode:

Global Mode

Usage guide:

Configure the columns of characters displayed on each screen of the terminal. The columns of characters displayed on each screen on the telnet.ssh client and the Console will be following this configuration.

Example:

Set the number of vty threads to 20.

Switch(config)#service terminal-length 20

1.1.26 sysContact

Command:

sysContact <LINE>

no sysContact

Function:

Set the factory contact mode, the “**no sysContact**” command reset the switch to factory settings.

Parameter:

<LINE> is the prompt character string, range from 0 to 255 characters.

Command mode:

Global Mode

Default:

The factory settings.

Usage guide:

The user can set the factory contact mode bases the fact instance.

Example:

Set the factory contact mode to test.

Switch(config)#sysContact test

1.1.27 sysLocation

Command:

sysLocation <LINE>
no sysLocation

Function:

Set the factory address, the “**no sysLocation**” command reset the switch to factory settings.

Parameter:

<LINE> is the prompt character string, range from 0 to 255 characters.

Command mode:

Global Mode

Default:

The factory settings.

Usage guide:

The user can set the factory address bases the fact instance.

Example:

Set the factory address to test.
Switch(config)#sysLocation test

1.1.28 set default

Command:

set default

Function:

Reset the switch to factory settings.

Command mode:

Admin Mode.

Usage Guide:

Reset the switch to factory settings. That is to say, all configurations made by the user to the switch will disappear.

When the switch is restarted, the prompt will be the same as when the switch was powered on for the first time.

Note: After the command, “**write**” command must be executed to save the operation. The switch will reset to factory settings after restart.

Example:

```
Switch#set default
```

```
Are you sure? [Y/N] = y
```

```
Switch#write
```

```
Switch#reload
```

1.1.29 setup

Command:

```
Setup
```

Function:

Enter the Setup Mode of the switch.

Command mode:

Admin Mode.

Usage Guide:

Switch provides a Setup Mode, in which the user can configure IP addresses, etc.

1.1.30 show clock

Command:

```
show clock
```

Function:

Display the current system clock.

Command mode:

Admin and Configuration Mode.

Usage Guide:

If the system clock is inaccurate, user can adjust the time by examining the system date and clock.

Example:

```
Switch#show clock
```

```
Current time is TUE AUG 22 11 : 00 : 01 2002
```

Command related: clock set

1.1.31 show cpu usage

Command:

```
show cpu usage [<slotno>]
```

Function:

Show CPU usage rate.

Command mode:

Admin and configuration mode.

Usage Guide:

Check the current usage of CPU resource by **show cpu usage** command. Only the **chassis switch** uses **slotno** parameter which is used to show the CPU usage rate of the card on specified slot, if there is no parameter, the default is current card.

Example:

Show the current usage rate of CPU.

```
Switch#show cpu usage
```

```
Last 5 second CPU IDLE: 87%
```

```
Last 30 second CPU IDLE: 89%
```

```
Last 5 minute CPU IDLE: 89%
```

```
From running CPU IDLE: 89%
```


1.1.32 show cpu utilization

Command:

`show cpu utilization`

Function:

Show the current CPU utilization rate.

Parameter:

None.

Default:

None.

Command mode:

Admin mode.

Usage Guide:

This command is used to show CPU utilization rate in the past 5 seconds, 30 seconds and 5 minutes.

Example:

Show CPU utilization rate.

```
Switch#show cpu utilization
```

```
Last 5 second CPU USAGE: 9%
```

```
Last 30 second CPU USAGE: 11%
```

```
Last 5 minute CPU USAGE: 11%
```

```
From running CPU USAGE: 11%
```

1.1.33 show memory usage

Command:

`show memory usage [<slotno>]`

Function:

Show memory usage rate.

Command mode:

Admin and configuration mode.

Usage Guide:

Check the current usage of memory resource by **show memory usage** command. Only the **chassis switch** uses **slotno** parameter which is used to show the memory usage rate of card on the specified slot, if there is no parameter, the default is current card.

Example:

Show the current usage rate of the memory.

```
Switch#show memory usage
```

The memory total 128 MB, free 58914872 bytes, usage is 56.10%

1.1.34 show privilege

Command:

```
show privilege
```

Function:

Show privilege of the current users.

Parameter:

None.

Command Mode:

All configuration modes

Example:

Show privilege of the current user.

```
Switch(Config)#show privilege
```

Current privilege level is 15

1.1.35 show privilege mode LINE

Command:

show privilege mode LINE

Function:

Show the level of the specified command.

Parameters:

mode: register mode of the command, 'Tab' or '?' is able to show all register modes

LINE: the command needs to be configured, it supports the command abbreviation

Command Mode:

Admin and configuration mode

Usage Guide:

LINE must be the whole command format, the abbreviation format is used to the command which can be analyzed successfully. For half-baked command, false command about writing and command that abbreviation cannot be analyzed successfully, the level of them cannot be shown.

Example:

Show the level of **privilege** command.

Switch(config)#show privilege exec show ip route

The command : show ip route

Privilege is : 15

1.1.36 show tech-support

Command:

show tech-support [no-more]

Function:

Display the operational information and the task status of the switch. The technique specialist use this command to diagnose whether the switch operate normally.

Parameter:

no-more: Display the operational information and the task status of the switch directly, do not connect the user by "more".

Command mode:

Admin and Configuration Mode.

Usage Guide:

This command is used to collect the relative information when the switch operation is malfunctioned.

Example:

Switch#show tech-support

1.1.37 show version

Command:

show version

Function:

Display the version information of the switch.

Command mode:

Admin and Configuration Mode.

Usage Guide:

This command is used to show the version of the switch, it includes the hardware version and the software version information.

Example:

Switch#show version.

1.1.38 username

Command:

username <username> [privilege <privilege>] [password [0 | 7] <password>]

no username <username>

Function:

Configure local login username and password along with its privilege level.

Parameter:

<username> is the username, its range should not exceed 32 characters. **<privilege>** is the maximum privilege level of the commands that the user is able to execute, its value is limited between 1 and 15, and 1 by default.

<password> is the password for the user. If input option 0 on password setting, the password is not encrypted; if input option 7, the password is encrypted (Use 32 bits password encrypted by MD5).

Command Mode:

Global Mode.

Usage Guide:

There are two available choices for the preferences of the registered commands in the switch. They are 1 and 15. Preference of 1 is for the commands of the normal user configuration mode. Preference of 15 is for the commands registered in modes other than the normal user configuration modes. 16 local users at most can be configured through this command, and the maximum length of the password should be no less than 32.

Notice: The user can log in user and priority after the command configures, before issuing the command authentication line console login local, it should be made sure that at one user has be configured as preference level of 15, in order to login the switch and make configuration changes in privileged mode and global mode. If there are no configured local users with preference level of 15, while only Local authentication is configured for the Console login method, the switch can be login without any authentication. When using the HTTP method to login the switch, only users with preference level of 15 can login the switch, users with preference level other than 15 will be denied.

Example:

Configure an administrator account named admin, with the preference level as 15. And configure two normal accounts with its preference level as 1. Then enable local authentication method.

Above all the configurations, only the admin user is able to login the switch in privileged mode through Telnet or Console login method, user1 and user2 can only login the switch in normal user mode through the telnet and console login method. For HTTP login method, only the admin user can pass the authentication configuration, user1 and user2 will be denied.

```
Switch(config)#username admin privilege 15 password 0 admin
```

```
Switch(config)# username user1 privilege 1 password 7
```

```
4a7d1ed414474e4033ac29ccb8653d9b (The password is 32 bits password encrypted by MD5)
```

```
Switch(config)# username user2 password 0 user2
```

```
Switch(config)# authentication line console login local
```

1.1.39 web language

Command:

web language {chinese | english}

Function:

Set the language for displaying the HTTP Server information.

Parameter:

chinese for Chinese display; **english** for English display.

Command mode:

Admin Mode

Default:

The default setting is English display.

Usage Guide:

The user can select the language according to their preference.

1.1.40 write

Command:

Write

Function:

Save the currently configured parameters to the Flash memory.

Command mode:

Admin Mode.

Usage Guide:

After a set of configuration with desired functions, the setting should be saved to the specified configuration file, so that the system can revert to the saved configuration automatically in the case of accidentally powered off or power failure. This is the equivalent to the **copy running-config startup-config** command.

1.1.41 write running-config

Command:

```
write running-config [<startup-config-file-name>]
```

Function:

Save the current running config as .cfg file to Flash Memory.

Parameters:

<startup-config-file-name> is the full path of the cfg file. The format of which is as follows:

1. The file path comprises of two parts: device prefix used as the root directory (flash:/) and the file name. No space is allowed in each part or between two parts.
2. The suffix of all file names should be .cfg.
3. The length of the full file path should not be longer than 128 characters, while the file name cannot be longer than 80 characters.

Command Mode:

Admin Mode.

Usage Guide:

Config file saved by Flash Memory can be used for startup file.

Example:

Save the current running config as .cfg file with name of 123.

```
Switch#write running-config 123.cfg
```

1.2 Commands for Telnet

1.2.1 aaa authorization config-commands

Command:

```
aaa authorization config-commands  
no aaa authorization config-commands
```

Function:

Enable command authorization function for the login user with VTY (login with Telnet and SSH). The no command disables this function. Only enabling this command and configuring command authorization manner, it will request to authorize when executing some command.

Default:

Disable.

Command Mode:

Global Mode.

Usage Guide:

Only after configuring this command and configuring command authorization manner and authorization selection priority of login user with VTY, it can be authorized when configuring command with corresponding command level for login user with VTY.

Example:

Enable VTY command authorization function.

```
Switch(config)# aaa authorization config-commands
```

1.2.2 accounting exec

Command:

```
accounting line {console | vty} exec {start-stop | stop-only | none} method1 [method2...]  
no accounting line {console | vty} exec
```

Function:

Configure the list of the accounting method for the login user with VTY (login with Telnet and SSH) and Console. The no command restores the default accounting method.

Parameters:

line selects the accounting line, including **console**, **vty** (telnet and ssh); **start-stop** sends the accounting start or the accounting stop when the user is logging or exit the login; **stop-only** sends the accounting stop when the user exits the login only; **none** does not send the accounting start or the accounting stop; **method** is the list of the accounting method, it only supports **tacacs** keyword; **tacacs** uses the remote TACACS+ server to count.

Default:

There is no accounting.

Command Mode:

Global Mode.

Usage Guide:

console and **vty** login method are able to set the corresponding accounting method respectively, the accounting method only supports TACACS+ method currently.

Example:

Configure the login accounting with the telnet method.

```
Switch(config)#accounting line vty exec start-stop tacacs
```

1.2.3 accounting command

Command:

```
accounting line {console | vty} command <1-15> {start-stop | stop-only | none} method1 [method2...]  
no accounting line {console | vty} command <1-15>
```

Function:

Configure the list of the command accounting method with VTY (login with Telnet and SSH) and Console. The no command restores the default accounting method.

Parameters:

line selects the accounting line, including **console**, **vty** (telnet and ssh); **command <1-15>** is the level of the accounting command; **start-stop** sends the accounting start or the accounting stop when the user is logging or exit the login; **stop-only** sends the accounting stop when the user exits the login only; **none** does not send the accounting start or the accounting stop; **method** is the list of the accounting method, it only supports **tacacs** keyword; **tacacs** uses the remote TACACS+ server to count.

Default:

There is no accounting method.

Command Mode:

Global Mode.

Usage Guide:

console and **vty** login method are able to set the corresponding command accounting method respectively, the accounting method only supports TACACS+ method currently. Only the stop information of the accounting is recorded, whether command accounting configures start-stop method or stop-only method.

Example:

Configure the command accounting with the telnet method.

```
Switch(config)#authorization line vty command 15 start-stop tacacs
```

1.2.4 authentication enable

Command:

```
authentication enable method1 [method2...]
```

```
no authentication enable
```

Function:

Configure the list of the enable authentication method. The no command restores the default authentication method.

Parameters:

method is the list of the authentication method, it must be among **local**, **tacacs** and **radius** keywords; **local** uses the local database to authenticate; **tacacs** uses the remote TACACS+ authentication server to authenticate; **radius** uses the remote RADIUS authentication server to authenticate.

Default:

The local authentication is enable command by default.

Command Mode:

Global Mode.

Usage Guide:

The enable authentication method can be any one or combination of Local, RADIUS and TACACS. When login method is configuration in combination, the preference goes from left to right. If the users have passed the authentication method, authentication method of lower preferences will be ignored. To be mentioned, if the user receives corresponding protocol's answer whether refuse or incept, it will not attempt the next authentication method (Exception: if the local authentication method failed, it will attempt the next authentication method); it will attempt the next authentication method if it receives nothing. And AAA function RADIUS server should be configured before the RADIUS configuration method can be used. And TACACS server should be configured before the TACACS configuration method can be used.

Example:

Configure the enable authentication method to be tacacs and local.

```
Switch(config)#authentication enable tacacs local
```

1.2.5 authentication ip access-class

Command:

```
authentication ip access-class {<num-std>|<name>}  
no authentication ip access-class
```

Function:

Binding standard IP ACL protocol to login with Telnet/SSH/Web; the no form command will cancel the binding ACL.

Parameters:

<num-std> is the access-class number for standard numeric ACL, ranging between 1-99; <name> is the access-class name for standard ACL, the character string length is ranging between 1 and 32.

Default:

The binding ACL to Telnet/SSH/Web function is closed by default.

Command Mode:

Global Mode.

Example:

```
Binding standard IP ACL protocol to access-class 1.  
Switch(config)#authentication ip access-class 1 in
```

1.2.6 authentication ipv6 access-class

Command:

```
authentication ipv6 access-class {<num-std>|<name>}  
no authentication ipv6 access-class
```

Function:

Binding standard IPv6 ACL protocol to login with Telnet/SSH/Web; the no form command will cancel the binding ACL.

Parameters:

<num-std> is the access-class number for standard numeric ACL, ranging between 500-599; <name> is the access-class name for standard ACL, the character string length is ranging between 1 and 32.

Default:

The binding ACL to Telnet/SSH/Web function is closed by default.

Command Mode:

Global Mode.

Example:

Binding standard IP ACL protocol to access-class 500.

```
Switch(config)#authentication ipv6 access-class 500 in
```

1.2.7 authentication line login

Command:

```
authentication line {console | vty | web} login method1 [method2...]
```

```
no authentication line {console | vty | web} login
```

Function:

Configure VTY (login with Telnet and SSH), Web and Console, so as to select the list of the authentication method for the login user. The no form command restores the default authentication method.

Parameters:

line selects the login line, including **console**, **vty** (telnet and ssh) and **web**; **method** is the list of the authentication method, it must be among **local**, **tacacs** and **radius** keywords; **local** uses the local database to authenticate; **tacacs** uses the remote TACACS+ authentication server to authenticate; **radius** uses the remote RADIUS authentication server to authenticate.

Default:

No configuration is enabled for the console login method by default. Local authentication is enabled for the VTY and Web login method by default.

Command Mode:

Global Mode.

Usage Guide:

The authentication method for Console, VTY and Web login can be configured respectively. And authentication method can be any one or combination of Local, RADIUS and TACACS. When login method is configuration in combination, the preference goes from left to right. If the users have passed the authentication method,

authentication method of lower preferences will be ignored. To be mentioned, if the user receives corresponding protocol's answer whether refuse or incept, it will not attempt the next authentication method (Exception: if the local authentication method failed, it will attempt the next authentication method); it will attempt the next authentication method if it receives nothing. And AAA function RADIUS server should be configured before the RADIUS configuration method can be used. And TACACS server should be configured before the TACACS configuration method can be used.

The **authentication line console login** command is exclusive with the “**login**” command. The **authentication line console login** command configures the switch to use the Console login method. And the **login** command makes the Console login to use the passwords configured by the **password** command for authentication.

If local authentication is configured while no local users are configured, users will be able to login the switch via the Console method.

Example:

Configure the telnet and ssh login with the remote RADIUS authentication.

```
Switch(config)#authentication line vty login radius
```

Relative Command: **aaa enable** , **radius-server authentication host** , **tacacs-server authentication host** , **tacacs-server key**

1.2.8 authentication securityip

Command:

```
authentication securityip <ip-addr>  
no authentication securityip <ip-addr>
```

Function:

To configure the trusted IP address for Telnet and HTTP login method. The no form of this command will remove the trusted IP address configuration.

Parameters:

<ip-addr> is the trusted IP address of the client in dotted decimal format which can login the switch.

Default:

No trusted IP address is configured by default.

Command Mode:

Global Mode.

Usage Guide:

IP address of the client which can login the switch is not restricted before the trusted IP address is not configured. After the trusted IP address is configured, only clients with trusted IP addresses are able to login the switch. Up to 32 trusted IP addresses can be configured in the switch.

Example:

To configure 192.168.1.21 as the trusted IP address.
Switch(config)# authentication securityip 192.168.1.21

1.2.9 authentication securityipv6

Command:

```
authentication securityipv6 <ipv6-addr>  
no authentication securityipv6 <ipv6-addr>
```

Function:

To configure the security IPv6 address for Telnet and HTTP login method. The no form of this command will remove the specified configuration.

Parameters:

<ipv6-addr> is the security IPv6 address which can login the switch.

Default:

No security IPv6 addresses are configured by default.

Command Mode:

Global Mode.

Usage Guide:

IPv6 address of the client which can login the switch is not restricted before the security IPv6 address is not configured. After the security IPv6 address is configured, only clients with security IPv6 addresses are able to login the switch. Up to 32 security IPv6 addresses can be configured in the switch.

Example:

Configure the security IPv6 address is 2001:da8:123:1::1.
Switch(config)# authentication securityipv6 2001:da8:123:1::1

1.2.10 authorization

Command:

```
authorization line {console | vty | web} exec method [method...]  
no authorization line {console | vty | web} exec
```

Function:

Configure the list of the authorization method for the login user with VTY (login with Telnet and SSH), Web and Console. The no command restores the default authorization method.

Parameters:

line selects the authorization line, including **console**, **vty** (telnet and ssh) and **web**; **method** is the list of the authorization method, it must be among **local**, **tacacs** and **radius** keywords; **local** uses the local database to authorize; **tacacs** uses the remote TACACS+ server to authorize; **radius** uses the remote RADIUS server to authorize.

Default:

There is no authorization mode.

Command Mode:

Global Mode.

Usage Guide:

The authorization method for Console, VTY and Web login can be configured respectively. And authorization method can be any one or combination of Local, RADIUS or TACACS. When login method is configuration in combination, the preference goes from left to right. If the users have passed the authorization method, authorization method of lower preferences will be ignored. To be mentioned, if the user receives corresponding protocol's answer whether refuse or incept, it will not attempt the next authorization method; it will attempt the next authorization method if it receives nothing. And AAA function RADIUS server should be configured before the RADIUS configuration method can be used. And TACACS server should be configured before the TACACS configuration method can be used.

The local users adopt username command permission while authorization command is not configured, the users login the switch via RADIUS/TACACS method and works under common mode.

Example:

```
Configure the telnet authorization method to RADIUS.  
Switch(config)#authorization line vty exec radius
```

1.2.11 authorization line vty command

Command:

```
authorization line vty command <1-15> {local | radius | tacacs} (none)
no authorization line vty command <1-15>
```

Function:

Configure command authorization manner and authorization selection priority of login user with VTY (login with Telnet and SSH). The no command recovers to be default manner.

Default:

The authorization manner is not configured as default.

Command Mode:

Global Mode.

Usage Guide:

Configure the authorization manner when VTY login user configures command, the manners include any combination of Local, RADIUS and TACACS, the manner of none is just as the last manner. When using combination authorization manners, the priority of the front authorization manner is the highest and the others are in descending order; if the authorization with high priority passed, it is successful to configure command and the back authorization manner will be ignored. Notice: as long as one authorization manner receives a clear response of the corresponding agreement. Whether it is received or refused, the next authorization manner will not be attempted. If the clear response is not received, try the next manner. When using RADIUS authorization, AAA function must be enabled and configure RADIUS server. when using TACACS authorization, TACACS server must be configured. None is the manner of escaping and it only can be the last manner. This manner returns to passed authorization directly and it is successful to configure the command.

Example:

Configure level 1 command authorization manner of telnet login user as TACACS.
Switch(config)#authorization line vty command 1 tacacs

1.2.12 clear line vty <0-31>

Command:

```
clear line vty <0-31>
```

Function:

Delete the logged user information on the appointed line, force user to get down the line who logs in through telnet or ssh.

Command mode:

Admin Mode.

Usage guide:

After inputting this command, there is need to judge for this command, "Confirm[Y/N]: ", when inputting "Y" or "y", run to delete; when inputting " ? ", do not run to delete, print the notice information only. When inputting other characters, do not run to delete.

1.2.13 crypto key clear rsa

Command:

```
crypto key clear rsa
```

Function:

Clear the secret key of ssh.

Command mode:

Admin Mode.

1.2.14 terminal length

Command:

```
terminal length <0-512>
```

```
terminal no length
```

Function:

Set length of characters displayed in each screen on terminal; the "terminal no length" cancels the screen switching operation and display content once in all.

Parameter:

Length of characters displayed in each screen, ranging between 0-512 (0 refers to non-stop display).

Command mode:

Admin Mode.

Default:

Default Length is 25.

Usage guide:

Set length of characters displayed in each screen on terminal, so that the-More-message will be shown when displayed information exceeds the screen. Press any key to show information in next screen. Default length is 25.

Example:

Configure length of characters in each display to 20.

```
Switch#terminal length 20
```

1.2.15 terminal monitor

Command:

```
terminal monitor
```

```
terminal no monitor
```

Function:

Copy debugging messages to current display terminal; the “**terminal no monitor**” command restores to the default value.

Command mode:

Admin Mode.

Usage guide:

Configures whether the current debugging messages is displayed on this terminal. If this command is configured on telnet or SSH clients, debug messages will be sent to that client. The debug message is displayed on console by default.

Example:

```
Switch#terminal monitor
```

1.2.16 telnet

Command:

```
telnet [vrf <vrf-name>] {<ip-addr> | <ipv6-addr> | host <hostname>} [<port>]
```

Function:

Login on the remote host by Telnet

Parameter:

<vrf-name> is the specific VRF name; <ip-addr> is the IP address of the remote host, shown in dotted decimal notation; <ipv6-addr> is the IPv6 address of the remote host; <hostname> is the name of the remote host, containing max 64 characters; <port> is the port number, ranging between 0 and 65535.

Command Mode:

Admin Mode.

Usage Guide:

This command is used when the switch is applied as Telnet client, for logging on remote host to configure. When a switch is applied as a Telnet client, it can only establish one TCP connection with the remote host. To connect to another remote host, the current TCP connection must be disconnected with a hotkey "CTRL+ \". To telnet a host name, mapping relationship between the host name and the IP/IPv6 address should be previously configured. For required commands please refer to ip host and ipv6 host. In case a host corresponds to both an IPv4 and an IPv6 addresses, the IPv6 should be preferred when telneting this host name.

Example:

The switch telnets to a remote host whose IP address is 20.1.1.1.

```
Switch#telnet 20.1.1.1 23
```

```
Connecting Host 20.1.1.1 Port 23...
```

```
Service port is 23
```

```
Connected to 20.1.1.1
```

```
login:123
```

```
password:***
```

```
router>
```

1.2.17 telnet server enable

Command:

telnet server enable
no telnet server enable

Function:

Enable the Telnet server function in the switch: the “no telnet server enable” command disables the Telnet function in the switch.

Default:

Telnet server function is enabled by default.

Command mode:

Global Mode

Usage Guide:

This command is available in Console only. The administrator can use this command to enable or disable the Telnet client to login to the switch.

Example:

Disable the Telnet server function in the switch.
Switch(config)#no telnet server enable

1.2.18 telnet-server max-connection

Command:

telnet-server max-connection {<max-connection-number> | default}

Function:

Configure the max connection number supported by the Telnet service of the switch.

Parameters:

<max-connection-number>: the max connection number supported by the Telnet service, ranging from 5 to 16. The default option will restore the default configuration.

Default:

The system default value of the max connection number is 5.

Command Mode:

Global Mode

Usage Guide:

None.

Example:

Set the max connection number supported by the Telnet service as 10.

```
Switch(config)#telnet-server max-connection 10
```

1.2.19 ssh-server authentication-retries

Command:

```
ssh-server authentication-retries <authentication-retries>
```

```
no ssh-server authentication-retries
```

Function:

Configure the number of times for retrying SSH authentication; the “**no ssh-server authentication-retries**” command restores the default number of times for retrying SSH authentication.

Parameter:

< authentication-retries > is the number of times for retrying authentication; valid range is 1 to 10.

Command mode:

Global Mode

Usage Guide:

None.

Default:

The number of times for retrying SSH authentication is 3 by default.

Example:

Set the time for retrying SSH authentication to 5.

```
Switch(config)#ssh-server authentication-retries 5
```

1.2.20 ssh-server enable

Command:

```
ssh-server enable
```

```
no ssh-server enable
```

Function:

Enable SSH function on the switch; the “**no ssh-server enable**” command disables SSH function.

Command mode:

Global Mode

Default:

SSH function is disabled by default.

Usage Guide:

In order that the SSH client can log on the switch, the users need to configure the SSH user and enable SSH function on the switch.

Example:

Enable SSH function on the switch.

```
Switch(config)#ssh-server enable
```

1.2.21 ssh-server host-key create rsa

Command:

```
ssh-server host-key create rsa [modulus < modulus >]
```

Function:

Generate new RSA host key.

Parameter:

modulus is the modulus which is used to compute the host key; valid range is 768 to 2048. The default value is 1024.

Command mode:

Global Mode

Default:

The system uses the key generated when the ssh-server is started at the first time.

Usage Guide:

This command is used to generate the new host key. When SSH client logs on the server, the new host key is used for authentication. After the new host key is generated and “write” command is used to save the configuration, the system uses this key for authentication all the time. Because it takes quite a long time to compute the new key and some clients are not compatible with the key generated by the modulus 2048, it is recommended to use the key which is generated by the default modulus 1024.

Example:

Generate new host key.

```
Switch(config)#ssh-server host-key create rsa
```

1.2.22 ssh-server max-connection

Command:

```
ssh-server max-connection {<max-connection-number>|default}
```

Function:

Configure the max connection number supported by the SSH service of the switch.

Parameters:

<max-connection-number>: the max connection number supported by the SSH service, ranging from 5 to 16. The default option will restore the default configuration.

Default:

The system default value of the max connection number is 5.

Command Mode:

Global Mode

Usage Guide:

None.

Example:

Set the max connection number supported by the SSH service as 10.

```
Switch(config)#ssh-server max-connection 10
```

1.2.23 ssh-server timeout

Command:

```
ssh-server timeout <timeout>
```

```
no ssh-server timeout
```

Function:

Configure timeout value for SSH authentication; the “**no ssh-server timeout**” command restores the default timeout value for SSH authentication.

Parameter:

<timeout> is timeout value; valid range is 10 to 600 seconds.

Command mode:

Global Mode

Default:

SSH authentication timeout is 180 seconds by default.

Usage Guide:

This command is used to set SSH authentication timeout, the default timeout is 180 seconds.

Example:

Set SSH authentication timeout to 240 seconds.

```
Switch(config)#ssh-server timeout 240
```


1.2.24 show crypto key

Command:

`show crypto key`

Function:

Show the secret key of ssh.

Command mode:

Admin Mode.

1.2.25 show ssh-server

Command:

`show ssh-server`

Function:

Display SSH state and users which log on currently.

Command mode:

Admin Mode.

Example:

```
Switch#show ssh-server
ssh server is enabled
ssh-server timeout 180s
ssh-server authentication-retries 3
ssh-server max-connection number 6
ssh-server login user number 2
```

1.2.26 show telnet login

Command:

`show telnet login`

Function:

Display the information of the Telnet client which currently establishes a Telnet connection with the switch.

Command Mode:

Admin and Configuration Mode.

Usage Guide:

Check the Telnet client messages connected through Telnet with the switch.

Example:

```
Switch#show telnet login
Authenticate login by local
Login user:
Aa
```

1.2.27 show users

Command:

```
show users
```

Function:

Show the user information who logs in through telnet or ssh. It includes line number, user name and user IP.

Command mode:

Admin Mode.

Usage Guide:

When inputting this command, show the user information who logs in through telnet or ssh. It includes line number, user name and user IP. Because 16 telnet users and 16 ssh users are supported at most currently, vty0-15 are used for telnet, and 16-31 are used for ssh.

Example:

```
Switch#show users
```

Line	User	Location
vtty 16	a	192.168.1.1
vtty 0	admin	192.168.1.2
vtty 17	mab	192.168.1.13
vtty 1	test	192.168.1.40

1.2.28 who

Command:

Who

Function:

Show the current login users with vty.

Parameter:

None.

Command Mode:

All configuration modes

Example:

Show the current login users with vty.

```
Switch#who
```

```
Telnet user a login from 192.168.1.20
```

1.3 Commands for Configuring Switch IP

1.3.1 interface vlan

Command:

```
interface vlan <vlan-id>  
no interface vlan <vlan-id>
```

Function:

Enter the VLAN interface configuration mode; the no operation of this command will delete the existing VLAN interface.

Parameters:

<vlan-id> is the VLAN ID of an existing VLAN, ranging from 1 to 4094.

Command Mode:

Global Configuration Mode.

Usage Guide:

Users should first make sure the existence of a VLAN before configuring it. User “**exit**” command to quit the VLAN interface configuration mode back to the global configuration mode.

Example:

Enter the VLAN interface configuration mode of VLAN1.

```
Switch(config)#interface vlan 1
```

```
Switch(Config-if-Vlan1)#
```

1.3.2 ip address

Command:

```
ip address <ip-address> <mask> [secondary]
```

```
no ip address [<ip-address> <mask>] [secondary]
```

Function:

Set the IP address and mask for the specified VLAN interface; the “**no ip address <ip address> <mask> [secondary]**” command deletes the specified IP address setting.

Parameter:

<ip-address> is the IP address in dot decimal format; <mask> is the subnet mask in dot decimal format; [secondary] indicates the IP configured is a secondary IP address.

Default:

No IP address is configured upon switch shipment.

Command mode:

VLAN Interface Mode

Usage Guide:

A VLAN interface must be created first before the user can assign an IP address to the switch.

Example:

Set 10.1.128.1/24 as the IP address of VLAN1 interface.

```
Switch(config)#interface vlan 1
```

```
Switch(Config-if-Vlan1)#ip address 10.1.128.1 255.255.255.0
```

```
Switch(Config-if-Vlan1)#exit
```

```
Switch(config)#
```

Relative Command: ip bootp-client enable, ip dhcp-client enable

1.3.3 ipv6 address

Command:

```
ipv6 address <ipv6address / prefix-length> [eui-64]  
no ipv6 address <ipv6address / prefix-length> [eui-64]
```

Function:

Configure aggregatable global unicast address, site-local address and link-local address for the interface.

Parameters:

<*ipv6address*> is the prefix of an IPV6 address; <*prefix-length*> is the length of the prefix of an IPV6 address, ranging from 3 to 128; **eui-64** means that the eui64 interface id of the interface will automatically create an IPV6 address.

Command Mode:

Interface Configuration Mode.

Default:

None.

Usage Guide:

The prefix of an IPV6 address should not be a multicast address, or other kinds of IPV6 addresses with specific usage. Different layer-three VLAN interfaces are forbidden to share a same address prefix. As for any global unicast address, the prefix should be limited in the range from 2001:: to 3fff ::, with a length no shorter than 3. And the prefix length of a site-local address or a link-local address should not be shorter than 10.

Examples:

Configure an IPV6 address at the layer-three interface of VLAN1: set the prefix as 2001:3f:ed8::99, the length of which is 64.

```
Switch(Config-if-Vlan1)#ipv6 address 2001:3f:ed8::99/64
```

1.3.4 ip bootp-client enable

Command:

```
ip bootp-client enable
no ip bootp-client enable
```

Function:

Enable the switch to be a BootP Client and obtain IP address and gateway address through BootP negotiation; the “**no ip bootp-client enable**” command disables the BootP Client function and releases the IP address obtained in BootP.

Default:

BootP client function is disabled by default.

Command mode:

VLAN Interface Mode

Usage Guide:

Obtaining IP address through BootP, Manual configuration and DHCP are mutually exclusive, enabling any two methods for obtaining IP address is not allowed. Note: To obtain IP address via BootP, a DHCP server or a BootP server is required in the network.

Example:

```
Get IP address through BootP.
Switch(config)#interface vlan 1
Switch(Config-if-Vlan1)#ip bootp-client enable
Switch (Config-if-Vlan1)#exit
Switch(config)#
```

Relative command: ip address, ip dhcp-client enable

1.3.5 ip dhcp-client enable

Command:

```
ip dhcp-client enable
no ip dhcp-client enable
```

Function:

Enables the switch to be a DHCP client and obtain IP address and gateway address through DHCP negotiation; the “**no ip dhcp-client enable**” command disables the DHCP client function and releases the IP address obtained in DHCP. Note: To obtain IP address via DHCP, a DHCP server is required in the network.

Default:

the DHCP client function is disabled by default.

Command mode:

VLAN Interface Mode

Usage Guide:

Obtaining IP address by DHCP, Manual configuration and BootP are mutually exclusive, enabling any 2 methods for obtaining an IP address is not allowed.

Example:

```
Getting an IP address through DHCP.
Switch(config)#interface vlan 1
Switch(Config-if-Vlan1)#ip dhcp-client enable
Switch(Config-if-Vlan1)#exit
Switch(config)#
```

1.4 Commands for SNMP

1.4.1 debug snmp mib

Command:

```
debug snmp mib
no debug snmp mib
```

Function:

Enable the SNMP mib debugging; the "**no debug snmp mib**" command disables the debugging.

Command Mode:

Admin Mode.

Usage Guide:

When user encounters problems in applying SNMP, the SNMP debugging is available to locate the problem causes.

Example:

```
Switch#debug snmp mib
```

1.4.2 debug snmp kernel

Command:

```
debug snmp kernel
no debug snmp kernel
```

Function:

Enable the SNMP kernel debugging; the "**no debug snmp kernel**" command disables the debugging function.

Command Mode:

Admin Mode.

Usage Guide:

When user encounters problems in applying SNMP, the SNMP debugging is available to locate the problem causes.

Example:

```
Switch#debug snmp kernel
```


1.4.3 rmon enable

Command:

rmon enable
no rmon enable

Function:

Enable RMON; the “**no rmon enable**” command disables RMON.

Command mode:

Global Mode

Default:

RMON is enabled by default.

Example:

Enable RMON.
Switch(config)#rmon enable
Disable RMON.
Switch(config)#no rmon enable

1.4.4 show private-mib oid

Command:

show private-mib oid

Function:

Show the original oid of the private mib.

Command mode:

Admin and configuration mode.

Usage Guide:

Check the beginning oid of the private mib by **show private-mib oid** command.

Example:

```
Show the original oid of the private mib.  
Switch#show private-mib oid  
Private MIB OID:1.3.6.1.4.1.6339
```

1.4.5 show snmp

Command:

```
show snmp
```

Function:

Display all SNMP counter information.

Command mode:

Admin and Configuration Mode.

Example:

```
Switch#show snmp  
0 SNMP packets input  
0 Bad SNMP version errors  
0 Unknown community name  
0 Illegal operation for community name supplied  
0 Encoding errors  
0 Number of requested variables  
0 Number of altered variables  
0 Get-request PDUs  
0 Get-next PDUs  
0 Set-request PDUs  
0 SNMP packets output  
0 Too big errors (Max packet size 1500)  
0 No such name errors  
0 Bad values errors  
0 General errors  
0 Get-response PDUs  
0 SNMP trap PDUs
```

Displayed information	Explanation
snmp packets input	Total number of SNMP packet inputs.
bad snmp version errors	Number of version information error packets.
unknown community name	Number of community name error packets.
illegal operation for community name supplied	Number of permission for community name error packets.
encoding errors	Number of encoding error packets.
number of requested variable	Number of variables requested by NMS.
number of altered variables	Number of variables set by NMS.
get-request PDUs	Number of packets received by "get" requests.
get-next PDUs	Number of packets received by "getnext" requests.
set-request PDUs	Number of packets received by "set" requests.
snmp packets output	Total number of SNMP packet outputs.
too big errors	Number of "Too_big" error SNMP packets.
maximum packet size	Maximum length of SNMP packets.
no such name errors	Number of packets requesting for non-existent MIB objects.
bad values errors	Number of "Bad_values" error SNMP packets.
general errors	Number of "General_errors" error SNMP packets.
response PDUs	Number of response packets sent.
trap PDUs	Number of Trap packets sent.

1.4.6 show snmp engineid

Command:

show snmp engineid

Function:

Display the engine ID commands.

Command Mode:

Admin and Configuration Mode.

Example:

```
Switch#show snmp engineid
SNMP engineID:3138633303f1276c      Engine Boots is:1
```

Displayed Information	Explanation
SNMP engineID	Engine number
Engine Boots	Engine boot counts

1.4.7 show snmp group

Command:

```
show snmp group
```

Function:

Display the group information commands.

Command Mode:

Admin and Configuration Mode.

Example:

```
Switch#show snmp group
Group Name:initial      Security Level:noAuthnoPriv
Read View:one
Write View:<no writeview specified>
Notify View:one
```

Displayed Information	Explanation
Group Name	Group name
Security level	Security level
Read View	Read view name
Write View	Write view name
Notify View	Notify view name
<no writeview specified>	No view name specified by the user

1.4.8 show snmp mib

Command:

show snmp mib

Function:

Display all MIB supported by the switch.

Command Mode:

Admin and Configuration Mode.

1.4.9 show snmp status

Command:

show snmp status

Function:

Display SNMP configuration information.

Command mode:

Admin and Configuration Mode.

Example:

Switch#show snmp status

Trap enable

RMON enable

Community Information:

V1/V2c Trap Host Information:

V3 Trap Host Information:

Security IP Information:

Displayed information	Description
Community string	Community string
Community access	Community access permission
Trap-rec-address	IP address which is used to receive Trap.
Trap enable	Enable or disable to send Trap.
SecurityIP	IP address of the NMS which is allowed to access Agent

1.4.10 show snmp user

Command:

show snmp user

Function:

Display the user information commands.

Command Mode:

Admin and Configuration Mode.

Example:

```
Switch#show snmp user
User name: initialsha
Engine ID: 1234567890
Auth Protocol:MD5    Priv Protocol:DES-CBC
Row status:active
```

Displayed Information	Explanation
User name	User name
Engine ID	Engine ID
Priv Protocol	Employed encryption algorithm
Auth Protocol	Employed identification algorithm
Row status	User state

1.4.11 show snmp view

Command:

show snmp view

Function:

Display the view information commands.

Command Mode:

Admin and Configuration Mode.

Example:

```
Switch#show snmp view
```

```
View Name:readview      1.      -Included   active
                        1.3.     Excluded   active
```

Displayed Information	Explanation
View Name	View name
1.and1.3.	OID number
Included	The view includes sub trees rooted by this OID
Excluded	The view does not include sub trees rooted by this OID
active	State

1.4.12 snmp-server community

Command:

```
snmp-server community {ro | rw} {0 | 7} <string> [access {<num-std>|<name>}] [ipv6-access {<ipv6-num-std>|<ipv6-name>}] [read <read-view-name>] [write <write-view-name>]
```

```
no snmp-server community <string> [access {<num-std>|<name>}] [ipv6-access {<ipv6-num-std>|<ipv6-name>}]
```

Function:

Configure the community string for the switch; the no command deletes the configured community string.

Parameter:

<string> is the configured community string. If key option is set as 0, the specified community string is not encrypted, if key option is set as 7, the specified community string is encrypted;

ro | rw is the specified access mode to MIB, **ro** for read-only and **rw** for read-write;

<num-std> is the access-class number for standard numeric ACL, ranging between 1-99;

<name> is the access-class name for standard ACL, the character string length is ranging between 1-32;

<ipv6-num-std> is the access-class number for standard numeric IPv6 ACL, ranging between 500-599;

<name> is the access-class name for standard IPv6 ACL, the character string length is ranging between 1-32;

<read-view-name> is the name of readable view which includes 1-32 characters;

<write-view-name> is the name of writable view which includes 1-32 characters.

Command mode:

Global Mode

Usage Guide:

The switch supports up to 4 community strings. It can realize the access-control for specifically community view by binding the community name to specifically readable view or writable view.

Example:

Add a community string named "private" with read-write permission.

```
Switch(config)#snmp-server community rw 0 private
```

Add a community string named "public" with read-only permission.

```
Switch(config)#snmp-server community ro 0 public
```

Modify the read-write community string named "private" to read-only.

```
Switch(config)# snmp-server community ro 0 private
```

Delete community string "private".

```
Switch(config)#no snmp-server community 0 private
```

Bind the read-only community string "public" to readable view "pviewr".

```
Switch(config)#snmp-server community ro 0 public read pviewr
```

Bind the read-write community string "private" to readable view "pviewr" and writable view "pvieww".

```
Switch(config)#snmp-server community rw 0 private read pviewr write pvieww
```

1.4.13 snmp-server enable

Command:

```
snmp-server enable
```

```
no snmp-server enable
```

Function:

Enable the SNMP proxy server function on the switch. The "**no snmp-server enable**" command disables the SNMP proxy server function

Command mode:

Global mode

Default:

SNMP proxy server function is disabled by system default.

Usage guide:

To perform configuration management on the switch with network manage software, the SNMP proxy server function has to be enabled with this command.

Example:

Enable the SNMP proxy server function on the switch.

```
Switch(config)#snmp-server enable
```

1.4.14 snmp-server enable traps

Command:

```
snmp-server enable traps
```

```
no snmp-server enable traps
```

Function:

Enable the switch to send Trap message; the “**no snmp-server enable traps**” command disables the switch to send Trap message.

Command mode:

Global Mode

Default:

Forbid to send Trap message.

Usage Guide:

When Trap message is enabled, if Down/Up in device ports or of system occurs, the device will send Trap messages to NMS that receives Trap messages.

Example:

Enable to send Trap messages.

```
Switch(config)#snmp-server enable traps
```

Disable to send Trap messages.

```
Switch(config)#no snmp-server enable traps
```

1.4.15 snmp-server engineid

Command:

```
snmp-server engineid <engine-string>
no snmp-server engineid
```

Function:

Configure the engine ID; the “no” form of this command restores to the default engine ID.

Command Mode:

Global mode

Parameter:

<engine-string> is the engine ID shown in 1-32 digit hex characters.

Default:

Default value is the company ID plus local MAC address.

Usage Guide:

None

Example:

```
Set current engine ID to A66688999F
Switch(config)#snmp-server engineid A66688999F
Restore the default engine ID
Switch(config)#no snmp-server engineid
```

1.4.16 snmp-server group

Command:

```
snmp-server group <group-string> {NoauthNopriv | AuthNopriv | AuthPriv} [[read <read-string>] [write
<write-string>] [notify <notify-string>]] [access {<num-std>|<name>}] [ipv6-access
{<ipv6-num-std>|<ipv6-name>}]
no snmp-server group <group-string> {NoauthNopriv | AuthNopriv | AuthPriv} [access {<num-std>|<name>}]
[ipv6-access {<ipv6-num-std>|<ipv6-name>}]
```

Function:

This command is used to configure a new group; the “no” form of this command deletes this group.

Command Mode:

Global Mode

Parameter:

<group-string> group name which includes 1-32 characters

NoauthNopriv Applies the non recognizing and non encrypting safety level

AuthNopriv Applies the recognizing but non encrypting safety level

AuthPriv Applies the recognizing and encrypting safety level

read-string Name of readable view which includes 1-32 characters

write-string Name of writable view which includes 1-32 characters

notify-string Name of trappable view which includes 1-32 characters

<num-std> is the access-class number for standard numeric ACL, ranging between 1-99;

<name> is the access-class name for standard ACL, the character string length is ranging between 1-32;

<ipv6-num-std> is the access-class number for standard numeric IPv6 ACL, ranging between 500-599;

<name> is the access-class name for standard IPv6 ACL, the character string length is ranging between 1-32.

Usage Guide:

There is a default view “v1defaultviewname” in the system. It is recommended to use this view as the view name of the notification. If the read or write view name is empty, corresponding operation will be disabled.

Example:

Create a group CompanyGroup, with the safety level of recognizing and encrypting, the read viewname isreadview, and the writing is disabled.

```
Switch (config)#snmp-server group CompanyGroup AuthPriv read readview
```

```
Delete group
```

```
Switch (config)#no snmp-server group CompanyGroup AuthPriv
```

1.4.17 snmp-server host

Command:

```
snmp-server host { <host-ipv4-address> / <host-ipv6-address> } {v1 | v2c | {v3 {NoauthNopriv | AuthNopriv | AuthPriv}} } <user-string>
```

```
no snmp-server host { <host-ipv4-address> / <host-ipv6-address> } {v1 | v2c | {v3 {NoauthNopriv | AuthNopriv | AuthPriv}} } <user-string>
```

Function:

As for the v1/v2c versions this command configures the IPv4 or IPv6 address and Trap community character string of the network management station receiving the SNMP Trap message. And for v3 version, this command is used for receiving the network management station IPv4 or IPv6 address and the Trap user name and safety level; the “no” form of this command cancels this IPv4 or IPv6 address.

Command Mode:

Global Mode.

Parameter:

<host-ipv4-addr> is IP address of NMS management station which receives Trap message.

<host-ipv6-addr> is IPv6 address of NMS management station which receives Trap message.

v1 | v2c | v3 is the version number when sending the trap.

NoauthNopriv | AuthNopriv | AuthPriv is the safety level v3 trap is applied, which may be non encrypted and non authentication, non encrypted and authentication, encrypted and authentication.

<user-string> is the community character string applied when sending the Trap message at v1/v2, and will be the user name at v3.

Usage Guide:

The Community character string configured in this command is the default community string of the RMON event group. If the RMON event group has no community character string configured, the community character string configured in this command will be applied when sending the Trap of RMON, and if the community character string is configured, its configuration will be applied when sending the RMON trap. This command allows to configure IPv4 or IPv6 addresses of SNMP management station that receive Trap message at the same time, but IPv4 and IPv6 addresses of v1 and v2c version are less than 8 in all.

Example:

Configure an IP address to receive Trap

```
Switch(config)#snmp-server host 1.1.1.5 v1 usertrap
```

Delete an IPv6 address to receive Trap.

```
Switch(config)#no snmp-server host 2001::1 v1 usertrap
```

1.4.18 snmp-server securityip

Command:

```
snmp-server securityip {<ipv4-address> | <ipv6-address>}  
no snmp-server securityip {<ipv4-address> | <ipv6-address>}
```

Function:

Configure security IPv4 or IPv6 address allowed to access NMS management station; the no command deletes security IPv4 or IPv6 address configured.

Command Mode:

Global Mode.

Parameter:

<ipv4-address> is NMS security IPv4 address, dotted decimal notation.

<ipv6-address> is NMS security IPv6 address, colon hexadecimal.

Usage Guide:

It is only the consistency between NMS administration station IPv4 or IPv6 address and security IPv4 or IPv6 address configured by the command, so it send SNMP packet could be processed by switch, the command only applies to SNMP. Allows configuration the IPv4 or IPv6 address of the network manage station receiving the SNMP Trap message, but the IP addresses are less than 20 in all.

Example:

Configure security IP address of NMS management station.

```
Switch(config)#snmp-server securityip 1.1.1.5
```

Delete security IPv6 address.

```
Switch(config)#no snmp-server securityip 2001::1
```

1.4.19 snmp-server securityip

Command:

```
snmp-server securityip {enable | disable}
```

Function:

Enable/disable the security IP address authentication on NMS management station.

Command Mode:

Global Mode

Default:

Enable the security IP address authentication function.

Example:

Disable the security IP address authentication function.

```
Switch(config)#snmp-server securityip disable
```

1.4.20 snmp-server trap-source

Command:

```
snmp-server trap-source {<ipv4-address> | <ipv6-address>}  
no snmp-server trap-source {<ipv4-address> | <ipv6-address>}
```

Function:

Set the source IPv4 or IPv6 address which is used to send trap packet, the no command deletes the configuration.

Parameter:

<ipv4-address>: IPv4 address is used to send trap packet in dotted decimal notation

<ipv6-address>: IPv6 address is used to send trap packet in colon hexadecimal.

Command Mode:

Global Mode.

Usage Guide:

If there is no configuration, select the source address according to the interface address sent by actual trap packet, when configure the IP address, adopt the configured source address as the source address of trap packet.

Example:

Set the IP address which is used to send trap packet.

```
Switch(config)#snmp-server trap-source 1.1.1.5
```

Delete the configured source address which is used to send IPv6 trap packet.

```
Switch(config)#no snmp-server trap-source 2001::1
```

1.4.21 snmp-server user

Command:

```
snmp-server user <use-string> <group-string> [{authPriv | authNoPriv} auth {md5 | sha} <word>] [access
{<num-std>|<name>}] [ipv6-access {<ipv6-num-std>|<ipv6-name>}]
no snmp-server user <user-string> [access {<num-std>|<name>}] [ipv6-access
{<ipv6-num-std>|<ipv6-name>}]
```

Function:

Add a new user to an SNMP group; the "no" form of this command deletes this user.

Command Mode:

Global Mode.

Parameter:

<user-string> is the user name containing 1-32 characters.

<group-string> is the name of the group the user belongs to, containing 1-32 characters.

authPriv use DES for the packet encryption.

authNoPriv not use DES for the packet encryption.

auth perform packet authentication.

md5 packet authentication using HMAC MD5 algorithm.

sha packet authentication using HMAC SHA algorithm.

<word > user password, containing 8-32 character.

<num-std> is the access-class number for standard numeric ACL, ranging between 1-99;

<name> is the access-class name for standard ACL, the character string length is ranging between 1-32;

<ipv6-num-std> is the access-class number for standard numeric IPv6 ACL, ranging between 500-599;

<name> is the access-class name for standard IPv6 ACL, the character string length is ranging between 1-32.

Usage Guide:

If the encryption and authentication is not selected, the default settings will be no encryption and no authentication. If the encryption is selected, the authentication must be done. When deleting a user, if correct username and incorrect group name is inputted, the user can still be deleted.

Example:

Add a new user tester in the UserGroup with an encryption safety level and HMAC md5 for authentication, the password is hellohello

```
Switch (config)#snmp-server user tester UserGroup authPriv auth md5 hellohello
```

Delete an User

```
Switch (config)#no snmp-server user tester
```

1.4.22 snmp-server view

Command:

```
snmp-server view <view-string> <oid-string> {include | exclude}
no snmp-server view <view-string> [ <oid-string> ]
```

Function:

This command is used to create or renew the view information; the "no" form of this command deletes the view information.

Command Mode:

Global Mode.

Parameter:

<view-string> view name, containing 1-32 characters.
<oid-string> is OID number or corresponding node name, containing 1-255 characters.
include | exclude, include/exclude this OID.

Usage Guide:

The command supports not only the input using the character string of the variable OID as parameter. But also supports the input using the node name of the parameter.

Example:

```
Create a view, the name is readview, including iso node but not including the iso.3 node
Switch(config)#snmp-server view readview iso include
Switch(config)#snmp-server view readview iso.3 exclude
Delete the view
Switch(config)#no snmp-server view readview
```


1.5 Commands for Switch Upgrade

1.5.1 copy (FTP)

Command:

`copy <source-url> <destination-url> [ascii | binary]`

Function:

Download files to the FTP client.

Parameter:

<source-url> is the location of the source files or directories to be copied; <destination-url> is the destination address to which the files or directories to be copied; forms of <source-url> and <destination-url> vary depending on different locations of the files or directories. **ascii** indicates the ASCII standard will be adopted; **binary** indicates that the binary system will be adopted in the file transmission (default transmission method) .When URL represents an FTP address, its form should be:

ftp://<username>:<password>@{<ipaddress>|<ipv6address>|<hostname> }/<filename>,amongst <username> is the FTP user name, <password> is the FTP user password, <ipaddress>|<ipv6address> is the IPv4 or IPv6 address of the FTP server/client, <hostname> is the name of the host mapping with the IPv6 address, it does not support the file download and upload with hosts mapping with IPv4 addresses, <filename> is the name of the FTP upload/download file.

Special keywords of the filename

Keywords	Source or destination addresses
running-config	Running configuration files
startup-config	It means the reboot configuration files when using copy running-config startup-config command
nos.img	System files
boot.rom	System startup files
stacking/nos.img	As destination address, execute system files upgrade for Slave in stacking mode
stacking/nos.rom	As destination address, execute system startup files upgrade for Slave in stacking mode

Command Mode:

Admin Mode.

Usage Guide:

This command supports command line hints, namely if the user can enter commands in following forms: copy <filename> ftp:// or copy ftp:// <filename> and press Enter, following hints will be provided by the system :

```
ftp server ip/ipv6 address [x.x.x.x]/[x::x:x] >
```

```
ftp username>
```

```
ftp password>
```

```
ftp filename>
```

Requesting for FTP server address, user name, password and file name

Examples:

(1) Save images in the FLASH to the FTP server of 10.1.1.1, FTP server username is Switch, password is superuser:

```
Switch#copy nos.img ftp://Switch:superuser@10.1.1.1/nos.img
```

(2) Obtain system file nos.img from the FTP server 10.1.1.1, the username is Switch, password is superuser

```
Switch#copy ftp://Switch:superuser@10.1.1.1/nos.img nos.img
```

(3) Save images in the FLASH to the FTP server of 2004:1:2:3::6

```
Switch#copy nos.img ftp://username:password@2004:1:2:3::6/ nos.img
```

(4) Obtain system file nos.img from the FTP server 2004:1:2:3::6

```
Switch#copy ftp:// username:password@2004:1:2:3::6/nos.img nos.img
```

(5) Save the running configuration files

```
Switch#copy running-config startup-config
```

Relevant Command: write

1.5.2 copy (TFTP)

Command:

copy <source-url> <destination-url> [ascii | binary]

Function:

Download files to the TFTP client.

Parameter:

<source-url> is the location of the source files or directories to be copied; **<destination-url>** is the destination address to which the files or directories to be copied; forms of **<source-url>** and **<destination-url>** vary depending on different locations of the files or directories. **ascii** indicates the ASCII standard will be adopted; **binary** indicates that the binary system will be adopted in the file transmission (default transmission method). When URL represents a TFTP address, its form should be: `tftp://{<ipaddress>|<ipv6address>|<hostname>}/<filename>`, amongst `<ipaddress>|<ipv6address>` is the IPv4 or IPv6 address of the TFTP server/client, `<hostname>` is the name of the host mapping with the IPv6 address, it does not support the file download and upload with hosts mapping with IPv4 addresses, `<filename>` is the name of the TFTP upload/download file.

Special keyword of the filename

Keywords	Source or destination addresses
running-config	Running configuration files
startup-config	It means the reboot configuration files when using copy running-config startup-config command
nos.img	System files
boot.rom	System startup files

Command Mode:

Admin Mode.

Usage Guide:

This command supports command line hints, namely if the user can enter commands in following forms: **copy <filename> tftp://** or **copy tftp:// <filename>** and press Enter, following hints will be provided by the system:

```
tftp server ip/ipv6 address[x.x.x.x]/[x::x::x]>
```

```
tftp filename>
```

Requesting for TFTP server address, file name

Example:

(1) Save images in the FLASH to the TFTP server of 10.1.1.1

```
Switch#copy nos.img tftp://10.1.1.1/nos.img
```

(2) Obtain system file nos.img from the TFTP server 10.1.1.1

```
Switch#copy tftp://10.1.1.1/nos.img nos.img
```

(3) Save images in the FLASH to the TFTP server 2004:1:2:3::6

```
Switch#copy nos.img tftp:// 2004:1:2:3::6/ nos.img
```

(4) Obtain system file nos.img from the TFTP server 2004:1:2:3::6

```
Switch#copy tftp:// 2004:1:2:3::6/nos.img nos.img
```

(5) Save the running configuration files

```
Switch#copy running-config startup-config
```

Relevant Command: write

1.5.3 ftp-dir

Command:

```
ftp-dir <ftp-server-url>
```

Function:

Browse the file list on the FTP server.

Parameter:

The form of **<ftp-server-url>** is : ftp://<username>:<password>@{ <ipv4address> | <ipv6address> }, amongst <username> is *the FTP* user name, <password> is the FTP user password, { <ipv4address> | <ipv6address> } is the IPv4 or IPv6 address of the FTP server.

Command Mode:

Admin Mode

Example:

Browse the list of the files on the server with the FTP client, the username is "Switch", the password is "superuser".

```
Switch#ftp-dir ftp://Switch:superuser @10.1.1.1.
```

1.5.4 ftp-server enable

Command:

```
ftp-server enable
no ftp-server enable
```

Function:

Start FTP server, the “**no ftp-server enable**” command shuts down FTP server and prevents FTP user from logging in.

Default:

FTP server is not started by default.

Command mode:

Global Mode

Usage Guide:

When FTP server function is enabled, the switch can still perform ftp client functions. FTP server is not started by default.

Example:

```
Enable FTP server service.
Switch#config
Switch(config)# ftp-server enable
Relative command: ip ftp
```

1.5.5 ftp-server timeout

Command:

```
ftp-server timeout <seconds>
```

Function:

Set data connection idle time.

Parameter:

<**seconds**> is the idle time threshold (in seconds) for FTP connection, the valid range is 5 to 3600.

Default:

The system default is 600 seconds.

Command mode:

Global Mode

Usage Guide:

When FTP data connection idle time exceeds this limit, the FTP management connection will be disconnected.

Example:

Modify the idle threshold to 100 seconds.

```
Switch#config
```

```
Switch(config)#ftp-server timeout 100
```

1.5.6 ip ftp

Command:

```
ip ftp username <username> password [0 | 7] <password>
```

```
no ip ftp username <username>
```

Function:

Configure the username and password for logging in to the FTP; the no operation of this command will delete the configured username and password simultaneously.

Parameters:

<username> is the username of the FTP link, its range should not exceed 32 characters; *<password>* is the password of the FTP link, if input option 0 on password setting, the password is not encrypted; if input option 7, the password is encrypted.

Default Settings:

The system uses anonymous FTP links by default.

Command Mode:

Global Configuration Mode.

Examples:

Configure the username as Switch and the password as superuser.

```
Switch#
```

```
Switch#config
```

```
Switch(config)#ip ftp username Switch password 0 superuser
```

```
Switch(config)#
```

1.5.7 show ftp

Command:

```
show ftp
```

Function:

Display the parameter settings for the FTP server.

Command mode:

Admin and Configuration Mode.

Default:

Do not display.

Example:

```
Switch#show ftp
```

```
Timeout : 600
```

Displayed information	Description
Timeout	Timeout time.

1.5.8 show tftp

Command:

```
show tftp
```

Function:

Display the parameter settings for the TFTP server.

Default:

Do not display.

Command mode:

Admin and Configuration Mode.

Example:

```
Switch#show tftp
timeout      : 60
Retry Times  : 10
```

Displayed information	Explanation
Timeout	Timeout time.
Retry Times	Retransmission times.

1.5.9 tftp-server enable

Command:

```
tftp-server enable
no tftp-server enable
```

Function:

Start TFTP server, the “**no tftp-server enable**” command shuts down TFTP server and prevents TFTP user from logging in.

Default:

Disable TFTP Server.

Command mode:

Global Mode

Usage Guide:

When TFTP server function is enabled, the switch can still perform TFTP client functions. TFTP server is not started by default.

Example:

Enable TFTP server service.

```
Switch#config
```

```
Switch(config)#ftp-server enable
```

Relative Command: ftp-server timeout

1.5.10 tftp-server retransmission-number

Command:

```
ftp-server retransmission-number <number>
```

Function:

Set the retransmission time for TFTP server.

Parameter:

<number> is the time to re-transfer, the valid range is 1 to 20.

Default:

Retransmit 5 times.

Command mode:

Global Mode

Example:

Modify the retransmission to 10 times.

```
Switch#config
```

```
Switch(config)#ftp-server retransmission-number 10
```

1.5.11 tftp-server transmission-timeout

Command:

```
tftp-server transmission-timeout <seconds>
```

Function:

Set the transmission timeout value for TFTP server.

Parameter:

<seconds> is the timeout value, the valid range is 5 to 3600s.

Default: The system default timeout setting is 600 seconds.

Command mode:

Global Mode

Example:

Modify the timeout value to 60 seconds.

```
Switch#config
```

```
Switch(config)#tftp-server transmission-timeout 60
```

Chapter 2 File System Commands

2.1 cd

Command:

`cd <directory>`

Function:

Change the working directory for the storage device.

Parameters:

`<directory>` is the sub-directory name, a sequence of consecutive characters whose length ranges from 1 to 80.

Command Mode:

Admin Mode.

Default Settings:

The default working directory is Flash.

Usage Guide:

After this command implemented, the current storage device will switch to the new working directory, which can be viewed by the "pwd" command.

Example:

Change the working directory of the current storage device to flash.

```
Switch#cd flash:
```

```
Switch#pwd
```

```
flash:/
```

```
Switch#
```

2.2 copy

Command:

`copy <source-file-url > <dest-file-url>`

Function:

Copy a designated file on the switch and store it as a new file.

Parameters:

<source-file-url> is the source file; **<dest-file-url>** is the destination file. When users operate on files stored in backup master board and line cards under IMG mode, URLs of the source file and the destination file should take such a form as described in the following requirements.

1. The prefix of the source file URL should be in one of the following forms:

starting with "flash:"

"ftp://username:pass@server-ip/file-name"

"tftp://server-ip/file-name"

2. The prefix of the destination file URL should be in one of the following forms:

starting with "flash:"

"ftp://username:pass@server-ip/file-name"

"tftp://server-ip/file-name"

Command Mode:

Admin Mode.

Default Settings:

None.

Usage Guide:

1. In this command, when the prefix of the source file URL is ftp:// or tftp://, that of the destination file URL should not be either of them.

2. To use this command, the designated source file should exist, and the destination file should not be named the same as any existing directory or file, otherwise, there might be a prompt warning about a failed copy operation or an attempt to overwrite an existing file.

3. If the source and destination files are in different directories, with this command implemented, users can copy files from other directories into the current one.

URL Example: The URL of files in root directory of Flash devices on it should be flash:/nos.img.

Example:

Copy the file "flash:/nos.img" and store it as "flash/ 6.1.11.0.img".

```
Switch#copy flash:/nos.img flash:/nos-6.1.11.0.img
```

```
Copy flash:/nos.img to flash:/nos-6.1.11.0.img? [Y:N] y
```

```
Copied file flash:/nos.img to flash:/nos-6.1.11.0.img.
```

2.3 delete

Command:

`delete <file-url>`

Function:

Delete the designate file on the storage device.

Parameters:

`<file-url>` is the full path of the file to be deleted.

Command Mode:

Admin Mode.

Default Settings:

None.

Usage Guide:

The designated file will be deleted after implementing this command.

Example:

Delete file flash:/nos.img.

Switch#delete flash:/nos5.img

Delete file flash:/nos5.img?[Y:N]y

Deleted file flash:/nos.img.

2.4 dir

Command:

`dir [WORD]`

Function:

Display the information of the designated directory on the storage device.

Parameters:

<WORD> is the name of the shown directory. There may be the following formats: directory name, slot-xx#directory name, flash:/directory name, cf:/directory name.

Command Mode:

Admin Configuration Mode.

Default Settings:

No <WORD> means to display information of the current working directory.

Usage Guide:

Implementing this command will display information of files and sub-directories in the designated directory.

Note: This command does not support a recursive display of all sub-directories.

Example:

Display information of the directory "flash:/".

```
Switch#dir flash:/
```

```
nos.img      2,449,496      1980-01-01 00:01:06      ----  
startup-config  2,064      1980-01-01 00:30:12      ----  
Total 7,932,928 byte(s) in 4 file(s) , free 4,966,400 byte(s)
```

```
Switch#
```

2.5 format

Command:

```
format <device>
```

Function:

Format the storage device.

Parameters:

<device> is the name of the device to be formatted.

Command Mode:

Admin Mode.

Default Settings:

None.

Usage Guide:

1. After formatting, all files on the storage device will be irrecoverably lost.
2. The only acceptable file system type of Format is FAT 32, without exception.
3. This command cannot be used to format flash.

2.6 mkdir

Command:

mkdir <*directory*>

Function:

Create a sub-directory in the designated directory on a certain storage device .

Parameters:

<*directory*> is the sub-directory name, a sequence of consecutive characters, whose length ranges from 1 to 80.

Command Mode:

Admin Mode.

Default Settings:

None.

Usage Guide:

The new created directory should not be named the same as any other directory or file in the designated directory, or located on a flash device. If any error occurs, a prompt will be displayed.

2.7 pwd

Command:

pwd

Function:

Display the current working directory.

Parameters:

None.

Command Mode:

Admin Mode.

Default Settings:

The default directory is flash.

Example:

Display the current working directory.

```
Switch#pwd
```

```
flash:/
```

```
Switch#
```

2.8 rename

Command:

```
rename <source-file-url> <new-filename >
```

Function:

Rename a designated file on the switch.

Parameters:

<source-file-url> is the source file, in which whether specifying or not its path are both acceptable; **<new-filename>**

is a filename without specifying its path.

Command Mode:

Admin Mode.

Default Settings:

None.

Usage Guide:

When using this command, if the new file name is not used as that of any existing directory or file, the rename operation can be done, or a prompt will indicate its failure.

Example:

Change the name of file “nos.img” in the current working directory to “nos-6.1.11.0.img”.

```
Switch# rename nos5.img nos-6.1.11.0.img
```

Rename flash:/nos5.img to flash:/nos-6.1.11.0.img ok !

2.9 rmdir

Command:

```
rmdir <directory>
```

Function:

Delete a sub-directory in the designated directory on a certain device .

Parameters:

<*directory*> is the sub-directory name, a sequence of consecutive characters whose length ranges from 1 to 80.

Command Mode:

Admin Mode.

Default Settings:

None.

Usage Guide:

The directory to be deleted should exist and be empty, that is, all files in the directory should be deleted before deleting it, or an error prompt will be displayed.

Chapter 3 Commands for Cluster

3.1 clear cluster nodes

Command:

```
clear cluster nodes [nodes-sn <candidate-sn-list> | mac-address <mac-addr>]
```

Function:

Clear the nodes in the candidate list found by the commander switch.

Parameters:

candidate-sn-list: sn of candidate switches, ranging from 1 to 256. More than one candidate can be specified.

mac-address: mac address of the switches (including all candidates, members and other switches).

Default:

No parameter means to clear information of all switches.

Command Mode:

Admin Mode.

Usage Guide:

After executing this command, the information of this node will be deleted from the chain list saved on commander switch. In 30 seconds, the commander will recreate a cluster topology and re-add this node. But after being read, the candidate id of the switch might change. The command can only be executed on commander switches

Example:

Clear all candidate switch lists found by the commander switch.

```
Switch#clear cluster nodes
```

3.2 cluster auto-add

Command:

```
cluster auto-add
```

```
no cluster auto-add
```

Function:

When this command is executed in the commander switch, the newly discovered candidate switches will be added to the cluster as a member switch automatically; the “**no cluster auto-add**” command disables this function.

Command mode:

Global Mode

Default:

This function is disabled by default. That means that the candidate switches are not automatically added to the cluster.

Usage Guide:

After enabling this command on a commander switch, candidate switches will be automatically added as members.

Example:

Enable the auto adding function in the commander switch.

```
Switch(config)#cluster auto-add
```

3.3 cluster commander

Command:

```
cluster commander [<cluster-name>]
```

```
no cluster commander
```

Function:

Set the switch as a commander switch, and create a cluster.

Parameter:

<cluster-name> is the cluster's name, no longer than 32 characters.

Command mode:

Global Mode

Default:

Default setting is no commander switch. cluster_name is null by default.

Usage Guide:

This command sets the role of a switch as commander switch and creates a cluster, which can only be executed on non commander switches. The cluster_name cannot be changed after the switch becoming a commander, and “no cluster commander” should be executed first to do that. The no operation of this command will cancel the commander configuration of the switch.

Example:

Set the current switch as the commander switch and name the cluster as switch.

```
Switch(config)#cluster commander switch
```

3.4 cluster ip-pool

Command:

```
cluster ip-pool <commander-ip>
```

```
no cluster ip-pool
```

Function:

Configure private IP address pool for member switches of the cluster.

Parameters :

commander-ip: cluster IP address pool for allocating internal IP addresses of the cluster commander-ip is the head address of the address pool, of which the valid format is 10.x.x.x, in dotted-decimal notation; the address pool should be big enough to hold 128 members, which requires the last byte of addresses to be less than 126 (254 – 128 = 126). IP address pool should never be changed with commander configured. The change can only be done after the “no cluster commander” command being executed.

Command mode:

Global Mode

Default:

The default address pool is 10.254.254.1.

Usage Guide:

When candidate switches becomes cluster members, the commander switch allocates a private IP address to each member for the communication within the cluster, and thus to realized its management and maintenance of cluster members. This command can only be used on non-commander switches. Once the cluster established, users can not modify its IP address pool. The NO command of this command will restore the address pool back to default value, which is 10.254.254.1.

Example:

Set the private IP address pool used by cluster member devices as 10.254.254.10

```
Switch(config)#cluster ip-pool 10.254.254.10
```

3.5 cluster keepalive interval

Command:

```
cluster keepalive interval <second>
```

```
no cluster keepalive interval
```

Function:

Configure the interval of keepalive messages within the cluster.

Parameters:

<**second**>: keepalive interval, in seconds, ranging from 3 to 30.

Default:

The default value is 30 seconds.

Command Mode:

Global Configuration Mode.

Usage Guide:

After executing this command on a commander switch, the value of the parameter will be distributed to all member switches via the TCP connections between the commander and members.

After executing it on a non commander switch, the configuration value will be saved but not used until the switch becomes a commander. Before that, its keepalive interval is the one distributed by its commander.

Commander will send DP messages within the cluster once in every keepalive interval. Members will respond to the received DP messages with DR messages.

The no operation of this command will restore the keepalive interval in the cluster back to its default value.

Example:

Set the keepalive interval in the cluster to 10 seconds.

```
Switch(config)#cluster keepalive interval 10
```

3.6 cluster keepalive loss-count

Command:

```
cluster keepalive loss-count <loss-count>  
no cluster keepalive loss-count
```

Function:

Configure the max number of lost keepalive messages in a cluster that can be tolerated.

Parameters:

loss-count: the tolerable max number of lost messages, ranging from 1 to 10.

Default:

The default value is 3.

Command Mode:

Global Configuration Mode

Usage Guide:

After executing this command on a commander switch, the value of the parameter will be distributed to all member switches via the TCP connections between the commander and members.

After executing it on a non commander switch, the configuration value will be saved but not used until the switch becomes a commander. Before that, its loss-count value is the one distributed by its commander.

commander calculates the loss-count after sending each DP message by adding 1 to the loss-count of each switch and clearing that of a switch after receiving a DR message from the latter. When a loss-count reaches the configured value (3 by default) without receiving any DR message, the commander will delete the switch from its candidate chain list.

If the time that a member fails to receive DP messages from the commander reaches loss-count, it will change its status to candidate.

The no operation of this command will restore the tolerable max number of lost keepalive messages in the cluster back to its default value: 3.

Example:

Set the tolerable max number of lost keepalive messages in the cluster to 5.

```
Switch(config)#cluster keepalive loss-count 5
```

3.7 cluster member

Command:

```
cluster member {nodes-sn <candidate-sn-list> | mac-address <mac-addr> [id <member-id>]}  
no cluster member {id <member-id> | mac-address <mac-addr>}
```

Function:

On a commander switch, manually add candidate switches into the cluster created by it. The no command deletes the specified member switch to change it as candidate.

Parameters:

nodes-sn :all cluster member switches as recorded in a chain list, each with a node sn which can be viewed by “show cluster candidates” command. One or more candidates can be added as member at one time. The valid range of candidate-sn-list is 1~256.

mac-address : the CPU Mac of candidate switches

member-id : A member id can be specified to a candidate as it becomes a member, ranging from 1 to 128, increasing from 1 by default.

nodes-sn is the automatically generated sn, which may change after the candidate becomes a member. Members added this way will be actually treated as those added in mac-addr mode with all config files in mac-addr mode.

If more than one switch is added as member simultaneously, no member-id is allowed; neither when using nodes-sn mode.

Default:

None.

Command Mode:

Global Mode

Usage Guide:

After executing this command, the switch will add those identified in **<nodes-sn>** or **<mac-address>** into the cluster it belongs to. One or more candidates are allowed at one time, linked with ‘-’ or ‘;’. A switch can only be member or commander of one cluster, exclusively. Attempts to execute the command on a non commander switch will return error. The no operation of this command will delete the specified member switch, and turn it back to a candidate.

Example:

In the commander switch, add the candidate switch which has the sequence number as 1. In the commander switch, add the switch whose the mac address is 11-22-33-44-55-66 to member, and the member-id is 5.

```
Switch(config)#cluster member nodes-sn 1
```

```
Switch(config)#cluster member mac-address 11-22-33-44-55-66 id 5
```

3.8 cluster member auto-to-user

Command:

`cluster member auto-to-user`

Function:

All members will be deleted when configuring no cluster auto-add. Users need to change automatically added members to manually added ones to keep them.

Parameter:

None.

Default:

None.

Command Mode:

Global Mode.

Usage Guide:

Execute this command on a switch to change automatically added members to manually added ones.

Example:

change automatically added members to manually added ones.

```
Switch(config)#cluster member auto-to-user
```

3.9 cluster reset member

Command:

`cluster reset member [id <member-id> / mac-address <mac-addr>]`

Function:

In the commander switch, this command can be used to reset the member switch.

Parameter:

member-id: ranging from 1 to 128. Use hyphen "-" or semicolon ";" to specify more than one member; if no value is provided, it means to reboot all member switches.

Default:

Boot all member switches.

Command mode:

Admin Mode.

Instructions:

In the commander switch, users can use this command to reset a member switch. If this command is executed in a non-commander switch, an error will be displayed.

Example:

In the commander switch, reset the member switch 1.

```
Switch#cluster reset member 1
```

3.10 cluster run

Command:

```
cluster run [key <WORD>] [vid <VID>]
```

```
no cluster run
```

Function:

Enable cluster function; the “**no cluster run**” command disables cluster function.

Parameter:

key : all keys in one cluster should be the same, no longer than 16 characters.

vid : vlan id of the cluster, whose range is 1-4094.

Command mode:

Global Mode

Default:

Cluster function is disabled by default, key: NULL(0) vid : 1.

Instructions:

This command enables cluster function. Cluster function has to be enabled before implementing any other cluster commands. The “**no cluster run**” disables cluster function. It is recommended that users allocate an exclusive vlan for cluster (such as vlan100)

Note : Routing protocols should be disabled on the layer-3 interface where cluster vlan locates to avoid broadcasting private route of the cluster.

Example:

Disable cluster function in the local switch.

Switch (config)#no cluster run

3.11 cluster update member

Command:

cluster update member <member-id> <src-url> <dst-filename> [ascii | binary]

Function:

Remotely upgrade member switches from the commander switch.

Parameters:

member-id : ranging from 1 to 128. Use hyphen “-” or semicolon “ ; ” to specify more than one member;

src-url : the location of source files to be copied;

dst-filename : the specified filename for saving the file in the switch flash;

scii means that the file transmission follows ASCII standard; binary means that the file transmission follows binary standard, which is de default mode.

when src-url is a FTP address, its form will be: ftp://<username>:<password>@<ipaddress>/<filename> , in which <username> is the FTP username <password> is the FTP password <ipaddress> is the IP address of the FTP server,<filename> is the name of the file to be downloaded via FTP.

when src-url is a TFTP address, its form will be: tftp://<ipaddress>/<filename> , in which <ipaddress>is the IP address of the TFTP server <filename> is the name of the file to be downloaded via.

Special keywords used in filename:

Keywords	source or destination address
startup-config	start the configuration file
nos.img	system file

Command mode:

Admin Mode

Usage Guide:

The commander distributes the remote upgrade command to members via the TCP connections between them, causing the number to implement the remote upgrade and reboot. Trying to execute this command on a non-commander switch will return errors. If users want to upgrade more than one member, these switches should be the same type to avoid boot failure induced by mismatched IMG files.

Example:

Remotely upgrade a member switch from the commander switch, with the member-id being 1, src-ur being ftp:// switch: switch @192.168.1.1/nos.img, and dst-url being nos.img

```
Switch#cluster update member 1 ftp:// switch: switch @192.168.1.1/nos.img nos.img
```

3.12 debug cluster

Command:

```
debug cluster {statemachine | application | tcp}  
no debug cluster {statemachine | application | tcp}
```

Function:

Enable the application debug of cluster; the no operation of this command will disable that.

Parameters:

statemachine: print debugging when the switch status changes.

application: print debugging when there are users trying to configure the switch after logging onto it via SNMP, WEB.

tcp: the TCP connection between the commander and the member.

Default:

None.

Command Mode:

Admin Mode.

Usage Guide:

None.

Example:

Enable the debug status changed on the switch.

```
Switch#debug cluster statemachine
```

3.13 debug cluster packets

Command:

```
debug cluster packets {DP | DR | CP} {receive | send}
```

```
no debug cluster packets {DP | DR | CP} {receive | send}
```

Function:

Enable the debug; the no command disables the debug.

Parameters:

DP: discovery messages.

DR: responsive messages.

CP: command messages.

receive: receive messages.

send: send messages.

Default:

None.

Command Mode:

Admin Mode.

Usage Guide:

Enable the debug of cluster messages. After enabling classification, all DP, DR and CP messages sent or received in the cluster will be printed.

Example:

Enable the debug of receiving DP messages.

```
Switch#debug cluster packets DP receive
```

3.14 show cluster

Command:

show cluster

Function:

Display cluster information of the switch.

Parameter:

None.

Command Mode:

Admin and Configuration Mode.

Usage Guide:

None.

Example:

Execute this command on different switches.

----in a commander-----

Switch#show cluster

Status: Enabled

Cluster VLAN: 1

Role: commander

IP pool: 10.254.254.1

Cluster name: MIS_zebra

Keepalive interval: 30

Keepalive loss-count: 3

Auto add: Disabled

Number of Members: 0

Number of Candidates: 3

----in a member -----

Switch#show cluster

Status: Enabled

Cluster VLAN: 1

Role: Member

Commander Ip Address: 10.254.254.1

Internal Ip Address: 10.254.254.2

Commander Mac Address: 00-12-cf-39-1d-90

---- a candidate -----

```
Switch#show cluster
```

```
Status: Enabled
```

```
Cluster VLAN: 1
```

```
Role: Candidate
```

---- disabled -----

```
Switch#show cluster
```

```
Status: Disabled
```

3.15 show cluster members

Command:

```
show cluster members [id <member-id> | mac-address <mac-addr>]
```

Function:

Display member information of a cluster. This command can only apply to commander switches.

Parameters:

member-id: member id of the switch.

mac-addr: the CPU mac addresses of member switches.

Default:

No parameters means to display information of all member switches.

Command Mode:

Admin and Configuration Mode.

Usage Guide:

Executing this command on a commander switch will display the configuration information of all cluster member switches.

Example:

Execute this command on a commander switch to display the configuration information of all and specified cluster member switches.

```
Switch#show cluster members
```

```
Switch#show cluster members id 1
```

3.16 show cluster candidates

Command:

```
show cluster candidates [nodes-sn <candidate-sn-list> | mac-address <mac-addr>]
```

Function:

Display the statistic information of the candidate member switches on the command switch

Parameter:

candidate-sn-list : candidate switch sn, ranging from 1 to 256. More than one switch can be specified.

mac-address : mac address of the candidate switch

Default:

No parameters means to display information of all member switches.

Command Mode:

Admin and Configuration Mode.

Usage Guide:

Executing this command on the switch will display the information of the candidate member switches.

Example:

Display configuration information of all cluster candidate switches.

```
Switch#show cluster candidates
```

```
Cluster Candidates:
```

SN	Mac	Description	Hostname
----	-----	-------------	----------

```
xxx xx-xx-xx-xx-xx-xx xxxxxxxxxxxxxxxxxxxxxxxx24 xxxxxxxxxxxxxxxxxxxxxxxx24
```

```
1 00-01-02-03-04-06 WGSW-52040
```

```
2 01-01-02-03-04-05 WGSW-52040 MIS_zebra
```

3.17 show cluster topology

Command:

```
show cluster topology [root-sn <starting-node-sn> | nodes-sn <node-sn-list> | mac-address <mac-addr>]
```

Function:

Display cluster topology information. This command only applies to commander switches.

Parameters:

starting-node-sn : the starting node of the topology.

node-sn-list : the switch node sn.

mac-addr : the CPU mac address of the switch.

No parameters means to display all topology information.

Command Mode:

Admin and Configuration Mode.

Usage Guide:

Executing this command on the commander switch will display the topology information with its starting node specified.

Example:

Execute this command on the commander switch to display the topology information under different conditions.

Switch#show cluster topology

Role: commander(CM);Member(M);Candidate(CA);Other commander(OC);Other member(OM)

LV	SN	Description	Hostname	Role	MAC_ADDRESS	Upstream	Upstream	leaf
						local-port	remote-port	node

== =====
x xxx xxxxxxxxxxx12 xxxxxxxxxxx12 xx xx-xx-xx-xx-xx xxxxxxxxxxx12 xxxxxxxxxxx12 x

1	1	SGS-6340	LAB_SWITCH_1	CM	01-02-03-04-05-01	-root-	-root-	-
	2	SGS-6340	LAB_SWITCH_2	M	01-02-03-04-05-02	eth 1/1	eth 1/2	N
	3	SGS-6340	LAB_SWITCH_3	CA	01-02-03-04-05-03	eth 1/1	eth 1/3	Y
	4	SGS-6340	LAB_SWITCH_4	CA	01-02-03-04-05-04	eth 1/1	eth 1/4	Y

.....

2	2	SGS-6340	LAB_SWITCH_2	M	01-02-03-04-05-02	eth 1/1	eth 1/2	-
	5	SGS-6340	LAB_SWITCH_1	OC	01-02-03-04-05-13	eth 1/1	eth 1/2	Y
	6	SGS-6340	LAB_SWITCH_1	OM	01-02-03-04-05-14	eth 1/1	eth 1/3	Y

Switch#show cluster topology root-sn 2

Role: commander(CM);Member(M);Candidate(CA);Other commander(OC);Other member(OM)

SN	Description	Hostname	Role	MAC_ADDRESS	Upstream	Upstream	leaf
					local-port	remote-port	node

== =====
* 2 SGS-6340 LAB_SWITCH_2 M 01-02-03-04-05-02 eth 1/1 eth 1/2 -

5	SGS-6340	LAB_SWITCH_1	OC	01-02-03-04-05-13	eth 1/1	eth 1/2	Y
6	SGS-6340	LAB_SWITCH_1	OM	01-02-03-04-05-14	eth 1/1	eth 1/3	Y

```
Switch#show cluster topology nodes-sn 2
```

```
Topology role: Member
```

```
Member status: Active member (user-config)
```

```
SN: 2
```

```
MAC Address: 01-02-03-04-05-02
```

```
Description: SGS-6340
```

```
Hostname : LAB_SWITCH_2
```

```
Upstream local-port: eth 1/1
```

```
Upstream node: 01-02-03-04-05-01
```

```
Upstream remote-port:eth 1/2
```

```
Upstream speed: 100full
```

```
Switch#
```

```
-----
```

```
Switch#show cluster topology mac-address 01-02-03-04-05-02
```

```
Topology role: Member
```

```
Member status: Active member (user-config)
```

```
SN: 2
```

```
MAC Address: 01-02-03-04-05-02
```

```
Description: SGS-6340
```

```
Hostname : LAB_SWITCH_2
```

```
Upstream local-port: eth 1/1
```

```
Upstream node: 01-02-03-04-05-01
```

```
Upstream remote-port: eth 1/2
```

```
Upstream speed: 100full
```

3.18 rcommand commander

Command:

```
rcommand commander
```

Function:

In the member switch, use this command to configure the commander switch.

Parameter:

None.

Default:

None.

Command mode:

Admin Mode.

Instructions:

This command is used to configure the commander switch remotely. Users have to telnet the commander switch by passing the authentication. The command “**exit**” is used to quit the configuration interface of the commander switch.

This command can only be executed on member switches.

Example:

In the member switch, enter the configuration interface of the commander switch.

```
Switch#rcommand commander
```

3.19 rcommand member

Command:

```
rcommand member <mem-id>
```

Function:

In the commander switch, this command is used to remotely manage the member switches in the cluster.

Parameter:

<mem-id> commander the member id allocated by commander to each member, whose range is 1~128.

Default:

None.

Command mode:

Admin Mode.

Usage Guide:

After executing this command, users will remotely login to a member switch and enter Admin Mode on the latter. Use exit to quit the configuration interface of the member. Because of the use of internal private IP, telnet authentication will be omitted on member switches. This command can only be executed on commander switches.

Example:

In the commander switch, enter the configuration interface of the member switch with member-id 1.

```
Switch#rcommand member 1
```

Chapter 4 Commands for Network Port Configuration

4.1 Commands for Ethernet Port Configuration

4.1.1 bandwidth

Command:

```
bandwidth control <bandwidth> {transmit | receive | both}
```

```
no bandwidth control
```

Function:

Enable the bandwidth limit function on the port; the no command disables this function.

Parameter:

<bandwidth> is the bandwidth limit, which is shown in kbps ranging between 1-1000000K; both refers to the bandwidth limit when the port receives and sends data, receive refers to the bandwidth limit will only performed when the switch receives data from outside, while transmit refers to the function will be performed on sending only.

Command Mode:

Port Mode.

Default:

Bandwidth limit disabled by default.

Usage Guide:

When the bandwidth limit is enabled with a size set, the max bandwidth of the port is determined by this size other than by 10/100/1000M. If **[both | receive | transmit]** keyword is not specified, the default is **both**.

Note: The bandwidth limit can not exceed the physic maximum speed on the port. For example, an 10/100M Ethernet port can not be set to a bandwidth limit at 101000K (or higher), but applicable on a 10/100/1000 port working at a speed of 100M. If the actual bandwidth is not a integral multiple of chip bandwidth granularity, it will be modified automatically. For example, a chip bandwidth granularity of this switch is 64K, but the input bandwidth is 50, the bandwidth will be modified as 64K.

Example:

Set the bandwidth limit of 1/1-8 port is 40000K.

```
Switch(config)#interface ethernet 1/1-8
```

```
Switch(Config-If-Port-Range)#bandwidth control 40000 both
```

4.1.2 clear counters interface

Command:

```
clear counters [interface {ethernet <interface-list> / vlan <vlan-id> / port-channel <port-channel-number> / <interface-name>}]
```

Function:

Clears the statistics of the specified port.

Parameters:

<interface-list> stands for the Ethernet port number; **<vlan-id>** stands for the VLAN interface number; **<port-channel-number>** for trunk interface number; **<interface-name>** for interface name, such as port-channel 1.

Command mode:

Admin Mode.

Default:

Port statistics are not cleared by default.

Usage Guide:

If no port is specified, then statistics of all ports will be cleared.

Example:

Clearing the statistics for Ethernet port1/1.

```
Switch#clear counters interface ethernet 1/1
```

4.1.3 description

Command:

description *<string>*
no description

Function:

Set name for specified port; the no command cancels this configuration.

Parameter:

<string> is a character string, which should not exceed 200 characters.

Command Mode:

Port Mode.

Default:

No port name by default.

Usage Guide:

This command is for helping the user manage switches, such as the user assign names according to the port application, e.g. financial as the name of 1/1-2 ports which is used by financial department, engineering as the name of 1/9 ports which belongs to the engineering department, while the name of 1/12 ports is assigned with Server, which is because they connected to the server. In this way the port distribution state will be brought to the table.

Example:

Specify the description of 1/1-2 port as financial.
Switch(config)#interface ethernet 1/1-2
Switch(Config-If-Port-Range)#description financial

4.1.4 flow control

Command:

flow control
no flow control

Function:

Enables the flow control function for the port: the “**no flow control**” command disables the flow control function for the port.

Command mode:

Port Mode.

Default:

Port flow control is disabled by default.

Usage Guide:

After the flow control function is enabled, the port will notify the sending device to slow down the sending speed to prevent packet loss when traffic received exceeds the capacity of port cache. Ports support IEEE802.3X flow control; the ports work in half-duplex mode, supporting back-pressure flow control. If flow control results in serious HOL, the switch will automatically start HOL control (discarding some packets in the COS queue that may result in HOL) to prevent drastic degradation of network performance.

Note: Port flow control function is not recommended unless the users need a slow speed, low performance network with low packet loss. Flow control will not work between different cards in the switch. When enable the port flow control function, speed and duplex mode of both ends should be the same.

Example:

Enabling the flow control function in ports 1/1-8.

```
Switch(config)#interface ethernet 1/1-8
```

```
Switch(Config-If-Port-Range)#flow control
```

4.1.5 interface ethernet

Command:

```
interface ethernet <interface-list>
```

Function:

Enters Ethernet Port Mode from Global Mode.

Parameters:

<interface-list> stands for port number.

Command mode:

Global Mode

Usage Guide:

Run the **exit** command to exit the Ethernet Port Mode to Global Mode.

Example:

Entering the Ethernet Port Mode for ports 1/1 , 1/4-5 , 1/8 .

```
Switch(config)#interface ethernet 1/1;1/4-5;1/8
```

```
Switch(Config-If-Port-Range)#
```

4.1.6 loopback

Command:

```
loopback
```

```
no loopback
```

Function:

Enables the loopback test function in an Ethernet port; the no command disables the loopback test on an Ethernet port.

Command mode:

Port Mode.

Default:

Loopback test is disabled in Ethernet port by default.

Usage Guide:

Loopback test can be used to verify the Ethernet ports are working normally. After loopback has been enabled, the port will assume a connection established to itself, and all traffic sent from the port will be received at the very same port.

Example:

Enabling loopback test in Ethernet ports 1/1-8.

```
Switch(config)#interface ethernet 1/1-8
```

```
Switch(Config-If-Port-Range)#loopback
```

4.1.7 mdi

Command:

```
mdi {auto | across | normal}
no mdi
```

Function:

Sets the cable types supported by the Ethernet port; the no command sets the cable type to auto-identification. This command is not supported on combo ports and fiber ports.

Parameters:

auto indicates **auto** identification of cable types; **across** indicates crossover cable support only; **normal** indicates straight-through cable support only.

Command mode:

Port Mode.

Default:

Port cable type is set to auto-identification by default.

Usage Guide:

Auto-identification is recommended. Generally, straight-through cable is used for switch-PC connection and crossover cable is used for switch-switch connection.

Example:

Setting the cable type support of Ethernet ports 1/1-8 to straight-through cable only.

```
Switch(config)#interface ethernet 1/1-8
```

```
Switch(Config-If-Port-Range)#mdi normal
```

4.1.8 media-type

Command:

```
media-type {copper | copper-preferred-auto | fiber | sfp-preferred-auto}
```

Function:

Sets to combo port mode (combo ports only).

Parameters:

copper forces use of copper cable port; **copper-preferred-auto** for copper cable port first; fiber forces use of fiber cable port; **sfp-preferred-auto** for fiber cable port first.

Command mode:

Port Mode.

Default:

The default setting for combo mode of combo ports is sfp-preferred-auto.

Usage Guide:

The combo mode of combo ports and the port connection condition determines the active port of the combo ports. A combo port consists of one fiber port and a copper cable port. It should be noted that the speed-duplex command applies to the copper cable port while the negotiation command applies to the fiber cable port, they should not conflict. For combo ports, only one, a fiber cable port or a copper cable port, can be active at a time, and only this port can send and receive data normally. For the determination of the active port in a combo port, see the table below. The headline row in the table indicates the combo mode of the combo port, while the first column indicates the connection conditions of the combo port, in which

Note:

1. Combo port is a conception involving the physical layer and the LLC sublayer of the datalink layer. The status of a combo port will not affect any operation in the MAC sublayer of the datalink layer and upper layers. If the bandwidth limit for a combo port is 1Mbps, then this 1Mbps applies to the active port of this combo port, regardless of the port type being copper or fiber.
2. If a combo port connects to another combo port, it is recommended for both parties to use the forced copper or the forced fiber mode.
3. Run show interface under Admin Mode to check for the active port of a combo port .The following result indicates if the active port for a combo port is the fiber (or copper) cable port: Hardware is Gigabit-combo, active is fiber (or copper)

Example:

Setting ports 1/21-24 to the forced fiber mode.

```
Switch(config)#interface ethernet 1/21-24
```

```
Switch(Config-Port-Range)#media-type fiber
```

4.1.9 negotiation

Command:

```
negotiation {on | off}
```

Function:

Enables/Disables the auto-negotiation function of a 1000Base-FX port.

Parameters:

on: enables the auto-negotiation; off: disable the auto-negotiation.

Command mode:

Port configuration Mode.

Default:

Auto-negotiation is enabled by default.

Usage Guide:

This command applies to 1000Base-FX interface only. The **negotiation** command is not available for 1000Base-TX or 100Base-TX interface. For combo port, this command applies to the 1000Base-FX port only but has no effect on the 1000Base-TX port. To change the negotiation mode, speed and duplex mode of 1000Base-TX port, use **speed-duplex** command instead.

Example:

Port 21 of Switch1 is connected to port 21 of Switch2, the following will disable the negotiation for both ports.

```
Switch1(config)#interface ethernet1/21
Switch1(Config-If-Ethernet1/21)#negotiation off
Switch2(config)#interface ethernet1/21
Switch2(Config-If-Ethernet1/21)#negotiation off
```

4.1.10 port-rate-statistics interval

Command:

```
port-rate-statistics interval <interval-value>
```

Function:

Set the interval of port-rate-statistics, ranging from 5 to 600.

Parameter:

interval-value: The interval of port-rate-statistics, unit is second, ranging from 5 to 600 with the configuration step of 5.

Default:

Only port-rate-statistics of 5 seconds and 5 minutes are displayed.

Command Mode:

Global Mode

Usage Guide:

None.

Example:

Count the interval of port-rate-statistics as 20 seconds.

```
Switch(config)#port-rate-statistics interval 20
```

4.1.11 port-scan-mode

Command:

```
port-scan-mode {interrupt | poll}
```

```
no port-scan-mode
```

Function:

Configure the scan mode of the port as "interrupt" or "poll", the no command restores the default scan mode.

Parameter:

interrupt: the interrupt mode; poll: the poll mode.

Command Mode:

Global Mode.

Default:

Poll mode.

Usage Guide:

There are two modes that can respond up/down event of the port. The interrupt mode means that interrupt hardware to announce the up/down change, the poll mode means that software poll can obtain the port event, the first mode is rapid. If using poll mode, the convergence time of MRPP is several hundred milliseconds, if using interrupt mode, the convergence time is less than 50 milliseconds.

Notice: The scan mode of the port usually configured as poll mode, the interrupt mode is only used to the environment of the good performance, but the security of the poll mode is better.

Example:

Configure the scan mode of the port as interrupt mode.

```
Switch(config)#port-scan-mode interrupt
```

4.1.12 rate-violation

Command :

```
rate-violation <200-2000000> [recovery <0-86400>]
```

```
no rate-violation
```

Function :

Configure the max packet reception rate of a port. If the packet reception rate of the port violate the packet reception rate, the port is shutdown. The restoration time after the port shutdown can be configured and the default time is 300s. The no command disables the rate-violation function.

The rate-violation means the port received all the packets rate (the number of the received packets per second). It does not distinguish the packets type.

Parameters :

<200-2000000> : the max packet reception rate of the port, the unit is packets/s;

<0-86400> : the restoration time interval after the port shutdown, the unit is s;

recovery means this port can restore to be UP after some time, <0-86400> means the reception timeout of the port, for example, when the packet reception rate of a port exceeds the restriction, the port will be shutdown. After the timeout of user's configuration is past, the port will be up. The default timeout is 300s and 0 means it will never restore.

Command Mode :

Interface Mode.

Default :

There is no controlling configuration for the rate-violation of the port as default.

Usage Guide:

This command is mainly used to detect the abnormal port flow. For example, when there are a large number of broadcast packets caused by a loopback, which affect the processing of other tasks, the port will be shut down to ensure the normal processing of the switch.

Example:

Set the rate-violation of port 1/8-10 (GB ports) as 10000pps and the port recovery time as 1200 seconds.

```
Switch(Config)#interface ethernet 1/8-10
```

```
Switch(Config-Port-Range)#rate-violation 10000 recovery 1200
```

4.1.13 show interface

Command:

```
show interface [ethernet <interface-number> | port-channel <port-channel-number> | vlan <vlan-id> | <interface-name>] [detail]
```

```
show interface ethernet status
```

```
show interface ethernet counter {packet | rate}
```

Function:

Show information of layer 3 or layer 2 port on the switch

Parameter:

<vlan-id> is the VLAN interface number, the value range from 1 to 4094. **<interface-number>** is the port number of the Ethernet, **status** show important information of all the layer 2 ports. **counter {packet | rate}** show package number or rate statistics of all layer 2 ports. **<port-channel-number>** is the number of the aggregation interface, **<interface-name>** is the name of the interface such as port-channel1. **[detail]** show the detail of the port.

Command Mode:

Admin and Configuration Mode.

Default:

Information not displayed by default

Usage Guide:

While for vlan interfaces, the port MAC address, IP address and the statistic state of the data packet will be shown; As for Ethernet port, this command will show port speed rate, duplex mode, flow control switch state, broadcast storm suppression of the port and the statistic state of the data packets; for aggregated port, port speed rate, duplex mode, flow control switch state, broadcast storm suppression of the port and the statistic state of the data packets will be displayed. The information of all ports on the switch will be shown if no port is specified.

Using [detail] to show the detail information for ethernet port and port-channel port, the information is related with the type of switch, board card.

For ethernet port, using status to show important information of all the layer 2 ports by list format. each port is a row, the showing information include port number, Link, Protocol status, Speed, Duplex, Vlan, port type and port name; counter packets show package number statistics of all ethernet ports, include layer 2 unicast, broadcast, multicast, error of input and output redirection package number; counter rate show the rate statistics of all ethernet ports, input and output package number, byte number in 5 minutes and 5 seconds.

Example:

Show the information of VLAN 1

```
Switch#show interface vlan 1
```

Vlan1 is up, line protocol is up, dev index is 2005

Device flag 0x1003(UP BROADCAST MULTICAST)

IPv4 address is:

192.168.10.1 255.255.255.0 (Primary)

Hardware is EtherSVI, address is 00-00-00-00-00-01

MTU is 1500 bytes , BW is 0 Kbit

Encapsulation ARPA, loopback not set

5 minute input rate 0 bytes/sec, 0 packets/sec

5 minute output rate 0 bytes/sec, 0 packets/sec

The last 5 second input rate 0 bytes/sec, 0 packets/sec

The last 5 second output rate 0 bytes/sec, 0 packets/sec

Input packets statistics:

Input queue 0/600, 0 drops

0 packets input, 0 bytes, 0 no buffer

0 input errors, 0 CRC, 0 frame alignment, 0 overrun

0 ignored, 0 abort, 0 length error

Output packets statistics:

0 packets output, 0 bytes, 0 underruns

0 output errors, 0 collisions, 0 late collisions

Show the information of port 1/1:

```
Switch#show interface e1/1
```

Ethernet1/1 is up, line protocol is down

Ethernet1/1 is layer 2 port, alias name is (null), index is 1

Hardware is Gigabit-TX, address is 00-30-4f-02-fc-01

PVID is 1

MTU 1500 bytes, BW 10000 Kbit

Encapsulation ARPA, Loopback not set

Auto-duplex: Negotiation half-duplex, Auto-speed: Negotiation 10M bits

FlowControl is off, MDI type is auto

5 minute input rate 0 bytes/sec, 0 packets/sec
 5 minute output rate 0 bytes/sec, 0 packets/sec
 The last 5 second input rate 0 bytes/sec, 0 packets/sec
 The last 5 second output rate 0 bytes/sec, 0 packets/sec

Input packets statistics:

0 input packets, 0 bytes, 0 no buffer
 0 unicast packets, 0 multicast packets, 0 broadcast packets
 0 input errors, 0 CRC, 0 frame alignment, 0 overrun, 0 ignored
 0 abort, 0 length error, 0 pause frame

Output packets statistics:

0 output packets, 0 bytes, 0 underruns
 0 unicast packets, 0 multicast packets, 0 broadcast packets
 0 output errors, 0 collisions, 0 late collisions, 0 pause frame

Show the important information of all layer 2 ports:

Switch#show interface ethernet status

Codes: A-Down - administratively down, a - auto, f - force, G - Gigabit

Interface	Link/Protocol	Speed	Duplex	Vlan	Type	Alias Name
1/1	UP/UP	f-100M	f-full	1		G-TX
1/2	UP/UP	a-100M	a-full	trunk		G-TX
1/3	UP/DOWN	auto	auto	1		G-TX
1/4	A-Down/DOWN	auto	auto	1		G-TX

...

Show the package number statistics information of all layer 2 ports:

Switch#Show interface ethernet counter packet

Interface		Unicast(pkts)	BroadCast(pkts)	MultiCast(pkts)	Err(pkts)
1/1	IN	12,345,678	12,345,678,9	12,345,678,9	4,567
	OUT	23,456,789	34,567,890	5,678	0
1/2	IN	0	0	0	0
	OUT	0	0	0	0
1/3	IN	0	0	0	0
	OUT	0	0	0	0
1/4	IN	0	0	0	0
	OUT	0	0	0	0

...

Show the rate statistics information of all layer 2 ports:

Switch#Show interface ethernet counter rate

Interface		IN(pkts/s)	IN(bytes/s)	OUT(pkts/s)	OUT(bytes/s)
1/1	5m	13,473	12,345,678	12,345	1,234,567
	5s	135	65,800	245	92,600
1/2	5m	0	0	0	0
	5s	0	0	0	0
1/3	5m	0	0	0	0
	5s	0	0	0	0
1/4	5m	0	0	0	0
	5s	0	0	0	0
...					

4.1.14 shutdown

Command:

shutdown

no shutdown

Function:

Shuts down the specified Ethernet port; the no command opens the port.

Command mode:

Port Mode.

Default:

Ethernet port is open by default.

Usage Guide:

When Ethernet port is shut down, no data frames are sent in the port, and the port status displayed when the user types the "**show interface**" command is "down".

Example:

Opening ports 1/1-8.

```
Switch(config)#interface ethernet1/1-8
```

```
Switch(Config-If-Port-Range)#no shutdown
```


4.1.15 speed-duplex

Command:

```
speed-duplex {auto [10 [100 [1000]] [auto | full | half ]] | force10-half | force10-full | force100-half |  
force100-full | force100-fx [module-type {auto-detected | no-phy-integrated | phy-integrated}] | {{force1g-half  
| force1g-full} [nonegotiate [master | slave]]} force10g-full}  
no speed-duplex
```

Function:

Sets the speed and duplex mode for 1000Base-TX, 100Base-TX or 100Base-FX ports; the no command restores the default speed and duplex mode setting, i.e., auto speed negotiation and duplex.

Parameters:

auto is the auto speed and duplex negotiation, **10** is 10Mbps speed, **100** is 100Mbps speed, **1000** is 1000Mbps speed, **auto** is duplex negotiation, **full** is full-duplex, **half** is half-duplex; **force10-half** is the forced 10Mbps at half-duplex mode; **force10-full** is the forced 10Mbps at full-duplex mode; **force100-half** is the forced 100Mbps at half-duplex mode; **force100-full** is the forced 100Mbps at full-duplex mode; **force100-fx** is the forced 100Mbps at full-duplex mode; **module-type** is the type of 100Base-FX module; **auto-detected**: automatic detection; **no-phy-integrated**: there is no phy-integrated 100Base-FX module; **phy-integrated**: phy-integrated 100Base-FX module; **force1g-half** is the forced 1000Mbps speed at half-duplex mode; **force1g-full** is the forced 1000Mbps speed at full-duplex mode; **nonegotiate** disables auto-negotiation forcibly for 1000Mb port; **master** forces the 1000Mb port to be **master** mode; **slave** forces the 1000Mb port to be **slave** mode. **force10g-full** is the forced 10000Mbps speed at full-duplex mode.

Command mode:

Port Mode.

Default:

Auto-negotiation for speed and duplex mode is set by default.

Usage Guide:

This command is configured the port speed and duplex mode. When configuring port speed and duplex mode, the speed and duplex mode must be the same as the setting of the remote end, i.e., if the remote device is set to auto-negotiation, then auto-negotiation should be set at the local port. If the remote end is in forced mode, the same should be set in the local end.

1000Gb ports are by default **master** when configuring **nonegotiate** mode. If one end is set to **master** mode, the other end must be set to **slave** mode.

force1g-half is not supported yet.

Example:

Port 1 of Switch1 is connected to port 1 of Switch2, the following will set both ports in forced 100Mbps at half-duplex mode.

```
Switch1(config)#interface ethernet1/1
```

```
Switch1(Config-If-Ethernet1/1)#speed-duplex force100-half
```

```
Switch2(config)#interface ethernet1/1
```

```
Switch2(Config-If-Ethernet1/1)#speed-duplex force100-half
```

4.1.16 storm-control

Command :

```
storm control {unicast | broadcast | multicast} {kbps <Kbits> | pps <PPS>}
```

```
no storm control {unicast | broadcast | multicast}
```

Function:

Sets the traffic limit for broadcasts, multicasts and unknown destination unicasts on all ports in the switch; the no command disables this traffic suppression function on all ports in the switch, i.e., enables broadcasts, multicasts and unknown destination unicasts to pass through the switch at line speed.

Parameters:

use unicast to limit unicast traffic for unknown destination; multicast to limit multicast traffic; broadcast to limit broadcast traffic. <Kbits> means the number of packets allowed to pass per second, the ranging from 1 to 1000000. <PPS> means number of the allowing packets per second, the range is 1 to 1488095.

Command mode:

Port Mode.

Default:

No limit is set by default. So, broadcasts, multicasts and unknown destination unicasts are allowed to pass at line speed.

Usage Guide:

All ports in the switch belong to a same broadcast domain if no VLAN has been set. The switch will send the above mentioned three traffics to all ports in the broadcast domain, which may result in broadcast storm and so may greatly degrade the switch performance. Enabling Broadcast Storm Control can better protect the switch from broadcast storm. Note the difference of this command in 10Gb ports and other ports. If the allowed traffic is set to 1000kbps, this means allow 1000 kbit per second and suppress the rest. This switch supports two ways for speed limit, they are speed limit through bandwidth (kbps) and through packets number (pps). Users can choose one of them and cannot configure these two ways at the same time.

Broadcast suppression is similar to bandwidth control. There is granularity limitation for the chip; When it limits the speed by kbps, the granularity of the switch is 64kbps. If the <Kbits> of users' inputting is not the integer multiple of 64, the system will adjust it to be the integer multiple of 64 automatically and print the real number for users. For broadcast suppression, broadcast, multicast, unicast must be set the same threshold value.

Example:

Setting ports 1-8 allow 1000kbit broadcast packets per second.

Switch(config-if-port-range)#storm-control broadcast kps1000

4.1.17 virtual-cable-test

Command:

virtual-cable-test interface ethernet <interface-list>

Function:

Test the link of the twisted pair cable connected to the Ethernet port. The response may include: well, short, open, fail. If the test information is not well, the location of the error will be displayed (how many meters it is away from the port).

Parameter:

<interface-list>: Port ID

Command Mode:

Admin Mode.

Default Settings:

No link test.

Usage Guide:

The RJ-45 port connected with the twisted pair under test should be in accordance with the wiring sequence rules of IEEE802.3, or the wire pairs in the test result may not be the actual ones. On a 100M port, only two pairs are used: (1, 2) and (3, 6), whose results are the only effective ones. If a 1000M port is connected to a 100M port, the results of (4, 5) and (7, 8) will be of no meaning. The result may have deviations according to the type of the twisted pair, the temperature, working voltage and other conditions. When the temperature is 20 degree Celsius, and the voltage is stable without interference, and the length of the twisted pair is not longer than 100 meters, a deviation of +/-2 meters is allowed. When the port is at Link UP status, a deviation of +/-10 meters is allowed. Notice: the test procedure will block all data flow on the line for 5-10 seconds, and then restore the original status.

Notice: combo port supports VCT function detection only at copper cable port mode, 100M port does not diagnose the link length at Link UP status.

568A wiring sequence: (1 green white, 2 green), (3 orange white, 6 orange), (4 blue, 5 blue white), (7 brown white, 8 brown).

568B wiring sequence: (1 orange white, 2 orange), (3 green white, 6 green), (4 blue, 5 blue white), (7 brown white, 8 brown).

Example:

Test the link status of the twisted pair connected to the 1000M port 1/25.

Switch#virtual-cable-test interface ethernet 1/25

Interface Ethernet1/25:

```
-----
```

Cable pairs	Cable status	Error length (meters)
-----	-----	-----
(1, 2)	open	5
(3, 6)	open	5
(4, 5)	open	5
(7, 8)	short	5

4.1.18 switchport discard packet

Command :

switchport discard packet { all | untag }

no switchport discard packet { all | untag }

Function :

Configure the port not to receive any packet or untag; the **no** command cancel the restriction of discard, it means the port is allowed to receive any packet or untag.

Parameters :

all means it does not receive any packet including untag, tag and the deal packet. **untag** means it does not receive untag.

Command Mode :

Port Mode

Default :

The default does not have the restriction.

Usage Guide :

This command is not suggested to be configured only if there is the special requirement.

Example :

Configure the port of 1/8 not to receive all packets.

```
Switch(config)#interface ethernet 1/8
```

```
Switch(config-if-ethernet1/8)#switchport discard packet all
```

Chapter 5 Commands for Port Isolation Function

5.1 isolate-port group

Command:

```
isolate-port group <WORD>  
no isolate-port group <WORD>
```

Function:

Set a port isolation group, which is the scope of isolating ports; the no operation of this command will delete a port isolation group and remove all ports out of it.

Parameters:

<WORD> is the name identification of the group, no longer than 32 characters.

Command Mode:

Global Mode.

Default:

None.

Usage Guide:

Users can create different port isolation groups based on their requirements. For example, if a user wants to isolate all downlink ports in a vlan of a switch, he can implement that by creating a port isolation group and adding all downlink ports of the vlan into it. No more than 16 port isolation groups can a switch have. When the users need to change or redo the configuration of the port isolation group, he can delete the existing group with the no operation of this command.

Example:

```
Create a port isolation group and name it as "test".  
Switch>enable  
Switch#config  
Switch(config)#isolate-port group test
```

5.2 isolate-port group switchport interface

Command:

```
isolate-port group <WORD> switchport interface [ethernet] <IFNAME>  
no isolate-port group <WORD> switchport interface [ethernet] <IFNAME>
```

Function:

Add one port or a group of ports into a port isolation group to isolate, which will become isolated from the other ports in the group. The no operation of this command will remove one port or a group of ports out of a port isolation group, which will be able to communicate with ports in that group normally. If the ports removed from the group still belong to another port isolation group, they will remain isolated from the ports in that group. If an Ethernet port is a member of a convergence group, it should not be added into a port isolation group, and vice versa, a member of a port isolation group should not be added into an aggregation group. But one port can be a member of one or more port isolation groups.

Parameters:

<WORD> is the name identification of the group, no longer than 32 characters. If there is no such group with the specified name, create one; **ethernet** means that the ports to be isolated is Ethernet ones, followed by a list of Ethernet ports, supporting symbols like ";" and "-". For example: "ethernet 1/1;3;4-7;8"; <IFNAME> is the name of the interface, such as e1/1. If users use interface name, the parameter of ethernet will not be required.

Command Mode:

Global Mode.

Default:

None.

Usage Guide:

Users can add Ethernet ports into or remove them from a port isolation group according to their requirements. When an Ethernet port is a member of more than one port isolate group, it will be isolated from every port of all groups it belongs to.

Example:

```
Add Ethernet ports 1/1-2 and 1/5 into a port isolation group named as "test".  
Switch(config)#isolate-port group test switchport interface ethernet 1/1-2; 1/5
```

5.3 show isolate-port group

Command:

show isolate-port group [<WORD>]

Function:

Display the configuration of port isolation, including all configured port isolation groups and Ethernet ports in each group.

Parameters:

<WORD> the name identification of the group, no longer than 32 characters; no parameter means to display the configuration of all port isolation groups.

Command Mode:

Admin Mode and Global Mode.

Default:

Display the configuration of all port isolation groups.

Usage Guide:

Users can view the configuration of port isolation with this command.

Example:

Display the port isolation configuration of the port isolation group named as "test".

```
Switch(config)#show isolate-port group test
```

```
Isolate-port group test
```

```
    The isolate-port Ethernet1/5
```

```
    The isolate-port Ethernet1/2
```


Chapter 6 Commands for Port Loopback Detection Function

6.1 debug loopback-detection

Command:

debug loopback-detection

Function:

After enabling the loopback detection debug on a port, BEBUG information will be generated when sending, receiving messages and changing states.

Parameters:

None.

Command Mode:

Admin Mode.

Default:

Disabled by default.

Usage Guide:

Display the message sending, receiving and state changes with this command.

Example:

```
Switch#debug loopback-detection
%Jan 01 03:29:18 2006 Send loopback detection probe packet:dev Ethernet1/10, vlan id 1
%Jan 01 03:29:18 2006 Send loopback detection probe packet:dev Ethernet1/10, vlan id 2
```

6.2 loopback-detection control

Command:

loopback-detection control {shutdown |block| learning}
no loopback-detection control

Function:

Enable the function of loopback detection control on a port, the no operation of this command will disable the function.

Parameters:

shutdown set the control method as shutdown, which means to close down the port if a port loopback is found.

block set the control method as block, which means to block a port by allowing bpdu and loopback detection messages only if a port loopback is found.

learning disable the control method of learning MAC addresses on the port, not forwarding traffic and delete the MAC address of the port.

Default:

Disable the function of loopback detection control.

Command Mode:

Port Mode.

Usage Guide:

If there is any loopback, the port will not recovery the state of be controlled after enabling control operation on the port. If the overtime is configured, the ports will recovery normal state when the overtime is time-out. If the control method is block, the corresponding relationship between instance and vlan id should be set manually by users, it should be noticed when be used.

Example:

Enable the function of loopback detection control under port1/2 mode.

```
Switch(config)#interface ethernet 1/2
```

```
Switch(Config-If-Ethernet1/2)#loopback-detection control shutdown
```

```
Switch(Config-If-Ethernet1/2)#no loopback-detection control
```

6.3 loopback-detection control-recovery timeout

Command:

```
loopback-detection control-recovery timeout <0-3600>
```

Function:

This command is used to recovery to uncontrolled state after a special time when a loopback being detected by the port entry be controlled state.

Parameters:

<0-3600> second is recovery time for be controlled state, 0 is not recovery state.

Default:

The recovery is not automatic by default.

Command Mode:

Global Configuration Mode.

Usage Guide:

When a port detects a loopback and works in control mode, the ports always work in control mode and not recover. The port will not sent packet to detection in shutdown mode, however, the port will sent loopback-detection packet to detection whether have loopback in block or learning mode. If the recovery time is configured, the ports will recovery normal state when the overtime is time-out. The recovery time is a useful time for shutdown control mode, because the port can keep on detection loopback in the other modes, so suggest not to use this command.

Examples:

Enable automatic recovery of the loopback-detection control mode after 30s.

```
Switch(config)#loopback-detection control-recovery timeout 30
```

6.4 loopback-detection interval-time

Command:

```
loopback-detection interval-time <loopback> <no-loopback>  
no loopback-detection interval-time
```

Function:

Set the loopback detection interval. The no operate closes the loopback detection interval function.

Parameters:

<loopback > the detection interval if any loopback is found, ranging from 5 to 300, in seconds.

<no-loopback > the detection interval if no loopback is found, ranging from 1 to 30, in seconds.

Default:

The default value is 5s with loopbacks existing and 3s otherwise.

Command Mode:

Global Mode.

Usage Guide:

When there is no loopback detection, the detection interval can be relatively shorter, for too short a time would be a disaster for the whole network if there is any loopback. So, a relatively longer interval is recommended when loopbacks exist.

Example:

Set the loopback detection interval as 35, 15.

```
Switch(config)#loopback-detection interval-time 35 15
```

6.5 loopback-detection specified-vlan

Command:

```
loopback-detection specified-vlan <vlan-list>
```

```
no loopback-detection specified-vlan [<vlan-list>]
```

Function:

Enable the function of loopback detection on the port and specify the VLAN to be checked; the no operation of this command will disable the function of detecting loopbacks through this port or the specified VLAN.

Parameters:

<vlan-list> the list of VLANs allowed passing through the port. Given the situation of a trunk port, the specified VLANs can be checked. So this command is used to set the vlan list to be checked.

Default:

Disable the function of detecting the loopbacks through the port.

Command Mode:

Port Mode.

Usage Guide:

If a port can be a TRUNK port of multiple VLANs, the detection of loopbacks can be implemented on the basis of port+VLAN, which means the objects of the detection can be the specified VLANs on a port. If the port is an ACCESS port, only one Vlan on the port is allowed to be checked despite the fact that multiple VLANs can be configured. This function is not supported under Port-channel.

Example:

Enable the function of loopback detection under port 1/2 mode.

```
Switch(config)#interface ethernet 1/2
```

```
Switch(Config-If-Ethernet1/2)#switchport mode trunk
```

```
Switch(Config-If-Ethernet1/2)#switchport trunk allowed vlan all
```

```
Switch(Config-If-Ethernet1/2)#loopback-detection specified-vlan 1;3;5-20
```

```
Switch(Config-If-Ethernet1/2)#no loopback-detection specified-vlan 1;3;5-20
```

6.6 show loopback-detection

Command:

```
show loopback-detection [interface <interface-list>]
```

Function:

Display the state of loopback detection on all ports if no parameter is provided, or the state and result of the specified ports according to the parameters.

Parameters:

<interface-list> the list of ports to be displayed, for example: ethernet 1/1.

Command Mode:

Admin and Configuration Mode.

Usage Guide:

Display the state and result of loopback detection on ports with this command.

Example:

Display the state of loopback detection on port 4.

```
Switch(config)#show loopback-detection interface Ethernet 1/4
```

loopback detection config and state information in the switch!

PortName	Loopback Detection	Control Mode	Is Controlled
Ethernet1/4	Enable	Shutdown	No

Chapter 7 Commands for ULDP

7.1 debug uldp

Command:

```
debug uldp (hello | probe | echo | unidir | all) [receive | send] interface [ethernet] IFNAME
```

```
no debug uldp (hello | probe | echo | unidir | all) [receive | send] interface [ethernet] IFNAME
```

Function:

Enable the debugging for receiving and sending the specified packets or all ULDP packets on port. After enable the debugging, show the information of the received and sent packets in terminal. The no command disables the debugging.

Parameters:

hello: packet's type is hello, it's announcement packet, including common announcement packet, RSY and Flush packet

probe: packet's type is probe, it's detection packet

echo: packet's type is echo, it means response of detection packet

unidir: packet's type is unidir, it's announcement packet that discover the single link

all: All ULDP packets

Command mode:

Admin mode

Default:

Disable.

Usage Guide:

With this command, user can check probe packets received by port 1/2.

```
Switch#debug uldp probe receive interface ethernet 1/2
```

7.2 debug uldp error

Command:

```
debug uldp error
```

```
no debug uldp error
```

Function:

Enable the error message debug function, the no form command disable the function.

Parameter:

None.

Command Mode:

Admin Mode.

Default:

Disabled.

Usage Guide:

Use this command to display the error message.

Example:

Display the error message.

```
Switch#debug uldp error
```

7.3 debug uldp event

Command:

```
debug uldp event
```

```
no debug uldp event
```

Function:

Enable the message debug function to display the event; the no form command disables this function.

Parameter:

None.

Command Mode:

Admin Mode.

Default:

Disabled.

Usage Guide:

Use this command to display all kinds of event information.

Example:

Display event information.

```
Switch#debug uldp event
```

7.4 debug uldp fsm interface ethernet

Command:

```
debug uldp fsm interface ethernet <IFname>  
no debug uldp fsm interface ethernet <IFname>
```

Function:

To enable debugging information for ULDP for the specified interface. The no form of this command will disable the debugging information.

Parameters:

<IFname> is the interface name.

Command Mode:

Admin Configuration Mode.

Default:

Disabled by default.

Usage Guide:

This command can be used to display the information about state transitions of the specified interfaces.

Example:

Print the information about state transitions of interface ethernet 1/1.

```
Switch#debug uldp fsm interface ethernet 1/1
```


7.5 debug uldp interface ethernet

Command:

```
debug uldp {hello|probe|echo|unidir|all} [receive|send] interface ethernet <IFname>  
no debug uldp {hello|probe|echo|unidir|all} [receive|send] interface ethernet <IFname>
```

Function:

Enable the debug function of display the packet details. After that, display some kinds of the packet details of terminal interface.

Parameter:

<IFname>: Name of the interface.

Command Mode:

Admin Mode.

Default:

Disabled.

Usage Guide:

Use this command to display the Hello packet details receiving on the interface Ethernet 1/1.

```
Switch#debug uldp hello receive interface Ethernet 1/1
```

7.6 debug uldp packet

Command:

```
debug uldp packet [receive|send]  
no debug uldp packet [receive|send]
```

Function:

Enable receives and sends packet debug function, after that. Display the type and interface of the packet which receiving and sending on the client. The no form command disables this function.

Parameter:

None.

Command Mode:

Admin Mode.

Default:

Disabled.

Usage Guide:

Use this command to display the packet that receiving on each interface.

```
Switch#debug uldp packet receive
```

7.7 uldp aggressive-mode

Command:

```
uldp aggressive-mode  
no uldp aggressive-mode
```

Function:

To configure ULDP to work in aggressive mode. The no form of this command will restore the normal mode.

Parameters:

None.

Command Mode:

Global Configuration Mode and Port Configuration Mode.

Default:

Normal mode.

Usage Guide:

The ULDP working mode can be configured only if it is enabled globally. When ULDP aggressive mode is enabled globally, all the existing fiber ports will work in aggressive mode. For the copper ports and fiber ports which are available after the configuration is available, aggressive mode should be enabled in port configuration mode.

Example:

To enable ULDP aggressive mode globally.

```
Switch(config)#uldp aggressive-mode
```

7.8 uldp enable

Command:

uldp enable

Function:

ULDP will be enabled after issuing this command. In global configuration mode, this command will enable ULDP for the global. In port configuration mode, this command will enable ULDP for the port.

Parameters:

None.

Command Mode:

Global Configuration Mode and Port Configuration Mode.

Default:

By default ULDP is not configured.

Usage Guide:

ULDP can be configured for the ports only if ULDP is enabled globally. If ULDP is enabled globally, it will be effect for all the existing fiber ports. For copper ports and fiber ports which are available after ULDP is enabled, this command should be issued in the port configuration mode to make ULDP be effect.

Example:

Enable ULDP in global configuration mode.

```
Switch(config)#uldp enable
```

7.9 uldp disable

Command:

uldp disable

Function:

To disable ULDP configuration through this command.

Parameters:

None.

Command Mode:

Global Configuration Mode and Port Configuration Mode.

Default:

By default ULDP is not configured.

Usage Guide:

When ULDP is disabled globally, then ULDP in all the ports will be disabled.

Example:

To disable the ULDP configuration in global configuration mode.

```
Switch(config)#uldp disable
```

7.10 uldp hello-interval

Command:

```
uldp hello-interval <integer>
```

```
no uldp hello-interval
```

Function:

To configure the interval for ULDP to send hello messages. The no form of this command will restore the default interval for the hello messages.

Parameters:

<integer>: The interval for the Hello messages, with its value limited between 5 and 100 seconds, 10 seconds by default.

Command Mode:

Global Configuration Mode.

Default:

10 seconds by default.

Usage Guide:

Interval for hello messages can be configured only if ULDP is enabled globally, its value limited between 5 and 100 seconds.

Example:

To configure the interval of Hello messages to be 12 seconds.

```
Switch(config)#uldp hello-interval 12
```

7.11 uldap manual-shutdown

Command:

```
uldp manual-shutdown  
no uldap manual-shutdown
```

Function:

To configure ULDP to work in manual shutdown mode. The no command will restore the automatic mode.

Parameters:

None.

Command Mode:

Global Configuration Mode.

Default:

Auto mode.

Usage Guide:

This command can be issued only if ULDP has been enabled globally.

Example:

To enable manual shutdown globally.

```
Switch(config)#uldp manual-shutdown
```

7.12 uldap recovery-time

Command:

```
uldp recovery-time<integer>  
no uldap recovery-time
```

Function:

To configure the interval for ULDP recovery timer. The no form of this command will restore the default configuration.

Parameters:

<integer>: the time out value for the ULDP recovery timer. Its value is limited between 30 and 86400 seconds.

Command Mode:

Global Configuration Mode.

Default:

0 is set by default which means the recovery is disabled.

Usage Guide:

If an interface is shutdown by ULDP, and the recovery timer times out, the interface will be reset automatically. If the recovery timer is set to 0, the interface will not be reset.

Example:

To set the recovery timer to be 600 seconds.

```
Switch(config)#uldp recovery-time 600
```

7.13 uldp reset

Command:

```
uldp reset
```

Function:

To reset the port when ULDP is shutdown.

Parameters:

None.

Command Mode:

Globally Configuration Mode and Port Configuration Mode.

Default:

None.

Usage Guide:

This command can only be effect only if the specified interface is disabled by ULDP.

Example:

To reset all the port which are disabled by ULDP.

```
Switch(config)#uldp reset
```

7.14 show uldp

Command:

```
show uldp [interface ethernet<interface-name>]
```

Function:

To show the global ULDP configuration and status information of interface. If <interface-name> is specified, ULDP configuration and status about the specified interface as well as its neighbors' will be displayed.

Parameters:

<interface-name> is the interface name.

Command Mode:

Admin and Configuration Mode.

Default:

None.

Usage Guide:

If no parameters are appended, the global ULDP information will be displayed. If the interface name is specified, information about the interface and its neighbors will be displayed along with the global information.

Example:

To display the global ULDP information.

```
Switch(config)#show uldp
```

Chapter 8 Commands for LLDP Function

8.1 clear lldp remote-table

Command:

clear lldp remote-table

Function:

Clear the Remote-table on the port.

Parameters:

None.

Default:

Do not clear the entries.

Command Mode:

Port Configuration Mode.

Usage Guide:

Clear the Remote table entries on this port.

Example:

Clear the Remote table entries on this port.

```
Switch(Config-If-Ethernet 1/1)# clear lldp remote-table
```

8.2 debug lldp

Command:

debug lldp

no debug lldp

Function:

Enable the debug information of LLDP function, the no operation of this command will disable the debug information of LLDP function.

Parameters:

None.

Default:

Disable the debug information of LLDP function.

Command Mode:

Admin Mode.

Usage Guide:

When the debug switch is enabled, users can check the receiving and sending of packets and other information.

Example:

Enable the debug switch of LLDP function on the switch.

```
Switch#debug lldp
```

8.3 debug lldp packets

Command:

```
debug lldp packets interface ethernet <IFNAME>  
no debug lldp packets interface ethernet <IFNAME>
```

Function:

Display the message-receiving and message-sending information of LLDP on the port; the no operation of this command will disable the debug information switch.

Parameters:

None.

Default:

Disable the debug information on the port.

Command Mode:

Admin Mode.

Usage Guide:

When the debug switch is enabled, users can check the receiving and sending of packets and other information on the port.

Example:

Enable the debug switch of LLDP function on the switch.

```
Switch#debug lldp packets interface ethernet 1/1
```

```
%Jan 01 00:02:40 2006 LLDP-PDU-TX   PORT= ethernet 1/1
```

8.4 lldp enable

Command:

lldp enable

lldp disable

Function:

Globally enable LLDP function; **disable** command globally disables LLDP function.

Parameters:

None.

Default:

Disable LLDP function.

Command Mode:

Global Mode.

Usage Guide:

If LLDP function is globally enabled, it will be enabled on every port.

Example:

Enable LLDP function on the switch.

```
Switch(config)#lldp enable
```

8.5 Ildp enable (Port)

Command:

Ildp enable
Ildp disable

Function:

Enable the LLDP function module of ports in port configuration mode; **disable** command will disable the LLDP function module of port.

Parameters:

None.

Default:

the LLDP function module of ports is enabled by default in port configuration mode.

Command Mode:

Port Configuration Mode.

Usage Guide:

When LLDP is globally enabled, it will be enabled on every port, the switch on a port is used to disable this function when it is unnecessary on the port.

Example:

Disable LLDP function of port on the port ethernet 1/5 of the switch.

```
Switch(config)#in ethernet 1/5
```

```
Switch(Config-If-Ethernet1/5)#Ildp disable
```

8.6 Ildp mode

Command:

Ildp mode <send | receive | both | disable>

Function:

Configure the operating state of LLDP function of the port.

Parameters:

send: Configure the LLDP function as only being able to send messages.

receive: Configure the LLDP function as only being able to receive messages.

both: Configure the LLDP function as being able to both send and receive messages.

disable: Configure the LLDP function as not being able to send or receive messages.

Default:

The operating state of the port is "both".

Command Mode:

Port Configuration Mode.

Usage Guide:

Choose the operating state of the Ildp Agent on the port.

Example:

Configure the state of port ethernet 1/5 of the switch as "receive".

```
Switch(config)#in ethernet 1/5
```

```
Switch(Config-If-Ethernet1/5)#lldp mode receive
```

8.7 Ildp msgTxHold

Command:

```
lldp msgTxHold <value>
```

```
no lldp msgTxHold
```

Function:

Set the multiplier value of the aging time carried by update messages sent by the all ports with LLDP function enabled, the value ranges from 2 to 10.

Parameters:

<value> is the aging time multiplier, ranging from 2 to 10.

Default:

the value of the multiplier is 4 by default.

Command Mode:

Global Mode.

Usage Guide:

After configuring the multiplier, the aging time is defined as the product of the multiplier and the interval of sending messages, and its maximum value is 65535 seconds.

Example:

Set the value of the aging time multiplier as 6.

```
Switch(config)#lldp msgTxHold 6
```

8.8 lldp neighbors max-num

Command:

```
lldp neighbors max-num <value>
```

```
no lldp neighbors max-num
```

Function:

Set the maximum number of entries can be stored in Remote MIB.

Parameters:

<value> is the configured number of entries, ranging from 5 to 500.

Default:

The maximum number of entries can be stored in Remote MIB is 100.

Command Mode:

Port Configuration Mode.

Usage Guide:

The maximum number of entries can be stored in Remote MIB.

Example:

Set the Remote as 200 on port ethernet 1/5 of the switch.

```
Switch(config)#in ethernet 1/5
```

```
Switch(Config-If-Ethernet1/5)# lldp neighbors max-num 200
```

8.9 Ildp notification interval

Command:

```
lldp notification interval <seconds>  
no lldp notification interval
```

Function:

When the time interval ends, the system is set to check whether the Remote Table has been changed. If it has, the system will send Trap to the SNMP management end.

Parameters:

<seconds> is the time interval, ranging from 5 to 3600 seconds.

Default:

The time interval is 5 seconds.

Command Mode:

Global Mode.

Usage Guide:

After configuring the notification time interval, a “trap” message will be sent at the end of this time interval whenever the Remote Table changes.

Example:

Set the time interval of sending Trap messages as 20 seconds.
Switch(config)#lldp notification interval 20

8.10 Ildp tooManyNeighbors

Command:

```
lldp tooManyNeighbors {discard | delete}
```

Function:

Set which operation will be done when the Remote Table is full.

Parameters:

discard: discard the current message.

delete: Delete the message with the least TTL in the Remoter Table.

Default:

Discard.

Command Mode:

Port Configuration Mode.

Usage Guide:

When the Remote MIB is full, Discard means to discard the received message; Delete means to the message with the least TTL in the Remoter Table.

Example:

Set port ethernet 1/5 of the switch as delete.

```
Switch(config)#in ethernet 1/5
```

```
Switch(Config-If-Ethernet1/5)#lldp tooManyNeighbors delete
```

8.11 lldp transmit delay

Command:

```
lldp transmit delay <seconds>
```

```
no lldp transmit delay
```

Function:

Since local information might change frequently because of the variability of the network environment, there could be many update messages sent in a short time. So a delay is required to guarantee an accurate statistics of local information.

When transmit delay is the default value and tx-interval is configured via some commands, transmit delay will become one fourth of the latter, instead of the default 2.

Parameters:

<seconds> is the time interval, ranging from 1 to 8192 seconds.

Default:

The interval is 2 seconds by default.

Command Mode:

Global Mode.

Usage Guide:

When the messages are being sent continuously, a sending delay is set to prevent the Remote information from being updated repeatedly due to sending messages simultaneously.

Example:

Set the delay of sending messages as 3 seconds.

```
Switch(config)#lldp transmit delay 3
```

8.12 lldp transmit optional tlv

Command:

```
lldp transmit optional tlv [portDesc] [sysName] [sysDesc] [sysCap]
```

```
no lldp transmit optional tlv
```

Function:

Configure the type of optional TLV of the port.

Parameters:

portDesc: the description of the port; **sysName:** the system name; **sysDesc:** The description of the system;

sysCap: the capability of the system.

Default:

The messages carry no optional TLV by default.

Command Mode:

Port Configuration Mode.

Usage Guide:

When configuring the optional TLV, each TLV can only appear once in a message, **portDesc** optional TLV represents the name of local port; **sysName** optional TLV represents the name of local system; **sysDesc** optional TLV represents the description of local system; **sysCap** optional TLV represents the capability of local system.

Example:

Configure that port ethernet 1/5 of the switch carries portDesc and sysCap TLV.

```
Switch(config)#in ethernet 1/5
```

```
Switch(Config-If-Ethernet1/5)# lldp transmit optional tlv portDesc sysCap
```


8.13 Ildp trap

Command:

Ildp trap <*enable* / *disable*>

Function:

enable: configure to enable the Trap function on the specified port; **disable:** configure to disable the Trap function on the specified port.

Parameters:

None.

Default:

The Trap function is disabled on the specified port by default.

Command Mode:

Port Configuration Mode.

Usage Guide:

The function of sending Trap messages is enabled on the port.

Example:

Enable the Trap function on port ethernet 1/5 of the switch.

```
Switch(config)#in ethernet1/5
```

```
Switch(Config-If-Ethernet1/5)#Ildp trap enable
```

8.14 Ildp tx-interval

Command:

Ildp tx-interval <*integer*>

no Ildp tx-interval

Function:

Set the interval of sending update messages on all the ports with LLDP function enabled, the value of which ranges from 5 to 32768 seconds and is 30 seconds by default.

Parameters:

<*integer*> is the interval of sending updating messages, ranging from 5 to 32768 seconds.

Default:

30 seconds.

Command Settings:

Global Mode.

Usage Guide:

After configuring the interval of sending messages, LLDP messages can only be received after a period as long as configured. The interval should be less than or equal with half of aging time, for a too long interval will cause the state of being aged and reconstruction happen too often; while a too short interval will increase the flow of the network and decrease the bandwidth of the port. The value of the aging time of messages is the product of the multiplier and the interval of sending messages. The maximum aging time is 65535 seconds.

When tx-interval is the default value and transmit delay is configured via some commands, tx-interval will become four times of the latter, instead of the default 40.

Example:

Set the interval of sending messages as 40 seconds.

```
Switch(config)#lldp tx-interval 40
```

8.15 show debugging lldp

Command:

```
show debugging lldp
```

Function:

Display all ports with lldp debug enabled.

Parameters:

None.

Default:

None.

Command Mode:

Admin and Configuration Mode.

Usage Guide:

With show debugging lldp, all ports with lldp debug enabled will be displayed.

Example:

Display all ports with lldp debug enabled.

```
Switch(config)#show debugging lldp
```

```
====BEGINNING OF LLDP DEBUG SETTINGS====
```

```
debug lldp
```

```
debug lldp packets interface Ethernet1/1
```

```
debug lldp packets interface Ethernet1/2
```

```
debug lldp packets interface Ethernet1/3
```

```
debug lldp packets interface Ethernet1/4
```

```
debug lldp packets interface Ethernet1/5
```

```
=====END OF DEBUG SETTINGS=====
```

8.16 show lldp

Command:

```
show lldp
```

Function:

Display the configuration information of global LLDP, such as the list of all the ports with LLDP enabled, the interval of sending update messages, the configuration of aging time, the interval needed by the sending module to wait for re-initialization, the interval of sending TRAP, the limitation of the number of the entries in the Remote Table.

Parameters:

None.

Default:

Do not display the configuration information of global LLDP.

Command Mode:

Admin Mode, Global Mode.

Usage Guide:

Users can check all the configuration information of global LLDP by using “show lldp”.

Example:

Check the configuration information of global LLDP after it is enabled on the switch.

```
Switch(config)#show lldp
-----LLDP GLOBAL INFORMATIONS-----
LLDP enabled port : Ethernet 1/1
LLDP interval :30
LLDP txTTL :120
LLDP txShutdownWhile :2
LLDP NotificationInterval :5
LLDP txDelay :20
-----END-----
```

8.17 show lldp interface ethernet

Command:

```
show lldp interface ethernet <IFNAME>
```

Function:

Display the configuration information of LLDP on the port, such as: the working state of LLDP Agent.

Parameters:

<IFNAME>: Interface name.

Default:

Do not display the configuration information of LLDP on the port.

Command Mode:

Admin Mode, Global Mode.

Usage Guide:

Users can check the configuration information of LLDP on the port by using “show lldp interface ethernet XXX”.

Example:

Check the configuration information of LLDP on the port after LLDP is enabled on the switch.

```
Switch(config)#show lldp interface ethernet 1/1
Port name : ethernet 1/1
LLDP Agent Adminstatus: Both
LLDP Operation TLV: portDecs sysName sysDesc sysCap
```

LLDP Trap Status: disable
LLDP maxRemote: 100
LLDP Overflow handle: discard
LLDP interface remote status : Full

8.18 show lldp neighbors interface ethernet

Command:

show lldp neighbors interface ethernet < IFNAME >

Function:

Display the LLDP neighbor information of the port.

Parameters:

None.

Default:

Do not display the LLDP neighbor information of the port.

Command Mode:

Admin Mode, Global Mode.

Usage Guide:

Users can check the LLDP neighbor information of the port by using “show lldp neighbors interface ethernet XXX”.

Example:

Check the LLDP neighbor information of the port after LLDP is enabled on the port.

Switch(config)#show lldp neighbors interface ethernet 1/1

8.19 show lldp traffic

Command:

show lldp traffic

Function:

Display the statistics of LLDP data packets.

Parameters:

None.

Default:

Do not display the statistics of LLDP data packets.

Command Mode:

Admin Mode, Global Mode.

Usage Guide:

Users can check the statistics of LLDP data packets by using “show lldp traffic”.

Example:

Check the statistics of LLDP data packets after LLDP is enabled on the switch.

Switch(config)#show lldp traffic

PortName	Ageouts	FramesDiscarded	FramesInErrors	FramesIn	FramesOut	TLVsDiscarded	TLVsUnrecognized	-----
Ethernet1/1	0	0	0	0	7	0	0	

Chapter 9 Commands for Port Channel

9.1 debug port-channel

Command:

```
debug port-channel <port-group-number> {all | event | fsm | packet | timer}  
no debug port-channel [<port-group-number>]
```

Function:

Open the debug switch of port-channel.

Parameters:

<port-group-number> is the group number of port channel, ranging from 1 ~ 14

all: all debug information

event: debug event information

fsm: debug the state machine

packet: debug LACP packet information

timer: debug the timer information

Command mode:

Admin mode.

Default:

Disable the debugging of port-channel.

Usage Guide:

Open the debug switch to check the debug information of port-channel.

Example:

(1) debug the state machine for port-group 1.

```
Switch#debug port-channel 1 fsm
```

(2) debug LACP packet information for port-group 2.

```
Switch#debug port-channel 2 packet
```

(3) debug all for port-group 1.

```
Switch#debug port-channel 1 all
```

9.2 interface port-channel

Command:

```
interface port-channel <port-channel-number>
```

Function:

Enters the port channel configuration mode

Command mode:

Global Mode

Usage Guide:

On entering aggregated port mode, configuration to GVRP or spanning tree modules will apply to aggregated ports; if the aggregated port does not exist (i.e., ports have not been aggregated), an error message will be displayed and configuration will be saved and will be restored until the ports are aggregated. Note such restoration will be performed only once, if an aggregated group is ungrouped and aggregated again, the initial user configuration will not be restored. If it is configuration for modules, such as shutdown configuration, then the configuration to current port will apply to all member ports in the corresponding port group.

Example:

Entering configuration mode for port-channel 1.

```
Switch(config)#interface port-channel 1
```

```
Switch(Config-If-Port-Channel1)#
```

9.3 lacp port-priority

Command:

```
lacp port-priority <port-priority>
```

```
no lacp port-priority
```

Function:

Set the port priority of LACP protocol.

Parameters:

<port-priority>: the port priority of LACP protocol, the range from 0 to 65535.

Command mode:

Port Mode.

Default:

The default priority is 32768 by system.

Usage Guide:

Use this command to modify the port priority of LACP protocol, the no command restores the default value.

Example:

Set the port priority of LACP protocol.

```
Switch(Config-If-Ethernet1/1)# lacp port-priority 30000
```

9.4 lacp system-priority

Command:

```
lacp system-priority <system-priority>
```

```
no lacp system-priority
```

Function:

Set the system priority of LACP protocol.

Parameters:

<*system-priority*>: The system priority of LACP protocol, ranging from 0 to 65535.

Command mode:

Global Mode

Default:

The default priority is 32768.

Usage Guide:

Use this command to modify the system priority of LACP protocol, the no command restores the default value.

Example:

Set the system priority of LACP protocol.

```
Switch(config)#lacp system-priority 30000
```

9.5 lacp timeout

Command:

```
lacp timeout {short | long}
no lacp timeout
```

Function:

Set the timeout mode of LACP protocol.

Parameters:

The timeout mode includes long and short.

Command mode:

Port Mode

Default:

Long.

Usage Guide:

Set the timeout mode of LACP protocol.

Example:

```
Set the timeout mode as short in LACP protocol.
Switch(Config-If-Ethernet1/1)#lacp timeout short
```

9.6 load-balance

Command:

```
load-balance {src-mac | dst-mac | dst-src-mac | src-ip | dst-ip | dst-src-ip}
```

Function:

Set load-balance mode for port-group.

Parameter:

src-mac performs load-balance according to the source MAC

dst-mac performs load-balance according to the destination MAC

dst-src-mac performs load-balance according to the source and destination MAC

src-ip performs load-balance according to the source IP

dst-ip performs load-balance according to the destination IP

dst-src-ip performs load-balance according to the destination and source IP

Command mode:

Aggregation port mode.

Default:

Perform load-balance according to the source and destination MAC.

Usage Guide:

Use port-channel to implement load-balance, user can configure the load-balance mode according to the requirements. If the specific load-balance mode of the command line is different with the current load-balance mode of port-group, then modify the load-balance of port-group as the specific load-balance of command line; otherwise return a message to notice that the current mode is already configured.

Example:

Set load-balance mode of port-group.

```
Switch(config)#interface port-channel 1
```

```
Switch(Config-If-Port-Channel1)#load-balance src-mac
```

9.7 port-group

Command:

```
port-group <port-group-number>
```

```
no port-group <port-group-number>
```

Function:

Creates a port group. The no command deletes that group.

Parameters:

<port-group-number> is the group number of a port channel from 1~14.

Default:

There is no port-group.

Command mode:

Global Mode

Example:

Creating a port group.

```
Switch(config)# port-group 1
```

Delete a port group.

```
Switch(config)#no port-group 1
```

9.8 port-group mode

Command:

```
port-group <port-group-number> mode {active | passive | on}  
no port-group
```

Function:

Add a physical port to port channel, the no operation removes specified port from the port channel.

Parameters:

<*port-group-number*> is the group number of port channel, from 1~14; **active** enables LACP on the port and sets it in Active mode; **passive** enables LACP on the port and sets it in Passive mode; **on** forces the port to join a port channel without enabling LACP.

Command mode:

Port Mode.

Default:

Switch ports do not belong to a port channel by default; LACP not enabled by default.

Usage Guide:

If the specified port group does not exist, then print a error message. All ports in a port group must be added in the same mode, i.e., all ports use the mode used by the first port added. Adding a port in “on” mode is a “forced” action, which means the local end switch port aggregation does not rely on the information of the other end, port aggregation will succeed as long as all ports have consistent VLAN information. Adding a port in “active” or “passive” mode enables LACP. Ports of at least one end must be added in “active” mode, if ports of both ends are added in “passive” mode, the ports will never aggregate.

Example:

Under the Port Mode of Ethernet1/1, add current port to “port-group 1” in “active” mode.

```
Switch(Config-If-Ethernet1/1)#port-group 1 mode active
```

9.9 show port-group

Command:

```
show port-group [<port-group-number>] {brief | detail }
```

Function:

Display the specified group number or the configuration information of all port-channel which have been configured.

Parameters:

<port-group-number> is the group number of port channel to be displayed, from 1~14; **brief** displays summary information; **detail** displays detailed information.

Command mode:

All Configuration Mode.

Usage Guide:

If the user does not input port-group-number, that means the information of all the existent port-group are showed; if the port channel corresponds to port-group-number parameter and is not exist, then print a error message, otherwise display the current port-channel information of the specified group number.

Example:

1. Display summary information for port-group 1.

```
Switch#show port-group brief
```

ID: port group number; Mode: port group mode such as on active or passive;

Ports: different types of port number of a port group,

the first is selected ports number, the second is standby ports number, and

the third is unselected ports number.

ID	Mode	Partner ID	Ports	Load-balance
1	active	0x8000,00-12-cf-4d-e1-a1	8,1,1	dst-src-mac
10	passive	0x8000,00-12-cf-4d-e1-b2	8,2,0	dst-src-ip
20	on		8,0,0	src-ip

2. Display the detailed information of port-group 1.

```
Switch#show port-group 1 detail
```

Flags: A -- LACP_Activity, B -- LACP_timeout, C -- Aggregation,

D -- Synchronization, E -- Collecting, F -- Distributing,

G -- Defaulted, H -- Expired

Port-group number: 1, Mode: active, Load-balance: dst-src-mac

Port-group detail information:

System ID: 0x8000,00-30-4f-0c-16-6d

Local:

Port	Status	Priority	Oper-Key	Flag
Ethernet1/1	Selected	32768	1	{ACDEF}
Ethernet1/2	Selected	32768	1	{ACDEF}
Ethernet1/3	Selected	32768	1	{ACDEF}
Ethernet1/4	Selected	32768	1	{ACDEF}
Ethernet1/5	Selected	32768	1	{ACDEF}
Ethernet1/6	Selected	32768	1	{ACDEF}
Ethernet1/7	Selected	32768	1	{ACDEF}
Ethernet1/8	Selected	32768	1	{ACDEF}
Ethernet1/20	Unselected	32768	1	{ACG}
Ethernet1/23	Standby	32768	1	{AC}

Remote:

Actor	Partner	Priority	Oper-Key	SystemID	Flag
Ethernet1/1	1	32768	1	0x8000,00-30-4f-01-02-04	{CDEF}
Ethernet1/2	2	32768	1	0x8000,00-30-4f-01-02-04	{CDEF}
Ethernet1/3	3	32768	1	0x8000,00-30-4f-01-02-04	{CDEF}
Ethernet1/4	4	32768	1	0x8000,00-30-4f-01-02-04	{CDEF}
Ethernet1/5	5	32768	1	0x8000,00-30-4f-01-02-04	{CDEF}
Ethernet1/6	6	32768	1	0x8000,00-30-4f-01-02-04	{CDEF}
Ethernet1/7	7	32768	1	0x8000,00-30-4f-01-02-04	{CDEF}
Ethernet1/8	8	32768	1	0x8000,00-30-4f-01-02-04	{CDEF}
Ethernet1/23	23	32768	1	0x8000,00-30-4f-01-02-04	{C}

Switch#

Chapter 10 Commands for MTU

10.1 mtu

Command:

```
mtu [<mtu-value>]
no mtu
```

Function:

Configure the MTU size of JUMBO frame, enable the jumbo receiving/sending function. The no command restores to the normal frame receiving function.

Parameter:

mtu-value: the MTU value of frames that can be received, in byte, ranging from <1500-16000>. The corresponding frame size is <1518/1522-16018/16022>. Without setting is parameter, the allowed max frame size is 16018/16022.

Default:

MTU function not enabled by default.

Command Mode:

Global Mode

Usage Guide:

Set switch of both ends mtu necessarily, or mtu frame will be dropped at the switch has not be set.

Example:

Enable the mtu function of the switch.

```
Switch(config)#mtu
```

Chapter 11 Commands for EFM OAM

11.1 clear ethernet-oam

Command:

```
clear ethernet-oam [interface {ethernet } <IFNAME>]
```

Function:

Clear the statistic information of packets and link event on specific or all ports for OAM.

Parameters:

<IFNAME>, the name of the port needs to clear OAM statistic information

Command Mode:

Admin mode

Default:

N/A.

Usage Guide:

N/A.

Example:

Clear the statistic information of OAM packets and link event on all ports.

```
Switch(config)#clear ethernet-oam
```

11.2 debug ethernet-oam error

Command:

```
debug ethernet-oam error [interface {ethernet } <IFNAME>]  
no debug ethernet-oam error [interface {ethernet } <IFNAME>]
```

Function:

Enable the debugging of OAM error information, no command disables it.

Parameters:

<IFNAME>: name of the port that the debugging will be enabled or disabled.

Command Mode:

Admin mode

Default:

Disable.

Usage Guide:

N/A.

Example:

Enable the debugging of OAM error information for ethernet1/1.

```
Switch#debug ethernet-oam error interface ethernet1/1
```

11.3 debug ethernet-oam fsm

Command:

```
debug ethernet-oam fsm {all | Discovery | Transmit} [interface {ethernet {}} <IFNAME>]  
no debug ethernet-oam fsm {all | Discovery | Transmit} [interface {ethernet {}} <IFNAME>]
```

Function:

Enable the debugging of OAM state machine, no command disables it.

Parameters:

<IFNAME>: name of the port that the debugging will be enabled or disabled

Command Mode:

Admin mode

Default:

Disable.

Usage Guide:

N/A.

Example:

Enable the debugging of Discovery state machine for ethernet1/1.

```
Switch#debug ethernet-oam fsm Discovery interface ethernet1/1.
```

11.4 debug ethernet-oam packet

Command:

```
debug ethernet-oam packet [detail] {all | send | receive} [interface {ethernet |} <IFNAME>]
no debug ethernet-oam packet [detail] {all | send | receive} interface {ethernet |} <IFNAME>
```

Function:

Enable the debugging of packets received or sent by OAM, no command disables the debugging.

Parameters:

<IFNAME>: name of the port that the debugging will be enabled or disabled

Command Mode:

Admin mode

Default:

Disable.

Usage Guide:

N/A.

Example:

Enable the debugging of packets received or sent for ethernet1/1.
Switch#debug ethernet-oam packet detail all interface ethernet1/1

11.5 debug ethernet-oam timer

Command:

```
debug ethernet-oam timer {all | pdu_timer | local_lost_link_timer} [interface {ethernet |} <IFNAME>]
no debug ethernet-oam timer {all | pdu_timer | local_lost_link_timer} [interface {ethernet |} <IFNAME>]
```

Function:

Enable the debugging of refreshing information for specific or all timers, no this command disables the debugging.

Parameters:

<IFNAME>: name of the port that the debugging will be enabled or disabled

Command Mode:

Admin mode

Default:

Disable.

Usage Guide:

N/A.

Example:

Enable the debugging of refreshing information for all timers of ethernet1/1.

```
Switch#debug ethernet-oam timer all interface ethernet1/1
```

11.6 ethernet-oam

Command:

ethernet-oam

no ethernet-oam

Function:

Enable ethernet-oam of ports, no command disables ethernet-oam of ports.

Parameters:

None.

Command Mode:

Port mode

Default:

Disable.

Usage Guide:

N/A.

Example:

Enable ethernet-oam of Ethernet 1/4.

```
Switch(config)#interface ethernet 1/4
```

11.7 ethernet-oam ethernet-oam errored-frame threshold high

Command:

```
ethernet-oam errored-frame threshold high {<high-frames> | none}  
no ethernet-oam errored-frame threshold high
```

Function:

Configure the high threshold of errored frame event, no command restores the default value.

Parameters:

<high-frames>, the high detection threshold of errored frame event, ranging from 2 to 4294967295.
none, cancel the high threshold configuration.

Command Mode:

Port mode

Default:

none.

Usage Guide:

During the specific detection period, serious link event is induced if the number of errored frame is larger than or equal to the high threshold and the device notifies the peer by sending Information OAMPDU of which the value of Link Fault flag in Flags field is 1. Note that the high threshold can not be less than the low threshold.

Example:

Configure the high threshold of errored frame event on Ethernet 1/4 to be 3000.
Switch(Config-If-Ethernet1/4)#ethernet-oam errored-frame threshold high 3000

11.8 ethernet-oam errored-frame threshold low

Command:

```
ethernet-oam errored-frame threshold low <low-frames>  
no ethernet-oam errored-frame threshold low
```

Function:

Configure the low threshold of errored frame event, no command restores the default value.

Parameters:

<**low-frames**>, the low detection threshold of errored frame event, ranging from 1 to 4294967295.

Command Mode:

Port mode

Default:

1.

Usage Guide:

During the specific detection period, errored frame event is induced if the number of errored frame is larger than or equal to the low threshold and the device notifies the peer by sending event notification OAMPDU. Note that the low threshold can not be larger than the high threshold.

Example:

Configure the low threshold of errored frame event on Ethernet 1/4 to 100.

```
Switch(Config-If-Ethernet1/4)#ethernet-oam errored-frame threshold low 100
```

11.9 ethernet-oam errored-frame window

Command:

```
ethernet-oam errored-frame window <seconds>
```

```
no ethernet-oam errored-frame window
```

Function:

Configure the detection period of errored frame event, no command restores the default value.

Parameters:

<**seconds**> is the time for counting the specified frame number, its range from 5 to 300, unit is 200ms.

Command Mode:

Port mode

Default:

5.

Usage Guide:

Detect the errored frame number of the port after the time of specific detection period. If the number of errored frame is larger than or equal to the threshold, bring the corresponding event and notify the peer through OAMPDU.

Example:

Configure the detection period of errored frame event on port1/4 to be 20s.

```
Switch(Config-If-Ethernet1/4)#ethernet-oam errored-frame window 100
```

11.10 ethernet-oam errored-frame-period threshold high

Command:

```
ethernet-oam errored-frame-period threshold high {<high-frames> | none}  
no ethernet-oam errored-frame-period threshold high
```

Function:

Configure the high threshold of errored frame period event, no command restores the default value.

Parameters:

<*high-frames*>, the high detection threshold of errored frame period event, ranging from 2 to 4294967295.

none, cancel the high threshold configuration.

Command Mode:

Port mode

Default:

none.

Usage Guide:

During the specific detection period, serious link event is induced if the number of errored frame is larger than or equal to the high threshold and the device notifies the peer by sending Information OAMPDU of which the value of Link Fault flag in Flags field is 1. Note that the high threshold can not be less than the low threshold.

Example:

Configure the high threshold of errored frame period event on port 1/4 to be 3000.

```
Switch(Config-If-Ethernet1/4)#ethernet-oam errored-frame-period threshold high 3000
```

11.11 ethernet-oam errored-frame-period threshold low

Command:

```
ethernet-oam errored-frame-period threshold low <low-frames>  
no ethernet-oam errored-frame-period threshold low
```

Function:

Configure the low threshold of errored frame period event, no command restores the default value.

Parameters:

<*low-frames*>, the low detection threshold of errored frame period event, ranging from 1 to 4294967295 frames.

Command Mode:

Port mode

Default:

1.

Usage Guide:

During the specific detection period, errored frame period event is induced if the number of errored frame is larger than or equal to the low threshold and the device notifies the peer by event notification OAMPDU. Note that the low threshold should not be larger than the high threshold.

Example:

Configure the low threshold of errored frame period event on port 1/4 to be 100.

```
Switch(Config-If-Ethernet1/4)#ethernet-oam errored-frame-period threshold low 100
```

11.12 ethernet-oam errored-frame-period window

Command:

```
ethernet-oam errored-frame-period window <seconds>  
no ethernet-oam errored-frame-period window
```

Function:

Configure the detection period of errored frame period event, no command restores the default value.

Parameters:

<*seconds*> is the time for counting the specified frame number, its range from 1 to 300, unit is 200ms.

Command Mode:

Port mode

Default:

5.

Usage Guide:

Detect errored frame of the port after the time of specific detection period. If the number of errored frame is larger than or equal to the threshold, corresponding event is induced and the device notifies the peer through OAMPDU. When sending the packets, the maximum number of frames is filled as the value of window in errored frame period event. The conversion rule is maximum number of frames= interface bandwidth×detection period of errored frame period event(s)÷(64×8), of which the detection period is the number of seconds in window of the configuration.

Example:

Configure the detection period of errored frame period event on port 1/4 to be 10s.

```
Switch(Config-If-Ethernet1/4)#ethernet-oam errored-frame-period window 50
```

11.13 ethernet-oam errored-frame-seconds threshold high

Command:

```
ethernet-oam errored-frame-seconds threshold high {<high-seconds> | none}  
no ethernet-oam errored-frame-seconds threshold high
```

Function:

Configure the high threshold of errored frame seconds event, no command restores the default value.

Parameters:

<high-seconds>, the high detection threshold of errored frame seconds event, ranging from 2 to 65535 seconds.

none, cancel the high threshold configuration.

Command Mode:

Port mode

Default:

none.

Usage Guide:

During the specific detection period, serious link event is induced if the number of errored frame seconds is larger than or equal to the high threshold and the device notifies the peer by sending Information OAMPDU of which the value of Link Fault flag in Flags field is 1. Note that the high threshold should not be less than the low threshold. The definition of errored frame seconds is the second in which errored frame is received.

Example:

Configure the high threshold of errored frame seconds event on port 1/4 to be 3000.

```
Switch(Config-If-Ethernet1/4)#ethernet-oam errored-frame-seconds threshold high 3000
```

11.14 ethernet-oam errored-frame-seconds threshold low

Command:

```
ethernet-oam errored-frame-seconds threshold low <low-seconds>
```

```
no ethernet-oam errored-frame-seconds threshold low
```

Function:

Configure the low threshold of errored frame seconds event, no command restores the default value.

Parameters:

<low-seconds>, the low detection threshold of errored frame seconds event, ranging from 1 to 65535 seconds.

Command Mode:

Port mode

Default:

1.

Usage Guide:

During the specific detection period, errored frame seconds event is induced if the number of errored frame seconds is larger than or equal to the low threshold and the device notifies the peer by sending event notification OAMPDU. Note that the low threshold should not be larger than the high threshold. The definition of errored frame seconds is the second in which errored frame is received.

Example:

Configure the low threshold of errored frame seconds event on port 1/4 to be 100.

```
Switch(Config-If-Ethernet1/4)#ethernet-oam errored-frame-seconds threshold low 100
```

11.15 ethernet-oam errored-frame-seconds window

Command:

```
ethernet-oam errored-frame-seconds window <seconds>  
no ethernet-oam errored-frame-seconds window
```

Function:

Configure the detection period of errored frame seconds event, no command restores the default value.

Parameters:

<*seconds*> is the time for counting the specified frame number, its range from 50 to 450, unit is 200ms.

Command Mode:

Port mode

Default:

300.

Usage Guide:

Detect errored frame seconds of the port after the time of specific detection period. If the number of errored frame seconds is larger than or equal to the threshold, corresponding event is induced and the device notified the peer through OAMPDU.

Example:

Configure the detection period of errored frame seconds event on port 1/4 to be 120s.
Switch(Config-If-Ethernet1/4)#ethernet-oam errored-frame-seconds window 600

11.16 ethernet-oam errored-symbol-period threshold high

Command:

```
ethernet-oam errored-symbol-period threshold high {<high-symbols> | none}  
no ethernet-oam errored-symbol-period threshold high
```

Function:

Configure the high threshold of errored symbol event, no command restores the default value.

Parameters:

<high-symbols>, the high detection threshold of errored symbol event, ranging from 2 to 18446744073709551615 symbols.

none, cancel the high threshold configuration.

Command Mode:

Port mode

Default:

none.

Usage Guide:

During the specific detection period, serious link event is induced if the number of errored symbols is larger than or equal to the high threshold and the device notifies the peer by sending Information OAMPDU of which the value of Link Fault flag in Flags field is 1. Note that the high threshold should not be less than the low threshold.

Example:

Set the high threshold of errored symbol event on port 1/4 to none.

```
Switch(Config-If-Ethernet1/4)#ethernet-oam errored-symbol-period threshold high none
```

11.17 ethernet-oam errored-symbol-period threshold low

Command:

```
ethernet-oam errored-symbol-period threshold low <low-symbols>
```

```
no ethernet-oam errored-symbol-period threshold low
```

Function:

Configure the low threshold of errored symbol event, no command restores the default value.

Parameters:

<low-symbols>, the low threshold of errored symbol event, ranging from 1 to 18446744073709551615 symbols.

none, cancel the high threshold configuration.

Command Mode:

Port mode

Default:

1.

Usage Guide:

During the specific detection period, errored symbol event is induced if the number of errored symbols is larger than or equal to the low threshold and the device notifies the peer by sending event notification OAMPDU. Note that the low threshold should not be larger than the high threshold.

Example:

Set the low threshold of errored symbol event on port 1/4 to be 5.

```
Switch(Config-If-Ethernet1/4)#ethernet-oam errored-symbol-period threshold low 5
```

11.18 ethernet-oam errored-symbol-period window

Command:

```
ethernet-oam errored-symbol-period window <seconds>
```

```
no ethernet-oam errored-symbol-period window
```

Function:

Configure the detection period of errored symbol event, no command restores the default value.

Parameters:

<*seconds*> is the time for counting the specified frame number, its range from 5 to 300, unit is 200ms.

Command Mode:

Port mode

Default:

5.

Usage Guide:

Detect errored symbols of the port after the time of specific detection period. If the number of errored symbols is larger than or equal to the threshold, corresponding event is induced and the device notified the peer through OAMPDU.

Example:

Set the detection period of errored symbol event on port 1/4 to be 2s.

```
Switch(Config-If-Ethernet1/4)#ethernet-oam errored-symbol-period window 10
```

11.19 ethernet-oam link-monitor

Command:

ethernet-oam link-monitor
no ethernet-oam link-monitor

Function:

Enable link monitor, no command disables the function.

Parameters:

None.

Command Mode:

Port mode

Default:

Enable.

Usage Guide:

Enable OAM to monitor local link errors. Generally link monitor is enabled when enabling OAM function of the port. When OAM link monitor is disabled, although local link error is not monitored, Event information OAMPDU from the peer is still normally received and processed.

Example:

Enable the link monitor of port 1/4.
Switch(Config-If-Ethernet1/4)#ethernet-oam link-monitor

11.20 ethernet-oam mode

Command:

ethernet-oam mode {active | passive}
no ethernet-oam mode

Function:

Configure the mode of OAM function, no command restores the default value.

Parameters:

active, active mode

passive, passive mode

Command Mode:

Port mode

Default:

active mode.

Usage Guide:

At least one of the two connected OAM entities should be configured to active mode. Once OAM is enabled, the working mode of OAM cannot be changed and you need to disable OAM function if you have to change the working mode.

Example:

Set the mode of OAM function on ethernet 1/4 to passive mode.

```
Switch(Config-If-Ethernet1/4)#ethernet-oam mode passive
```

11.21 ethernet-oam period

Command:

```
ethernet-oam period <seconds>
```

```
no ethernet-oam mode
```

Function:

Configure the transmission period of Information OAMPDU, no command restores the default value.

Parameters:

<**seconds**>, sending period, ranging from 1 to 2 seconds.

Command Mode:

Port mode

Default:

1s.

Usage Guide:

Use this command to configure the transmission interval of Information OAMPDU which keep OAM connection normally.

Example:

Set the transmission interval of Information OAMPDU for ethernet 1/4 to be 2s.

```
Switch(Config-If-Ethernet1/4)# ethernet-oam period 2
```

11.22 ethernet-oam remote-failure

Command:

```
ethernet-oam remote-failure
```

```
no ethernet-oam remote-failure
```

Function:

Enable remote failure indication of OAM, no command disables the function.

Parameters:

None.

Command Mode:

Port mode

Default:

Enable.

Usage Guide:

With remote failure indication is enabled, if critical-event or link fault event is occurred locally, it will notify the peer by sending Information OAMPDU, log the fault information and send SNMP trap warning. When the remote failure indication is disabled, although local critical-event or link fault event is not monitored, failure indication information from the peer is still normally received and processed.

Example:

Enable remote failure indication of ethernet 1/4.

```
Switch(Config-If-Ethernet1/4)#ethernet-oam remote-failure
```

11.23 ethernet-oam timeout

Command:

```
ethernet-oam timeout <seconds>  
no ethernet-oam timeout
```

Function:

Configure the timeout of OAM connection, no command restores the default value.

Parameters:

<*seconds*>, the timeout ranging from 5 to 10 seconds.

Command Mode:

Port mode

Default:

5s.

Usage Guide:

OAM connection will be disconnected if no OAMPDU is received after specified timeout.

Example:

```
Set the timeout of OAM connection for ethernet 1/4 to be 6 seconds.  
Switch(Config-If-Ethernet1/4)#ethernet-oam timeout 6
```

11.24 show ethernet-oam

Command:

```
show ethernet-oam [{local | remote} interface {ethernet } <IFNAME>]
```

Function:

Show Ethernet OAM connection of specified or all ports.

Parameters:

Overview information of all Ethernet OAM connections will be shown if no parameters is input

local, show detailed information of local OAM connection

remote, show detailed information of remote OAM connection

<*IFNAME*>, the port that OAM connection information will be shown

Command Mode:

Admin mode

Default:

N/A.

Usage Guide:

N/A.

Example:

Show overview information of Ethernet OAM connection.

Switch#show ethernet-oam

Remote-Capability codes: L - Link Monitor, R - Remote Loopback

U - Unidirection, V - Variable Retrieval

```

-----
Interface Local-Mode Local-Capability Remote-MAC-Addr Remote-Mode Remote-Capability
1/1      active      L R      0030.4f02.2e5d      active      L R
1/2      active      L R      0030.4f19.3a3e      avtive     L R
1/4      active      L R      0030.4f26.480c      passive    L R
1/5      active      L R      0030.4f28.020a      active     L R

```

Field	Description
Interface	port with Ethernet OAM enabled
Local-Mode	Working mode of the local port OAM.
Local-Capability	Functions are supported by local port OAM L - Link Monitor, R - Remote Loopback U - Unidirection, V - Variable Retrieval
Remote-MAC-Addr	MAC address of the peer
Remote-Mode	OAM working mode of the peer
Remote-Capability	Functions are supported by OAM of the peer L - Link Monitor, R - Remote Loopback U - Unidirection, V - Variable Retrieval

Show detailed information of local OAM entity for ethernet 1/2:

Switch#show ethernet-oam local interface ethernet1/2

Ethernet1/2 oam local Information :

oam_status=enable

local_mode=active

period=1s

timeout=8s
 Loopback Supported=YES
 Unidirectional Support=YES
 Link Events=YES
 Remote Failure=YES
 local_pdu=INFO
 local_mux_action=FWD
 local_par_action=DISCARD
 Max_OAMPDU_Size=1518

 OAM_local_flags_field :

Link Fault=0 Dying Gasp=0 Critical Events=0

Packet statistic :

Packets	Send	Receive
OAMPDU	553	21
Information	552	21
Event Notification	1	0
Loopback Control	0	0

Field	Description
oam_status	Status of Ethernet OAM: enable, OAM is enabled; disable, OAM is not enabled.
local_mode	Working mode of Ethernet OAM: active, the port is set as active mode; passive, the port is set as passive mode.
Period	Transmission period of packets
Timeout	Timeout of connection
local_pdu	The way in which the local end processes Ethernet OAMPDUs: RX_INFO, the port only receives Information OAMPDUs and does not send any Ethernet OAMPDUs. LF_INFO, the port only sends Information OAMPDU packets without Information TLV and with their link error flag bits being set. INFO, the port only sends and receives Information OAMPDU packets. ANY, the port sends and receives any OAMPDU packets.
local_mux_action	Working mode of the local transmitter: FWD, the port can send any packets;

	DISCARD, the port only sends OAMPDU packets and discards others.
local_par_action	Working mode of the local receiver in the following: FWD, receiving any packets is allowed; DISCARD, only OAMPDU packets is received while others are discarded; LB, OAM remote loopback is enabled on the port. In this case, all the packets except OAMPDU packets received are returned to their sources along the ways they come.
Loopback Supported	Whether support remote loopback: YES for support and NO for not.
Unidirectional Support	Whether support unidirectional transmission: YES for support and NO for not.
Link Events	Whether support general link events: YES for support and NO for not.
Remote Failure	Whether support severe link events (remote failure indication): YES for support and NO for not.
Link Fault	Whether occur a Link Fault event: 0 for no and 1 for yes.
Dying Gasp	Whether occur a Dying Gasp event: 0 for no and 1 for yes.
Critical Event	Whether occur a Critical Event: 0 for no and 1 for yes.
Max_OAMPDU_Size	The maximum length of OAMPDU is supported.
OAMPDU	Show the number of the OAMPDU packets sent and received which is the sum of three kinds of packets.
Information	Show the number of the Information OAMPDU packets sent and received
Event Notification	Show the number of the Event Notification OAMPDU packets sent and received
Loopback Control	Show the number of the Loopback Control OAMPDU packets sent and received

Display detailed information of remote OAM entity for Ethernet 1/2

Switch#show ethernet-oam remote interface ethernet1/2

Ethernet1/2 oam remote Information :

Remote_Mac_Address=0030.4f19.3a3e

local_mode=active

local_pdu=INFO

local_mux_action=FWD

local_par_action=DISCARD

Loopback Supported=YES

Unidirectional Support=NO

Link Events=YES

Remote Failure=YES

Max_OAMPDU_Size=1518

OAM Remote Flags Field :

Link Fault=0 Dying Gasp=0 Critical Event=0

Field	Description
Remote_Mac_Address	MAC address of remote OAM entity
local_mode	Working mode of Ethernet OAM: active, the port is set as active mode; passive, the port is set as passive mode.
local_pdu	The way in which the local end processes Ethernet OAMPDUs: RX_INFO, the port only receives Information OAMPDUs and does not send any Ethernet OAMPDUs. LF_INFO, the port only sends Information OAMPDU packets without Information TLV and with their link error flag bits being set. INFO, the port only sends and receives Information OAMPDU packets. ANY, the port sends and receives any OAMPDU packets.
local_mux_action	Working mode of the local transmitter: FWD, the port can send any packets; DISCARD, the port only sends OAMPDU packets and discards others.
local_par_action	Working mode of the local receiver in the following: FWD, receiving any packets is allowed; DISCARD, only OAMPDU packets is received while others are discarded; LB, OAM remote loopback is enabled on the port. In this case, all the packets except OAMPDU packets received are returned to their sources along the ways they come.
Loopback Supported	Whether support remote loopback: YES for support and NO for not.
Unidirectional Support	Whether support unidirectional transmission: YES for support and NO for not.
Link Events	Whether support general link events: YES for support and NO for not.
Remote Failure	Whether support severe link events: YES for support and NO for not.
Max_OAMPDU_Size	The maximum length of OAMPDU is supported.
Link Fault	Whether occur a Link Fault event: 0 for no and 1 for yes.
Dying Gasp	Whether occur a Dying Gasp event: 0 for no and 1 for yes.
Critical Event	Whether occur a Critical Event: 0 for no and 1 for yes.

11.25 show ethernet-oam events

Command:

show ethernet-oam events {local | remote} [interface {ethernet | } <IFNAME>]

Function:

Shows the statistic information of link events on specified or all ports with OAM enabled, including general link events and severe link events.

Parameters:

local, show the detailed information of the local events;

remote, show the detailed information of the remote events;

<IFNAME>, the port that the statistic information of OAM link events needs to be shown, the statistic information of OAM link events for all ports will be shown if this parameter is not specified.

Command Mode:

Admin mode

Default:

N/A.

Usage Guide:

N/A.

Example:

Show the statistic information of link events on Ethernet 1/1.

```
Switch#show ethernet-oam events local interface 1/1
```

```
ethernet1/1 link-events :
```

```
OAM_local_errored-symbol-period-events:
```

```
-----  
event time stamp : 3539                errored symbol window(200ms) : 5  
errored symbol low threshold : 1        errored symbol high threshold : none  
errored symbol : 1200120                errored running total : 2302512542  
event running total : 232
```

```
OAM_local_errored-frame-period-events:
```

```
-----  
event time stamp : 3539                errored frame window(200ms) : 50  
errored frame low threshold : 1        errored frame high threshold : none
```

errored frame : 1200120
 event running total : 52

errored running total : 2302512542

OAM_local_errored-frame-events:

 event time stamp : 3539 errored frame window(200ms) : 5
 errored frame low threshold : 1 errored frame high threshold : none
 errored frame : 1200120 errored running total : 2302512542
 event running total : 75

OAM_local_errored-frame-seconds-summary-events:

 event time stamp : 3520 errored frame seconds summary window(200ms) : 300
 errored frame low threshold : 1 errored frame high threshold : none
 errored frame : 1200120 errored running total : 2302512542
 event running total : 232

OAM_local_link-fault : 0

OAM_local_dying gasp : 0

OAM_local_critical event : 0

Field	Description
OAM_local_errored-symbol-period-events	Statistic information of the local errored symbol events
OAM_local_errored-frame-period-events	Statistic information of the local errored frame period events
OAM_local_errored-frame-events	Statistic information of the local errored frame events
OAM_local_errored-frame-seconds-summary-events	Statistic information of the local errored frame seconds events
event time stamp	Time stamp of the event
window	Detection period of the event
low threshold	Low threshold of events detection
high threshold	High threshold of events detection
errored frame	the number of errored frames
errored symbol	the number of errored symbols
errored running total	Total number of errors occurred since the reset of OAM function
event running total	Total number of error events occurred since

	the reset of OAM function
OAM_local_link-fault	The number of the local link-fault faults
OAM_local_dying gasp	The number of the local dying-gasp faults
OAM_local_critical event	The number of the local critical-event faults

11.26 show ethernet-oam link-events configuration

Command:

show ethernet-oam link-events configuration [interface {ethernet | } <IFNAME>]

Function:

Show configuration of link events on specified or all ports with OAM enabled, including detection period and threshold of the events and so on.

Parameters:

<IFNAME>, the port that the statistic information of OAM link events needs to be shown, the statistic information of OAM link events for all ports will be shown if this parameter is not specified.

Command Mode:

Admin mode

Default:

N/A.

Usage Guide:

N/A.

Example:

Show configuration of link events on ethernet 1/1.

```
Switch#show ethernet-oam link-events configuration interface ethernet 1/1
```

Ethernet1/1 link-monitor configuration :

event	high-threshold	low-threshold	window(200ms)
Err-symbol-Period	none	1	2
Err-frame-Period	none	1	10
Err-frame	none	2	5
Err-frame-second-summary	none	2	600

Field	Description
Event	Event type
Err-symbol-Period	Errored symbol event
Err-frame-Period	Errored frame period event
Err-frame	Errored frame event
Err-frame-second-summary	Errored frame seconds event
high-threshold	High threshold
low-threshold	Low threshold
window(200ms)	Detection period, unit is 200ms

Chapter 12 Commands for PORT SECURITY

12.1 clear port-security

Command:

```
clear port-security {all | configured | dynamic | sticky} [[address <mac-addr> | interface <interface-id>] [vlan <vlan-id> ]]
```

Function:

Clear the secure MAC entries for the interfaces.

Parameter:

- all** : All secure MAC entries on the interfaces
- configured** : The configured secure MAC
- dynamic** : The dynamic secure MAC learnt by the interface
- sticky** : The secure MAC of sticky
- mac-addr** : The specified secure MAC address
- interface-id** : The secure MAC entries of the specified interface
- vlan-id** : The specified VLAN

Default:

None.

Command Mode:

Admin mode

Usage Guide:

None.

Example:

Clear all secure MACs on the interface.

```
Switch#clear port-security all
```

12.2 show port-security

Command:

```
show port-security [interface <interface-id>] [address | vlan]
```

Function:

Show port-security configuration.

Parameter:

interface-id : Show port-security configuration of the interface.

address: Show the secure address of the interface.

vlan: Show the maximum number of each VLAN configured on trunk/hybrid interface.

Default:

None.

Command Mode:

Any modes

Usage Guide:

None.

Example:

Show all secure MACs on the interfaces.

```
Switch# show port-security address interface ethernet 1/1
```

12.3 switchport port-security

Command:

switchport port-security
no switchport port-security

Function:

Configure port-security function for the interface, the no command disables port-security.

Parameter:

None.

Default:

Disable.

Command Mode:

Port mode

Usage Guide:

Clear all dynamic MACs after the interface enabled port-security, and all MACs learnt from the interfaces are tagged with FDB_TYPE_PORT_SECURITY_DYNAMIC. After disabling port-security of the interfaces, clear all secure MACs or change them into the dynamic MACs.

Example:

Enable port-security on the interface.
Switch(config-if- ethernet1/1)#switchport port-security

12.4 switchport port-security aging

Command:

switchport port-security aging {static | time <value> | type {absolute | inactivity}}
no switchport port-security violation aging {static | time | type}

Function:

Enable the aging entries of port-security, and specify the aging time and type on the interface.

Parameter:

static : Enable the aging of the static MAC address configured on the specified interface.

time <value> : Specify MAC aging time of the interface, its range from 1 to 1440mins. The default value is 0, that means disable the aging.

type : Specify the aging type

absolute : The expiration of the aging timer on the interface, all secure MACs of the interfaces will get aged and be removed from the MAC table.

inactivity : The expiration of the aging timer on the interface, the entries will get aged without the traffic, the entries are still kept in the aging period with the traffic.

Default:

Do not enable port-security aging, the default aging time is 0.

Aging mode is absolute by default.

The static entries are not aged by default.

Command Mode:

Port mode

Usage Guide:

None.

Example:

Configure the aging time of the secure MAC as 1 second on the interface.

```
Switch (config-if- ethernet1/1)# switchport port-security aging time 1
```

12.5 switchport port-security mac-address

Command:

```
switchport port-security mac-address <mac-address> [vlan <vlan-id>]
```

```
no switchport port-security mac-address <mac-address> [vlan <vlan-id>]
```

Function:

Configure the static secure MAC on the interface, the no command cancels the configuration.

Parameter:

mac-address : Configure the specified MAC address as the static secure MAC.

vlan-id : The specified VLAN of the MAC address, it only takes effect on trunk and hybrid interfaces.

Default:

No secure MAC is bound by the interface.

Command Mode:

Port mode

Usage Guide:

When configuring the static secure MAC, pay attention to the number of the current secure MAC whether exceed the maximum MAC limit allowed by the interface. If exceeding the maximum MAC limit, it will result in violation operation.

Example:

Configure the secure MAC address on the interface.

```
Switch (config-if- ethernet1/1)# switchport port-security mac-address 00-00-00-00-00-01
```

12.6 switchport port-security mac-address sticky

Command:

```
switchport port-security mac-address sticky [mac-address] [vlan <vlan-id>]
```

```
no switchport port-security mac-address sticky [mac-address] [vlan <vlan-id>]
```

Function:

Configure the static secure MAC with the sticky type on the interface, the no command cancels the configured secure MAC.

Parameter:

mac-address : Configure the specified MAC address as the static secure MAC with the sticky type.

vlan-id : The specified VLAN of the MAC address, it only takes effect on trunk and hybrid interfaces.

Default:

No secure MAC is bound by the interface with the sticky type.

Command Mode:

Port mode

Usage Guide:

When configuring the static secure MAC with sticky type, pay attention to the number of the current secure MAC whether exceed the maximum MAC limit allowed by the interface. If exceeding the maximum MAC limit, it will result in violation operation.

Example:

Configure the secure MAC address on the interface.

```
Switch(config-if-ethernet1/1)#switchport port-security mac-address sticky 00-00-00-00-00-01
```

12.7 switchport port-security maximum

Command:

```
switchport port-security maximum <value> [vlan <vlan-list>]
```

```
no switchport port-security maximum <value> [vlan <vlan-list>]
```

Function:

Configure the maximum number of the secure MAC allowed by the interface, if specifying VLAN parameter, it means the maximum number in the configured VLANs. The no command cancels the maximum number of the secure MAC configured by the interface.

Parameter:

value : Configure the maximum number of the secure MAC allowed by the interface, its range between 1 and 128. It is determined by the maximum MAC number of the device.

vlan-id: Configure the maximum value for the specified VLAN, it only takes effect on trunk and hybrid interfaces.

Default:

After enabling port-security, if there is no other configuration, the maximum number of the secure MAC is 1 on the interface. The interface number in VLAN is no limit by default

Command Mode:

Port mode

Usage Guide:

Pay attention to the coupling relation about the number between the interface and VLAN, set the maximum number configured by the interface as the standard firstly.

Example:

Configure the maximum number of the secure MAC on the interface.

```
Switch(config-if- ethernet1/1)# switchport port-security maximum 100
```

12.8 switchport port-security violation

Command:

```
switchport port-security violation {protect | restrict | shutdown}  
no switchport port-security violation
```

Function:

When exceeding the maximum number of the configured MAC addresses, MAC address accessing the interface does not belong to this interface in MAC address table or a MAC address is configured to several interfaces in same VLAN, both of them will violate the security of the MAC address.

Parameter:

protect : Protect mode, it will trigger the action that do not learn the new MAC, drop the package and do not send the warning.

restrict : Restrict mode, it will trigger the action that do not learn the new MAC, drop the package, send snmp trap and record the configuration in syslog.

shutdown : Shutdown mode is the default mode. Under this condition, the interface is disabled directly, send snmp trap and record the configuration in syslog.

Default:

Shutdown.

Command Mode:

Port mode

Usage Guide:

None.

Example:

Configure violation mode as protect for the interface.

```
Switch(config-if-ethernet1/1)#switchport port-security violation protect
```

Chapter 13 Commands for DDM

13.1 clear transceiver threshold-violation

Command:

`clear transceiver threshold-violation [interface ethernet <interface-list>]`

Function:

Clear the threshold violation of the transceiver monitoring.

Parameter:

interface ethernet <interface-list>: The interface list that the threshold violation of the transceiver monitoring needs to be cleared.

Command Mode:

Admin mode

Default:

None.

Usage Guide:

None.

Example:

Clear the threshold violation of the transceiver monitoring on port 21, 25, 26, 28.

```
Switch#clear transceiver threshold-violation interface ethernet 1/21;25-26;28
```

13.2 debug transceiver

Command:

`debug transceiver {on | off}`

Function:

Enable/disable DDM debugging.

Parameter: on/off:

Enable or disable the debugging.

Command Mode:

Admin mode

Default:

Off.

Usage Guide:

Disable the DDM debugging with ctrl+o.

Example:

Enable DDM debugging.

```
Switch#debug transceiver on
```

13.3 show transceiver

Command:

```
show transceiver [interface ethernet <interface-list>] [detail]
```

Function:

Show the monitoring of the transceiver.

Parameter:

interface ethernet <interface-list>: The interface list that the monitoring of the transceiver needs to be shown.

detail : Show the detailed monitoring of the transceiver.

Command Mode:

User mode, admin mode and global mode

Default:

None.

Usage Guide:

Temperature can be accurate to the integer, other values can be accurate to the second bit after the radix point.

When the parameter exceeds the warning threshold, it is shown with 'W+' or 'W-', when the parameter exceeds the alarm threshold, it is shown with 'A+' or 'A-', no tagged parameter is normal.

Example:

Show the brief DDM information of all ports.

```
Switch#show transceiver
```

Interface	Temp (°C)	Voltage (V)	Bias (mA)	RX Power (dBm)	TX Power (dBm)
1/21	33	3.31	6.11	-30.54(A-)	-6.01
1/23	33	5.00 (W+)	6.11	-20.54(W-)	-6.02

13.4 show transceiver threshold-violation

Command:

```
show transceiver threshold-violation [interface ethernet <interface-list>]
```

Function:

Show the transceiver monitoring.

Parameter:

interface ethernet <interface-list>: The interface list that the transceiver monitoring needs to be shown.

Command Mode:

Admin mode and global mode

Default:

None.

Usage Guide:

None.

Example:

Show the transceiver monitoring.

```
Switch(config)#show transceiver threshold-violation interface ethernet 1/21-22
```

```
Ethernet 1/21 transceiver threshold-violation information :
```

```
Transceiver monitor is enabled. Monitor interval is set to 30 minutes.
```

```
The current time is Jan 02 12:30:50 2010.
```

```
The last threshold-violation time is Jan 01 1:30:50 2010.
```

```
Brief alarm information:
```

```
  RX loss of signal
```

```
  RX power low
```

Detail diagnostic and threshold information:

	Diagnostic			Threshold	
	Realtime Value	High Alarm	Low Alarm	High Warn	Low Warn
Temperature (°C)	33	70	0	70	0
Voltage (V)	7.31	10.00	0.00	5.00	0.00
Bias current (mA)	3.11	10.30	0.00	5.00	0.00
RX Power (dBm)	-30.54(A-)	9.00	-25.00 (-34)	9.00	-25.00
TX Power (dBm)	-1.01	9.00	-12.05	9.00	-10.00

Ethernet 1/22 transceiver threshold-violation information:

Transceiver monitor is disabled. Monitor interval is set to 30 minutes.

The last threshold-violation doesn't exist.

13.5 transceiver-monitoring

Command:

transceiver-monitoring {enable | disable}

Function:

Enable/ disable the transceiver monitoring.

Parameter:

enable/ disable: Enable or disable the function.

Command Mode:

Port mode

Default:

Disable.

Usage Guide:

None.

Example:

Enable the transceiver monitoring of ethernet1/1.

```
Switch(config-if-ethernet1/1)#transceiver-monitoring enable
```

13.6 transceiver-monitoring interval

Command:

transceiver-monitoring interval <minutes>
no transceiver-monitoring interval

Function:

Set the interval of the transceiver monitoring. The no command sets the interval to be the default interval of 15 minutes.

Parameter:

<minutes>: The interval of the transceiver monitoring needs to be set.

Command Mode:

Global mode

Default:

15 minutes.

Usage Guide:

None.

Example:

Set the interval of the transceiver monitoring as 1 minute.
Switch(config)#transceiver-monitoring interval 1

13.7 transceiver threshold

Command:

transceiver threshold {default | {temperature | voltage | bias | rx-power | tx-power} {high-alarm | low-alarm | high-warn | low-warn} {<value> | default}}

Function:

Set the threshold defined by the user.

Parameters:

default: Restore the threshold as the default threshold set by the manufacturer. If the monitoring index is not specified, restore all thresholds, if the monitoring index is specified, restore the corresponding threshold only.

temperature : The monitoring index—temperature

voltage : The monitoring index—voltage

bias : The monitoring index—bias current

rx-power : The monitoring index—receiving power

tx-power : The monitoring index—sending power

high-alarm : High-alarm of the monitoring index, namely there is alarm with A+ if exceeding the threshold.

low-alarm : Low-alarm of the monitoring index, namely there is alarm with A- if exceeding the threshold.

high-warn : High-warn of the monitoring index, namely there is warning with W+ if exceeding the threshold.

low-warn : Low-warn of the monitoring index, namely there is warning with W- if exceeding the threshold.

Command Mode:

Port mode

Default:

The threshold is set by the manufacturer.

Usage Guide:

The range of the threshold parameters is shown for each monitoring index in the following:

Temperature: -128.00~128.00 °C

Voltage: 0.00~7.00 V

Bias current: 0.00~140.00 mA

x-power: -50.00~9.00 dBm

tx-power: -50.00~9.00 dBm

The maximum length of the threshold parameter configured by the user is 20 bits. After the user configured a parameter threshold, the threshold set by the manufacturer will be labeled with the bracket when showing the threshold, and decide whether give an alarm according to the user's configuration.

Example:

Configure tx-power threshold of the fiber module, the low-warn threshold is configured as -12 on ethernet1/1.

```
Switch(config-if-ethernet1/1)#transceiver threshold tx-power low-warning -12
```

Chapter 14 Commands for LLDP-MED

14.1 civic location

Command:

```
civic location {dhcp server | switch | endpointDev} <country-code>  
no civic location
```

Function:

Configure device type and country code of the location with Civic Address LCI format and enter Civic Address LCI address mode. The no command cancels all configurations of the location with Civic Address LCI format.

Parameters:

dhcp server: Set device type to be DHCP server

switch: Set device type to be Switch

endpointDev: Set device type to be LLDP-MED Endpoint

country-code: Set country code which consist of 2 letters, such as DE or US, it should accord the country code of ISO 3166 standard.

Default:

No location with Civic Address LCI format is configured on the port.

Command Mode:

Port mode

Usage Guide:

Configure device type and country code of the location with Civic Address LCI format and enter Civic Address LCI address mode to configure the more detailed location.

Example:

Configure device type as switch and country code as US for the location with Civic Address LCI format on Ethernet 19.

```
Switch(Config-If-Ethernet1/19)# civic location switch US
```

```
Switch(Med-Civic)#
```

14.2 {description-language | province-state | city | county | street | locationNum | location | floor | room | postal | otherInfo}

Command:

```
{description-language | province-state | city | county | street | locationNum | location | floor | room | postal | otherInfo} <address>
```

```
no {description-language | province-state | city | county | street | locationNum | location | floor | room | postal | otherInfo}
```

Function:

Configure the detailed location after enter Civic Address LCI address mode of the port.

Parameters:

description-language: language for describing location, such as 'English'

province-state: state, canton, region, province prefecture, and so on, such as 'clara'

city: city, such as 'New York'

county: county, parish, such as 'santa clara'

street: street, such as '1301 Shoreway Road'

locationNum: house number, such as '9'

location: name and occupant of a location, such as 'Carrillo's Holiday Market'

floor: floor number, such as '13'

room: room number, such as '1308'

postal: postal/zip code, such as '10027-1234'

otherInfo: Additional location information, such as 'South Wing'

address: detailed address information, it cannot exceed 250 characters

Default:

No detailed information of the location with Civic Address LCI is configured on the port.

Command Mode:

Civic Address LCI address mode

Usage Guide:

With this command, configure the detailed information of the location with Civic Address LCI on the port, it is able to configure 10 kinds of address types at most.

Example:

Configure the detailed location information in Civic Address LCI address mode.

```
Switch(Med-Civic)# city Beijing
```

```
Switch(Med-Civic)# street shangdi
```

14.3 ecs location

Command:

```
ecs location <tel-number>  
no ecs location
```

Function:

Configure the location with ECS ELIN format on the port, the no command cancels the configured location.

Parameter:

<tel-number>: location characters with ECS ELIN format, such as emergent telephone number, it is character string with the length between 10 and 25.

Default:

No location with ECS ELIN format is configured.

Command Mode:

Port mode

Usage Guide:

Length range of the location character string between 10 and 25 with ECS ELIN format.

Example:

```
Configure the location of ECS ELIN format on port 19.  
Switch(Config-If-Ethernet1/19)# ecs location 880-445-3381
```

14.4 lldp med fast count

Command:

```
lldp med fast count <value>  
no lldp med fast count
```

Function:

When the fast LLDP-MED startup mechanism is enabled, it needs to fast send LLDP packets with LLDP-MED TLV, this command sets the value of sending the packets fast, the no command restores the default value.

Parameter:

value: The number of sending the packets fast, its range from 1 to 10, unit is entries.

Default:

4.

Command Mode:

Global mode

Usage Guide:

With this command, set the number for sending the packets fast.

Example:

```
Switch(config)#lldp med fast count 5
```

14.5 lldp med trap

Command:

```
lldp med trap {enable | disable}
```

Function:

Configure the specified port to enable or disable the function for sending TRAP message when LLDP-MED network topology is changed.

Parameters:

enable: Enable LLDP-MED TRAP for the port

disable: Disable LLDP-MED TRAP for the port

Default:

Disable LLDP-MED TRAP.

Command Mode:

Port mode

Usage Guide:

Enable or disable LLDP-MED TRAP of the port.

Example:

Enable LLDP-MED TRAP of the port 19.

```
Switch(Config-If-Ethernet1/19)# lldp med trap enable
```

14.6 lldp transmit med tlv all

Command:

```
lldp transmit med tlv all
```

```
no lldp transmit med tlv all
```

Function:

Configure the specified port to send all LLDP-MED TLVs, the no command disables the function.

Parameter:

None.

Default:

Port does not enable the function for Sending LLDP-MED TLV.

Command Mode:

Port mode

Usage Guide:

After configuring this command, if the port is able to send LLDP-MED TLV, the sent LLDP packets with LLDP-MED TLV supported by all switches. However, LLDP packets sent by the port without any LLDP-MED TLV after the switch configured the corresponding no command.

Example:

Port 19 enables the function for sending LLDP-MED TLV.

```
Switch(Config-If-Ethernet1/19)# lldp transmit med tlv all
```

14.7 Ildp transmit med tlv capability

Command:

Ildp transmit med tlv capability
no Ildp transmit med tlv capability

Function:

Configure the specified port to send LLDP-MED Capability TLV. The no command disables the capability.

Parameter:

None.

Default:

The function is disabled for sending LLDP-MED Capability TLV.

Command Mode:

Port mode

Usage Guide:

After configuring this command, if the port is able to send LLDP-MED TLV, the sent LLDP packets with LLDP-MED Capability TLV. However, LLDP packets sent by the port without LLDP-MED Capability TLV after the switch configured the corresponding no command. Note: LLDP-MED Capability TLV is the important LLDP-MED TLV, if do not configure the port to send LLDP-MED Capability TLV firstly, other LLDP-MED TLV will not be sent.

Example:

Port 19 enables the function for sending LLDP-MED Capability TLV.
Switch(Config-If-Ethernet1/19)# Ildp transmit med tlv capability

14.8 Ildp transmit med tlv extendPoe

Command:

Ildp transmit med tlv extendPoe
no Ildp transmit med tlv extendPoe

Function:

Configure the specified port to send LLDP-MED Extended Power-Via-MDI TLV. The no command disables the capability.

Parameter:

None.

Default:

The function is disabled for sending LLDP-MED Extended Power-Via-MDI TLV.

Command Mode:

Port mode

Usage Guide:

After configuring this command, if the port is able to send LLDP-MED TLV, LLDP packets with LLDP-MED Extended Power-Via-MDI TLV sent by the port. However, LLDP packets without LLDP-MED Extended Power-Via-MDI TLV sent by the port after the switch configured the corresponding no command. Note: LLDP-MED Capability TLV sent by the port must be configured before sending LLDP-MED Extended Power-Via-MDI TLV, or else the configuration cannot be successful. If the device does not support PoE or PoE function of the port is disabled, although configuring this command, LLDP-MED Extended Power-Via-MDI TLV will not be sent.

Example:

Port 19 enables the function for sending LLDP-MED Extended Power-Via-MDI TLV.

```
Switch(Config-If-Ethernet1/19)# lldp transmit med tlv extendPoe
```

14.9 lldp transmit med tlv inventory

Command:

```
lldp transmit med tlv inventory
```

```
no lldp transmit med tlv inventory
```

Function:

Configure the specified port to send LLDP-MED Inventory Management TLVs aggregation, TLVs aggregation includes 7 TLVs, they are Hardware Revision TLV, Firmware Revision TLV, Software Revision TLV, Serial Number TLV, Manufacturer Name TLV, Model Name TLV, Asset ID TLV. The no command disables the capability.

Parameter:

None.

Default:

The function is disabled for sending LLDP-MED Inventory Management TLVs.

Command Mode:

Port mode

Usage Guide:

After configuring this command, if the port is able to send LLDP-MED TLV, LLDP packets with LLDP-MED Inventory Management TLVs sent by the port. However, LLDP packets without LLDP-MED Inventory Management TLVs sent by the port after the switch configured the corresponding no command. Note: LLDP-MED Capability TLV sent by the port must be configured before sending LLDP-MED Inventory Management TLVs, or else the configuration cannot be successful.

Example:

Port 19 enables the function for sending LLDP-MED Inventory Management TLVs.

```
Switch(Config-If-Ethernet1/19)# lldp transmit med tlv inventory
```

14.10 lldp transmit med tlv networkPolicy

Command:

lldp transmit med tlv networkPolicy

no lldp transmit med tlv networkPolicy

Function:

Configure the specified port to send LLDP-MED Network Policy TLV. The no command disables the capability.

Parameter:

None.

Default:

The function is disabled for sending LLDP-MED Network Policy TLV.

Command Mode:

Port mode

Usage Guide:

After configuring this command, if the port is able to send LLDP-MED TLV, LLDP packets with LLDP-MED Network Policy TLV sent by the port. However, LLDP packets without LLDP-MED Network Policy TLV sent by the port after the switch configured the corresponding no command. Note: LLDP-MED Capability TLV sent by the port must be configured before sending LLDP-MED Network Policy TLV, or else the configuration cannot be successful.

Example:

Port 19 enables the function for sending LLDP-MED Network Policy TLV.

```
Switch(Config-If-Ethernet1/19)# lldp transmit med tlv networkPolicy
```

14.11 network policy

Command:

```
network policy {voice | voice-signaling | guest-voice | guest-voice-signaling | softphone-voice |  
video-conferencing | streaming-video | video-signaling} [status {enable | disable}] [tag {tagged | untagged}]  
[vid {<vlan-id> | dot1p}] [cos <cos-value>] [dscp <dscp-value> ]  
no network policy {voice | voice-signaling | guest-voice | guest-voice-signaling | softphone-voice |  
video-conferencing | streaming- video | video-signaling}
```

Function:

Configure the network policy of the port, including VLAN ID, the supported application (such as voice and video), the application priority and the used policy, and so on.

Parameters:

voice, voice-signaling, guest-voice, guest-voice-signaling, softphone-voice, video-conferencing, streaming-video and video-signaling: the application types are supported by the port.

status: Whether the network policy is usable.

enable: Network Policy of the specified application type has been defined, enable is the default value of the network policy.

disable: Network Policy of the specified application type is unknown, the fields (such as VLAN ID, L2 priority and DSCP) are ignored, network connection device will not send TLV of the specified application type.

tag: Configure the specified application to uses **tagged** or **untagged** VLAN method.

tagged: Configure the flow of the specified application to use the tagged vlan method, here, the fields (such as VLAN ID, Layer2 priority and DSCP value) are take effect.

untagged: Configure the flow without tag for the specified application, the fields (such as VLAN ID, Layer2 priority) are ignored, only DSCP value field takes effect. Untagged is the default value of VLAN method.

vid: Configure VLAN ID that the specified application belongs to. When the peer sends the flow of the specified application, it will tag the notified VLAN ID, or else the vlan-id value is 1.

vlan-id: Configure the value of VLAN ID, its range from 1 to 4094.

dot1p: Configure the specified application to tag the flow by using 802.1p priority, at the same time, use vlan 0 to load the flow.

cos: Configure the priority of Ethernet frame for VLAN.

cos-value: Configure the value of Ethernet frame priority for VLAN, its range from 0 to 7, the default value is 5.

dscp: Configure DSCP of VLAN.

dscp-value: DSCP value input by the user, its range from 0 to 63, the default value is 46.

Default:

No network policy is configured on the port.

Command Mode:

Port mode

Usage Guide:

User is able to configure the network policy of many kinds on a port, but their application types cannot repeat, and a kind of network policy corresponds to a LLDP-MED network policy TLV. If user configures multi-policy for a port, it will send multi-LLDP-MED network policy TLV to a LLDP packet. If user does not configure any network policy, no LLDP-MED network policy TLV is sent to LLDP packet.

Example:

Configure the network policy with the application type of voice on port 19.

```
Switch(Config-If-Ethernet1/19)# network policy voice tag tagged vid 2 cos 6 dscp 23
```

14.12 show lldp

Command:

```
show lldp
```

Function:

Show the global LLDP and LLDP-MED configuration.

Parameter:

None.

Default:

None.

Command Mode:

Admin mode

Usage Guide:

None.

Example:

Show the global LLDP and LLDP-MED configuration.

```
Switch#show lldp
```

```
-----LLDP GLOBAL INFORMATIONS-----
```

```
LLDP has been enabled globally.
```

```
LLDP enabled port : Ethernet1/19
```

```
LLDP interval :5
```

```
LLDP txTTL :20
```

```
LLDP NotificationInterval :5
```

```
LLDP txDelay :1
```

```
LLDP-MED FastStart Repeat Count :4
```

```
-----END-----
```

14.13 show lldp [interface ethernet <IFNAME>]

Command:

```
show lldp [interface ethernet <IFNAME>]
```

Function:

Show LLDP and LLDP-MED configurations on the current port.

Parameter:

[interface ethernet <IFNAME>]: Port name

Command Mode:

Admin mode

Default:

None.

Usage Guide:

None.

Example:

Show LLDP and LLDP-MED configuration of the port 19.

```
Switch#show lldp interface ethernet 1/19
```

Port name :Ethernet1/19

LLDP Agent Adminstatus : Both

LLDP Operation TLV : default

LLDP Trap Status : disable

LLDP maxRemote :100

LLDP Overflow handle : discard

LLDP interface remote status : Free

MED Optional TLV : capabilities networkPolicy location power inventory

MED Trap Status:Enable

MED TLV Transmit Status:Disable

MED Fast Transmit Status:Disable

14.14 show lldp neighbors

Command:

show lldp neighbors [interface ethernet <IFNAME>]

Function:

Show LLDP and LLDP-MED information of the neighbors for the port.

Parameter:

None.

Default:

None.

Command Mode:

Admin mode

Usage Guide:

With this command, checking LLDP and LLDP-MED information of the neighbors after the port received LLDP packets sent by the neighbors.

Example:

Show the neighbor information on port 1.

Switch #show lldp neighbors interface ethernet 1/1

Port name : Ethernet1/1
Port Remote Counter : 1
TimeMark :20
ChassisIdSubtype :4
ChassisId :00-30-4f-00-00-02
PortIdSubtype :Local
PortId :3
PortDesc :Ethernet1/1
SysName :switch
SysDesc :switch Device, Compiled Feb 12 17:39:53 2011
SoftWare Version 6.2.30.0
BootRom Version 4.0.1
HardWare Version
Device serial number
Copyright (C) 2001-2011 by Vendor.
All rights reserved

Chapter 15 Commands for bpdu-tunnel

15.1 bpdu-tunnel dmac

Command:

```
bpdu-tunnel dmac <mac>  
no bpdu-tunnel dmac
```

Function:

Configure the tunnel MAC address globally, the no command restores the default tunnel MAC address.

Parameter:

<mac>: MAC address

Command Mode:

Global mode

Default:

Default MAC address.

Usage Guide:

Configure the tunnel MAC address globally, use the configured MAC (it must be multicast MAC address) to forward the specified protocol across the tunnel.

Example:

Configure the tunnel MAC address.

```
Switch(Config)# bpdu-tunnel dmac 01-02-03-04-05-06
```

15.2 bpdu-tunnel stp

Command:

```
bpdu-tunnel stp
```

```
no bpdu-tunnel stp
```

Function:

Configure the specified port to forward stp packets across the tunnel, the no command cancels the operation.

Parameter:

None.

Command Mode:

Port mode

Default:

Port does not forward any protocol packets across the tunnel.

Usage Guide:

Disable stp function on the port before configuring this command.

Example:

Configure Ethernet 4/5 to forward stp packets across the tunnel.

```
Switch(Config)#in Ethernet 4/5
```

```
Switch(Config-if-ethernet 4/5)#bpdu-tunnel stp
```

15.3 bpdu-tunnel gvrp

Command:

```
bpdu-tunnel gvrp
no bpdu-tunnel gvrp
```

Function:

Configure the specified port to forward gvrp packets across the tunnel, the no command cancels the operation.

Parameter:

None.

Command Mode:

Port mode

Default:

Port does not forward any protocol packets across the tunnel.

Usage Guide:

Disable gvrp function on the port before configuring this command.

Example:

Configure Ethernet 4/5 to forward gvrp packets across the tunnel.

```
Switch(Config)#in ethernet 4/5
```

```
Switch(Config-if-ethernet 4/5)#bpdu-tunnel gvrp
```

15.4 bpdu-tunnel uldp

Command:

```
bpdu-tunnel uldp
no bpdu-tunnel uldp
```

Function:

Configure the specified port to forward uldp packets across the tunnel, the no command cancels the operation.

Parameter:

None.

Command Mode:

Port mode

Default:

Port does not forward any protocol packets across the tunnel.

Usage Guide:

Disable uldp function on the port before configuring this command.

Example:

Configure Ethernet 4/5 to forward uldp packets across the tunnel.

```
Switch(Config)#in ethernet 4/5
```

```
Switch(Config-if-ethernet 4/5)#bpd-tunnel uldp
```

15.5 bpd-tunnel lacp

Command:

```
bpd-tunnel lacp
```

```
no bpd-tunnel lacp
```

Function:

Configure the specified port to forward lacp packets across the tunnel, the no command cancels the operation.

Parameter:

None.

Command Mode:

Port mode

Default:

Port does not forward any protocol packets across the tunnel.

Usage Guide:

Disable lacp function on the port before configuring this command.

Example:

Configure Ethernet 4/5 to forward lacp packets across the tunnel.

```
Switch(Config)#in ethernet 4/5
```

```
Switch(Config-if-ethernet 4/5)#bpdu-tunnel lacp
```

15.6 bpdu-tunnel dot1x

Command:

```
bpdu-tunnel dot1x
```

```
no bpdu-tunnel dot1x
```

Function:

Configure the specified port to forward dot1x packets across the tunnel, the no command cancels the operation.

Parameter:

None.

Command Mode:

Port mode

Default:

Port does not forward any protocol packets across the tunnel.

Usage Guide:

Disable dot1x function on the port before configuring this command.

Example:

Configure Ethernet 4/5 to forward dot1x packets across the tunnel.

```
Switch(Config)#in ethernet 4/5
```

```
Switch(Config-if-ethernet 4/5)#bpdu-tunnel dot1x
```

Chapter 16 Commands for EEE Energy-saving

16.1 eee enable

Command:

eee enable
no eee enable

Function:

Configure the port to enable eee energy-saving function; the no command deletes it.

Parameters:

None.

Command Mode:

Port Mode.

Default:

None.

Usage Guide:

It supports that configure EEE energy-saving function for the appointed port. There is not the EEE energy-saving function on port as default. After configuring the port to enable EEE energy-saving function, the port will enter the energy-saving state if stop to send packets to the port, the state of port is down. When sending packets to the port, the mode will changed from power saving mode to normal mode.

Example:

Enable EEE energy-saving function:
Switch(config-if-ethernet1/1)#eee enable

Chapter 17 VLAN Configuration

17.1 Commands for VLAN Configuration

17.1.1 debug gvrp event

Command:

```
debug gvrp event interface (ethernet | port-channel ) IFNAME  
no debug gvrp event interface (ethernet | port-channel ) IFNAME
```

Function:

Enable/disable GVRP event debugging including the transfer of state machine and the expiration of timer.

Parameters:

ethernet, physical port
port-channel, aggregate port
IFNAME, port name

Command Mode:

Admin mode

Default:

GVRP event debugging is disabled.

Usage Guide:

Use this command to enable GVRP event debugging.

Example:

```
Show GVRP event debugging.  
Switch(config)#debug gvrp event interface ethernet 1/1  
%Jan 16 02:25:14 2006 GVRP EVENT: LO -> VO › interface ethernet 1/1, vlan 100  
%Jan 16 02:35:15 2006 GVRP EVENT: join timer expire › interface ethernet 1/1
```

17.1.2 debug gvrp packet

Command:

```
debug gvrp packet (receive | send) interface (ethernet | port-channel |) IFNAME
no debug gvrp packet (receive | send) interface (ethernet | port-channel |) IFNAME
```

Function:

Enable/disable GVRP packet debugging.

Parameters:

receive, enabling the debugging of receiving GVRP packet
send, enabling the debugging of sending GVRP packet
ethernet, physical port
port-channel, aggregate port
IFNAME, port name

Command Mode:

Admin mode

Default:

GVRP packet debugging is disabled.

Usage Guide:

Use this command to enable the debugging of GVRP packet.

Example:

Show information of sending and receiving GVRP packet.

```
Switch(config)#debug gvrp packet receive interface ethernet 1/1
```

```
Receive packet, smac 00-21-27-aa-0f-46, dmac 01-80-C2-00-00-21,
```

```
length 90, protocol ID:1,attribute type:0x01,
```

Attribute Index	Length	Event	Value
1	10	joinIn	100
2	10	joinEmpty	140
3	10	leaveIn	150
4	10	leaveEmpty	180

17.1.3 dot1q-tunnel enable

Command:

```
dot1q-tunnel enable
no dot1q-tunnel enable
```

Function:

Set the access port of the switch to dot1q-tunnel mode; the no command restores to default.

Parameter:

None.

Command Mode:

Port Mode.

Default:

Dot1q-tunnel function disabled on the port by default.

Usage Guide:

After enabling dot1q-tunnel on the port, data packets without VLAN tag (referred to as tag) will be packed with a tag when entering through the port; those with tag will be packed with an external tag. The TPID in the tag is the global configuration TPID. its default value is 0x8100, and the VLAN ID is the VLAN ID the port belongs to. Data packets with double tags will be forwarded according to MAC address and external tag, till the external tag is removed when transmitted outside from the access port. Since the length of the data packet may be oversized when packed with external tag, it is recommended to use this command associating the Jumbo function. Normally this command is used on access ports. This command can not be used when vlan-translation is enabled.

Example:

Join port1 into VLAN3, enable dot1q-tunnel function.

```
Switch(config)#vlan 3
Switch(Config-Vlan3)#switchport interface ethernet 1/1
Switch(Config-Vlan3)#exit
Switch(config)#interface ethernet 1/1
Switch(Config-If-Ethernet1/1)# dot1q-tunnel enable
Switch(Config-If-Ethernet1/1)# exit
Switch(config)#
```

17.1.4 dot1q-tunnel selective enable

Command:

```
dot1q-tunnel selective enable
no dot1q-tunnel selective enable
```

Function:

Specify a port to enable selective QinQ, the no command restores the default value.

Parameter:

None.

Command Mode:

Port mode

Default:

Do not enable selective QinQ.

Usage Guide:

Enable selective QinQ command should associates with hybrid mode, and it should not be used with dot1q-tunnel enable synchronously.

Example:

```
Enable dot1q-tunnel selective enable of port1.
Switch#config
Switch(config)#interface ethernet 1/1
Switch(Config-If-Ethernet1/1)#dot1q-tunnel selective enable
```

17.1.5 dot1q-tunnel selective s-vlan

Command:

```
dot1q-tunnel selective s-vlan <s-vlan> c-vlan <c-vid-list>
no dot1q-tunnel selective s-vlan <s-vlan> c-vlan <c-vid-list>
```

Function:

Add the mapping relation between user's VLAN ID list and SP VLAN ID for selective QinQ, the no command deletes the mapping.

Parameters:

s-vlan is SP VLAN ID, c-vid-list is the range of user's VLAN ID.

Command Mode:

Port mode

Default:

There is no mapping relation.

Usage Guide:

This command is used to configure the mapping relation for selective QinQ. If packets match the mapping relation, they will be tagged with SP vlan tag as the outer VLAN tag. If the c-vlan value configured by user is a range, 8 ranges are supported by per port. If it is a single value, it can be configured more than one.

Example:

Packets of VLAN 100 through VLAN 200 are tagged with the tag of VLAN 1000 as the outer VLAN tag on Ethernet1/1.

```
Switch#config
```

```
Switch(config)#interface ethernet 1/1
```

```
Switch(Config-If-Ethernet1/1)# dot1q-tunnel selective s-vlan 1000 c-vlan 100-200
```

```
Switch(Config-If-Ethernet1/1)# dot1q-tunnel selective enable
```

```
Switch(Config-If-Ethernet1/1)#exit
```

```
Switch(config)#
```

17.1.6 dot1q-tunnel tpid

Command:

```
dot1q-tunnel tpid {0x8100|0x9100|0x9200| <1-65535> }
```

Function:

Configure the global protocol type (TPID) of the switch.

Parameter:

None.

Command Mode:

Global Mode.

Default:

TPID on global is defaulted at 0x8100.

Usage Guide:

This function is to facilitate internetworking with equipments of other manufacturers. If the equipment connected with the switch trunk port sends data packet with a TPID of 0x9100, the global TPID will be set to 0x9100, this way switch will receive and process data packets normally. IF the TPID is not the default value 0x8100, it requires that there must be one port enable qinq function at least.

Example:

Set the switch TPID to be 0x9100.

```
Switch(config)#dot1q-tunnel tpid 0x9100
```

```
Switch(config)#
```

17.1.7 garp timer join

Command:

```
garp timer join <200-500>
```

Function:

Set the value of garp join timer, note that the value of join timer must be less than half leave timer.

Parameters:

<200-500>, the value of timer in millisecond

Command Mode:

Global mode

Default:

200 ms.

Usage Guide:

Check whether the value satisfy the range. If so, modify the value of garp timer to the specified value, otherwise return a configuration error.

Example:

Set the value of garp join timer as 200ms.

```
Switch(config)#garp timer join 200
```

17.1.8 garp timer leave

Command:

`garp timer leave <500-1200>`

Function:

Set the value of garp leave timer, note that the value of leave timer must be double of join timer and less than leaveAll timer.

Parameters:

<500-1200>, the value of timer in millisecond

Command Mode:

Global mode

Default:

600 ms.

Usage Guide:

Check whether the value satisfy the range. If so, modify the value of garp timer to the specified value, otherwise return a configuration error.

Example:

Set the value of garp leave timer as 600ms.

```
Switch(config)#garp timer leave 600
```

17.1.9 garp timer leaveAll

Command:

`garp timer leaveall <5000-60000>`

Function:

Set the value of garp leaveAll timer, note that the value of leaveAll timer must be larger than leave timer.

Parameters:

<5000-60000>, the value of timer in millisecond

Command Mode:

Global mode

Default:

10000 ms.

Usage Guide:

Check whether the value satisfy the range. If so, modify the value of garp leaveAll timer to the specified value, otherwise return a configuration error.

Example:

Set the value of garp leaveAll as 20000ms.

```
Switch(config)#garp timer leaveall 20000
```

17.1.10 gvrp (Global)

Command:

```
gvrp  
no gvrp
```

Function:

Enable/disable GVRP function globally.

Parameters:

None.

Command Mode:

Global mode

Default:

Disabled.

Usage Guide:

Enable GVRP function globally and only in this way GVRP module can work normally.

Example:

Enable GVRP function globally.

```
Switch(config)#gvrp
```

17.1.11 gvrp (Port)

Command:

gvrp
no gvrp

Function:

Enable/disable GVRP function on port. Notice: although GVRP can be enabled on port when GVRP is not enabled globally, it will not take effect until global GVRP is enabled.

Parameters:

None

Command Mode:

Port mode

Default:

Disabled

Usage Guide:

GVRP function can only be enabled on trunk and hybrid ports, and enabling GVRP will return an error on access port. After GVRP enabled on port, this port will be added to GVRP (i.e. adding corresponding state machine to GVRP of the port).

Example:

Enable GVRP of port.
Switch(config-if-ethernet1/1)#gvrp

17.1.12 no garp timer

Command:

no garp timer (join | leave | leaveall)

Function:

Restore garp join | leave | leaveAll timer to the default value.

Parameters:

join, join timer
leave, leave timer
leaveAll, leaveAll timer

Command Mode:

Global mode

Default:

200 | 600 | 10000 milliseconds for join | leave | leaveall timer respectively.

Usage Guide:

Check whether the default value satisfy the range. If so, modify the value of garp join | leave | leaveAll timer to the default value, otherwise return a configuration error.

Example:

Restore garp timer to the default value.
Switch(config)#no garp timer leaveall

17.1.13 name

Command:

name <vlan-name>
no name

Function:

Specify a name, a descriptive string, for the VLAN; the no operation of the command will delete the name of the VLAN.

Parameters:

<vlan-name> is the specified name string.

Command Mode:

VLAN Configuration Mode.

Default:

The default VLAN name is vlanXXX, where xxx is VID.

Usage Guide:

The switch can specify names for different VLANs, making it easier for users to identify and manage VLANs.

Examples:

Specify the name of VLAN100 as TestVlan.

```
Switch(Config-Vlan100)#name TestVlan
```

17.1.14 private-vlan

Command:

```
private-vlan {primary | isolated | community}
```

```
no private-vlan
```

Function:

Configure current VLAN to Private VLAN. The no command cancels the Private VLAN configuration.

Parameter:

primary set current VLAN to Primary VLAN, **isolated** set current VLAN to Isolated VLAN, **community** set current VLAN to Community VLAN.

Command Mode:

VLAN mode

Default:

Private VLAN is not configured by default.

Usage Guide:

There are three Private VLANs: **Primary** VLAN, **Isolated** VLAN and **Community** VLAN. Ports in Primary there are three Private VLANs: Primary VLAN, Isolated VLAN and Community VLAN can communicate with ports of Isolated VLAN and Community VLAN related to this Primary VLAN; Ports in Isolated VLAN are isolated between each other and only communicate with ports in Primary VLAN they related to; ports in Community VLAN can communicate both with each other and with Primary VLAN ports they related to; there is no communication between ports in Community VLAN and port in Isolated VLAN.

Only VLANs containing empty Ethernet ports can be set to Private VLAN, and only the Private VLANs configured with associated private relationships can set the Access Ethernet ports their member ports. Normal VLAN will clear its Ethernet ports when set to Private VLAN.

It is to be noted Private VLAN messages will not be transmitted by GVRP.

Example:

Set VLAN100, 200, 300 to private vlans, with respectively primary, Isolated, Community types.

```
Switch(config)#vlan 100
```

```
Switch(Config-Vlan100)#private-vlan primary
```

Note:This will remove all the ports from vlan 100

```
Switch(Config-Vlan100)#exit
```

```
Switch(config)#vlan 200
```

```
Switch(Config-Vlan200)#private-vlan isolated
```

Note:This will remove all the ports from vlan 200

```
Switch(Config-Vlan200)#exit
```

```
Switch(config)#vlan 300
```

```
Switch(Config-Vlan300)#private-vlan community
```

Note:This will remove all the ports from vlan 300

```
Switch(Config-Vlan300)#exit
```

17.1.15 private-vlan association

Command:

```
private-vlan association <secondary-vlan-list>
```

```
no private-vlan association
```

Function:

Set Private VLAN association; the no command cancels Private VLAN association.

Parameter:

<secondary-vlan-list> Sets Secondary VLAN list which is associated to Primary VLAN. There are two types of Secondary VLAN: Isolated VLAN and Community VLAN. Users can set multiple Secondary VLANs by ','.

Command mode:

VLAN Mode.

Default:

There is no Private VLAN association by default.

Usage Guide:

This command can only be used for Private VLAN. The ports in Secondary VLANs which are associated to Primary VLAN can communicate to the ports in Primary VLAN.

Before setting Private VLAN association, three types of Private VLANs should have no member ports; the Private VLAN with Private VLAN association can't be deleted. When users delete Private VLAN association, all the member ports in the Private VLANs whose association is deleted are removed from the Private VLANs.

Example:

Associate Isolated VLAN200 and Community VLAN300 to Primary VLAN100.

```
Switch(Config-Vlan100)#private-vlan association 200;300
```

17.1.16 show dot1q-tunnel

Command:

```
show dot1q-tunnel
```

Function:

Display the information of all the ports at dot1q-tunnel state.

Parameter:

None.

Command Mode:

Admin and Configuration Mode.

Usage Guide:

This command is used for displaying the information of the ports at dot1q-tunnel state.

Example:

Display current dot1q-tunnel state.

```
Switch#show dot1q-tunnel
```

```
Interface Ethernet1/1:
```

```
dot1q-tunnel is enable
```

```
Interface Ethernet1/3:
```

```
dot1q-tunnel is enable
```

17.1.17 show garp timer

Command:

show garp timer (join | leave | leaveall)

Function:

Show the value of each timer. Note that the value is not the remaining time to run the timer but the initial value when enabling the timer.

Parameters:

join, join timer

leave, leave timer

leaveAll, leaveAll timer

Command Mode:

Admin mode

Default:

200|600|10000 milliseconds for join | leave | leaveAll timer respectively.

Usage Guide:

Show the corresponding value of the timer specified in the command.

Example:

Show the value of all garp timers currently.

```
Switch#show garp timer join
```

```
Garp join timer's value is 200(ms)
```

17.1.18 show gvrp fsm information

Command:

show gvrp fsm information interface (ethernet | port-channel) IFNAME

Function:

Show the current state of all registered machines and request state machines on specified or all ports.

Parameters:

ethernet, physical port
 port-channel, aggregate port
 IFNAME, port name

Command Mode:

Admin mode

Default:

MT for registered machine and VO for request state machine.

Usage Guide:

Show the corresponding state of all registered machines and request state machines.

Example:

Show the state of all state machines.

```
Switch#show gvrp fsm information interface ethernet 1/1
```

VA : Very anxious Active member , AA : Anxious Active member , QA : Quiet Active member

VP : Very anxious Passive member , AP : Anxious Passive member , QP : Quiet Passive member

VO : Very anxious Observer , AO : Anxious Observer , QO : Quiet Observer

LA : Leaving Active member , LO : leaving Observer

Interface ethernet 1/1 gvrp fsm information:

Index	VLANID	Applicant	Registrar
----	-----	-----	-----
1	100	VO	LV
2	300	VP	IN

17.1.19 show gvrp leaveAll fsm information

Command:

```
show gvrp leaveall fsm information interface (ethernet | port-channel) IFNAME
```

Function:

Show the state of leaveAll state machine on specified or all ports.

Parameters:

ethernet, physical port
port-channel, aggregate port
IFNAME, port name

Command Mode:

Admin mode

Default:

Passive.

Usage Guide:

Check the state of leaveAll state machine.

Example:

Show the state of leaveAll state machine on port.
Switch#show gvrp leaveall fsm information interface ethernet 1/1
Interface leaveAll fsm
----- -----
Ethernet1/1 passive

17.1.20 show gvrp leavetimer running information

Command:

```
show gvrp leavetimer running information (vlan <1-4094> |) interface (Ethernet | port-channel |) IFNAME
```

Function:

Show running of all leavetimer on current port.

Parameters:

<1-4094>, VLAN tag
Ethernet, physical port
port-channel, aggregate port
IFNAME, port name

Command Mode:

Admin mode

Default:

leavetimer is disabled.

Usage Guide:

Show running state and expiration time of each leave timer.

Example:

Show running state and expiration time of each leave timer on current port.

```
Switch#show gvrp leavetimer running information interface ethernet 1/1
```

VLANID	running state	expired time
-----	-----	-----
100	UP	0.2 s
300	DOWN	non

17.1.21 show gvrp port-member

Command:

```
show gvrp (active) port-member
```

Function:

Shows all ports with GVRP enabled. "active" means the port is in active state with GVRP enabled.

Parameters:

active means the port is in active state

Command Mode:

Admin mode

Default:

GVRP is disabled on port.

Usage Guide:

Show all ports (enable GVRP) saved in GVRP.

Example:

Show all ports with GVRP enabled.

```
Switch#show gvrp port member
```

Ports which were enabled gvrp included :

```
Ethernet1/3 (T)    Ethernet1/4 (T)
```

```
Ethernet1/5 (T)    Ethernet1/6 (T)
```

```
Ethernet1/7 (T)    Ethernet1/8 (T)
```

```
Ethernet1/9 (T)    Ethernet1/10 (T)
```

17.1.22 show gvrp port registered vlan

Command:

```
show gvrp port (dynamic | static |) registered vlan interface (Ethernet | port-channel |) IFNAME
```

Function:

Show the dynamic or static registration VLANs on current port.

Parameters:

dynamic, dynamic registration

static, static registration

Ethernet, physical port

port-channel, aggregate port

IFNAME, port name

Command Mode:

Admin mode

Default:

No dynamic or static registration VLANs on port.

Usage Guide:

Show the corresponding VLANs of the registered machines by dynamic or static registration.

Example:

Show all dynamic or static registration VLANs on current port.

```
Switch#show gvrp port registered vlan interface ethernet 1/1
```

Current port dynamic registered vlan included :

```
Vlan10    vlan20
```

```
Vlan40    vlan60
```

Current port static registered vlan included :

```
Vlan10    vlan30
```

```
Vlan40    vlan200
```

17.1.23 show gvrp timer running information

Command:

```
show gvrp timer (join | leaveall) running information interface (ethernet | port-channel ) IFNAME
```

Function:

Show running of all join|leaveAll timer on current port.

Parameters:

join, join timer

leaveall, leaveAll timer

ethernet, physical port

port-channel, aggregate port

IFNAME, port name

Command Mode:

Admin mode

Default:

Join timer is disabled and leaveAll timer is enabled.

Usage Guide:

Check running state of join|leaveAll timer on port.

Example:

Show running state and expiration time of each timer.

```
Switch(config)#show gvrp timer join running information interface ethernet 1/1
```

Current port's jointimer running state is: UP

Current port's jointimer expired time is: 0.2 s

17.1.24 show gvrp vlan registered port

Command:

```
show gvrp vlan <1-4094> registered port
```

Function:

Show the ports with specified VLAN registered.

Parameters:

<1-4094>: VLAN tag

Command Mode:

Admin mode

Default:

No ports with specified VLAN registered.

Usage Guide:

None.

Example:

Show all ports with current VLAN registered.

```
Switch#show gvrp vlan 100 registered port
```

```
Ethernet1/3 (T)   Ethernet1/4 (T)
```

```
Ethernet1/5 (T)   Ethernet1/6 (T)
```

```
Ethernet1/7 (T)   Ethernet1/8 (T)
```

```
Ethernet1/9 (T)   Ethernet1/10 (T)
```

17.1.25 show vlan

Command:

```
show vlan [brief | summary] [id <vlan-id>] [name <vlan-name>] [internal usage [id <vlan-id> | name <vlan-name>]]
```

Function:

Display detailed information for all VLANs or specified VLAN.

Parameter:

brief stands for brief information; **summary** for VLAN statistics; **<vlan-id>** for VLAN ID of the VLAN to display status information, the valid range is 1 to 4094; **<vlan-name>** is the VLAN name for the VLAN to display status information, valid length is 1 to 11 characters.

Command mode:

Admin Mode and Configuration Mode.

Usage Guide:

If no **<vlan-id>** or **<vlan-name>** is specified, then information for all VLANs in the switch will be displayed.

Example:

Display the status for the current VLAN; display statistics for the current VLAN.

```
Switch#show vlan
```

VLAN Name	Type	Media	Ports
1 default	Static	ENET	Ethernet1/1 Ethernet1/2 Ethernet1/3 Ethernet1/4 Ethernet1/9 Ethernet1/10 Ethernet1/11 Ethernet1/12
2 VLAN0002	Static	ENET	Ethernet1/5 Ethernet1/6 Ethernet1/7 Ethernet1/8

```
Switch#show vlan summary
```

The max. vlan entrys: 4094

Existing Vlans:

Universal Vlan:

1 12 13 15 16 22

Total Existing Vlans is:6

Displayed information	Explanation
VLAN	VLAN number
Name	VLAN name
Type	VLAN type, statically configured or dynamically learned.
Media	VLAN interface type: Ethernet
Ports	Access port within a VLAN

17.1.26 show vlan-translation

Command:

show vlan-translation

Function:

Display the information of all the ports at VLAN-translation state.

Parameter:

None.

Command Mode:

Admin and Configuration Mode.

Usage Guide:

Display the information of all the ports at VLAN-translation state.

Example:

Display current VLAN translation state information.

```
Switch#show vlan-translation
```

```
Interface Ethernet1/1:
```

```
  vlan-translation is enable
```

```
Interface Ethernet1/2:
```

```
  vlan-translation is enable
```

```
Interface Ethernet1/3:
```

```
  vlan-translation is enable
```

17.1.27 switchport access vlan

Command:

```
switchport access vlan <vlan-id>  
no switchport access vlan
```

Function:

Add the current Access port to the specified VLAN. The “**no switchport access vlan**” command deletes the current port from the specified VLAN, and the port will be partitioned to VLAN1.

Parameter:

<**vlan-id**> is the VID for the VLAN to be added the current port, valid range is 1 to 4094.

Command mode:

Port Mode.

Default:

All ports belong to VLAN1 by default.

Usage Guide:

Only ports in Access mode can join specified VLANs, and an Access port can only join one VLAN at a time.

Example:

```
Add some Access port to VLAN100.  
Switch(config)#interface ethernet 1/8  
Switch(Config-If-Ethernet1/8)#switchport mode access  
Switch(Config-If-Ethernet1/8)#switchport access vlan 100  
Switch(Config-If-Ethernet1/8)#exit
```

17.1.28 switchport forbidden vlan

Command:

```
switchport forbidden vlan {WORD | all | add WORD | except WORD | remove WORD}  
no switchport forbidden vlan
```

Function:

Configure the forbidden vlan for a port. Note that this command can only be used to configure on trunk or hybrid ports and the port with GVRP not enabled. No command cancels the forbidden vlanlist for a port.

Parameters:

WORD, add the vlanList as forbidden vlan and cover the previous configuration

all, set all VLANs as forbidden vlan

add WORD, add vlanList to the current forbidden vlanList

except WORD, set all VLANs as forbidden vlan except vlanList

remove WORD, remove vlan specified by vlanList from current forbidden vlanList

Command Mode:

Port mode

Default:

Forbidden vlanList is empty

Usage Guide:

Tag the corresponding position for forbidden vlanList and clear allow vlanList flags in ports. A port leaves these VLANs if it joins them statically, and it sends message to GVRP module to enable corresponding registered machine of the port to enter forbidden mode.

Example:

Port quits the corresponding VLAN and the corresponding registered machine of GVRP to enter forbidden mode.

```
Switch(config-if-ethernet1/1)#switchport forbidden vlan all
```

17.1.29 switchport hybrid allowed vlan

Command:

```
switchport hybrid allowed vlan {WORD | all | add WORD | except WORD | remove WORD} {tag | untag}  
no switchport hybrid allowed vlan
```

Function:

Set hybrid port which allow the VLAN to pass with tag or untag method; the “no switchport hybrid allowed vlan” command restores the default setting.

Parameter:

WORD: Set vlan List to allowed vlan, and the late configuration will cover the previous configuration;

all: Set all VLANs to allowed vlan;

add WORD: Add vlanList to the existent allowed vlanList;

except WORD: Set all VLANs to allowed vlan except the configured vlanList;

remove WORD: Delete the specific VLAN of vlanList from the existent allow vlanList;

tag: Join the specific VLAN with tag mode;

untag: Join the specific VLAN with untag mode.

Command mode:

Port Mode.

Default:

Deny all VLAN traffic to pass.

Usage Guide:

The user can use this command to set the VLANs whose traffic allowed to pass through the Hybrid port, traffic of VLANs not included are prohibited. The difference between tag and untag mode by setting allowed vlan: set VLAN to untag mode, the frame sent via hybrid port without VLAN tag; set VLAN to tag mode, the frame sent via hybrid port with corresponding VLAN tag. The same VLAN can not be allowed with tag and untag mode by a Hybrid port at the same time. If configure the tag (or untag) allowed VLAN to untag (or tag) allowed VLAN, the last configuration will cover the previous.

Example:

Set hybrid port allowed vlan 1, 3, 5-20 with untag mode and allow vlan 100; 300; 500-2000 with tag mode.

```
Switch(config)#interface ethernet 1/5
```

```
Switch(Config-If-Ethernet1/5)#switchport mode hybrid
```

```
Switch(Config-If-Ethernet1/5)#switchport hybrid allowed vlan 1;3;5-20 untag
```

```
Switch(Config-If-Ethernet1/5)#switchport hybrid allowed vlan 100;300;500-2000 tag
```

```
Switch(Config-If-Ethernet1/5)#exit
```

17.1.30 switchport hybrid native vlan

Command:

switchport hybrid native vlan <vlan-id>

no switchport hybrid native vlan

Function:

Set the PVID for Hybrid port; the “**no switchport hybrid native vlan**” command restores the default setting.

Parameter:

<vlan-id> is the PVID of Hybrid port.

Command mode:

Port Mode.

Default:

The default PVID of Hybrid port is 1.

Usage Guide:

When an untagged frame enters a Hybrid port, it will be added a tag of the native PVID which is set by this command, and is forwarded to the native VLAN.

Example:

Set the native vlan to 100 for a Hybrid port.

```
Switch(config)#interface ethernet 1/5
```

```
Switch(Config-If-Ethernet1/5)#switchport mode hybrid
```

```
Switch(Config-If-Ethernet1/5)#switchport hybrid native vlan 100
```

```
Switch(Config-If-Ethernet1/5)#exit
```

17.1.31 switchport interface

Command:

```
switchport interface [ethernet | portchannel] [<interface-name | interface-list>]
```

```
no switchport interface [ethernet | portchannel] [<interface-name | interface-list>]
```

Function:

Specify Ethernet port to VLAN; the no command deletes one or one set of ports from the specified VLAN.

Parameter:

ethernet is the Ethernet port to be added. **portchannel** means that the port to be added is a link-aggregation port.

interface-name port name, such as e1/1. If this option is selected, ethernet or portchannel should not be.

interface-list is the port list to be added or deleted, “;” and “-” are supported, for example: ethernet1/1;3;4-7;8.

Command mode:

VLAN Mode.

Default:

A newly created VLAN contains no port by default.

Usage Guide:

Access ports are normal ports and can join a VLAN, but a port can only join one VLAN for a time.

Example:

Assign Ethernet port 1 , 3 , 4-7 , 8 of VLAN100.

```
Switch(Config-Vlan100)#switchport interface ethernet 1/1;3;4-7;8
```

17.1.32 switchport mode

Command:

```
switchport mode {trunk | access | hybrid}
```

Function:

Set the port in access mode, trunk mode or hybrid mode.

Parameter:

trunk means the port allows traffic of multiple VLAN; **access** indicates the port belongs to one VLAN only; **hybrid** means the port allows the traffic of multi-VLANs to pass with tag or untag mode.

Command mode:

Port Mode.

Default:

The port is in Access mode by default.

Usage Guide:

Ports in trunk mode is called Trunk ports. Trunk ports can allow traffic of multiple VLANs to pass through. VLAN in different switches can be interconnected with the Trunk ports. Ports under access mode are called Access ports. An access port can be assigned to one and only one VLAN at a time. Hybrid ports can allow traffic of multiple VLANs to pass through, receive and send the packets of multiple VLANs, used to connect switch, or user's computer. When Hybrid ports and Trunk ports receive the data, the deal way is same, but the deal way is different in sending the data. Because Hybrid ports can allow the packets of multiple VLANs to send with no tag, however, Trunk ports can only

allow the packets of the default VLAN to send with no tag. The attribute of ports can not directly convert between Hybrid and Trunk, it must configure to be access at first, then configure to be Hybrid or Trunk. When the Trunk or Hybrid attribute is cancelled, the port attribute restores the default (access) attribute and belongs to vlan1.

Example:

Set port 5 to trunk mode and port 8 to access mode, port 10 to hybrid mode.

```
Switch(config)#interface ethernet 1/5
Switch(Config-If-Ethernet1/5)#switchport mode trunk
Switch(Config-If-Ethernet1/5)#exit
Switch(config)#interface ethernet 1/8
Switch(Config-If-Ethernet1/8)#switchport mode access
Switch(Config-If-Ethernet1/8)#exit
Switch(config)#interface ethernet 1/10
Switch(Config-If-Ethernet1/10)#switchport mode hybrid
Switch(Config-If-Ethernet1/10)#exit
```

17.1.33 switchport mode trunk allow-null

Command:

```
switchport mode trunk allow-null
```

Function:

Add a port as trunk mode. When enabling GVRP, the mode that adds the ports with trunk mode to all VLANs is not appropriate. Therefore, add a port as trunk port and does not join any VLANs by default for enabling GVRP on trunk port is appropriate. It is recommended to configure a port as trunk with this command before enabling GVRP. This command can also be used when a port has been configured as trunk already, which equals to clearing allow-list and quits all VLANs.

Parameters:

None

Command Mode:

Port mode

Default:

access mode.

Usage Guide:

Configure the port as trunk, enable it to leave all VLANs and clear allow-list.

Example:

```
Switch(config-if-ethernet1/1)#switchport mode trunk allow-null
```

17.1.34 switchport trunk allowed vlan

Command:

```
switchport trunk allowed vlan {WORD | all | add WORD | except WORD | remove WORD}  
no switchport trunk allowed vlan
```

Function:

Set trunk port to allow VLAN traffic; the “**no switchport trunk allowed vlan**” command restores the default setting.

Parameter:

WORD: specified VLANs; keyword;
all: all VLANs, the range from 1 to 4094;
add: add assigned VLANs behind **allow vlan**;
except: all VLAN add to **allow vlan** except assigned VLANs;
remove: delete assigned **allow vlan** from **allow vlan** list.

Command mode:

Port Mode.

Default:

Trunk port allows all VLAN traffic by default.

Usage Guide:

The user can use this command to set the VLAN traffic allowed to passthrough the Trunk port; traffic of VLANs not included are prohibited.

Example:

```
Set Trunk port to allow traffic of VLAN1, 3, 5-20.  
Switch(config)#interface ethernet 1/5  
Switch(Config-If-Ethernet1/5)#switchport mode trunk  
Switch(Config-If-Ethernet1/5)#switchport trunk allowed vlan 1;3;5-20  
Switch(Config-If-Ethernet1/5)#exit
```

17.1.35 switchport trunk native vlan

Command:

```
switchport trunk native vlan <vlan-id>  
no switchport trunk native vlan
```

Function:

Set the PVID for Trunk port; the “**no switchport trunk native vlan**” command restores the default setting.

Parameter:

<vlan-id> is the PVID for Trunk port.

Command mode:

Port Mode.

Default:

The default PVID of Trunk port is 1.

Usage Guide:

PVID concept is defined in 802.1Q. PVID in Trunk port is used to tag untagged frames. When an untagged frame enters a Trunk port, the port will tag the untagged frame with the native PVID set with this commands for VLAN forwarding.

Example:

```
Set the native VLAN for a Trunk port to 100.  
Switch(config)#interface ethernet 1/5  
Switch(Config-If-Ethernet1/5)#switchport mode trunk  
Switch(Config-If-Ethernet1/5)#switchport trunk native vlan 100  
Switch(Config-If-Ethernet1/5)#exit
```

17.1.36 vlan

Command:

```
vlan WORD  
no vlan WORD
```

Function:

Create VLANs and enter VLAN configuration mode. If using ';' and '-' connect with multi-VLANs, then only create these VLANs. If only existing VLAN, then enter VLAN configuration mode; if the VLAN is not exist, then create VLAN and enter VLAN configuration mode. In VLAN Mode, the user can set VLAN name and assign the switch ports to the VLAN. The no command deletes specified VLANs.

Parameter:

WORD is the VLAN ID to be created/deleted, valid range is 1 to 4094, connect with ';' and '-'.

Command mode:

Global Mode.

Default:

Only VLAN1 is set by default.

Usage Guide:

VLAN1 is the default VLAN and cannot be configured or deleted by the user. The maximal VLAN number is 4094. It should be noted that dynamic VLANs learnt by GVRP cannot be deleted by this command.

Example:

Create VLAN100 and enter the configuration mode for VLAN 100.

```
Switch(config)#vlan 100
```

```
Switch(Config-Vlan100)#
```

17.1.37 vlan internal

Command:

```
vlan <2-4094> internal
```

Function:

Specify the internal VLAN ID. After an ID is specified as the internal VLAN ID, it is not allowed to be used by other VLAN. Internal VLAN is only used to LOOPBACK interface and can not add physical port. New internal VLAN ID takes effect after save the configuration and reboot the switch.

Parameter:

<vlan-id>: The ID is specified as internal VLAN ID, the range is 2 to 4094.

Command mode:

Global Mode.

Default:

1006.

Usage Guide:

Set 1006 as the default internal VLAN ID, the internal VLAN ID needs to be modified when the network set 1006 as VLAN ID. Internal VLAN ID must select an unused ID or else affect other VLAN. This command takes effect after save the configuration and reboot the switch.

Example:

Set 100 as the internal VLAN ID.

Switch(config)#vlan 100 internal

17.1.38 vlan ingress enable

Command:

vlan ingress enable

no vlan ingress enable

Function:

Enable the VLAN ingress filtering for a port; the “**no vlan ingress enable**” command disables the ingress filtering.

Command mode:

Global Mode

Default:

Enable VLAN ingress filtering function.

Usage Guide:

After VLAN ingress filtering is enabled on the port, when the system receives data it will check source port first, and forwards the data to the destination port if it is the VLAN member port, or else drop the data.

Example:

Disable VLAN ingress rules on the port.

Switch(config)#no vlan ingress enable

17.1.39 vlan-translation

Command:

```
vlan-translation <old-vlan-id> to <new-vlan-id> in
no vlan-translation <old-vlan-id> in
```

Function:

Add VLAN translation by creating a mapping between original VLAN ID and current VLAN ID; the no form of this command deletes corresponding mapping.

Parameter:

old-vlan-id is the original VLAN ID; new-vlan-id is the translated VLAN ID; in indicates ingress translation.

Command Mode:

Global/Port Mode.

Default:

There is no VLAN translation relation.

Usage Guide:

The command is for configuring the translation relation of the VLAN translation function. The data packets will be matched according to the configured translation relations, and its VLAN ID will be changed to the one in the configured item once matched, while forward the packets of the original VLAN if not match. This command can not be used with dot1q-tunnel enable at the same time.

Example:

Move the VLAN100 data entered from the port1 to VLAN2 after ingress translation.

```
Switch#config
Switch(config)#vlan-translation 100 to 2 in
Switch(config)#interface ethernet 1/1
Switch(Config-If-Ethernet1/1)#vlan-translation enable
Switch(Config-If-Ethernet1/1)#exit
Switch(config)#
```

17.1.40 vlan-translation enable

Command:

```
vlan-translation enable
no vlan-translation enable
```

Function:

Enable VLAN translation on the port; the no command restores to the default value.

Parameter:

None.

Command Mode:

Port Mode.

Default:

VLAN translation has not been enabled on the port by default.

Usage Guide:

vlan-translation and dot1q-tunnel are mutually exclusive, it is recommended to enable `vlan-translation` on trunk port and manually disable port filtering.

Example:

```
Enable VLAN translation function on port1.
Switch#config
Switch(config)#interface ethernet 1/1
Switch(Config-If-Ethernet1/1)#vlan-translation enable
```

17.2 Commands for Multi-to-One VLAN Translation

17.2.1 vlan-translation n-to-1

Command:

```
vlan-translation n-to-1 <WORD> to <new-vlan-id>
no vlan-translation n-to-1 <WORD>
```

Function:

Enable/disable Multi-to-One VLAN translation of the port.

Parameters:

WORD is the original VLAN ID, its range from 1 to 4094, connect them with ';' and '-'. If there are two VLANs with different range are translated into different VLAN ID in the same port, two VLAN ranges should not be superposed.
new-vlan-id is the translated VLAN ID, its range from 1 to 4094.

Command Mode:

Port mode

Default:

Disable

Usage Guide:

Multi-to-One VLAN translation is used to network edge to map multiple VLANs to one VLAN of backbone network. When data traffic returns from backbone network to network edge, it will restore VLAN of network edge to implement Multi-to-One VLAN translation and save VLAN resource of backbone network. Note: When using this function, the device must establish the original and the translated VLAN firstly, and enabling the downlink port of this function and the uplink port for connecting backbone network, which must be join in the original and the translated VLAN with tagged mode. This function should not be used with dot1q-tunnel and VLAN translation at the same time
Note: Multi-to-One VLAN translation should be enabled after MAC learning.

Example:

On Ethernet 1/1, translate the data traffic from VLAN with the range between 1 to 5 into VLAN 100, and translate the data traffic (belongs to VLAN with the range between 1 to 5) out from VLAN100 into the corresponding VLAN ID, connect the uplink port of the backbone network as Ethernet 1/5.

```
Switch(config)#vlan 1-5;100
```

```
Switch(config)#interface ethernet 1/1
```

```
Switch(Config-If-Ethernet1/1)# switchport mode trunk
```

```
Switch(Config-If-Ethernet1/1)# vlan-translation n-to-1 1-5 to 100
```

```
Switch(config)#interface ethernet 1/5
```

```
Switch(Config-If-Ethernet1/5)# switchport mode trunk
```

17.2.2 show vlan-translation n-to-1

Command:

```
show vlan-translation n-to-1 [<interface-name>]
```

Function:

Show the port configuration with Multi-to-One VLAN translation.

Parameter:

interface-name: Specify the name of the port which will be shown. If there is no parameter, show all port configurations with this function.

Command Mode:

Admin mode.

Default:

There is no Multi-to-One VLAN translation information.

Usage Guide:

When it is

Example:

Show all port configurations with Multi-to-One VLAN translation function.

```
Switch# show vlan-translation n-to-1
```

```
Interface Ethernet1/1:
```

```
vlan-translation n-to-1 enable, vlan 1-4 to 100
```

```
vlan-translation n-to-1 enable,vlan 5-8;13 to 101
```

```
Interface Ethernet1/2:
```

```
vlan-translation n-to-1 enable,vlan 1-4 to 100
```

17.3 Commands for Dynamic VLAN Configuration

17.3.1 dynamic-vlan mac-vlan prefer

Command:

```
dynamic-vlan mac-vlan prefer
```

Function:

Set the MAC-based VLAN preferred.

Parameter:

None.

Command Mode:

Global Mode.

Default:

MAC-based VLAN is preferred by default.

Usage Guide:

Configure the preference of dynamic-vlan on switch. The default priority sequence is MAC-based VLAN 、IP-subnet-based VLAN 、Protocol-based VLAN, namely the preferred order when several dynamic VLAN is available.

After the IP-subnet-based VLAN is set to be preferred and the user wish to restore to preferring the MAC-based VLAN, please use this command.

Example:

Set the MAC-based VLAN preferred.

```
Switch#config
```

```
Switch(config)#dynamic-vlan mac-vlan prefer
```

17.3.2 dynamic-vlan subnet-vlan prefer

Command:

```
dynamic-vlan subnet-vlan prefer
```

Function:

Set the IP-subnet-based VLAN preferred.

Parameter:

None.

Command Mode:

Global Mode.

Default:

MAC-based VLAN is preferred by default.

Usage Guide:

Configure the preference of dynamic-vlan on switch. The default priority sequence is MAC-based VLAN 、IP-subnet-based VLAN 、Protocol-based VLAN, namely the preferred order when several dynamic VLAN is available.

This command is used to set to preferring the IP-subnet-based VLAN.

Example:

Set the IP-subnet-based VLAN preferred.

```
Switch#config
```

```
Switch(config)#dynamic-vlan subnet-vlan prefer
```

17.3.3 mac-vlan

Command:

```
mac-vlan mac <mac-addrss> vlan <vlan-id> priority <priority-id>
```

```
no mac-vlan {mac <mac-addrss>|all}
```

Function:

Add the correspondence between MAC address and VLAN, namely specify certain MAC address to join specified VLAN. The no form of this command deletes all/the correspondence.

Parameter:

mac-address is the MAC address which is shown in the form of XX-XX-XX-XX-XX-XX, vlan-id is the ID of the VLAN with a valid range of 1~4094; priority-id is the level of priority and is used in the VLAN tag with a valid range of 0~7; all refers to all the MAC addresses.

Command Mode:

Global Mode.

Default:

No MAC address joins the VLAN by default.

Usage Guide:

With this command user can add specified MAC address to specified VLAN. If there is a non VLAN label data packet enters from the switch port from the specified MAC address, it will be assigned with specified VLAN ID so sent enter specified VLAN. Their belonging VLAN are the same no matter which port did they enter through. The command does not have any interfere on the VLAN label data packet.

Example:

Add network device of MAC address as 00-30-4f-11-22-33 to VLAN 100.

```
Switch#config
```

```
Switch(config)#mac-vlan mac 00-30-4f-11-22-33 vlan 100 priority 0
```

17.3.4 mac-vlan vlan

Command:

```
mac-vlan vlan <vlan-id>  
no mac-vlan vlan <vlan-id>
```

Function:

Configure the specified VLAN to MAC VLAN; the “**no mac-vlan vlan <vlan-id>**” command cancels the MAC VLAN configuration of this VLAN.

Parameter:

<vlan-id> is the number of the specified VLAN.

Command Mode:

Global Mode.

Default:

No MAC VLAN is configured by default.

Usage Guide:

Set specified VLAN for MAC VLAN.

Example:

Set VLAN100 to MAC VLAN.

```
Switch#config
```

```
Switch(config)#mac-vlan vlan 100
```

17.3.5 protocol-vlan

Command:

```
protocol-vlan etype <etype-id> vlan <vlan-id>  
no protocol-vlan {etype <etype-id> vlan <vlan-id> | all}
```

Function:

Add the correspondence between the protocol and the VLAN namely specify the protocol to join specified VLAN.
The no form of this command deletes all/the correspondence.

Parameter:

etype-id is the type of the packet protocol, with a valid range of 1536~65535; **vlan-id** is the ID of VLAN, the valid range is 1~4094; **priority** is the priority, the range is 0~7; **all** indicates all the encapsulate protocols.

Command Mode:

Global Mode.

Default:

No protocol joined the VLAN by default.

Usage Guide:

The command adds specified protocol into specified VLAN. If there is any non VLAN label packet from specified protocol enters through the switch port, it will be assigned with specified VLAN ID and enter the specified VLAN. No matter which port the packets go through, their belonging VLAN is the same. The command will not interfere with VLAN labeled data packets. It is recommended to configure ARP protocol together with the IP protocol or else some application may be affected.

Example:

Assign the IP protocol data packet encapsulated by the EthernetII to VLAN200.

```
Switch#config
```

```
Switch(config)#protocol-vlan etype 2048 vlan 200
```

17.3.6 show dynamic-vlan prefer

Command:

```
show dynamic-vlan prefer
```

Function:

Display the preference of the dynamic VLAN.

Parameter:

None.

Command Mode:

Admin Mode and Configuration Mode.

Usage Guide:

Display the dynamic VLAN preference.

Example:

Display current dynamic VLAN preference.

```
Switch#show dynamic-vlan prefer
```

Mac Vlan/Voice Vlan

IP Subnet Vlan

Protocol Vlan

17.3.7 show mac-vlan

Command:

```
show mac-vlan
```

Function:

Display the configuration of MAC-based VLAN on the switch.

Parameter:

None.

Command Mode:

Admin Mode and other configuration Mode.

Usage Guide:

Display the configuration of MAC-based VLAN on the switch.

Example:

Display the configuration of the current MAC-based VLAN.

```
Switch#show mac-vlan
```

MAC-Address	VLAN_ID	Priority
-----	-----	-----
00-11-22-77-ab-9d	2	2
00-11-22-26-8d-f3	2	2
00-11-22-11-22-33	5	5

17.3.8 show mac-vlan interface

Command:

`show mac-vlan interface`

Function:

Display the ports at MAC-based VLAN.

Parameter:

None.

Command Mode:

Admin Mode and other configuration Mode.

Usage Guide:

Display the ports of enabling MAC-based VLAN, the character in the bracket indicate the ports mode, A means Access port, T means Trunk port, H means Hybrid port.

Example:

Display the ports of enabling MAC-based VLAN currently.

```
Switch#show mac-vlan interface
```

```
Ethernet1/1(A)      Ethernet1/2(A)
```

```
Ethernet1/3(A)      Ethernet1/4(A)
```

```
Ethernet1/5(H)      Ethernet1/6(T)
```

17.3.9 show protocol-vlan

Command:

`show protocol-vlan`

Function:

Display the configuration of Protocol-based VLAN on the switch.

Parameter:

None.

Command Mode:

Admin Mode and Configuration Mode

Usage Guide:

Display the configuration of Protocol-based VLAN on the switch.

Example:

Display the configuration of the current Protocol-based VLAN.

```
Switch#show protocol-vlan
```

Protocol_Type		VLAN_ID	Priority
-----		-----	-----
etype 0x800	200	4	
etype 0x860	200	4	
etype 0xabc	100	5	

17.3.10 show subnet-vlan

Command:

```
show subnet-vlan
```

Function:

Display the configuration of the IP-subnet-based VLAN on the switch.

Parameter:

None.

Command Mode:

Admin Mode and other Configuration Mode.

Usage Guide:

Display the configuration of the IP-subnet-based VLAN on the switch.

Example:

Display the configuration of the current IP-subnet-based VLAN.

```
Switch#show subnet-vlan
```

IP-Address	Mask	VLAN_ID
-----	-----	-----
192.168.1.165	255.255.255.0	2
202.200.121.21	255.255.0.0	2
10.0.0.1	255.248.0.0	5

17.3.11 show subnet-vlan interface

Command:

show subnet-vlan interface

Function:

Display the port at IP-subnet-based VLAN.

Parameter:

None.

Command Mode:

Admin Mode and other Configuration Mode.

Usage Guide:

Display the port of enabling IP-subnet-based VLAN, the character in the bracket indicate the ports mode, A means Access port, T means Trunk port, H means Hybrid port.

Example:

Display the port of enabling IP-subnet-based VLAN currently.

```
Switch#show subnet-vlan interface
```

```
Ethernet1/1(A)      Ethernet1/2(A)
```

```
Ethernet1/3(A)      Ethernet1/4(A)
```

```
Ethernet1/5(H)      Ethernet1/6(T)
```

17.3.12 subnet-vlan

Command:

subnet-vlan ip-address <ipv4-addrss> mask <subnet-mask> vlan <vlan-id> priority <priority-id>
no subnet-vlan {ip-address <ipv4-addrss> mask <subnet-mask> | all}

Function:

Add a correspondence between the IP subnet and the VLAN, namely add specified IP subnet into specified VLAN; the no form of this command deletes all/the correspondence.

Parameter:

ipv4-address is the IPv4 address shown in dotted decimal notation; the valid range of each section is 0-255;
subnet-mask is the subnet mask code shown in dotted decimal notation; the valid range of each section is 0-255;

priority-id is the priority applied in the VLAN tag with a valid range of 0~7; vlan-id is the VLAN ID with a valid range of 1~4094;all indicates all the subnets.

Command Mode:

Global Mode.

Default:

No IP subnet joined the VLAN by default.

Usage Guide:

This command is used for adding specified IP subnet to specified VLAN. When packet without VLAN label and from the specified IP subnet enters through the switch port, it will be matched with specified VLAN id and enters specified VLAN. These packets will always come to the same VLAN no matter through which port did they enter. This command will not interfere with VLAN labeled data packets.

Example:

Add the network equipment with IP subnet of 192.168.1.0/24 to VLAN 300.

```
Switch#config
```

```
Switch(config)#subnet-vlan ip-address 192.168.1.1 mask 255.255.255.0 vlan 300 priority 0
```

17.3.13 switchport mac-vlan enable

Command:

switchport mac-vlan enable

no switchport mac-vlan enable

Function:

Enable the MAC-based VLAN function on the port; the no form of this command will disable the MAC-based VLAN function on the port.

Parameter:

None.

Command Mode:

Port Mode.

Default:

The MAC-base VLAN function is enabled on the port by default.

Usage Guide:

After adding a MAC address to specified VLAN, the MAC-based VLAN function will be globally enabled. This command can disable the MAC-based VLAN function on specified port to meet special user applications.

Example:

Disable the MAC-based VLAN function on port1.

```
Switch#config
```

```
Switch(config)#interface ethernet 1/1
```

```
Switch(Config-If-Ethernet1/1)#no switchport mac-vlan enable
```

17.3.14 switchport subnet-vlan enable

Command:

```
switchport subnet-vlan enable
```

```
no switchport subnet-vlan enable
```

Function:

Enable the IP-subnet-based VLAN on the port; the no form of this command disables the IP-subnet-based VLAN function on the port.

Parameter:

None.

Command Mode:

Port Mode.

Default:

The IP-subnet-based VLAN is enabled on the port by default.

Usage Guide:

After adding the IP subnet to specified VLAN, the IP-subnet-based VLAN function will be globally enabled. This command can disable the IP-subnet-based VLAN function on specified port to meet special user applications.

Example:

Disable the IP-subnet-based VLAN function on port1.

```
Switch#config
```

```
Switch(config)#interface ethernet 1/1
```

```
Switch(Config-If-Ethernet1/1)#no switchport subnet-vlan enable
```

17.4 Commands for Voice VLAN Configuration

17.4.1 show voice-vlan

Command:

show voice-vlan

Function:

Display the configuration status of the Voice VLAN on the switch.

Parameter:

None.

Command Mode:

Admin Mode and other Configuration Mode.

Usage Guide:

Display Voice VLAN Configuration.

Example:

Display the Current Voice VLAN Configuration.

```
Switch#show voice-vlan
```

```
Voice VLAN ID:2
```

```
Ports:ethernet1/1;ethernet1/3
```

Voice name	MAC-Address	Mask	Priority
-----	-----	-----	-----
financePhone	00-11-22-77-ab-9d	0xff	5
manager	00-22-33-26-8d-f3	0xfe	6
Mr_Lee	00-33-44-11-22-33	0x80	5
NULL	00-44-55-11-22-33	0x0	5

17.4.2 switchport voice-vlan enable

Command:

switchport voice-vlan enable

no switchport voice-vlan enable

Function:

Enable the Voice VLAN function on the port; the “no” form of this command disables Voice VLAN function on the port.

Parameter:

None.

Command Mode:

Port Mode.

Default:

Voice VLAN is enabled by default.

Usage Guide:

When voice equipment is added to the Voice VLAN, the Voice VLAN is enabled globally by default. This command disables Voice VLAN on specified port to meet specified application of the user.

Example:

```
Disable the Voice VLAN function on port3.  
Switch#config  
Switch(config)#interface ethernet1/3  
switch(Config-If-Ethernet1/3)#no switchport voice-vlan enable
```

17.4.3 voice-vlan

Command:

```
voice-vlan mac <mac-address> mask <mac-mask> priority <priority-id>[name<voice-name>]  
no voice-vlan {mac <mac-address> mask <mac-mask> | name <voice-name> | all}
```

Function:

Specify certain voice equipment to join in Voice VLAN; the no form of this command will let the equipment leave the Voice VLAN.

Parameter:

Mac-address is the voice equipment MAC address, shown in “xx-xx-xx-xx-xx-xx” format; mac-mask is the last eight digit of the mask code of the MAC address, the valid values are: 0xff, 0xfe, 0xfc, 0xf8, 0xf0, 0xe0, 0xc0, 0x80, 0x0; priority-id is the priority of the voice traffic, the valid range is 0–7; the voice-name is the name of the voice equipment, which is to facilitate the equipment management; all indicates all the MAC addresses of the voice equipments.

Command Mode:

Global Mode.

Default:

This command will add a specified voice equipment into the Voice VLAN, if a non VLAN labeled data packet from the specified voice equipment enters through the switch port, then no matter through which port the packet enters, it will belong to Voice VLAN. The command will not interfere with the packets of VLAN labels.

Example:

Add the 256 sets of voice equipments of the R&D department with MAC address ranging from 00-30-4f-11-22-00 to 00-30-4f-11-22-ff to the Voice VLAN.

```
Switch#config
```

```
Switch(config)#voice-vlan vlan 100
```

```
Switch(config)#voice-vlan mac 00-30-4f-11-22-00 mask 0 priority 5 name test
```

17.4.4 voice-vlan vlan

Command:

```
voice-vlan vlan <vlan-id>
```

```
no voice-vlan
```

Function:

Configure the specified VLAN to Voice VLAN; the “**no voice-vlan**” command cancels the Voice VLAN configuration of this VLAN.

Parameter:

Vlan id is the number of the specified VLAN.

Command Mode:

Global Mode.

Default:

No Voice VLAN is configured by default.

Usage Guide:

Set specified VLAN for Voice VLAN, There can be only one Voice VLAN at the same time. The voice VLAN cannot be applied concurrently with MAC-based VLAN.

Example:

Set VLAN100 to Voice VLAN.

```
Switch#config
```

```
Switch(config)#voice-vlan vlan 100
```


Chapter 18 Commands for MAC Address Table Configuration

18.1 Commands for MAC Address Table Configuration

18.1.1 clearCollisionMacTable

Command :

```
clear collision-mac-address-table
```

Function :

Clear the hash collision mac table.

Parameter :

None.

Command mode :

Admin Mode.

Usage Guide :

If enable the function of the hash collision mac table that issued ffp (**mac-address-table avoid-collision**), the mac cannot be cleared.

Example :

Clear the hash collision mac table.

```
Switch#clear collision-mac-address-table
```

18.1.2 clear mac-address-table dynamic

Command:

```
clear mac-address-table dynamic [address <mac-addr>] [vlan <vlan-id>] [interface [ethernet | portchannel] <interface-name>]
```

Function:

Clear the dynamic address table.

Parameter:

<mac-addr>: MAC address will be deleted; **<interface-name>** the port name for forwarding the MAC packets;
<vlan-id> VLAN ID.

Command mode:

Admin mode.

Usage Guide:

Delete all dynamic address entries which exist in MAC address table, except application, system entries. MAC address entries can be classified according to different sources, the types are as follows: DYNAMIC, STATIC, APPLICATION, SYSTEM. DYNAMIC is the dynamic MAC address entries learned by switch, it can be aged by switch automatically.

Example:

Delete all dynamic MAC.

```
Switch#clear mac-address-table dynamic
```

18.1.3 mac-address-learning cpu-control

Command:

```
mac-address-learning cpu-control
```

```
no mac-address-learning cpu-control
```

Function:

Enable MAC learning through CPU control, the no command restores that the chip automatically learn MAC address.

Parameter:

None.

Command Mode:

Global mode.

Default:

Chip automatically learn MAC address.

Usage Guide:

If enable port-security, private-vlan, mac-notification, mac-limit, etc., it should enable MAC learning through CPU first.

Example:

Enable MAC learning through CPU.

```
Switch(Config)#mac-address-learning cpu-control
```

18.1.4 mac-address-table aging-time

Command:

```
mac-address-table aging-time <0 / aging-time>
```

```
no mac-address-table aging-time
```

Function:

Sets the aging-time for the dynamic entries of MAC address table.

Parameter:

<aging-time> is the aging-time seconds, range from 10 to 1000000; **0** to disable aging.

Command Mode:

Global Mode.

Default:

Default aging-time is 300 seconds.

Usage Guide:

If no destination address of the packets is same with the address entry in aging-time, the address entry will get aged.

The user had better set the aging-time according to the network condition, it usually use the default value.

Example:

Set the aging-time to 600 seconds.

```
Switch(config)#mac-address-table aging-time 600
```

18.1.5 mac-address-table static | static-multicast | blackhole

Command:

```
mac-address-table {static | static-multicast | blackhole} address <mac-addr> vlan <vlan-id> [interface ethernet <interface-name>] | [source | destination | both]
no mac-address-table {static | static-multicast | blackhole | dynamic} [address <mac-addr>] [vlan <vlan-id>] [interface ethernet <interface-name>]
```

Function:

Add or modify static address entries, static multicast entries and filter address entries. The no command deletes the three entries.

Parameter:

static is the static entries; **static-multicast** is the static multicast entries; **blackhole** is filter entries, which is for discarding frames from specific MAC address, it can filter source address, destination address or the both. When choose the filter entries, blackhole address can't based on port, and not configure to interface; **dynamic** is dynamic address entries; **<mac-addr>** MAC address to be added or deleted; **<interface-name>** name of the port transmitting the MAC data packet; **<vlan-id>** is the vlan number. **source** is based on source address filter; **destination** is based on destination address filter; **both** is based on source address and destination address filter, the default is both.

Command Mode:

Global Mode

Default:

When VLAN interface is configured and is up, the system will generate a static address mapping entry of which the inherent MAC address corresponds to the VLAN number.

Usage Guide:

In certain special applications or when the switch is unable to dynamically learn the MAC address, users can use this command to manually establish mapping relation between the MAC address and port and VLAN.

no mac-address-table command is for deleting all dynamic, static, filter MAC address entries existing in the switch MAC address list, except application, system entries. MAC address entries can be classified according to the different source, the types are as follows: DYNAMIC, STATIC, APPLICATION, SYSTEM. DYNAMIC is the dynamic MAC address entries learned by switch, it can be aged by switch automatically. STATIC is the static MAC address entries (including blackhole entries) added by user. APPLICATION is the static MAC address entries added by application protocol (such as dot1x, security port...). SYSTEM is the additive static MAC address entries according to VLAN interface. When adding STATIC entries, it can cover the conflictive DYNAMIC, except APPLICATION, SYSTEM entries.

After configure the static multicast MAC by this command, the multicast MAC traffic will be forwarded to the specified port of the specified VLAN.

Example:

Port 1/1 belongs to VLAN200, and establishes address mapping with MAC address 00-30-4f-f0-00-18.

```
Switch(config)#mac-address-table static address 00-30-4f-f0-00-18 vlan 200 interface ethernet 1/1
```

Configure a static multicast MAC 01-00-5e-00-00-01, the egress is ethernet 1/1.

```
Switch(config)#mac-address-table static-multicast address 01-00-5e-00-00-01 vlan 1 interface ethernet1/1
```

18.1.6 showCollisionMacTable

Command :

```
show collision-mac-address-table
```

Function :

Show the hash collision mac table.

Parameter :

None.

Command mode :

Global Mode.

Usage Guide :

If enable the function of the hash collision mac table that issued ffp (**mac-address-table avoid-collision**), the collision mac which issued ffp use

18.1.7 show mac-address-table

Command:

```
show mac-address-table [static | blackhole | multicast | aging-time <aging-time> | count] [address <mac-addr>] [vlan <vlan-id>] [count] [interface <interface-name>]
```

Function:

Show the current MAC table.

Parameter:

static static entries; **blackhole** filter entries; **aging-time** *<aging-time>* address aging time; **count** entry's number, **multicast** multicast entries; *<mac-addr>* entry's MAC address; *<vlan-id>* entry's VLAN number; *<interface-name>* entry's interface name.

Command mode:

Admin and Configuration Mode.

Default:

MAC address table is not displayed by default.

Usage guide:

This command can display various classes of MAC address entries. Users can also use **show mac-address-table** to display all the MAC address entries.

Example:

Display all the filter MAC address entries.
Switch#show mac-address-table blackhole

18.2 Commands for Mac Address Binding configuration

18.2.1 clear port-security dynamic

Command:

```
clear port-security dynamic [address <mac-addr> | interface <interface-id>]
```

Function:

Clear the Dynamic MAC addresses of the specified port.

Command mode:

Admin Mode.

Parameter:

<mac-addr> stands MAC address; *<interface-id>* for specified port number.

Usage Guide:

The secure port must be locked before dynamic MAC clearing operation can be perform in specified port. If no ports and MAC are specified, then all dynamic MAC in all locked secure ports will be cleared; if only port but no MAC address is specified, then all MAC addresses in the specified port will be cleared.

Example:

Delete all dynamic MAC in port1.

```
Switch#clear port-security dynamic interface Ethernet 1/1
```

18.2.2 show port-security

Command:

```
show port-security
```

Function:

Display the secure MAC addresses of the port.

Command mode:

Admin and Configuration Mode.

Default:

The switch is not display port-security configuration.

Usage Guide:

This command displays the secure port MAC address information.

Example:

```
Switch#show port-security
```

Security Port	MaxSecurity Addr (count)	CurrentAddr (count)	Security Action
Ethernet1/1	1	1	Protect
Ethernet1/3	10	1	Protect
Ethernet1/5	1	0	Protect

```
Max Addresses limit in System:128
```

```
Total Addresses in System:2
```

Displayed information	Explanation
Security Port	Is port enabled as a secure port.
MaxSecurityAddr	The maximum secure MAC address number set for the security port.
CurrentAddr	The current secure MAC address number of the security port.
Security Action	The violation mode of the port configuration.
Total Addresses in System	The current secure MAC address number of the system.
Max Addresses limit in System	The maximum secure MAC address number of the system.

18.2.3 show port-security address

Command:

show port-security address [interface <interface-id>]

Function:

Display the secure MAC addresses of the port.

Command mode:

Admin and Configuration Mode.

Parameter:

<interface-id> stands for the port to be displayed.

Usage Guide:

This command displays the secure port MAC address information, if no port is specified, secure MAC addresses of all ports are displayed. The following is an example:

```
Switch#show port-security address interface ethernet 1/3
```

```
Security Mac Address Table
```

```
-----
Vlan    Mac Address          Type                Ports
  1      0000.0000.1111      SecureConfigured    Ethernet1/1
-----
```

```
Total Addresses: 1
```

Displayed information	Explanation
Vlan	The VLAN ID for the secure MAC Address.
Mac Address	Secure MAC address.

Type	Secure MAC address type.
Ports	The port that the secure MAC address belongs to.
Total Addresses	Current secure MAC address number in the system.

18.2.4 show port-security interface

Command:

show port-security interface <interface-id>

Function:

Display the configuration of secure port.

Command mode:

Admin and Configuration Mode.

Parameter:

<interface-id> stands for the port to be displayed.

Default:

Configuration of secure ports is not displayed by default.

Usage Guide:

This command displays the detailed configuration information for the secure port.

Example:

```
Switch#show port-security interface ethernet 1/1
Port Security: Enabled
Port status: Security Up
Violation mode: Protect
Maximum MAC Addresses: 1
Total MAC Addresses: 1
Configured MAC Addresses: 1
Lock Timer is ShutDown
Mac-Learning function is: Opened
```

Displayed information	Explanation
Port Security	Is port enabled as a secure port.
Port status	Port secure status.

Violation mode	Violation mode set for the port.
Maximum MAC Addresses	The maximum secure MAC address number set for the port.
Total MAC Addresses	Current secure MAC address number for the port.
Configured MAC Addresses	Current secure static MAC address number for the port.
Lock Timer	Whether locking timer (timer timeout) is enabled for the port.
Mac-Learning function	Whether the MAC address learning function is enabled.

18.2.5 switchport port-security

Command:

switchport port security
no switchport port security

Function:

Enable MAC address binding function for the port; the no command disables the MAC address binding function for the port.

Command mode:

Port Mode.

Default:

MAC address binding is not enabled by default.

Usage Guide:

The MAC address binding function and Port Aggregation functions are mutually exclusive. Therefore, if MAC binding function for a port is to be enabled, the Port Aggregation functions must be disabled, and the port enabling MAC address binding must not be a Trunk port.

Example:

Enable MAC address binding function for port 1.
Switch(config)#interface Ethernet 1/1
Switch(Config-If-Ethernet1/1)#switchport port security

18.2.6 switchport port-security mac-address

Command:

```
switchport port-security mac-address <mac-address>  
no switchport port-security mac-address <mac-address>
```

Function:

Add a static secure MAC address; the no command deletes a static secure MAC address.

Command mode:

Port Mode.

Parameters:

<mac-address> stands for the MAC address to be added or deleted.

Usage Guide:

The MAC address binding function must be enabled before static secure MAC address can be added.

Example:

Adding MAC 00-30-4f-FE-2E-D3 to port1.

```
Switch(config)#interface Ethernet 1/1
```

```
Switch(Config-If-Ethernet1/1)#switchport port-security mac-address 00-30-4f-FE-2E-D3
```

18.2.7 switchport port-security maximum

Command:

```
switchport port-security maximum <value>  
no switchport port-security maximum
```

Function:

Sets the maximum number of secure MAC addresses for a port; the no command restores the maximum secure address number of 1.

Command mode:

Port Mode.

Parameter:

< value> is the up limit for static secure MAC address, the valid range is 1 to 128.

Default:

The default maximum port secure MAC address number is 1.

Usage Guide:

The MAC address binding function must be enabled before maximum secure MAC address number can be set. If secure static MAC address number of the port is larger than the maximum secure MAC address number set, the setting fails; extra secure static MAC addresses must be deleted, so that the secure static MAC address number is no larger than the maximum secure MAC address number for the setting to be successful.

Example:

Set the maximum secure MAC address number as 4 for port1.

```
Switch(config)#interface Ethernet 1/1
```

```
Switch(Config-If-Ethernet1/1)#switchport port-security maximum 4
```

18.2.8 switchport port-security violation

Command:

```
switchport port-security violation {protect | shutdown} [recovery <30-3600>]  
no switchport port-security violation
```

Function:

Configure the port violation mode. The no restores the violation mode to protect.

Command Mode:

Port mode.

Parameter:

protect refers to protect mode

shutdown refers to shutdown mode

recovery: configure the border port can be recovered automatically after implement shutdown violation operation

<30-3600>: the recovery time, do not recover it by default

Default:

The port violation mode is **protect** by default.

Usage Guide:

The port violation mode configuration is only available after the MAC address binding function is enabled. When the port secure MAC address exceeds the security MAC limit, if the violation mode is **protect**, the port only disables the dynamic MAC address learning function; while the port will be shut if at **shutdown** mode. Users can manually open the port with **no shutdown** command.

Example:

Set the violation mode of port 1 to shutdown.

```
Switch(config)#interface Ethernet 1/1
```

```
Switch(Config-If-Ethernet1/1)#switchport port-security violation shutdown recovery 60
```

18.3 Commands for MAC Notification

18.3.1 clear mac-notification statistics

Command:

```
clear mac-notification statistics
```

Function:

Clear the statistics of MAC notification trap.

Parameter:

None.

Default:

None.

Command Mode:

Admin mode

Usage Guide:

When this command is used with show command, it is able to check the executive result by show command after executing this command.

Example:

```
Switch# clear mac-notification statistics
```

18.3.2 mac-address-table notification

Command:

mac-address-table notification
no mac-address-table notification

Function:

Enable the MAC address notification globally, the no command disables the global MAC address notification.

Parameter:

None.

Default:

Disable.

Command Mode:

Global mode

Usage Guide:

This command is used with trap switch of snmp. When disabling the MAC address notification, other configuration can be shown, but the function is invalid.

Example:

Enable the MAC address notification.
Switch(Config)#mac-address-table notification

18.3.3 mac-address-table notification history-size

Command:

mac-address-table notification history-size <0-500>
no mac-address-table notification history-size

Function:

Configure the maximum history-size for storing MAC changing message, the no command restores the default value.

Parameter:

history-size: data length of sending the notification, its range from 1 to 500.

Default:

10.

Command Mode:

Global mode

Usage Guide:

After the global switch is disabled, this command is also able to be configured sequentially.

Example:

Change the maximum history-size to be 256.

```
Switch(Config)#mac-address-table notification history-size 256
```

18.3.4 mac-address-table notification interval

Command:

```
mac-address-table notification interval <0-86400>
```

```
no mac-address-table notification interval
```

Function:

Configure the interval for sending the MAC address notification, the no command restores the default interval.

Parameter:

interval: interval for sending the notification, unit is second, its range from 0 to 86400.

Default:

30s.

Command Mode:

Global mode

Usage Guide:

After the global switch is disabled, this command is also able to be configured sequentially.

Example:

Configure the interval as 30s for sending the MAC address notification.

```
Switch(Config)#mac-address-table notification interval 30
```

18.3.5 mac-notification

Command:

```
mac-notification {added | both | removed}
no mac-notification
```

Function:

Configure the MAC address notification for the specified port, the no command cancels the function.

Parameter:

added: the added MAC address
removed: the removed MAC address
both: the added and the removed MAC addresses

Default:

No MAC address notification.

Command Mode:

Port mode

Usage Guide:

After the global switch is disabled, this command is also able to be configured sequentially.

Example:

```
Send the trap notification after the MAC address is added to Ethernet 1/5.
Switch(Config)#in ethernet 1/5
Switch(Config-if-ethernet 1/5)#mac-notification added
```

18.3.6 show mac-notification summary

Command:

```
show mac-notification summary
```

Function:

Show the configuration of MAC notification and the data of the notification packet.

Parameter:

None.

Default:

Do not show the summary.

Command Mode:

Admin mode

Usage Guide:

With this command, check the configuration of MAC address and the sending status of MAC notification trap.

Example:

```
Switch#show mac-notification summary
MAC address notification:enabled
MAC address snmp traps:enabled
MAC address notification interval = 10
MAC address notification history log size = 120
MAC address added = 0
MAC address removed = 0
MAC address snmp traps generated = 0
```

18.3.7 snmp-server enable traps mac-notification

Command:

```
snmp-server enable traps mac-notification
no snmp-server enable traps mac-notification
```

Function:

Enable the trap notification of MAC address globally, the no command disables the trap notification.

Parameter:

None.

Default:

Disable trap notification globally.

Command Mode:

Global mode

Usage Guide:

This command is used with MAC notification switch. When the switch is disabled, other configuration can be shown, but the function is invalid.

Example:

Enable the trap notification of MAC address.

```
Switch(Config)#snmp-server enable traps mac-notification
```

Chapter 19 Commands for MSTP

19.1 Commands for MSTP

19.1.1 abort

Command:

`abort`

Function:

Abort the current MSTP region configuration, quit MSTP region mode and return to global mode.

Command mode:

MSTP Region Mode.

Usage Guide:

This command is to quit MSTP region mode without saving the current configuration. The previous MSTP region configuration is valid.

Example:

Quit MSTP region mode without saving the current configuration.

```
Switch(Config-Mstp-Region)#abort
```

```
Switch(config)#
```

19.1.2 exit

Command:

`exit`

Function:

Save current MSTP region configuration, quit MSTP region mode and return to global mode.

Command mode:

MSTP Region Mode

Usage Guide:

This command is to quit MSTP region mode with saving the current configuration.

Example:

Quit MSTP region mode with saving the current configuration.

```
Switch(Config-Mstp-Region)#exit
```

```
Switch(config)#
```

19.1.3 instance vlan

Command:

```
instance <instance-id> vlan <vlan-list>
```

```
no instance <instance-id> [vlan <vlan-list>]
```

Function:

In MSTP region mode, create the instance and set the mappings between VLANs and instances; the command “**no instance <instance-id> [vlan <vlan-list>]**” removes the specified instance and the specified mappings between the VLANs and instances.

Parameter:

Normally, **<instance-id>** sets the instance number. The valid range is from 0 to 64; in the command “**no instance <instance-id> [vlan <vlan-list>]**”, **<instance-id>** sets the instance number. The valid number is from 0 to 64. **<vlan-list>** sets consecutive or non-consecutive VLAN numbers. “-” refers to consecutive numbers, and “;” refers to non-consecutive numbers.

Command mode:

MSTP Region Mode

Default:

Before creating any Instances, there is only the instance 0, and VLAN 1~4094 all belong to the instance 0.

Usage Guide:

This command sets the mappings between VLANs and instances. Only if all the mapping relationships and other attributes are same, the switches are considered in the same MSTP region. Before setting any instances, all the VLANs belong to the instance 0. MSTP can support maximum 64 MSTIs (except for CISTs). CIST can be treated as MSTI 0. All the other instances are considered as instance 1 to 64.

Example:

Map VLAN1-10 and VLAN 100-110 to Instance 1.

Switch(config)#spanning-tree mst configuration

Switch(Config-Mstp-Region)#instance 1 vlan 1-10;100-110

19.1.4 name

Command:

name <name>

no name

Function:

In MSTP region mode, set MSTP region name; the “**no name**” command restores the default setting.

Parameter:

<name> is the MSTP region name. The length of the name should be less than 32 characters.

Command mode:

MSTP Region Mode

Default:

Default MSTP region name is the MAC address of this bridge.

Usage Guide:

This command is to set MSTP region name. The bridges with same MSTP region name and same other attributes are considered in the same MSTP region.

Example:

Set MSTP region name to mstp-test.

Switch(config)#spanning-tree mst configuration

Switch(Config-Mstp-Region)#name mstp-test

19.1.5 no

Command:

no <instance-id> | <name> | <revision-level>

Function:

Cancel one command or set it as initial value.

Parameter:

<instance-id> instance number, **<name>** MSTP region name, **<revision-level>** is account the modify value of MST configuration caption.

Command mode:

MSTP Region Mode

Default:

The default revision level is 0.

Usage Guide:

This command deletes the specified instance and MSTP region name, restore the default of modify value is 0.

Example:

Delete instance 1.

```
Switch(Config-Mstp-Region)#no instance 1
```

19.1.6 revision-level

Command:

```
revision-level <level>
```

```
no revision-level
```

Function:

In MSTP region mode, this command is to set revision level for MSTP configuration; the command “**no revision-level**” restores the default setting to 0.

Parameter:

<level> is revision level. The valid range is from 0 to 65535.

Command mode:

MSTP Region Mode

Default:

The default revision level is 0.

Usage Guide:

This command is to set revision level for MSTP configuration. The bridges with same MSTP revision level and same other attributes are considered in the same MSTP region.

Example:

Set revision level to 2000.

```
Switch(config)#spanning-tree mst configuration
```

```
Switch(Config-Mstp-Region)# revision-level 2000
```

19.1.7 show

Command:

```
show
```

Function:

Display the information of current running system.

Command mode:

MSTP Region Mode.

Usage Guide:

This command can check the detail information of system.

Example:

Display the information of current running system.

```
Switch(Config-Mstp-Region)#show
```

19.1.8 spanning-tree

Command:

```
spanning-tree
```

```
no spanning-tree
```

Function:

Enable MSTP in global mode and in Port Mode; The command “**no spanning-tree**” is to disable MSTP.

Command mode:

Global Mode and Port Mode

Default:

MSTP is not enabled by default.

Usage Guide:

If the MSTP is enabled in global mode, the MSTP is enabled in all the ports except for the ports which are set to disable the MSTP explicitly.

Example:

Enable the MSTP in global mode, and disable the MSTP in the interface 1/2.

```
Switch(config)#spanning-tree
```

```
Switch(config)#interface ethernet 1/2
```

```
Switch(Config-If-Ethernet1/2)#no spanning-tree
```

19.1.9 spanning-tree cost

Command:

```
spanning-tree cost <cost>
```

```
no spanning-tree cost
```

Function:

Sets path cost of the current port; the command “**no spanning-tree cost**” restores the default setting.

Parameter:

<cost> sets path cost. The valid range is from 1 to 200,000,000.

Command mode:

Port Mode

Default:

By default, the port cost is relevant to the port bandwidth.

Port Type	Default Path Cost	Suggested Range
10Mbps	2000000	2000000~20000000
100Mbps	200000	200000~2000000
1Gbps	20000	20000~200000

10Gbps	2000	2000~20000
--------	------	------------

For the aggregation ports, the default costs are as below:

Port Type	Allowed Number Of Aggregation Ports	Default Port Cost
10Mbps	N	2000000/N
100Mbps	N	200000/N
1Gbps	N	20000/N
10Gbps	N	2000/N

Usage Guide:

By setting the port cost, users can control the cost from the current port to the root bridge in order to control the elections of port and the designated port of the instance.

Example:

On the port1/2, set the port cost is 3000000.

```
Switch(Config-If-Ethernet1/2)#spanning-tree cost 3000000
```

19.1.10 spanning-tree digest-snooping

Command:

```
spanning-tree digest-snooping  
no spanning-tree digest-snooping
```

Function:

Configure the port to use the authentication string of partner port; the command “**no spanning-tree digest-snooping**” restores to use the port generated authentication string.

Parameter:

None

Command mode:

Port Mode

Default:

Don't use the authentication string of partner port.

Usage Guide:

According to MSTP protocol, the region authentication string is generated by MD5 algorithm with public authentication key, instance ID, VLAN ID. Some manufactory don't use the public authentication key, this causes the incompatibility. After the command is executed the port can use the authentication string of partner port, realize compatibility with these manufactories equipment.

Note: Because the authentication string is related to instance ID and VLAN ID, the command may cause recognizing the equipment that with different instance and VLAN relation as in the same region. Before the command is executed, make sure that instance and VLAN relation is accord for all the equipment. If there are more than one equipment connected, all the connected ports should execute this command.

Example:

Configure the authentication string of partner port.

```
Switch(config)#interface ethernet 1/2
```

```
Switch(Config-If-Ethernet1/2)#spanning-tree digest-snooping
```

```
Switch(Config-If-Ethernet1/2)#
```

19.1.11 spanning-tree format

Command:

```
spanning-tree format {standard | privacy | auto}
```

```
no spanning-tree format
```

Function:

Configure the format of the port packet so to be interactive with products of other companies. The `no` command restores the default format.

Parameter:

standard: The packet format provided by IEEE

privacy: Privacy packet format, which is compatible with CISCO equipments.

auto: Auto identified packet format, which is determined by checking the format of the received packets.

Command Mode:

Port Mode

Default:

Auto Packet Format.

Usage Guide:

As the CISCO has adopted the packet format different with the one provided by IEEE, while many companies also adopted the CISCO format to be CISCO compatible, we have to provide support to both formats. The standard format is originally the one provided by IEEE, and the privacy packet format is CISCO compatible. In case we are not sure about which the packet format is on partner, the AUTO configuration will be preferred so to identify the format by the packets they sent. The AUTO packet format is set by default in the concern of better compatibility with previous products and the leading companies. The packet format will be privacy format before receiving the partner packet when configured to AUTO.

When the format is not AUTO and the received packet format from the partner does not match the configured format, we set the state of the port which receives the unmatched packet to DISCARDING to prevent both sides consider themselves the root which leads to circuits.

When the AUTO format is set, and over one equipment which is not compatible with each other are connected on the port (e.g. a equipment running through a HUB or Transparent Transmission BPDU is connected with several equipments running MSTP), the format alter counts will be recorded and the port will be disabled at certain count threshold. The port can only be re-enabled by the administrator.

Example:

```
Configure port message format as the message format of IEEE. Switch(config)#interface ethernet 1/2
Switch(Config-If-Ethernet1/2)#spanning-tree format standard
Switch(Config-If-Ethernet1/2)#
```

19.1.12 spanning-tree forward-time

Command:

```
spanning-tree forward-time <time>
no spanning-tree forward-time
```

Function:

Set the switch forward delay time; the command "**no spanning-tree forward-time**" restores the default setting.

Parameter:

<time> is forward delay time in seconds. The valid range is from 4 to 30.

Command mode:

Global Mode

Default:

The forward delay time is 15 seconds by default.

Usage Guide:

When the network topology changes, the status of the port is changed from blocking to forwarding. This delay is called the forward delay. The forward delay is co working with hello time and max age. The parameters should meet the following conditions. Otherwise, the MSTP may work incorrectly.

$$2 * (\text{Bridge_Forward_Delay} - 1.0 \text{ seconds}) \geq \text{Bridge_Max_Age}$$
$$\text{Bridge_Max_Age} \geq 2 * (\text{Bridge_Hello_Time} + 1.0 \text{ seconds})$$

Example:

In global mode, set MSTP forward delay time to 20 seconds.

```
Switch(config)#spanning-tree forward-time 20
```

19.1.13 spanning-tree hello-time

Command:

```
spanning-tree hello-time <time>
```

```
no spanning-tree hello-time
```

Function:

Set switch Hello time; The command “**no spanning-tree hello-time**” restores the default setting.

Parameter:

<time> is Hello time in seconds. The valid range is from 1 to 10.

Command mode:

Global Mode

Default:

Hello Time is 2 seconds by default.

Usage Guide:

Hello time is the interval that the switch sends BPDUs. Hello time is co working with forward delay and max age. The parameters should meet the following conditions. Otherwise, the MSTP may work incorrectly.

$$2 * (\text{Bridge_Forward_Delay} - 1.0 \text{ seconds}) \geq \text{Bridge_Max_Age}$$
$$\text{Bridge_Max_Age} \geq 2 * (\text{Bridge_Hello_Time} + 1.0 \text{ seconds})$$

Example:

Set MSTP hello time to 5 seconds in global mode.

```
Switch(config)#spanning-tree hello-time 5
```

19.1.14 spanning-tree link-type p2p

Command:

```
spanning-tree link-type p2p {auto | force-true | force-false}  
no spanning-tree link-type
```

Function:

Set the link type of the current port; the command “**no spanning-tree link-type**” restores link type to auto-negotiation.

Parameter:

auto sets auto-negotiation, **force-true** forces the link as point-to-point type, **force-false** forces the link as non point-to-point type.

Command mode:

Port Mode

Default:

The link type is auto by default; The MSTP detects the link type automatically.

Usage Guide:

When the port is full-duplex, MSTP sets the port link type as point-to-point; When the port is half-duplex, MSTP sets the port link type as shared.

Example:

```
Force the port 1/7-8 as point-to-point type.  
Switch(config)#interface ethernet 1/7-8  
Switch(Config-Port-Range)#spanning-tree link-type p2p force-true
```

19.1.15 spanning-tree maxage

Command:

```
spanning-tree maxage <time>  
no spanning-tree maxage
```

Function:

Set the max aging time for BPDU; the command “**no spanning-tree maxage**” restores the default setting.

Parameter:

<time> is max aging time in seconds. The valid range is from 6 to 40.

Command mode:

Global Mode

Default:

The max age is 20 seconds by default.

Usage Guide:

The lifetime of BPDU is called max age time. The max age is co working with hello time and forward delay. The parameters should meet the following conditions. Otherwise, the MSTP may work incorrectly.

$$2 * (\text{Bridge_Forward_Delay} - 1.0 \text{ seconds}) \geq \text{Bridge_Max_Age}$$
$$\text{Bridge_Max_Age} \geq 2 * (\text{Bridge_Hello_Time} + 1.0 \text{ seconds})$$
Example:

In global mode, set max age time to 25 seconds.

```
Switch(config)#spanning-tree maxage 25
```

19.1.16 spanning-tree max-hop

Command:

```
spanning-tree max-hop <hop-count>
```

```
no spanning-tree max-hop
```

Function:

Set maximum hops of BPDU in the MSTP region; the command “**no spanning-tree max-hop**” restores the default setting.

Parameter:

<hop-count> sets maximum hops. The valid range is from 1 to 40.

Command mode:

Global Mode

Default:

The max hop is 20 by default.

Usage Guide:

The MSTP uses max-age to count BPDU lifetime. In addition, MSTP also uses max-hop to count BPDU lifetime. The max-hop is degressive in the network. The BPDU has the max value when it initiates from MSTP root bridge. Once the BPDU is received, the value of the max-hop is reduced by 1. When a port receives the BPDU with max-hop as 0, it drops this BPDU and sets itself as designated port to send the BPDU.

Example:

Set max hop to 32.

```
Switch(config)#spanning-tree max-hop 32
```

19.1.17 spanning-tree mcheck

Command:

```
spanning-tree mcheck
```

Function:

Force the port to run in the MSTP mode.

Command mode:

Port Mode

Default:

The port is in the MSTP mode by default.

Usage Guide:

If a network which is attached to the current port is running IEEE 802.1D STP, the port converts itself to run in STP mode. The command is used to force the port to run in the MSTP mode. But once the port receives STP messages, it changes to work in the STP mode again.

This command can only be used when the switch is running in IEEE802.1s MSTP mode. If the switch is running in IEEE802.1D STP mode, this command is invalid.

Example:

Force the port 1/2 to run in the MSTP mode.

```
Switch(Config-If-Ethernet1/2)#spanning-tree mcheck
```

19.1.18 spanning-tree mode

Command:

```
spanning-tree mode {mstp | stp | rstp}
no spanning-tree mode
```

Function:

Set the spanning-tree mode in the switch; the command “**no spanning-tree mode**” restores the default setting.

Parameter:

mstp sets the switch in IEEE802.1s MSTP mode; stp sets the switch in IEEE802.1D STP mode; rstp sets the switch in IEEE802.1D RSTP mode.

Command mode:

Global Mode

Default:

The switch is in the MSTP mode by default.

Usage Guide:

When the switch is in IEEE802.1D STP mode, it only sends standard IEEE802.1D BPDU and TCN BPDU. It drops any MSTP BPDUs.

Example:

```
Set the switch in the STP mode.
Switch(config)#spanning-tree mode stp
```

19.1.19 spanning-tree mst configuration

Command:

```
spanning-tree mst configuration
no spanning-tree mst configuration
```

Function:

Enter the MSTP mode. Under the MSTP mode, the MSTP attributes can be set. The command “**no spanning-tree mst configuration**” restores the attributes of the MSTP to their default values.

Command mode:

Global Mode

Default:

The default values of the attributes of the MSTP region are listed as below:

Attribute of MSTP	Default Value
Instance	There is only the instance 0. All the VLANs (1~4094) are mapped to the instance 0.
Name	MAC address of the bridge
Revision	0

Usage Guide:

Whether the switch is in the MSTP region mode or not, users can enter the MSTP mode, configure the attributes, and save the configuration. When the switch is running in the MSTP mode, the system will generate the MST configuration identifier according to the MSTP configuration. Only if the switches with the same MST configuration identifier are considered as in the same MSTP region.

Example:

```
Enter MSTP region mode.
Switch(config)#spanning-tree mst configuration
Switch(Config-Mstp-Region)#
```

19.1.20 spanning-tree mst cost

Command:

```
spanning-tree mst <instance-id> cost <cost>
no spanning-tree mst <instance-id> cost
```

Function:

Sets path cost of the current port in the specified instance; the command “**no spanning-tree mst <instance-id> cost**” restores the default setting.

Parameter:

<instance-id> sets the instance ID. The valid range is 0-64. **<cost>** sets path cost, different cost formats have different ranges. For the default dot1t mode the valid range is 1-200,000,000, and for dot1d is 1-65535.

Command mode:

Port Mode

Default:

By default, the port cost is relevant to the port bandwidth.

Port Type	Default Path Cost	Suggested Range
10Mbps	2000000	2000000~20000000
100Mbps	200000	200000~2000000
1Gbps	20000	20000~200000
10Gbps	2000	2000~20000

For the aggregation ports, the default costs are as below:

Port Type	Allowed Number Of Aggregation Ports	Default Port Cost
10Mbps	N	2000000/N
100Mbps	N	200000/N
1Gbps	N	20000/N
10Gbps	N	2000/N

Port Speed	Port Type	Port Cost	
		802.1D-2008	802.1T
0		65535	200,000,000
10Mbps	Half- duplex	100	2,000,000
	Full- duplex	99	1,999,999
	aggregation link with 2 ports	95	1,000,000
	aggregation link with 3 ports	95	666,666
	aggregation link with 4 ports	95	500,000
100Mbps	Half- duplex	19	200,000
	Full- duplex	18	199,999
	aggregation link with 2 ports	15	100,000
	aggregation link with 3 ports	15	66,666
	aggregation link with 4 ports	15	50,000
1000Mbps	Full- duplex	4	20,000
	aggregation link with 2 ports	3	10,000
	aggregation link with 3 ports	3	6,666
	aggregation link with 4 ports	3	5,000

	ports aggregation link with 4 ports		
10Gbps	Full- duplex aggregation link with 2 ports aggregation link with 3 ports aggregation link with 4 ports	2 1 1 1	2,000 1,000 666 500

Usage Guide:

By setting the port cost, users can control the cost from the current port to the root bridge in order to control the elections of root port and the designated port of the instance.

Example:

On the port1/2, set the MSTP port cost in the instance 2 to 3000000.
Switch(Config-If-Ethernet1/2)#spanning-tree mst 2 cost 3000000

19.1.21 spanning-tree cost-format

Command:

`spanning-tree cost-format {dot1d | dot1t}`

Function:

In global mode, users can select path-cost format with dot1d or dot1t, the default format is dot1t.

Command Mode:

Global mode.

Default:

count path-cost with dot1t format.

Usage Guide:

There are two formats about cost value: they are dot1d marked on IEEE802.1d-2008 and dot1t marked on IEEE802.1t, but path-cost ranges of them are different, dot1d range from 1 to 65535, and dot1t range from 1 to 200,000,000.

If users already configured the cost value of link with **spanning-tree cost** command manually, changing path-cost format with **cost-format** command is successful after the previous configuration is cleared only.

Example:

Set the cost format in global mode

```
Switch(config)#spanning-tree cost-format dot1d
```

19.1.22 spanning-tree mst loopguard

Command:

```
spanning-tree [mst <instance-id>] loopguard  
no spanning-tree [mst <instance-id>] loopguard
```

Function:

Enable the loopguard function for specified instance, the no command disables this function.

Parameter:

<instance-id>: MSTP instance ID.

Command mode:

Port Mode.

Default:

Disable loopguard function.

Usage Guide:

The command can avoid root port or alternate port to be changed as designated port due to invalid unilateralism link.

When the receiving timer is time, the configured port with loopguard is set as block state.

Example:

Configure port 1/2 as loopguard mode for instance 0.

```
Switch(Config)#interface ethernet 1/2
```

```
Switch(Config-Ethernet-1/2)#spanning-tree mst 0 loopguard
```

```
Switch(Config-Ethernet-1/2)#
```

19.1.23 spanning-tree mst port-priority

Command:

```
spanning-tree mst <instance-id> port-priority <port-priority>  
no spanning-tree mst <instance-id> port-priority
```

Function:

Set the current port priority for the specified instance; the command “**no spanning-tree mst <instance-id> port-priority**” restores the default setting.

Parameter:

<instance-id> sets the instance ID. The valid range is from 0 to 64; **<port-priority>** sets port priority. The valid range is from 0 to 240. The value should be the multiples of 16, such as 0, 16, 32...240.

Command mode:

Port Mode

Default:

The default port priority is 128.

Usage Guide:

By setting the port priority, users can control the port ID of the instance in order to control the root port and designated port of the instance. The lower the value of the port priority is, the higher the priority is.

Example:

```
Set the port priority as 32 on the port 1/2 for the instance 1.  
Switch(config)#interface ethernet 1/2  
Switch(Config-If-Ethernet1/2)#spanning-tree mst 1 port-priority 32
```

19.1.24 spanning-tree mst priority

Command:

```
spanning-tree mst <instance-id> priority <bridge-priority>  
no spanning-tree mst <instance-id> priority
```

Function:

Set the bridge priority for the specified instance; the command “**no spanning-tree mst <instance-id> priority**” restores the default setting.

Parameter:

<instance-id> sets instance ID. The valid range is from 0 to 64; **<bridge-priority>** sets the switch priority. The valid range is from 0 to 61440. The value should be the multiples of 4096, such as 0, 4096, 8192...61440.

Command mode:

Global Mode

Default:

The default bridge priority is 32768.

Usage Guide:

By setting the bridge priority, users can change the bridge ID for the specified instance. And the bridge ID can influence the elections of root bridge and designated port for the specified instance.

Example:

Set the priority for Instance 2 to 4096.

```
Switch(config)#spanning-tree mst 2 priority 4096
```

19.1.25 spanning-tree mst rootguard

Command:

```
spanning-tree [mst <instance-id>] rootguard  
no spanning-tree [mst <instance-id>] rootguard
```

Function:

Enable the rootguard function for specified instance, the rootguard function forbid the port to be MSTP root port. "**no spanning-tree mst <instance-id> rootguard**" disable the rootguard function.

Parameter:

<instance-id>: MSTP instance ID.

Command mode:

Port Mode.

Default:

Disable rootguard function.

Usage Guide:

The command is used in Port Mode, if the port is configured to be a rootguard port, it is forbidden to be a MSTP root port. If superior BPDU packet is received from a rootguard port, MSTP did not recalculate spanning-tree, and just set the status of the port to be `root_inconsistent` (blocked). If no superior BPDU packet is received from a blocked rootguard port, the port status will restore to be forwarding. The rootguard function can maintain a relative stable spanning-tree topology when a new switch is added to the network.

Example:

Enable rootguard function for port 1/2 in instance 0.

```
Switch(config)#interface ethernet 1/2
```

```
Switch(Config-If-Ethernet1/2)#spanning-tree mst 0 rootguard
```

```
Switch(Config-If-Ethernet1/2)#
```

19.1.26 spanning-tree portfast

Command:

```
spanning-tree portfast [bpdufilter | bpduguard] [recovery <30-3600>]
```

```
no spanning-tree portfast
```

Function:

Set the current port as boundary port, and BPDU filter \ BPDU guard as specified mode or default mode; the command “**no spanning-tree portfast**” sets the current port as non-boundary port.

Parameter:

bpdufilter: configure the border port mode as BPDU filter

bpduguard: configure the border port mode as BPDU guard

recovery: configure the border port can be recovered automatically after implement bpduguard violation operation

<30-3600>: the recovery time, do not recover it by default

Command mode:

Port Mode

Default:

All the ports are non-boundary ports by default when enabling MSTP.

Usage Guide:

When a port is set to be a boundary port, the port converts its status from discarding to forwarding without bearing forward delay. Once the boundary port receives the BPDU, the port becomes a non-boundary port.

Example:

```
Configure the border port mode as BPDU guard, the recovery time as 60s.  
Switch(config)#interface ethernet 1/2  
Switch(Config-If-Ethernet1/2)#spanning-tree portfast bpduguard recovery 60  
Switch(Config-If-Ethernet1/2)#
```

19.1.27 spanning-tree port-priority

Command:

```
spanning-tree port-priority <port-priority>  
no spanning-tree port-priority
```

Function:

Set the port priority; the command “**no spanning-tree port-priority**” restores the default setting.

Parameter:

<**port-priority**> sets port priority. The valid range is from 0 to 240. The value should be the multiples of 16, such as 0, 16, 32, 48...240.

Command mode:

Port Mode

Default:

The default port priority is 32768.

Usage Guide:

By setting the port priority to designated port. The lower the value of the port priority is, the higher the priority is.

Example:

```
Set the port priority as 4096 on the port 1.  
Switch(Config-If-Ethernet1/1)#spanning-tree port-priority 4096
```


19.1.28 spanning-tree priority

Command:

```
spanning-tree priority <bridge-priority>  
no spanning-tree priority
```

Function:

Configure the spanning-tree priority; the “**no spanning-tree priority**” command restores the default priority.

Parameter:

<**bridge-priority**> is the priority of the bridging switch. Its value should be round times of 4096 between 0 and 61440, such as 0, 4096, 8192... 61440.

Command Mode:

Global Mode.

Default:

Priority is 32768.

Usage Guide:

The bridge ID can be altered by changing the priority of the switch. Further, the priority information can also be used for voting of the root bridge and the specified ports. The bridge priority value of the switch is smaller, however the priority is higher.

Example:

```
Configure the priority is 4096.  
Switch(config)#spanning-tree priority 4096
```

19.1.29 spanning-tree rootguard

Command:

```
spanning-tree rootguard  
no spanning-tree rootguard
```

Function:

Set the port is root port, “**no spanning-tree rootguard**” command sets the port is non-root port.

Parameter:

None.

Command mode:

Port Mode.

Default:

Port is non-root port.

Usage Guide:

The command is used in Port Mode, if the port is configured to be a rootguard port, it is forbidden to be a MSTP root port. If superior BPDU packet is received from a rootguard port, MSTP did not recalculate spanning-tree, and just set the status of the port to be root_inconsistent (blocked). If no superior BPDU packet is received from a blocked rootguard port, the port status will restore to be forwarding. The rootguard function can maintain a relative stable spanning-tree topology when a new switch is added to the network.

Example:

Set the port 1 is root port.

```
Switch(Config-If-Ethernet1/1)#spanning-tree rootguard
```

19.1.30 spanning-tree tcflush (Global mode)

Command:

```
spanning-tree tcflush {enable| disable| protect}
```

```
no spanning-tree tcflush
```

Function:

Configure the spanning-tree flush mode once the topology changes. "no spanning-tree tcflush" restores to default setting.

Parameter:

enable: The spanning-tree flush once the topology changes.

disable: The spanning tree don't flush when the topology changes.

protect: the spanning-tree flush not more than one time every ten seconds.

Command mode:

Global mode

Default:

Enable

Usage Guide:

According to MSTP, when topology changes, the port that send change message clears MAC/ARP table (FLUSH). In fact it is not needed for some network environment to do FLUSH with every topology change. At the same time, as a method to avoid network assault, we allow the network administrator to configure FLUSH mode by the command

Note: For the complicated network, especially need to switch from one spanning tree branch to another rapidly, the disable mode is not recommended.

Example:

Configure the spanning-tree flush mode once the topology changes is not flush to TC.

```
Switch(config)#spanning-tree tcf flush disable
```

```
Switch(config)#
```

19.1.31 spanning-tree tcf flush (Port mode)

Command:

```
spanning-tree tcf flush {enable| disable| protect}
```

```
no spanning-tree tcf flush
```

Function:

Configure the spanning-tree flush mode for port once the topology changes. "no spanning-tree tcf flush" restores to default setting.

Parameter:

enable: The spanning-tree flush once the topology changes.

disable: The spanning tree don't flush when the topology changes.

protect: the spanning-tree flush not more than one time every ten seconds.

Command mode:

Port Mode

Default:

Global configuration

Usage Guide:

According to MSTP, when topology changes, the port that send change message clears MAC/ARP table (FLUSH). In fact it is not needed for some network environment to do FLUSH with every topology change. At the same time, as a method to avoid network assault, we allow the network administrator to configure FLUSH mode by the command

Note: For the complicated network, especially need to switch from one spanning tree branch to another rapidly, the disable mode is not recommended.

Example:

Configure the spanning-tree flush mode once the topology change is not flush to TC.

```
Switch(config)#interface ethernet 1/2
```

```
Switch(Config-If-Ethernet1/2)#spanning-tree tcf flush disable
```

```
Switch(Config-If-Ethernet1/2)#
```

19.1.32 spanning-tree transmit-hold-count

Command:

```
spanning-tree transmit-hold-count <tx-hold-count-value>
```

```
no spanning-tree transmit-hold-count
```

Function:

Set the max transmit-hold-count of port.

Parameter:

tx-hold-count-value: ranging from 1 to 20, the default value is 10.

Command mode:

Global Mode

Default:

10.

Usage Guide:

Set the max number for sending BPDU within the Hello Time interval to control BPDU flow. The variable is used to whole MST bridge.

Example:

Set the max transmit-hold-count as 20.

```
Switch(config)#spanning-tree transmit-hold-count 20
```

19.2 Commands for Monitor and Debug

19.2.1 debug spanning-tree

Command:

```
debug spanning-tree
no debug spanning-tree
```

Function:

Enable the MSTP debugging information; the command “**no debug spanning-tree**” disables the MSTP debugging information.

Command mode:

Admin Mode

Usage Guide:

This command is the general switch for all the MSTP debugging. Users should enable the detailed debugging information, and then they can use this command to display the relevant debugging information. In general, this command is used by skilled technicians.

Example:

```
Enable to receive the debugging information of BPDU messages on the port1/1.
Switch#debug spanning-tree
Switch#debug spanning-tree bpdu rx interface e1/1
```

19.2.2 show mst-pending

Command:

```
show mst-pending
```

Function:

In the MSTP region mode, display the configuration of the current MSTP region.

Command mode:

Admin Mode

Usage Guide:

In the MSTP region mode, display the configuration of the current MSTP region such as MSTP name, revision, VLAN and instance mapping.

Note: Before quitting the MSTP region mode, the displayed parameters may not be effective.

Example:

Display the configuration of the current MSTP region.

```
Switch(config)#spanning-tree mst configuration
```

```
Switch(Config-Mstp-Region)#show mst-pending
```

```
Name      switch
Revision  0
Instance  Vlans Mapped
-----
00         1-29, 31-39, 41-4093
03         30
04         40
05         4094
-----
```

```
Switch(Config-Mstp-Region)#
```

19.2.3 show spanning-tree

Command:

```
show spanning-tree [mst [<instance-id>]] [interface <interface-list>] [detail]
```

Function:

Display the MSTP Information.

Parameter:

<interface-list> sets interface list; *<instance-id>* sets the instance ID. The valid range is from 0 to 64; **detail** sets the detailed spanning-tree information.

Command mode:

Admin and Configuration Mode

Usage Guide:

This command can display the MSTP information of the instances in the current bridge.

Example:

Display the bridge MSTP.

Switch#sh spanning-tree

-- MSTP Bridge Config Info --

Standard : IEEE 802.1s
Bridge MAC : 00: 30: 4f: 01: 0e: 30
Bridge Times : Max Age 20, Hello Time 2, Forward Delay 15
Force Version: 3

Instance 0

Self Bridge Id : 32768 - 00: 30: 4f: 01: 0e: 30
Root Id : 16384.00: 30: 4f: 01: 0f: 52
Ext.RootPathCost : 200000
Region Root Id : this switch
Int.RootPathCost : 0
Root Port ID : 128.1

Current port list in Instance 0:

Ethernet1/1 Ethernet1/2 (Total 2)

PortName	ID	ExtRPC	IntRPC	State	Role	DsgBridge	DsgPort
Ethernet1/1	128.001	0	0	FWD	ROOT	16384.00304f010f52	128.007
Ethernet1/2	128.002	0	0	BLK	ALTR	16384.00304f010f52	128.011

Instance 3

Self Bridge Id : 0.00: 30: 4f: 01: 0e: 30
Region Root Id : this switch
Int.RootPathCost : 0
Root Port ID : 0

Current port list in Instance 3:

Ethernet1/1 Ethernet1/2 (Total 2)

PortName	ID	IntRPC	State	Role	DsgBridge	DsgPort
Ethernet1/1	128.001	0	FWD	MSTR	0.00304f010e30	128.001
Ethernet1/2	128.002	0	BLK	ALTR	0.00304f010e30	128.002

Instance 4

Self Bridge Id : 32768.00: 30: 4f: 01: 0e: 30

Region Root Id : this switch

Int.RootPathCost : 0

Root Port ID : 0

Current port list in Instance 4:

Ethernet1/1 Ethernet1/2 (Total 2)

PortName	ID	IntRPC	State	Role	DsgBridge	DsgPort
Ethernet1/1	128.001	0	FWD	MSTR	32768.00304f010e30	128.001
Ethernet1/2	128.002	0	BLK	ALTR	32768.00304f010e30	128.002

Displayed Information	Description
Bridge Information	
Standard	STP version
Bridge MAC	Bridge MAC address
Bridge Times	Max Age, Hello Time and Forward Delay of the bridge
Force Version	Version of STP
Instance Information	
Self Bridge Id	The priority and the MAC address of the current bridge for the current instance
Root Id	The priority and the MAC address of the root bridge for the current instance
Ext.RootPathCost	Total cost from the current bridge to the root of the entire network
Int.RootPathCost	Cost from the current bridge to the region root of the current instance
Root Port ID	Root port of the current instance on the current bridge
MSTP Port List Of The Current Instance	
PortName	Port name
ID	Port priority and port index
ExtRPC	Port cost to the root of the entire network
IntRPC	Cost from the current port to the region root of the current instance
State	Port status of the current instance
Role	Port role of the current instance
DsgBridge	Upward designated bridge of the current port in the current instance
DsgPort	Upward designated port of the current port in the current instance

19.2.4 show spanning-tree mst config

Command:

```
show spanning-tree mst config
```

Function:

Display the configuration of the MSTP in the Admin mode.

Command mode:

Admin Mode

Usage Guide:

In the Admin mode, this command can show the parameters of the MSTP configuration such as MSTP name, revision, VLAN and instance mapping.

Example:

Display the configuration of the MSTP on the switch.

```
Switch#show spanning-tree mst config
```

```
Name          switch
Revision      0
Instance      Vlans Mapped
-----
00            1-29, 31-39, 41-4094
03            30
04            40
-----
```

Chapter 20 Commands for QoS

20.1 accounting

Command:

accounting
no accounting

Function:

Set statistic function for the classified traffic.

Parameter:

None.

Command mode:

Policy map configuration mode

Default:

Do not set statistic function.

Usage Guide:

After enable this function, add statistic function to the traffic of the policy class map. In single bucket mode, the messages can be only red or green when passing policy. When printing the information, in-profile means green and out-profile means red; In dual bucket mode, there are three colors(green, yellow, red) of messages. in-profile means **green**, **out-profile** means red and yellow.

Example:

```
Count the packets which satisfy c1 rule.  
Switch(config)#policy-map p1  
Switch(Config-PolicyMap-p1)#class c1  
Switch(Config-PolicyMap-p1-Class-c1)#accounting  
Switch(Config-PolicyMap-p1-Class-c1)#exit  
Switch(Config-PolicyMap-p1)#exit
```

20.2 class

Command:

```
class <class-map-name> [insert-before <class-map-name>]  
no class <class-map-name>
```

Function:

Associates a class to a policy map and enters the policy class map mode; the no command deletes the specified class.

Parameters:

<class-map-name> is the class map name used by the class.

insert-before <class-map-name> insert a new configured class to the front of an existent class to improve the priority of the new class.

Default:

No policy class is configured by default.

Command mode:

Policy map configuration mode

Usage Guide:

Before setting up a policy class, a policy map should be created and the policy map mode entered. In the policy map mode, classification and nexthop configuration can be performed on packet traffic classified by class map.

Example:

After add a policy class map c1 to the policy map, add a policy class map c2 and insert it to the front of c1.

```
Switch(config)#policy-map p1
```

```
Switch(Config-PolicyMap-p1)#class c1
```

```
Switch(Config-PolicyMap-p1-Class-c1)#exit
```

```
Switch(Config-PolicyMap-p1)#class c2 insert-before c1
```

```
Switch(Config-PolicyMap-p1-Class-c2)#exit
```

20.3 class-map

Command:

```
class-map <class-map-name>  
no class-map <class-map-name>
```

Function:

Creates a class map and enters class map mode; the no command deletes the specified class map.

Parameters:

<class-map-name> is the class map name.

Default:

No class map is configured by default.

Command mode:

Global Mode

Example:

Creating and then deleting a class map named "c1".

```
Switch(config)#class-map c1
```

```
Switch(Config-ClassMap-c1)#exit
```

```
Switch(config)#no class-map c1
```

20.4 clear mls qos statistics

Command:

```
clear mls qos statistics [interface <interface-name> | vlan <vlan-id>]
```

Function:

Clear accounting data of the specified ports or VLAN Policy Map. If there are no parameters, clear accounting data of all policy map.

Parameters:

<vlan-id>: VLAN ID

<interface-name>: The interface name

Default:

Do not set action.

Command mode:

Admin Mode

Usage Guide:

Clear accounting data of the specified ports or VLAN Policy Map. If there are no parameters, clear accounting data of all policy map.

Example:

Clear the Policy Map statistic of VLAN 100.

```
Switch#Clear mls qos statistics vlan 100
```

20.5 drop

Command:

drop
no drop

Function:

Drop data package that match the class, the no command cancels the assigned action.

Parameters:

None.

Default:

Do not set the action.

Command mode:

Policy class map configuration mode

Usage Guide:

Drop the specified packet after configure this command.

Example:

Drop the packet which satisfy c1.

```
Switch(config)#policy-map p1
```

```
Switch(Config-PolicyMap-p1)#class c1
```

```
Switch(Config-PolicyMap-p1-Class-c1)#drop
```

```
Switch(Config-PolicyMap-p1-Class-c1)#exit
```

```
Switch(Config-PolicyMap-p1)#exit
```

20.6 match

Command:

```
match {access-group <acl-index-or-name> | ip dscp <dscp-list> | ip precedence <ip-precedence-list> | ipv6  
access-group <acl-index-or-name> | ipv6 dscp <dscp-list> | ipv6 flowlabel <flowlabel-list> | vlan <vlan-list> |  
cos <cos-list>}  
no match {access-group | ip dscp | ip precedence| ipv6 access-group| ipv6 dscp | ipv6 flowlabel | vlan | cos}
```

Function:

Configure the match standard of the class map; the no form of this command deletes the specified match standard.

Parameter:

access-group <acl-index-or-name> match specified IP ACL, MAC ACL or IPv6 standard ACL or MAC-IP ACL, the parameters are the number or name of the ACL;

ip dscp <dscp-list> and **ipv6 dscp <dscp-list>** match specified DSCP value, the parameter is a list of DSCP consisting of maximum 8 DSCP values, the range is 0~63;

ip precedence <ip-precedence-list> match specified IP Precedence, the parameter is a IP Precedence list consisting of maximum 8 IP Precedence values with a valid range of 0~7;

ipv6 access-group <acl-index-or-name> match specified IPv6 ACL, the parameter is the number or name of the IPv6 ACL, it only supports standard ipv6 acl;

ipv6 flowlabel <flowlabel-list> match specified IPv6 flow label, the parameter is IPv6 flow label value, the range is 0~1048575;

vlan <vlan-list> match specified VLAN ID, the parameter is a VLAN ID list consisting of maximum 8 VLAN IDs, the range is 1~4094;

cos <cos-list> match specified CoS value, the parameter is a CoS list consisting of maximum 8 CoS, the range is 0~7.

Default:

No match standard by default

Command Mode:

Class-map Mode

Usage Guide:

Only one match standard can be configured in a class map. When configuring the match ACL, permit rule as the match option, apply Policy Map action. Deny rule as the excluding option, do not apply Policy Map action. If configure another match rule after one was configured, the operation fails, but configure the same match rule will cover the previous.

Example:

Create a class-map named c1, and configure the class rule of this class-map to match packets with IP Precedence of 0.

```
Switch(config)#class-map c1
```

```
Switch(Config-ClassMap-c1)#match ip precedence 0
```

```
Switch(Config-ClassMap-c1)#exit
```

20.7 mls qos cos

Command:

```
mls qos cos {<default-cos>}
```

```
no mls qos cos
```

Function:

Configures the default CoS value of the port; the “**no mls qos cos**” command restores the default setting.

Parameters:

<default-cos> is the default CoS value for the port, the valid range is 0 to 7.

Default:

The default CoS value is 0.

Command mode:

Port Configuration Mode.

Usage Guide:

Configure the default CoS value for switch port. In default configuration, the message ingress cos from this port are default value whether the message with tag. If the message without tag, the message cos value for tag is enacted.

Example:

Setting the default CoS value of ethernet port 1/1 to 7, i.e., packets coming in through this port will be assigned a default CoS value of 7 if no CoS value present .

```
Switch(config)#interface ethernet 1/1
```

```
Switch(Config-If-Ethernet1/1)#mls qos cos 7
```

20.8 mls qos map

Command:

```
mls qos map {cos-intp <intp1...intp8> | cos-dp<dp1...dp8> | dscp-intp <in-dscp list> to <intp> | dscp-dp
<in-dscp list> to <dp> | dscp-dscp <in-dscp list> to <out-dscp>}
no mls qos map {cos-intp | cos-dp | dscp-intp | dscp-dp | dscp-dscp}
```

Function:

Set the priority mapping of QoS, the **no** command restores the default mapping.

Parameters:

cos-intp <intp1...intp8> defines the mapping from CoS to intp (queue) value, <intp1..intp8> are 8 intp value corresponding to the 0 to 7 CoS value, each intp value is delimited with space, ranging from 0 to 3;

cos-dp<dp1...dp8> defines the mapping from Cos to the dropping priority, <dp1...dp8> is the Cos value of 0 to 7 that correspond to the 8 dropping priority. Every dropping priority value is separated by the space and the range of the dropping priority is 0 to 2;

dscp-intp defines the mapping from DSCP to intp (queue);

dscp-dp defines the mapping from dscp value to the dropping priority;

dscp-dscp defines the mapping from ingress dscp value to egress dscp value, <in-dscp list> is the inputting dscp value and there are 8 at most. They are separated by the space and the range is 0 to 63. <out-dscp> is the outputting dscp value and the range is 0 to 63.

Default:

Default mapping values are:

Default CoS-TO-INTP Map

CoS Value	0	1	2	3	4	5	6	7
INTP Value	0	0	1	1	2	2	3	3

Default CoS-TO-DP Map

CoS Value	0	1	2	3	4	5	6	7
DP Value	0	0	0	0	0	0	0	0

Default DSCP-TO-INTP Map

In-DSCP Value	0-7	8-15	16-23	24-31	32-39	40-47	48-55	56-63
INTP Value	0	0	1	1	2	2	3	3

Default DSCP-TO-DP Map

In-DSCP Value	0-7	8-15	16-23	24-31	32-39	40-47	48-55	56-63
DP Value	0	0	0	0	0	0	0	0

Default DSCP-TO-DSCP Map

In-DSCP Value	0-7	8-15	16-23	24-31	32-39	40-47	48-55	56-63
Out-DSCP Value	0	8	16	24	32	40	48	56

Command mode:

Global Mode

Usage Guide:

INTP means the chip internal priority setting. Because of the internal DSCP value have 64 and the chip internal priority (queue) only 8, the dscp-intp mapping need 8 continuum internal dscp mapping to the same INTP.

Example:

1. Setting the CoS-to-INTP mapping value to the default 0 8 16 24 32 40 48 56 to 0 1 2 3 3 2 1 0.

```
Switch(config)#mls qos map cos-intp 0 1 2 3 3 2 1 0
```

20.9 mls qos queue algorithm

Command:

```
mls qos queue algorithm {sp | wrr| wdr }
no mls qos queue algorithm
```

Function:

After configure this command, the queue management algorithm is set.

Parameters:

sp: The strict priority, the queue number of bigger, then the priority is higher

wrr: Select wrr algorithm

wdr: Select wdr algorithm

Default:

The default queue algorithm is wrr.

Command mode:

Global Mode.

Usage Guide:

After configure this command, the queue management algorithm is set.

Example:

Setting the queue management algorithm as sp.

```
Switch(config)#mls qos queue algorithm sp
```

20.10 mls qos queue wrr weight

Command:

```
mls qos queue wrr weight <weight0..weight7>
```

```
no mls qos queue wrr weight
```

Function:

After configure this command, the queue weight is set.

Parameters:

<weight0..weight7> defines the queue weight, for WRR algorithm, this configuration is valid, but SP algorithm is invalid. when the weight is 0, this queue adopts SP algorithm to manage, and WRR algorithm turns into SP+WRR algorithm. The absolute value of WRR is meaningless. WRR allocates bandwidth by using 4 weight values. The different chips support the different weight range, if the setting exceeds the chip range, it will prompt the right range.

Default:

The queue weight is 1 2 3 4 5 6 7 8.

Command mode:

Global Mode.

Usage Guide:

If the weight of queue is configured as 0, this queue will be scheduled with SP algorithm. This time, WRR algorithm will become SWRR algorithm. The system will ensure SP queue scheduling when scheduling. When there are no packets sent in SP queue, WRR will be scheduled. SP queue runs the priority scheduling manner strictly, WRR runs weighted round robin manner.

Example:

Configure the queue weight as 1:2:3:4:4:3:2:1.

```
Switch(config)#mls qos queue weight 1 2 3 4 4 3 2 1
```

20.11 mls qos queue wdr weight

Command:

```
mls qos queue wdr weight <weight0..weight7>  
no mls qos queue wdr weight
```

Function:

After configure this command, the queue weight is set.

Parameters:

<weight0..weight7> defines the queue weight, in Kbytes. For WDRR algorithm, this configuration is valid, but for SP algorithm, it is invalid. When the weight is 0, this queue adopts SP algorithm to manage, and WDRR algorithm turns into SP+WDRR algorithm. WRR, in byte, allocates bandwidth by using 8 weight values. The different chips support the different weight range, if the setting exceeds the chip range will prompt the right range, when the chip supports 4 queues, it's parameter turns into <weight1..weight4>.

Default:

The queue weight is 10 20 40 80 160 320 640 1280.

Command mode:

Port Mode.

Usage Guide:

If the queue weight is configured as 0, it uses SP algorithm to manage, while WRR turns into SWDRR. When removing the queue, the system will manage SP queue at first, then manage WDRR queue, SP queue executes the strict priority management mode, WDRR queue executes the weight rotation management mode.

Example:

Configure the queue bandwidth as 10kbytes, 10kbytes, 20kbytes, 20kbytes, 30kbytes, 30kbytes, 40kbytes, 40kbytes.

```
Switch(interface-ethernet1/1)#mls qos queue wdr weight 10 10 20 20 40 40 80 80
```

20.12 mls qos queue bandwidth

Command:

```
mls qos queue <queue-id> bandwidth <minimum-bandwidth> <maximum-bandwidth>  
no mls qos queue <queue-id> bandwidth
```

Function:

After configure this command, the queue bandwidth guarantee is set.

Parameters:

<queue-id> is the queue ID to configure the bandwidth guarantee, the different chip supports the different queue count, the range is different too, and the ranging from 1 to 8.

<minimum-bandwidth > is the minimum-bandwidth, ranging from 0 to 128000, when input 0, it means the min-bandwidth function is not take effect.

<maximum-bandwidth > is the maximum-bandwidth, ranging from 0 to 128000, when input 0, it means the max-bandwidth function is not take effect. The minimum-bandwidth must not bigger than maximum-bandwidth.

Default:

The queue bandwidth have no guarantee.

Command mode:

Port Mode.

Usage Guide:

The minimum-bandwidth guarantee and maximum-bandwidth limit can be configured at the different or same queue. The queue bandwidth pledge for egress is relative to management mode, for example: one port is the strict priority-queue, the highest priority is queue 1 now, it will satisfy this queue traffic when block is happened. But if user want the lower priority of queue having bandwidth, it can remain bandwidth via this command, the lower priority queue's minimum-bandwidth will be satisfied at first, then the excess bandwidth is managed according to SP.

Example:

Configure the minimum-bandwidth is 64kbps and the maximum-bandwidth is 128kbps for ethernet1/2 queue1.

```
Switch(config)#interface ethernet 1/2
```

```
Switch(Config-If-Ethernet1/2)# mls qos queue 1 bandwidth 64 128
```

20.13 mls qos trust

Command:

```
mls qos trust dscp
```

```
no mls qos trust dscp
```

Function:

Configures port trust; the no command disables the current trust status of the port.

Parameters:

dscp configures the port to trust DSCP value.

Default:

Trust CoS value.

Command mode:

Port Configuration Mode.

Usage Guide:

trust dscp mode: Set the intp field based dscp-to-intp mapping.

Example:

Set trust dscp of port.

```
Switch(config)#interface ethernet 1/1
```

```
Switch(config-if-ethernet1/1)#mls qos trust dscp
```

20.14 policy

Command:**Single Bucket Mode:**

```
policy <bits_per_second> <normal_burst_bytes> ({conform-action ACTION | exceed-action ACTION})
```

Dual Bucket Mode:

```
policy <bits_per_second> <normal_burst_bytes> [pir <peak_rate_bps>] | <maximum_burst_bytes>
[ {conform-action ACTION | exceed-action ACTION | violate-action ACTION } ]
```

ACTION definition:

```
drop | transmit / set-dscp-transmit <dscp_value> | set-prec-transmit <ip_precedence_value> |
set-cos-transmit <cos_value> | set-internal-priority <inp_value> | set-Drop-Precedence <dp_value>
```

```
no policy
```

Function:

The non-aggregation policy command supporting three colors. Determine whether the working mode of token bucket is single rate single bucket, single rate dual bucket or dual rate dual bucket, set the corresponding action to the different color packets. The no command will delete the mode configuration.

Parameters:

bits_per_second: The committed information rate – CIR (Committed Information Rate), in Kbps, ranging from 1 to 10000000;

normal_burst_bytes: The committed burst size – CBS (Committed Burst Size), in byte, ranging from 1 to 1000000. When the configured CBS value exceeds the max limit of the chip, configure the hardware with max number supported by the chip without any CLI prompt; **maximum_burst_bytes:** The peak burst size – PBS (Peak Burst Size), in byte, ranging from 1 to 10000000. When the configured PBS value exceeds the max limit of the chip, configure the hardware with max number supported by the chip without any CLI prompt. Notice: this configuration only exists in dual bucket mode;

pir_peak_rate_bps: The peak information rate – PIR (Peak Information Rate), in kbps, ranging from 1 to 10000000. Without configuring PIR, the Police works in the single rate dual bucket mode; otherwise in the dual rate dual bucket mode. Notice: this configuration only exists in dual bucket mode;

violate-action: The actions to take when the PIR is exceeded, which means the messages are red, the default as drop;

conform-action: The action to take when the CIR is not exceeded, which means the messages are green, the default as transmit;

exceed-action: The actions to take when the CIR is exceeded but PIR isn't, which means the messages are yellow, the default as drop.

ACTION include:

drop/transmit: Drop/transmit the packets

set-dscp-transmit sets DSCP, it is valid to IPv4 and IPv6 packets, only set-dscp-transmit or set-prec-transmit can be selected.

set-prec-transmit sets TOS, only set-prec-transmit or set-dscp-transmit can be selected

set-internal-priority sets the internal priority of the packets

set-Drop-Precedence sets the drop precedence of the packets

set-cos-transmit sets the CoS value of the L2 packets

Default:

No policy action; the default action of conform-action is transmit, while that of exceed-action and violate-action are both drop.

Command mode:

Policy class map configuration Mode

Usage Guide:

The CLI can support both single bucket and dual bucket configuration, and determine which one to select by checking whether PIR or PBS is configured. When configuring with CLI, after configuring CBS, if the action is directly configured, the mode is single bucket dual color; if only PBS is configured, the mode is single rate dual bucket three color; if PIR and PBS are configured, the mode is dual rate dual bucket three color. "set" and "policy" (policy aggregate) are selected and have the same action in Policy Map, then the action selected by "policy" will cover the action of "set".

Example:

In the policy class table configuration mode, set the CIR as 1000, CBS as 2000 and the action when CIR is not exceeded as transmitting the messages after changing DSCP to 23, and the action triggered by exceeding CIR as transmit without changing the messages.

```
Switch(config)#class-map cm
```

```
Switch(config-classmap-cm)#match cos 0
```

```
Switch(config-classmap-cm)#exit
```

```
Switch(config)#policy-map 1
```

```
Switch(config-policymap-1)#class cm
```

```
Switch(config-policymap-1-class-cm)#policy 1000 2000 conform-action set-dscp-transmit 23
```

20.15 policy aggregate

Command:

```
policy aggregate <aggregate-policy-name>
```

```
no policy aggregate <aggregate-policy-name>
```

Function:

Police Map reference aggregate policy, applies an aggregate policy to classified traffic; the no command deletes the specified aggregate policy.

Parameters:

<aggregate-policy-name> is the policy set name.

Default:

No policy is configured by default.

Command mode:

Policy class map configuration Mode

Usage Guide:

The same policy set can be referred to by different policy class maps.

Example:

Create class-map, the match rule is the cos value is 0; policy-map is 1, enter the policy map mode, set the Policy and choose the color policy for the current list.

```
Switch(config)#class-map cm
```

```
Switch(config-classmap-cm)#match cos 0
```

```
Switch(config-classmap-cm)#exit
```

```
Switch(config)#policy-map 1
```

```
Switch(config-policymap-1)#class cm
```

```
Switch(config-policymap-1-class-cm)#policy aggregate color
```

20.16 policy-map

Command:

```
policy-map <policy-map-name>
```

```
no policy-map <policy-map-name>
```

Function:

Creates a policy map and enters the policy map mode; the “**no policy-map <policy-map-name>**” command deletes the specified policy map.

Parameters:

<policy-map-name> is the policy map name.

Default:

No policy map is configured by default.

Command mode:

Global Mode

Usage Guide:

Policy class map operation can be done in policy map configuration mode.

Example:

```
Creating and deleting a policy map named "p1".  
Switch(config)#policy-map p1  
Switch(Config-PolicyMap-p1)#exit  
Switch(config)#no policy-map p1
```

20.17 service-policy input

Command:

```
service-policy input <policy-map-name>  
no service-policy input {<policy-map-name>}
```

Function:

Applies a policy map to the specified port; the no command deletes the specified policy map applied to the port or deletes all the policy maps applied on the ingress direction of the port .

Parameters:

input <policy-map-name> applies the specified policy map to the ingress direction of switch port.
no command will delete all the policy maps applied on the ingress direction of the port if there is not the specified policy map name.

Default:

No policy map is bound to port by default.

Command mode:

Port Configuration Mode.

Usage Guide:

Only one policy map can be applied to each direction of each port or VLAN interface. It is not recommended to use policy map on VLAN and VLAN's port at the same time. Egress policy map is not supported yet.

Example:

```
Bind policy p1 to ingress Ethernet port1/1.  
Switch(config)#interface ethernet 1/1  
Switch(Config-If-Ethernet1/1)#service-policy input p1  
Bind policy p1 to ingress redirection of v1 interface.  
Switch(config)#interface vlan 1  
Switch(Config-If-vlan1)#service-policy input p1
```

20.18 service-policy input vlan

Command:

```
service-policy input <policy-map-name> vlan <vlan-list>  
no service-policy input {<policy-map-name>} vlan <vlan-list>
```

Function:

Applies a policy map to the specified VLAN interface; the no command deletes the specified policy map applied to the VLAN interface or deletes all the policy maps applied in the ingress direction of the vlan interface .

Parameters:

input <policy-map-name> applies the specified policy map to the ingress direction of switch VLAN interface.
vlan <vlan-list> the vlan list of binding policy map.
no command will deletes all the policy maps applied in the ingress direction of the vlan interface if there is not the specified policy map name.

Default:

No policy map is bound to VLAN interface by default.

Command mode:

Global Configuration Mode.

Usage Guide:

Only one policy map can be applied to each direction of each port or VLAN interface. It is not recommended to use policy map on VLAN and VLAN's port at the same time. Egress policy map is not supported yet.

Example:

Bind policy p1 to ingress of VLAN interface v2, v3, v4, v6.
Switch(config)# service-policy input p1 vlan 2-4;6

20.19 set

Command:

```
set {ip dscp <new-dscp> | ip precedence <new-precedence> | internal priority <new-inp> | drop precedence  
<new-dp> | cos <new-cos>}  
no set {ip dscp | ip precedence | internal priority | drop precedence | cos}
```

Function:

Assign a new DSCP, IP Precedence for the classified traffic; the no form of this command delete assigning the new values.

Parameter:

ip dscp <new-dscp> new DSCP value, do not distinguish v4 and v6.

ip precedence <new-precedence> new IP Precedence.

cos <new cos> new COS value.

Default:

Not assigning by default.

Command Mode:

Policy Class-map Mode

Usage Guide:

Only the classified traffic which matches the matching standard will be assigned with the new values.

Example:

Set the IP Precedence of the packets matching c1 class rule to 3.

```
Switch(config)#policy-map p1
```

```
Switch(Config-PolicyMap-p1)#class c1
```

```
Switch(Config-PolicyMap-p1-Class-c1)#set ip precedence 3
```

```
Switch(Config-PolicyMap-p1-Class-c1)#exit
```

```
Switch(Config-PolicyMap-p1)#exit
```

20.20 show class-map

Command:

```
show class-map [<class-map-name>]
```

Function:

Displays class map of QoS.

Parameters:

<class-map-name> is the class map name.

Default:

N/A.

Command mode:

Admin Mode.

Usage Guide:

Displays all configured class-map or specified class-map information.

Example:

Switch # show class-map

Class map name:c1, used by 1 times

match acl name:1

Displayed information	Explanation
Class map name:c1	Name of the Class map
used by 1 times	Used times
match acl name:1	Classifying rule for the class map.

20.21 show policy-map

Command:

show policy-map [*<policy-map-name>*]

Function:

Displays policy map of QoS.

Parameters:

<policy-map-name> is the policy map name.

Default:

N/A.

Command mode:

Admin Mode.

Usage Guide:

Displays all configured policy-map or specified policy-map information.

Example:

Switch#show policy -map

Policy Map p1, used by 0 port

Class Map name: c1

policy CIR: 1000 CBS: 1000 PIR: 200 PBS: 3000

conform-action:

transmit

exceed-action:

drop

violate-action:

drop

Displayed information	Explanation
Policy Map p1	Name of policy map
Class map name:c1	Name of the class map referred to
policy CIR: 1000 CBS: 1000 PIR: 200 PBS: 3000 conform-action: transmit exceed-action: drop violate-action: drop	Policy implemented

20.22 show mls qos interface

Command:

```
show mls qos {interface [<interface-id>] [policy | queuing] | vlan <vlan-id>} | [begin | include | exclude  
<regular-expression>]
```

Function:

Displays QoS configuration information on a port.

Parameters:

<interface-id> is the port ID; <vlan-id>: VLAN ID; policy is the policy setting on the port; queuing is the queue setting for the port.

Default:

N/A.

Command mode:

Admin Mode.

Usage Guide:

In single rate single bucket mode, the messages can only red or green when passing police. In the print information, in-profile means green and out-profile means red. In dual bucket mode, there are three colors of messages. But the counter can only count two kinds of messages, the red and yellow ones will both be treated as out-profile. Only when configuring ingress policies, there is statistic information.

Example:

```
Switch#show mls qos interface ethernet 1/2
Ethernet1/2 :
Default COS : 0
Trust : COS
Attached Policy Map for Ingress: p1
Classmap    classified    in-profile    out-profile (in packets)
   c1         20             10            10
   c2         NA             NA             NA
(If Class Map is not configured Accounting, show NA)
```

```
Egress Internal-Priority-TO-Queue map:
INTP   0    1    2    3    4    5    6    7
-----
Queue  0    1    2    3    4    5    6    7
```

```
Queue Algorithm: WRR
Queue weights:
Queue   0    1    2    3    4    5    6    7
-----
WrrWeight 1    2    3    4    5    6    7    8
WdrrWeight 10   20   40   80   160  320  640  1280
```

```
Bandwidth Guarantee Configuration:
Queue   1    2    3    4    5    6    7    8
-----
MinBW(K) 0    0    0    0    0    0    0    0
MaxBW(K) 0    0    0    0    0    0    0    0
```

Display Information	Explanation
Ethernet1/2	Port name
default cos:0	Default CoS value of the port

Trust : COS	The trust state of the port
Attached Policy Map for Ingress: p1	Policy name bound to port
ClassMap	ClassMap name
classified	Total data packets match this ClassMap. If there is no Accounting for Class Map, show NA
in-profile	Total in-profile data packets match this ClassMap. If there is no Accounting for Class Map, show NA
out-profile	Total out-profile data packets match this ClassMap. If there is no Accounting for Class Map, show NA
Internal-Priority-TO-Queue map::	Internal-Priority to queue mapping
Queue Algorithm :	WRR or WDRR or PQ queue out method
Queue weights	Queue weights configuration
Bandwidth Guarantee Configuration	Bandwidth guarantee configuration

Switch(config)#show mls qos interface ethernet1/2 queuing

Ethernet1/2:

Egress Internal-Priority-TO-Queue map:

INTP: 0 1 2 3 4 5 6 7

Queue: 0 1 2 3 4 5 6 7

Queue Algorithm: WRR

Queue weights:

Queue 0 1 2 3 4 5 6 7

WrrWeight 1 2 3 4 5 6 7 8

WdrWeight 10 20 40 80 160 320 640 1280

Bandwidth Guarantee Configuration:

Queue 1 2 3 4 5 6 7 8

MinBW(K) 0 0 0 0 0 0 0 0

MaxBW(K) 0 0 0 0 0 0 0 0

Display Information	Explanation
Internal-Priority-TO-Queue map::	Internal-Priority to queue mapping
Queue Algorithm :	WRR or WDRR or PQ queue out method
Queue weights	Queue weights configuration
Bandwidth Guarantee Configuration	Bandwidth guarantee configuration

Switch#show mls qos interface ethernet 1/2 policy

Ethernet1/2 :

Attached Policy Map for Ingress: p1

Accounting : ON

Classmap	classified	in-profile	out-profile (in packets)
c1	0	0	0

Display Information	Explanation
Ethernet1/2	Port name
Attached Policy Map for Ingress: p1	Policy name bound to port
ClassMap	ClassMap name
classified	Total data packets match this ClassMap.
in-profile	Total in-profile data packets match this ClassMap.
out-profile	Total out-profile data packets match this ClassMap.

Switch#show mls qos vlan 100

Vlan 100 :

Attached Policy Map for Ingress: p1

Classmap	classified	in-profile	out-profile (in packets)
c1	20	10	10

20.23 show mls qos maps

Command:

```
show mls qos maps [cos-intp | cos-dp | dscp-intp | dscp-dp | dscp-dscp] [begin | include | exclude <regular-expression> ]
```

Function:

Display the configuration of QoS mapping.

Parameters:

cos-intp: The mapping from ingress L2 CoS to internal priority

cos-dp: The mapping from ingress L2 COS to the dropping priority

dscp-intp: The mapping from ingress DSCP to internal priority

dscp-dp : The mapping from ingress DSCP to the dropping priority

intp-dscp : The mapping from egress interior priority to DSCP

Default:

None.

Command mode:

Admin and Configuration Mode.

Usage Guide:

Display the map configuration information of QoS.

Example:

Display configuration information of the mapping table.

Ingress COS-TO-Internal-Priority map:

COS: 0 1 2 3 4 5 6 7

INTP: 0 1 2 3 4 5 6 7

Ingress DSCP-TO-Internal-Priority map:

d1 : d2	0	1	2	3	4	5	6	7	8	9
0:	0	0	0	0	0	0	0	0	1	1
1:	1	1	1	1	1	1	2	2	2	2
2:	2	2	2	2	3	3	3	3	3	3
3:	3	3	4	4	4	4	4	4	4	4
4:	5	5	5	5	5	5	5	5	6	6
5:	6	6	6	6	6	6	7	7	7	7
6:	7	7	7	7						

Ingress COS-TO-Drop-Precedence map:

COS: 0 1 2 3 4 5 6 7

DP: 0 0 0 0 0 0 0 0 0

Ingress DSCP-TO-DSCP map:

d1 : d2	0	1	2	3	4	5	6	7	8	9
0:	0	0	0	0	0	0	0	0	8	8
1:	8	8	8	8	8	8	16	16	16	16
2:	16	16	16	16	24	24	24	24	24	24
3:	24	24	32	32	32	32	32	32	32	32
4:	40	40	40	40	40	40	40	40	48	48
5:	48	48	48	48	48	48	56	56	56	56
6:	56	56	56	56						

Ingress DSCP-TO-Drop-Precedence map:

d1 : d2	0	1	2	3	4	5	6	7	8	9
0:	0	0	0	0	0	0	0	0	0	0
1:	0	0	0	0	0	0	0	0	0	0
2:	0	0	0	0	0	0	0	0	0	0
3:	0	0	0	0	0	0	0	0	0	0
4:	0	0	0	0	0	0	0	0	0	0
5:	0	0	0	0	0	0	0	0	0	0
6:	0	0	0	0						

20.24 show mls qos vlan

Command:

show mls qos vlan <v-id>

Parameters:

v-id: the ranging from 1 to 4094.

Command Mode:

Admin mode.

Default:

None.

Example:

```
Switch#show mls qos vlan 1
```

```
Vlan 1:
```

```
Attached Policy Map for Ingress: 1
```

Classmap	classified	in-profile	out-profile (in packets)
1	NA	NA	NA

```
Switch(config)#show mls qos vlan 7
```

```
Vlan 7:
```

```
Attached Policy Map for Ingress: 7
```

Classmap	classified	in-profile	out-profile (in packets)
7	0	0	0

20.25 transmit

Command:

```
transmit
```

```
no transmit
```

Function:

Transmit data package that match the class, the no command cancels the assigned action.

Parameters:

None.

Default:

Do not set the action.

Command mode:

Policy class map configuration mode

Usage Guide:

Send the packet directly after configure this command.

Example:

Send the packet which satisfy c1.

```
Switch(config)#policy-map p1
```

```
Switch(Config-PolicyMap-p1)#class c1
```

```
Switch(Config-PolicyMap-p1-Class-c1)#transmit
```

```
Switch(Config-PolicyMap-p1-Class-c1)#exit
```

```
Switch(Config-PolicyMap-p1)#exit
```

Chapter 21 Commands for Flow-based Redirection

21.1 access-group redirect to interface ethernet

Command:

```
access-group <aclname> redirect to interface [ethernet <IFNAME> | <IFNAME>]  
no access-group <aclname> redirect
```

Function:

Specify flow-based redirection; “no access-group <aclname> redirect” command is used to delete flow-based redirection.

Parameters:

<aclname> name of the flow , only supports digital standard IP ACL, digital extensive IP ACL, nomenclatural standard IP ACL, nomenclatural extensive IP ACL, digital standard MAC ACL, digital extensive MAC ACL, nomenclatural standard MAC ACL, nomenclatural extensive MAC ACL, digital standard IPv6 ACL, and nomenclatural standard IPv6 ACL. Parameters of **Time range** and **Port range** can not be set in ACL; the type of ACL should be Permit. <IFNAME> the destination port of redirection.

Command Mode:

Physical Port Configuration Mode.

Usage Guide:

“no access-group <aclname> redirect” command is used to delete flow-based redirection. Flow-based redirection function enables the switch to transmit the data frames meeting some special condition to another specified port.

Examples:

```
Redirecting the frames whose source IP is 192.168.1.111 received from port 1 to port 6,  
Switch(config)#access-list 1 permit host 192.168.1.111  
Switch(config)# interface ethernet 1/1  
Switch(Config-If-Ethernet1/1)# access-group 1 redirect to interface ethernet 1/6
```

21.2 show flow-based-redirect

Command:

```
show flow-based-redirect {interface [ethernet <IFNAME> | <IFNAME>]}
```

Function:

Display the information of current flow-based redirection in the system/port.

Parameters:

1. No specified port, display the information of all the flow-based redirection in the system.
2. Specify ports in <IFNAME>, display the information of the flow-based redirection configured in the ports listed in the interface-list.

Command Mode:

Admin Mode and Configuration Mode.

Usage Guide:

This command is used to display the information of current flow-based redirection in the system/port.

Examples:

```
Switch(config)# show flow-based-redirect
```

```
Flow-based-redirect config on interface ethernet 1/1:
```

```
RX flow (access-list 1) is redirected to interface Ethernet1/6
```

Chapter 22 Commands for Flexible QinQ

22.1 match

Command:

```
match {access-group <acl-index-or-name> | ip dscp <dscp-list> | ip precedence <ip-precedence-list> | ipv6
access-group <acl-index-or-name> | ipv6 dscp <dscp-list> match {access-group <acl-index-or-name> | ip
dscp <dscp-list> | ip precedence <ip-precedence-list> | ipv6 access-group <acl-index-or-name> | ipv6 dscp
<dscp-list> | ipv6 flowlabel <flowlabel-list> | vlan <vlan-list> | cos <cos-list> | c-vlan <vlan-list> >}
no match {access-group | ip dscp | ip precedence | ipv6 access-group | ipv6 dscp no match {access-group |
ip dscp | ip precedence | ipv6 access-group | ipv6 dscp | ipv6 flowlabel | vlan | cos | c-vlan }}
```

Function:

Configure the match standard of the class map; the no command deletes the specified match standard.

Parameter:

access-group <acl-index-or-name> match the specified IP ACL or MAC ACL, MAC-IP ACL or standard IPV6 ACL, the parameters are the number or name of ACL

ip dscp <dscp-list> and **ipv6 dscp <dscp-list>** match the specified DSCP value, the parameter is a list of DSCP consisting of maximum 8 DSCP values, the ranging is 0 to 63

ip precedence <ip-precedence-list> match the specified IP Precedence, the parameter is an IP Precedence list consisting of maximum 8 IP Precedence values with a valid range of 0 to 7

ipv6 access-group <acl-index-or-name> match the specified IPV6 ACL, the parameter is the number or name of IPV6 ACL

ipv6 flowlabel <flowlabel-list> match the specified IPV6 flow label, the parameter is IPV6 flow label value, the ranging is 0 to 1048575

vlan <vlan-list> match the specified VLAN ID of the external VLAN Tag, the parameter is a VLAN ID list consisting of maximum 8 VLAN IDs, the ranging is 1 to 4094

cos <cost-list> match the specified CoS value, the parameter is a CoS list consisting of maximum 8 CoS values, the ranging is 0 to 7

c-vlan <vlan-list> match the specified customer VLAN ID, the parameter is a VLAN ID list consisting of maximum 8 VLAN IDs, the ranging is 1 to 4094

Default:

There is no match standard.

Command Mode:

Class-map Mode

Usage Guide:

Only one match standard can be configured in a class map. When configuring the ACL match, permit rule is the match option, it will apply Policy Map action. Deny rule is the excluding option, it does not apply Policy Map action. If it has been configured other match rule, the operation is failure, but configuring the same match rule will cover the previous.

Example:

Create a class-map named c1, and configure the class rule of the class-map to match packets with IP Precedence of 0.

```
Switch(config)#class-map c1
```

```
Switch(config-classmap-c1)#match ip precedence 0
```

```
Switch(config-classmap-c1)#exit
```

22.2 service-policy

Command:

```
service-policy <policy-map-name> in  
no service-policy <policy-map-name> in
```

Function:

Bind the specified policy of flexible QinQ to the ingress of the port, the no command cancels the binding.

Parameters:

service-policy <policy-map-name>: The specified policy-map name of flexible QinQ.

Default:

No policy map is bound to port.

Command mode:

Port Mode.

Usage Guide:

Only one policy map can be bound to each port, the function takes effect after the policy map is bound to a port. If s-vid needs to be modified, enable QinQ function on the corresponding port at first. At present, do not support the configuration with add command and delete command in policy.

Example:

Apply policy-map p1 (p1 corresponds with the action that modify s-vid) to Ethernet port 1/1 for flexible QinQ.

```
Switch(Config-If-Ethernet1/1)#dot1q-tunnel enable
```

```
Switch(Config-If-Ethernet1/1)#service-policy p1 in
```

Apply policy-map p1 (p1 corresponds with the action that modify c-vid) to Ethernet port 1/1 for flexible QinQ.

```
Switch(Config-If-Ethernet1/1)#service-policy p1 in
```

22.3 set

Command:

```
set {s-vid <new-vid>}
```

```
no set {s-vid }
```

Function:

Assign **the new cos and vid value** to the packets which match the class map, no command cancels the operation.

Parameters:

s-vid <new-vid> specifies VID of an external VLAN Tag

Default:

Do not assign the value.

Command Mode:

Policy class-map configuration mode

Usage Guide:

Only assign the new value again for the classified flow that correspond the match standard. This switch only supports to modify the outer layer of vlan, it does not support to add outer layer of vlan or delete the outer layer of vlan and it does not support to configure the inner layer of vlan. At the same time, the vid modified by this command is not used for studying and forwarding but it is used for vlan checking.

Example:

Set an external VLAN Tag' VID as 3 for the packet which satisfy c2 class rule.

```
Switch(config)#policy-map p1
```

```
Switch(Config-PolicyMap-p1)#class c2
```

```
Switch(Config-PolicyMap-p1-Class-c2)#set s-vid 3
```

```
Switch(Config-PolicyMap-p1-Class-c2)#exit
```

Chapter 23 Commands for Layer 3 Management

23.1 Commands for Layer 3 Interface

23.1.1 description

Command:

description <text>
no description

Function:

Configure the description information of VLAN interface. The no command will cancel the description information of VLAN interface.

Parameter:

<text> is the description information of VLAN interface, the length should not exceed 256 characters.

Default:

Do not configure.

Command Mode:

VLAN interface mode

Usage Guide:

The description information of VLAN interface behind description and shown under the configured VLAN.

Example:

Configure the description information of VLAN interface as test vlan.
Switch(config)#interface vlan 2
Switch(config-if-vlan2)#description test vlan

23.1.2 interface vlan

Command:

```
interface vlan <vlan-id>  
no interface vlan <vlan-id>
```

Function:

Create a VLAN interface (a Layer 3 interface); the “no interface vlan <vlan-id>” command deletes the Layer 3 interface specified.

Parameters:

<vlan-id> is the VLAN ID of the established VLAN, ranging from 1 to 4094.

Default:

No Layer 3 interface is configured upon switch shipment.

Command mode:

Global Mode

Usage Guide:

When creating a VLAN interface (Layer 3 interface), VLANs should be configured first, for details, see the VLAN chapters. When VLAN interface (Layer 3 interface) is created with this command, the VLAN interface (Layer 3 interface) configuration mode will be entered. After the creation of the VLAN interface (Layer 3 interface), interface vlan command can still be used to enter Layer 3 Port Mode. Configure 16 interface vlan to manage device that is supported by layer 2 switch, but layer 3 forward is not supported.

Example:

Create a VLAN interface (layer 3 interface).

```
Switch(config)#interface vlan 1
```

```
Switch(Config-if-Vlan1)#
```

23.1.3 show ip route

Command:

```
show ip route [ database ]
```

Function:

Display routing table.

Parameter:

database is database information.

Command Mode:

Admin Mode

Usage Guide:

Show kernal routing table, include: routing type, destination network, mask, next-hop address, interface, etc.

Example:

Switch#show ip route

Codes: C - connected, S - static, R - RIP derived, O - OSPF derived

A - OSPF ASE, B - BGP derived

Destination Mask Nexthop Interface Pref

C 2.2.2.0 255.255.255.0 0.0.0.0 vlan2 0

C 4.4.4.0 255.255.255.0 0.0.0.0 vlan4 0

S 6.6.6.0 255.255.255.0 9.9.9.9 vlan9 1

Displayed information	Explanation
C –connected	Direct route, namely the segment directly connected with the layer 3 switch
S –static	Static route, the route manually configured by users
R - RIP derived	RIP route, acquired by layer 3 switch through the RIP protocol.
O - OSPF derived	OSPF route, acquired by layer 3 switch through the OSPF protocol
A- OSPF ASE	Route introduced by OSPF
B- BGP derived	BGP route, acquired by the BGP protocol.
Destination	Target network
Mask	Target network mask
Nexthop	Next-hop IP address
Interface	Next-hop pass-by layer 3 switch interfaces
Preference	Route priority. If other types of route to the target network exists, the kernel route will only shows those with high priority.

23.2 Commands for IPv4/v6 configuration

23.2.1 clear ip traffic

Command:

`clear ip traffic`

Function:

Clear the statistic information of IP protocol.

Parameter:

None.

Command mode:

Admin Mode.

Default:

None.

Usage guide:

Clear the statistic information of receiving and sending packets for IP kernel protocol, including the statistic of receiving packets, sending packets and dropping packets and the error information of receiving and sending packets for IP protocol, ICMP protocol, TCP protocol and UDP protocol.

Example:

Clear statistic information of IP protocol.

Switch#clear ip traffic

23.2.2 clear ipv6 neighbor

Command:

`clear ipv6 neighbors`

Function:

Clear the neighbor cache of IPv6.

Parameter:

None

Command Mode:

Admin Mode

Default:

None

Usage Guide:

This command cannot clear static neighbor.

Example:

Clear neighbor list.

```
Switch#clear ipv6 neighbors
```

23.2.3 debug ip icmp

Command:

```
debug ip icmp
```

```
no debug ip icmp
```

Function:

The debugging for receiving and sending ICMP packets.

Parameter:

None.

Default:

None.

Command mode:

Admin Mode

Usage Guide:

None.

Example:

```
Switch#debug ip icmp
```

```
IP ICMP: sent, type 8, src 0.0.0.0, dst 20.1.1.1
```

Display	Description
IP ICMP: sent	Send ICMP packets
type 8	Type is 8 (PING request)
src 0.0.0.0	Source IPv4 address
dst 20.1.1.1	Destination IPv4 address

23.2.4 debug ip packet

Command:

```
debug ip packet
```

```
no debug ip packet
```

Function:

Enable the IP packet debug function: the “**no debug IP packet**” command disables this debug function.

Parameter:

None

Default:

IP packet debugging information is disabled by default.

Command mode:

Admin Mode

Usage Guide:

Displays statistics for IP packets received/sent, including source/destination address and bytes, etc.

Example:

```
Enable IP packet debug.
```

```
Switch #debug ip packet
```

```
IP PACKET: sent, src 200.1.1.35, dst 224.0.0.9, size 312, proto 17, vrf 0
```

```
IP PACKET: rcvd, src 101.1.1.1, dst 224.0.0.9, size 312, proto 17, from Vlan200, vrf 0
```


23.2.5 debug ipv6 packet

Command:

```
debug ipv6 packet
no debug ipv6 packet
```

Function:

IPv6 data packets receive/send debug message.

Parameter:

None

Default:

None

Command Mode:

Admin Mode

Example:

```
Switch#debug ipv6 packet
```

```
IPv6 PACKET: rcvd, src <fe80::203:fff:fe01:2786>, dst <fe80::1>, size <64>, proto <58>, from Vlan1
```

Displayed information	Explanation
IPv6 PACKET: rcvd	Receive IPv6 data report
Src <fe80::203:fff:fe01:2786>	Source IPv6 address
Dst <fe80::1>	Destination IPv6 address
size <64>	Size of data report
proto <58>	Protocol field in IPv6 header
from Vlan1	IPv6 data report is collected from Layer 3 port vlan1

23.2.6 debug ipv6 icmp

Command:

```
debug ipv6 icmp
no debug ipv6 icmp
```

Function:

ICMP data packets receive/send debug message.

Parameter:

None

Default:

None

Command Mode:

Admin Mode

Usage Guide:

None

Example:

Switch#debug ipv6 icmp

IPv6 ICMP: sent, type <129>, src <2003::1>, dst <2003::20a:ebff:fe26:8a49> from Vlan1

Displayed information	Explanation
IPv6 ICMP: sent	Send IPv6 data report
type <129>	Ping protocol No.
src <2003::1>	Source IPv6 address
dst <2003::20a:ebff:fe26:8a49>	Destination IPv6 address
from Vlan1	Layer 3 port being sent

23.2.7 debug ipv6 nd

Command:**debug ipv6 nd [ns | na | rs | ra | redirect]****no debug ipv6 nd [ns | na | rs | ra | redirect]****Function:**

Enable the debug of receiving and sending operations for specified types of IPv6 ND messages. The ns, na, rs, ra and redirect parameters represent neighbor solicitation, neighbor advertisement, route solicitation, route advertisement and route redirect. No specification means to enable the debug for all five types of ND message. The no operation of this command will disable debug of receiving and sending operations for specified types of IPv6 ND messages, while no specification means to disable that for all five types of ND message.

Parameter:

None.

Default:

The debug of receiving and sending operations for all five types of IPv6 ND messages is disabled by default.

Command Mode:

Admin Mode

Usage Guide:

The ND protocol is an essential part of IPv6. This command can display the ND message of a specified type for troubleshooting.

Example:

```
Switch#debug ipv6 nd
```

```
IPv6 ND: rcvd, type <136>, src <fe80::203:fff:fe01:2786>, dst <fe80::203:fff:fe01:59ba>
```

Displayed information	Explanation
IPv6 ND: rcvd	Receive ND data report
type <136>	ND Type
src <fe80::203:fff:fe01:2786>	Source IPv6 address
dst <fe80::203:fff:fe01:59ba>	Destination IPv6 address

23.2.8 ip address

Command:

```
ip address <ip-address> <mask> [secondary]
```

```
no ip address [<ip-address> <mask>] [secondary]
```

Function:

Set IP address and net mask of switch; the “no ip address [<ip-address> <mask>] [secondary]” command deletes the IP address configuration.

Parameter:

<ip-address> is IP address, dotted decimal notation; <mask> is subnet mask, dotted decimal notation; [secondary] indicates that the IP address is configured as secondary IP address.

Command Mode:

VLAN interface configuration mode

Default:

The system default is no IP address configuration.

Usage Guide:

This command configures IP address on VLAN interface manually. If optional parameter **secondary** is not configured, then it is configured as the primary IP address of VLAN interface; if optional parameter **secondary** is configured, then that means the IP address is the secondary IP address of VLAN. One VLAN interface can only have one primary IP address and more than one secondary IP addresses. Primary IP and Secondary IP all can be used on SNMP/Web/Telnet management. Furthermore, the switch also provides BOOTP/DHCP manner to get IP address.

Example:

The IP address of switch VLAN1 interface is set to 192.168.1.10/24.

```
Switch(Config-if-Vlan1)#ip address 192.168.1.10 255.255.255.0
```

23.2.9 ip default-gateway

Command:

```
ip default-gateway <A.B.C.D>  
no ip default-gateway <A.B.C.D>
```

Function:

Configure the default gateway of the router. The no command cancels the configuration.

Parameter:

<A.B.C.D> is gateway address, for example 10.1.1.10.

Command mode:

Global mode.

Default:

There is no default gateway.

Usage Guide:

Configure the default gateway of the router to specify the default next hop address to which the packets will be sent.

Example:

Specify a default gateway:

```
Switch(config)# ip default-gateway 10.1.1.10
```

Cancel the setting of a default gateway:

```
Switch(config)# no ip default-gateway 10.1.1.10
```

23.2.10 ip route

Command:

```
ip route {<ip-prefix> <mask> | <ip-prefix>/<prefix-length>} {<gateway-address> | <gateway-interface>}
[<distance>]
```

```
no ip route {<ip-prefix> <mask> | <ip-prefix>/<prefix-length>} [<gateway-address> | <gateway-interface>]
[<distance>]
```

Function:

Configure the static route. The no command deletes the static route.

Parameter:

<ip-prefix> and **<mask>** are respectively destination IP address and subnet mask, shown in dotted decimal notation; **<ip-prefix>** and **<prefix-length>** are respectively the destination IP address and the length of prefix; **<gateway-address>** is the next-hop IP address shown in dotted decimal notation; **<gateway-interface>** is the next-hop interface; **< distance >** is the distance value of route management, the range is 1 to 255.

Default:

The default distance value of route management is 1.

Command Mode:

Global Mode.

Usage Guide:

When configuring the next-hop of static route, the next-hop IP address of route packets and the manner of egress or interface can be appointed.

The distance values of all kinds of the switch routes are the following:

Route Type	Distance Value
Directly Connected Routes	0
Static Routes	1
OSPF	110

RIP	120
IBGP	200
EBGP	20

At the case of no changing the distance value of all kinds of routes, the priority of directly connected routes is the highest, the static routes, EBGp, OSPF, RIP and IBGP are followed.

Example:

1. Add a static route.
Switch(config)#ip route 1.1.1.0 255.255.255.0 2.1.1.1
2. Add the default route.
Switch(config)#ip route 0.0.0.0 0.0.0.0 2.2.2.1

23.2.11 ipv6 address

Command:

```
ipv6 address <ipv6-address/prefix-length> [eui-64]
no ipv6 address <ipv6-address/prefix-length> [eui-64]
```

Function:

Configure aggregately global unicast address, site-local address and link-local address for the interface.

Parameter:

Parameter **<ipv6-address>** is the prefix of IPv6 address, parameter **<prefix-length>** is the prefix length of IPv6 address, which is between 3-128, **eui-64** means IPv6 address is generated automatically based on eui64 interface identifier of the interface.

Command Mode:

Interface Configuration Mode.

Default:

None.

Usage Guide:

IPv6 address prefix can not be multicast address or any other specific IPv6 address, and different layer 3 interfaces can not configure the same address prefix. For global unicast address, the length of the prefix must be greater than or equal to 3. For site-local address and link-local address, the length of the prefix must be greater than or equal to 10.

Example:

Configure an IPv6 address on VLAN1 Layer 3 interface: the prefix is 2001:3f:ed8::99 and the length of the prefix is 64.

```
Switch(Config-if-Vlan1)#ipv6 address 2001:3f:ed8::99/64
```

23.2.12 ipv6 default-gateway

Command:

```
ipv6 default-gateway <X:X::X:X>  
no ipv6 default-gateway <X:X::X:X>
```

Function:

Configure IPv6 default gateway of the router. The no command cancels the configuration.

Parameter:

< X:X::X:X > is IPv6 address of the gateway, for example 2002:100::1.

Default:

Do not configure IPv6 default gateway of the router.

Command mode:

Global mode.

Usage Guide:

Configure IPv6 default gateway of the router to specify the default next hop IPv6 address to which the packets will be sent.

Example:

Specify an IPv6 default gateway:

```
Switch(config)# ipv6 default-gateway 2002:100::1
```

Cancel the setting of IPv6 default gateway:

```
Switch(config)# no ipv6 default-gateway 2002:100::1
```

23.2.13 ipv6 nd dad attempts

Command:

```
ipv6 nd dad attempts <value>  
no ipv6 nd dad attempts
```

Function:

Set Neighbor Solicitation Message number sent in succession by interface when setting Duplicate Address Detection.

Parameter:

<value> is the Neighbor Solicitation Message number sent in succession by Duplicate Address Detection, and the value of <value> must be in 0-10, NO command restores to default value 1.

Command Mode:

Interface Configuration Mode

Default:

The default request message number is 1.

Usage Guide:

When configuring an IPv6 address, it is required to process IPv6 Duplicate Address Detection, this command is used to configure the ND message number of Duplicate Address Detection to be sent, *value* being 0 means no Duplicate Address Detection is executed.

Example:

The Neighbor Solicitation Message number sent in succession by interface when setting Duplicate Address Detection is 3.

```
Switch(Config-if-Vlan1)# ipv6 nd dad attempts 3
```

23.2.14 ipv6 nd ns-interval

Command:

```
ipv6 nd ns-interval <seconds>  
no ipv6 nd ns-interval
```

Function:

Set the time interval of Neighbor Solicitation Message sent by the interface.

Parameter:

parameter **<seconds>** is the time interval of sending Neighbor Solicitation Message, **<seconds>** value must be between 1-3600 seconds, **no** command restores the default value 1 second.

Command Mode:

Interface Configuration Mode

Default:

The default Request Message time interval is 1 second.

Usage Guide:

The value to be set will include the situation in all routing announcement on the interface. Generally, very short time interval is not recommended.

Example:

Set Vlan1 interface to send out Neighbor Solicitation Message time interval to be 8 seconds.

```
Switch(Config-if-Vlan1)#ipv6 nd ns-interval 8
```

23.2.15 ipv6 neighbor

Command:

```
ipv6 neighbor <ipv6-address> <hardware-address> interface <interface-type interface-name>  
no ipv6 neighbor <ipv6-address>
```

Function:

Set static neighbor table entry.

Parameters:

Parameter **ipv6-address** is static neighbor IPv6 address, parameter **hardware-address** is static neighbor hardware address, **interface-type** is Ethernet type, **interface-name** is Layer 2 interface name.

Command Mode:

Interface Configuration Mode

Default Situation:

There is not static neighbor table entry.

Usage Guide:

IPv6 address and multicast address for specific purpose and local address cannot be set as neighbor.

Example:

Set static neighbor 2001:1:2::4 on port E1/1, and the hardware MAC address is 00-30-4f-89-44-bc.

```
Switch(Config-if-Vlan1)#ipv6 neighbor 2001:1:2::4 00-30-4f-89-44-bc interface Ethernet 1/1
```

23.2.16 show ip interface

Command:

```
show ip interface [<ifname> | vlan <vlan-id>] brief
```

Function:

Show the brief information of the configured layer 3 interface.

Parameters:

<ifname> Interface name; <vlan-id> VLAN ID.

Default:

Show all brief information of the configured layer 3 interface when no parameter is specified.

Command mode:

All modes.

Usage Guide:

None.

Example:

```
Restarter#show ip interface vlan1 brief
```

Index	Interface	IP-Address	Protocol
3001	Vlan1	192.168.2.11	up

23.2.17 show ip traffic

Command:

```
show ip traffic
```

Function:

Display statistics for IP packets.

Command mode:

Admin Mode

Usage Guide:

Display statistics for IP, ICMP, TCP, UDP packets received/sent.

Example:

```
Switch#show ip traffic
```

```
IP statistics:
```

```
Rcvd: 3249810 total, 3180 local destination
```

```
0 header errors, 0 address errors
```

```
0 unknown protocol, 0 discards
```

```
Frag: 0 reassembled, 0 timeouts
```

```
0 fragment rcvd, 0 fragment dropped
```

```
0 fragmented, 0 couldn't fragment, 0 fragment sent
```

```
Sent: 0 generated, 3230439 forwarded
```

```
0 dropped, 0 no route
```

```
ICMP statistics:
```

```
Rcvd: 0 total 0 errors 0 time exceeded
```

```
0 redirects, 0 unreachable, 0 echo, 0 echo replies
```

```
0 mask requests, 0 mask replies, 0 quench
```

```
0 parameter, 0 timestamp, 0 timestamp replies
```

```
Sent: 0 total 0 errors 0 time exceeded
```

```
0 redirects, 0 unreachable, 0 echo, 0 echo replies
```

```
0 mask requests, 0 mask replies, 0 quench
```

```
0 parameter, 0 timestamp, 0 timestamp replies
```

```
TCP statistics:
```

```
TcpActiveOpens      0, TcpAttemptFails    0
```

```
TcpCurrEstab        0, TcpEstabResets      0
```

```
TcpInErrs           0, TcpInSegs            3180
```

```
TcpMaxConn          0, TcpOutRsts           3
```

```
TcpOutSegs          0, TcpPassiveOpens      8
```

```
TcpRetransSegs      0, TcpRtoAlgorithm       0
```

```
TcpRtoMax           0, TcpRtoMin            0
```

```
UDP statics:
```

UdpInDatagrams 0, UdpInErrors 0
 UdpNoPorts 0, UdpOutDatagrams 0

Displayed information	Explanation
IP statistics :	IP packet statistics.
Rcvd: 3249810 total, 3180 local destination 0 header errors, 0 address errors 0 unknown protocol, 0 discards	Statistics of total packets received, number of packets reached local destination, number of packets have header errors, number of erroneous addresses, number of packets of unknown protocols; number of packets dropped.
Frgs : 0 reassembled, 0 timeouts 0 fragment rcvd, 0 fragment dropped 0 fragmented, 0 couldn't fragment, 0 fragment sent	Fragmentation statistics: number of packets reassembled, timeouts, fragments received, fragments discarded, packets that cannot be fragmented, number of fragments sent, etc.
Sent : 0 generated, 0 forwarded 0 dropped, 0 no route	Statistics for total packets sent, including number of local packets, forwarded packets, dropped packets and packets without route.
ICMP statistics :	ICMP packet statistics.
Rcvd : 0 total 0 errors 0 time exceeded 0 redirects, 0 unreachable, 0 echo, 0 echo replies 0 mask requests, 0 mask replies, 0 quench 0 parameter, 0 timestamp, 0 timestamp replies	Statistics of total ICMP packets received and classified information
Sent : 0 total 0 errors 0 time exceeded 0 redirects, 0 unreachable, 0 echo, 0 echo replies 0 mask requests, 0 mask replies, 0 quench 0 parameter, 0 timestamp, 0 timestamp replies	Statistics of total ICMP packets sent and classified information
TCP statistics:	TCP packet statistics.
UDP statistics:	UDP packet statistics.

23.2.18 show ipv6 interface

Command:

show ipv6 interface {brief|<interface-name>}

Function:

Show interface IPv6 parameters.

Parameter:

Parameter brief is the brief summarization of IPv6 status and configuration, and parameter interface-name is Layer 3 interface name.

Default:

None

Command Mode:

Admin and Configuration Mode

Usage Guide:

If only brief is specified, then information of all L3 is displayed, and you can also specify a specific Layer 3 interface.

Example:

```
Switch#show ipv6 interface Vlan1
Vlan1 is up, line protocol is up, dev index is 2004
Device flag 0x1203(UP BROADCAST ALLMULTI MULTICAST)
IPv6 is enabled
Link-local address(es):
fe80::203:fff:fe00:10 PERMANENT
Global unicast address(es):
3001::1 subnet is 3001::1/64 PERMANENT
Joined group address(es):
ff02::1
ff02::16
ff02::2
ff02::5
ff02::6
ff02::9
ff02::d
ff02::1:ff00:10
ff02::1:ff00:1
MTU is 1500 bytes
ND DAD is enabled, number of DAD attempts is 1
```

ND managed_config_flag is unset
 ND other_config_flag is unset
 ND NS interval is 1 second(s)
 ND router advertisements is disabled
 ND RA min-interval is 200 second(s)
 ND RA max-interval is 600 second(s)
 ND RA hoplimit is 64
 ND RA lifetime is 1800 second(s)
 ND RA MTU is 0
 ND advertised reachable time is 0 millisecond(s)
 ND advertised retransmit time is 0 millisecond(s)

Displayed information	Explanation
Vlan1	Layer 3 interface name
[up/up]	Layer 3 interface status
dev index	Internal index No.
fe80::203:fff:fe00:10	Automatically configured IPv6 address of Layer 3 interface
3001::1	Configured IPv6 address of Layer 3 interface

23.2.19 show ipv6 route

Command:

show ipv6 route [database]

Function:

Display IPv6 routing table.

Parameter:

database is router database.

Default Situation:

None.

Command Mode:

Admin and Configuration Mode.

Usage Guide:

show ipv6 route only shows IPv6 kernal routing table (routing table in tcpip), database shows all routers except the local router.

Example:

Switch#show ipv6 route

Codes: C - connected, L - Local, S - static, R - RIP, O - OSPF,
I - IS-IS, B - BGP

```
S 2001:2::/32 via fe80::789, Vlan2 1024
S 2001:2:3:4::/64 via fe80::123, Vlan2 1024
O 2002:ca60:c801:1::/64 via ::, Vlan1 1024
C 2003:1::/64 via ::, Vlan4 256
S 2004:1:2:3::/64 via fe80:1::88, Vlan2 1024
O 2006:1::/64 via ::, Vlan1 1024
S 2008:1:2:3::/64 via fe80::250:baff:fe2:a4f4, Vlan1 1024
C 2008:2005:5:8::/64 via ::, Ethernet0 256
S 2009:1::/64 via fe80::250:baff:fe2:a4f4, Vlan1 1024
C 2022:1::/64 via ::, Ethernet0 256
O 3333:1:2:3::/64 via fe80::20c:ceff:fe13:eac1, Vlan12 1024
C 3ffe:501:fff:1::/64 via ::, Vlan4 256
O 3ffe:501:fff:100::/64 via ::, Vlan5 1024
O 3ffe:3240:800d:1::/64 via ::, Vlan1 1024
O 3ffe:3240:800d:2::/64 via ::, Vlan2 1024
O 3ffe:3240:800d:10::/64 via ::, Vlan12 1024
O 3ffe:3240:800d:20::/64 via fe80::20c:ceff:fe13:eac1, Vlan12 1024
C fe80::/64 via ::, Vlan1 256
C ff00::/8 via ::, Vlan1 256
```

Displayed information	Explanation
IPv6 Routing Table	IPv6 routing table status
Codes: K - kernel route, C - connected, S - static, R - RIP, O - OSPF, I - IS-IS, B - BGP > - selected route, * - FIB route, p - stale info	Abbreviation display sign of every entry
S 2009:1::/64 via fe80::250:baff:fe2:a4f4, Vlan1 1024	The static router in FIB table, of which the destination network segment is 2002::/64, via means passing fe80::250:baff:fe2:a4f4 is the next hop, VLAN1 is the exit interface name, 1024 is router weight.

23.2.20 show ipv6 neighbors

Command:

```
show ipv6 neighbors [{vlan|ethernet} interface-number | interface-name | address <ipv6address>]
```

Function:

Display neighbor table entry information.

Parameter:

Parameter **{vlan|ethernet} interface-number|interface-name** specify the lookup based on interface. Parameter **ipv6-address** specifies the lookup based on IPv6 address. It displays the whole neighbor table entry if without parameter.

Default Situation:

None

Command Mode:

Admin and Configuration Mode

Example:

```
Switch#show ipv6 neighbors
```

```
IPv6 neighbour unicast items: 14, valid: 11, matched: 11, incomplete: 0, delayed: 0,  
manage items 5
```

IPv6 Address	Hardware Addr	Interface	Port	State
2002:ca60:c801:1:250:baff:fef2:a4f4	00-50-ba-f2-a4-f4	Vlan1	Ethernet1/2	reachable
3ffe:3240:800d:1::100	00-30-4f-01-27-86	Vlan1	Ethernet1/3	reachable
3ffe:3240:800d:1::8888	00-02-01-00-00-00	Vlan1	Ethernet1/1	permanent
3ffe:3240:800d:1:250:baff:fef2:a4f4	00-50-ba-f2-a4-f4	Vlan1	Ethernet1/4	reachable
3ffe:3240:800d:2::8888	00-02-01-00-01-01	Vlan2	Ethernet1/16	permanent
3ffe:3240:800d:2:203:fff:fefe:3045	00-30-4f-fe-30-45	Vlan2	Ethernet1/15	reachable
fe80::203:fff:fe01:2786	00-30-4f-01-27-86	Vlan1	Ethernet1/5	reachable
fe80::203:fff:fefe:3045	00-30-4f-fe-30-45	Vlan2	Ethernet1/17	reachable
fe80::20c:ceff:fe13:eac1	00-0c-ce-13-ea-c1	Vlan12	Ethernet1/20	reachable
fe80::250:baff:fef2:a4f4	00-50-ba-f2-a4-f4	Vlan1	Ethernet1/6	reachable

IPv6 neighbour table: 11 entries

Displayed information	Explanation
IPv6 Address	Neighbor IPv6 address

Hardware Addr	Neighbor MAC address
Interface	Exit interface name
Port	Exit interface name
State	Neighbor status (reachable 、 state 、 delay 、 probe 、 permanent 、 incomplete 、 unknown)

23.2.21 show ipv6 traffic

Command:

show ipv6 traffic

Function:

Display IPv6 transmission data packets statistics information.

Parameter:

None

Default:

None

Command Mode:

Admin and Configuration Mode

Example:

```
Switch#show ipv6 traffic
```

```
IP statistics:
```

```
Rcvd: 90 total, 17 local destination
```

```
0 header errors, 0 address errors
```

```
0 unknown protocol, 13 discards
```

```
Frag: 0 reassembled, 0 timeouts
```

```
0 fragment rcvd, 0 fragment dropped
```

```
0 fragmented, 0 couldn't fragment, 0 fragment sent
```

```
Sent: 110 generated, 0 forwarded
```

```
0 dropped, 0 no route
```

```
ICMP statistics:
```

```
Rcvd: 0 total 0 errors 0 time exceeded
```

```
0 redirects, 0 unreachable, 0 echo, 0 echo replies
```

Displayed information	Explanation
IP statistics	IPv6 data report statistics
Rcvd: 90 total, 17 local destination0 header errors, 0 address errors0 unknown protocol, 13 discards	IPv6 received packets statistics
Frgs: 0 reassembled, 0 timeouts 0 fragment rcvd, 0 fragment dropped0 fragmented, 0 couldn't fragment, 0 fragment sent	IPv6 fragmenting statistics
Sent: 110 generated, 0 forwarded 0 dropped, 0 no route	IPv6 sent packets statistics

23.3 Commands for ARP Configuration

23.3.1 arp

Command:

```
arp <ip_address> <mac_address> {interface [ethernet] <portName>}
no arp <ip_address>
```

Function:

Configures a static ARP entry; the “no arp <ip_address>” command deletes a ARP entry of the specified IP address.

Parameters:

<ip_address> is the IP address, at the same field with interface address; <mac_address> is the MAC address; ethernet stands for Ethernet port; <portName> for the name of layer2 port. **The maximum of static number is 1000.**

Default:

No static ARP entry is set by default.

Command mode:

VLAN Interface Mode

Usage Guide:

Static ARP entries can be configured in the switch.

Example:

Configuring static ARP for interface VLAN1.

```
Switch(Config-if-Vlan1)#arp 1.1.1.1 00-30-4f-f0-12-34 interface eth 1/2
```

23.3.2 clear arp-cache

Command:

```
clear arp-cache
```

Function:

Clears ARP table.

Command mode:

Admin Mode

Example:

```
Switch#clear arp-cache
```

23.3.3 clear arp traffic

Command:

```
clear arp traffic
```

Function:

Clear the statistic information of ARP messages of the switch. For box switches, this command will only clear statistics of APP messages received and sent from the current boardcard.

Command mode:

Admin Mode

Example:

```
Switch#clear arp traffic
```

23.3.4 debug arp

Command: `debug arp {receive|send|state}`
`no debug arp {receive|send|state}`

Function:

Enables the ARP debugging function; the “**no debug arp {receive|send|state}**” command disables this debugging function.

Parameter:

receive the debugging-switch of receiving ARP packets of the switch; **send** the debugging-switch of sending ARP packets of the switch; **state** the debugging-switch of APR state changing of the switch.

Default:

ARP debug is disabled by default.

Command mode:

Admin Mode.

Usage Guide:

Display contents for ARP packets received/sent, including type, source and destination address, etc.

Example:

Enable ARP debugging.

Switch#debug arp receive

%Jan 01 01:05:53 2006 IP ARP: rcvd, type REQUEST, src 172.16.1.251, 00-e0-4c-88-ad-bc, dst 172.16.1.110, 00-00-00-00-00-00 flag 0x0, pkt type 1, intf Vlan100.

%Jan 01 01:05:53 2006 IP ARP: rcvd, type REQUEST, src 172.16.1.251, 00-e0-4c-88-ad-bc, dst 172.16.1.110, 00-00-00-00-00-00 flag 0x0, pkt type 1, intf Vlan100.

e%Jan 01 01:05:53 2006 IP ARP: rcvd, type REQUEST, src 172.16.1.251, 00-e0-4c-88-ad-bc, dst 172.16.1.110, 00-00-00-00-00-00 flag 0x0, pkt type 1, intf Vlan100.

%Jan 01 01:05:53 2006 IP ARP: rcvd, type REQUEST, src 172.16.1.251, 00-e0-4c-88-ad-bc, dst172.16.1.110, 00-00-00-00-00-00 flag 0x0, pkt type 1, intf Vlan100.

23.3.5 show arp

Command:

`show arp [<ipaddress>] [<vlan-id>] [<hw-addr>] [type {static | dynamic}] [count] [vrf word]`

Function:

Displays the ARP table.

Parameters:

<ipaddress> is a specified IP address; **<vlan-id>** stands for the entry for the identifier of specified VLAN; **<hw-addr>** for entry of specified MAC address; **static** for static ARP entry; **dynamic** for dynamic ARP entry; **count** displays number of ARP entries; **word** is the specified vrf name.

Command mode:

Admin Mode

Usage Guide:

Displays the content of current ARP table such as IP address, MAC address, hardware type, interface name, etc.

Example:

```
Switch#show arp
```

```
ARP Unicast Items: 7, Valid: 7, Matched: 7, Verifying: 0, Incomplete: 0, Failed: 0, None: 0
```

Address	Hardware Addr	Interface	Port	Flag
50.1.1.6	00-0a-eb-51-51-38	Vlan50	Ethernet1/11	Dynamic
50.1.1.9	00-00-00-00-00-09	Vlan50	Ethernet1/1	Static
150.1.1.2	00-00-58-fc-48-9f	Vlan150	Ethernet1/4	Dynamic

Displayed information	Explanation
Total arp items	Total number of ARP entries.
Valid	ARP entry number matching the filter conditions and attributing the legality states.
Matched	ARP entry number matching the filter conditions.
Verifying	ARP entry number at verifying again validity for ARP.
Incomplete	ARP entry number have ARP request sent without ARP reply.
Failed	ARP entry number at failed state.
None	ARP entry number at begin-found state.
Address	IP address of ARP entries.
Hardware Address	MAC address of ARP entries.
Interface	Layer 3 interface corresponding to the ARP entry.
Port	Physical (Layer2) port corresponding to the ARP entry.
Flag	Describes whether ARP entry is dynamic or static.

23.3.6 show arp traffic

Command:

`show arp traffic`

Function:

Display the statistic information of ARP messages of the switch. For box switches, this command will only show statistics of APP messages received and sent from the current boardcard.

Command mode:

Admin and Config Mode

Usage Guide:

Display statistics information of received and sent APP messages.

Example:

Switch#show arp traffic

ARP statistics:

Rcvd: 10 request, 5 response

Sent: 5 request, 10 response

Chapter 24 Commands for RIP

24.1 accept-lifetime

Command:

```
accept-lifetime <start-time> {<end-time>| duration<seconds>| infinite}  
no accept-lifetime
```

Function:

Use this command to specify a key accept on the key chain as a valid time period. The “no accept-lifetime” command deletes this configuration.

Parameter:

<start-time> parameter specifies the start time of the time period, of which the form should be:

<start-time>={<hh:mm:ss> <month> <day> <year>|<hh:mm:ss> <day> <month> <year>}

<hh:mm:ss> specify the concrete valid time of **accept-lifetime** in hours, minutes and second

<day> specifies the date of valid, ranging between 1 -31

<month> specifies the month of valid shown with the first three letters of the month, such as Jan

<year> specifies the year of valid start, ranging between 1993 - 2035

<end-time> specifies the due of the time period, of which the form should be:

<end-time>={<hh:mm:ss> <month> <day> <year>|<hh:mm:ss> <day> <month> <year>}

<hh:mm:ss> specify the concrete valid time of **accept-lifetime** in hours, minutes and second

<day> specifies the date of valid, ranging between 1 -31

<month> specifies the month of valid shown with the first three letters of the month, such as Jan

<year> specifies the year of valid start, ranging between 1993 - 2035

<seconds> the valid period of the key in seconds, ranging between 1-2147483646

Infinite means the key will never be out of date.

Default:

No default configuration.

Command Mode:

keychain-key mode

Example:

The example below shows the accept-lifetime configuration of key 1 on the keychain named mychain.

```
Switch# config terminal
Switch(config)# key chain mychain
Switch(config-keychain)# key 1
Switch(config-keychain-key)# accept-lifetime 03:03:01 Dec 3 2004 04:04:02 Oct 6 2006
```

Related Command:

key
key-string
key chain
send-lifetime

24.2 clear ip rip route

Command:

```
clear ip rip route {<A.B.C.D/M> | kernel | static | connected | rip | ospf | isis | bgp | all}
```

Function:

Clear specific route in the RIP route table.

Parameter:

<A.B.C.D/M> Clear the routes which match the destination address from the RIP route table. specifies the IP address prefix and its length of the destination address

kernel delete kernel routes from the RIP route table

static delete static routes from the RIP route table

connected delete direct routes from the RIP route table

rip only delete RIP routes from the RIP route table

ospf only delete OSPF routes from the RIP route table

isis only delete ISIS routes from the RIP route table

bgp only delete BGP routes from the RIP route table

all delete all routes from the RIP route table

Default:

No default configurations.

Command Mode:

Admin mode

Usage Guide:

Use this command with the all parameter will delete all learnt route in the RIP route which will be immediately recovered except for rip route. The dynamic learnt RIP route can only be recovered by studying one more time.

Example:

```
Switch# clear ip rip route 10.0.0.0/8
Switch# clear ip rip route ospf
```

24.3 debug rip

Command:

```
debug rip [events| nsm| packet[recv|send][detail]] all]
no debug rip [events| nsm| packet[recv|send][detail]] all]
```

Function:

Open various RIP adjustment switches and show various adjustment debugging messages. The “**no debug rip [events| nsm| packet[recv|send][detail]] all]**” command close corresponding debugging switch.

Parameter:

events shows the debugging messages of RIP events
nsm shows the communication messages between RIP and NSM
packet shows the debugging messages of RIP data packets
recv shows the messages of the received data packets
send shows the messages of the sent data packets
detail shows the messages of received or sent data packets
Default: Debug switch closed.

Command Mode:

Admin mode and global mode

Example:

```
Switch# debug rip packet
Switch#1970/01/01 01:01:43 IMI: SEND[Vlan1]: Send to 224.0.0.9:520
1970/01/01 01:01:43 IMI: SEND[Vlan1]: Send to 224.0.0.9:520
1970/01/01 01:01:47 IMI: RECV[Vlan1]: Receive from 20.1.1.2:520
```

24.4 debug rip redistribute message send

Command:

```
debug rip redistribute message send  
no debug rip redistribute message send
```

Function:

To enable the debugging of sending messages for routing redistribution messages from OSPF process or BGP protocol for RIP. The no form of this command will disable the debugging messages.

Default:

Close the debug by default.

Command Mode:

Admin Mode.

Example:

```
Switch#debug rip redistribute message send  
Switch#no debug rip redistribute message send
```

24.5 debug rip redistribute route receive

Command:

```
debug rip redistribute route receive  
no debug rip redistribute route receive
```

Function:

To enable debugging of received messages from NSM for RIP. The no form of this command will disable debugging of received messages from NSM for RIP.

Default:

Close the debug by default.

Command Mode:

Admin Mode.

Example:

```
Switch#debug rip redistribute route receive
Switch#no debug rip redistribute route receive
```

24.6 default-information originate

Command:

```
default-information originate
no default-information originate
```

Function:

Allow the network 0.0.0.0 to be redistributed into the RIP. The “**no default-information originate**” disable this function.

Default:

Disabled

Command Mode:

Router mode

Example:

```
Switch# config terminal
Switch(config)# router rip
Switch(config-router)# default-information originate
```

24.7 default-metric

Command:

```
default-metric <value>
no default-metric
```

Function:

Set the default metric value of the introduced route. The “**no default-metric**” command restores the default value to 1.

Parameter:

<value> is the metric value to be set, ranging between 1~16.

Default:

Default route metric value is 1.

Command Mode:

Router mode and address-family mode

Usage Guide:

default-metric command is used for setting the default route metric value of the routes from other routing protocols when distributed into the RIP routes. When using the **redistribute** commands for introducing routes from other protocols, the default route metric value specified by **default-metric** will be adopted if no specific route metric value is set.

Example:

Set the default route metric value to 3 for introducing routes from other routing protocols into the RIP routes.

```
Switch(config-router)#default-metric 3
```

Relevant Commands:

Redistribute

24.8 distance

Command:

distance <number> [<A.B.C.D/M>] [<access-list-name / access-list-number >]

no distance [<A.B.C.D/M>]

Function:

Set the managing distance with this command. The “**no distance [<A.B.C.D/M>]**” command restores the default value to 120.

Parameter:

<number> specifies the distance value, ranging between 1 to 255.

<A.B.C.D/M> specifies the network prefix and its length.

<access-list-name / access-list-number > specifies the access-list number or name applied.

Default:

The default managing distance of RIP is 120.

Command Mode:

Router mode and address-family mode

Usage Guide:

In case there are routes from two different routing protocols to the same destination, the managing distance is then used for selecting routes. The less the managing distance of the route protocol is, the more reliable will be the route acquired from the protocol.

Example:

```
Switch# config terminal
Switch(config)# router rip
Switch(config-router)# distance 8 10.0.0.0/8 mylist
```

24.9 distribute-list

Command:

```
distribute-list {<access-list-number | access-list-name> |prefix<prefix-list-name>} {in|out} [<ifname>]
no distribute-list {<access-list-number | access-list-name> |prefix<prefix-list-name>} {in|out} [<ifname>]
```

Function:

This command uses access-list or prefix-list to filter the route update packets sent and received. The “**no distribute-list {<access-list-number | access-list-name> |prefix<prefix-list-name>} {in|out} [<ifname>]”** command cancels this route filter function.

Parameter:

<access-list-number |access-list-name> is the name or access-list number to be applied. **<prefix-list-name>** is the name of the prefix-list to be applied.

<ifname> specifies the name of interface to be applied with route filtering.

Default:

The function in default situation is disabled.

Command Mode:

Router mode and address-family mode

Usage Guide:

The filter will be applied to all the interfaces in case no specific interface is set.

Example:

```
Switch# config terminal
Switch(config)# router rip
Switch(config-router)# distribute-list prefix myfilter in vlan 1
```

24.10 ip rip aggregate-address

Command:

```
ip rip aggregate-address A.B.C.D/M
no ip rip aggregate-address A.B.C.D/M
```

Function:

To configure RIP aggregation route. The no form of this command will delete this configuration.

Parameter:

A.B.C.D/M:IPv4 address and mask length.

Command Mode:

Router Mode or Interface Configuration Mode.

Default:

Disabled.

Usage Guide:

If to configure aggregation route under router mode, RIP protocol must be enabled. If configured under interface configuration mode, RIP protocol may not be enabled, but the aggregation router can operation after the RIP protocol be enabled on interface.

Example:

To configure aggregation route as 192.168.20.0/22 globally.

```
Switch(config)#router rip
Switch(config-router) #ip rip agg 192.168.20.0/22
```

24.11 ip rip authentication key-chain

Command:

```
ip rip authentication key <name-of-chain>  
no ip rip authentication key-chain
```

Function:

Use this command to enable RIPv2 authentication on an interface and further configures the adopted key chain. The “no ip rip authentication key-chain” command cancels the authentication.

Parameter:

<name-of-chain> is the name of the adopted key chain. There may be spaces in the string. The input ends with an enter and the string should not be longer than 256 bytes.

Command Mode:

Interface Configuration Mode.

Usage Guide:

If the authentication is only configured without configuring the key chain or password used by the interface, the authentication does no effect. If mode has not been configured prior to configuring this command, the mode will be set to plaintext authentication. The “no ip rip authentication key” command will cancel the authentication which only cancels the authentication process when sending or receiving data packet other than set non authentication mode.

Example:

```
Switch# config terminal  
Switch(config)# interface vlan 1  
Switch(Config-if-Vlan1)# ip rip authentication key my key
```

Relevant Commands:

key, key chain

24.12 ip rip authentication mode

Command:

```
ip rip authentication mode {text|md5}  
no ip rip authentication mode {ext|md5}
```

Function:

Configure the authentication mode; the “**no ip rip authentication mode {ext|md5}**” command restores to the default authentication mode namely text authentication mode.

Parameter:

text means text authentication; **md5** means MD5 authentication.

Default:

Not configured authentication.

Command Mode:

Interface Configuration Mode.

Usage Guide:

RIP-I do not support authentication which the RIP-II supports two authentication modes: text authentication (i.e. Simple authentication) and data packet authentication (i.e. MD5 authentication). This command should be used associating the ip rip authentication key or ip rip authentication string. Independently configuration will not lead to authentication process.

Example:

```
Switch# config terminal
Switch(config)# interface vlan 1
Switch(Config-if-Vlan1)# ip rip authentication mode md5
```

Related Command:

ip rip authentication key-chain, ip rip authentication string

24.13 ip rip authentication string

Command:

```
ip rip authentication string <text>
no ip rip authentication string
```

Function:

Set the password used in RIP authentication. The “**no ip rip authentication string**” cancels the authentication.

Parameter:

<text> is the password used in authentication of which the length should be 1-16 characters with space available. The password should end with enter.

Command Mode:

Interface mode

Usage Guide:

The ip rip authentication key will not be able to be configured when this command is configured, key id value is required in MD5 authentication which is 1 when use this command. The mode will be set to plaintext authentication in case no mode configuration is available. The “**no ip rip authentication string**” command will cancel the authentication which only cancels the authentication process when sending or receiving data packet other than set non authentication mode. Input ip rip authentication string aaa aaa to set the password as aaa aaa which is 7 characters.

Example:

```
Switch# config terminal
Switch(config)# interface vlan 1
Switch(Config-if-Vlan1)# ip rip authentication string guest
```

Related Command:

ip rip authentication mode

24.14 ip rip authentication cisco-compatible

Command:

ip rip authentication cisco-compatible
no ip rip authentication cisco-compatible

Function:

After configured this command, the cisco RIP packets will be receivable by configuring the plaintext authentication or MD5 authentication.

Default:

Not configured

Command Mode:

Interface mode

Usage Guide:

After authentication is configured on the cisco router, the RIP packets will exceeds the length of the defined standard length of the protocol once the number of route items is greater than 25. By configuring this command the over-lengthen RIP packets will be receivable other than denied.

Example:

```
Switch# config terminal
Switch(config)# interface vlan 1
Switch(Config-if-Vlan1)# ip rip authentication cisco-compatible
```

Related Command:

ip rip authentication mode

24.15 ip rip receive-packet

Command:

ip rip receive-packet
no ip rip receive-packet

Function:

Set the interface to be able to receivable RIP packets; the “**no ip rip receive-packet**” command set the interface to be unable to receivable RIP packets.

Default:

Interface receives RIP packets.

Command Mode:

Interface Configuration Mode.

Example:

```
Switch# config terminal
Switch(config)# interface vlan 1
```

```
Switch(Config-if-Vlan1)# ip rip receive-packet
```

Related Command:

ip rip send-packet

24.16 ip rip receive version

Command:

ip rip receive version { 1 | 2|1 2 }

no ip rip receive version

Function:

Set the version information of the RIP packets the interface receives. The default version is 2; the “**no ip rip receive version**” command restores the value set by using the version command.

Parameter:

1 and 2 respectively stands for RIP version 1 and RIP version 2, 1 2 stands for the RIP versions 1, 2.

Default:

Version 2

Command Mode:

Interface Configuration Mode.

Example:

```
Switch# config terminal
Switch(config)# interface vlan 1
Switch(Config-if-Vlan1)# ip rip receive version 1 2
```

Related Command:

Version

24.17 ip rip send-packet

Command:

```
ip rip send-packet  
no ip rip send-packet
```

Function:

Set the Interface to be able to receive the RIP packets; the “**no ip rip send-packet**” set the interface to be unable to receive the RIP packets.

Default:

Interface sends RIP packets.

Command Mode:

Interface Configuration Mode.

Example:

```
Switch# config terminal  
Switch(config)# interface vlan 1  
Switch(Config-if-Vlan1)# ip rip send-packet
```

Related Command:

```
ip rip receive-packet
```

24.18 ip rip send version

Command:

```
ip rip send version { 1 | 2 | 1-compatible | 1 2 }  
no ip rip send version
```

Function:

Set the version information of the RIP packets the interface receives. The default version is 2; the “**no ip rip send version**” command restores the value set by using the version command.

Parameter:

1 and 2 respectively stands for RIP version 1 and RIP version 2, 1 2 stands for the RIP versions 1, 2.

Default:

Version 2

Command Mode:

Interface Configuration Mode.

Example:

```
Switch# config terminal
Switch(config)# interface vlan 1
Switch(Config-if-Vlan1)# ip rip send version 1
```

Related Command:

Version

24.19 ip rip split-horizon

Command:

```
ip rip split-horizon [poisoned]
no ip rip split-horizon
```

Function:

Enable split horizon. The “**no ip rip split-horizon**” disables the split horizon.

Parameter:

[poisoned] means configure the split horizon with poison reverse.

Default:

Split Horizon with poison reverse by default.

Command Mode:

Interface Configuration Mode.

Usage Guide:

The split horizon is for preventing the Routing Loops, namely preventing the layer 3 switches from broadcasting the routes which is learnt from the same interface on which the route to be broadcasted.

Example:

```
Switch# config terminal
Switch(config)# interface vlan 1
Switch(Config-if-Vlan1)# ip rip split-horizon poisoned
```

24.20 key

Command:

```
key <keyid>
no key <keyid>
```

Function:

This command is for managing and adding keys in the key chain. The “**no key <keyid>**” command deletes one key.

Parameter:

<**keyid**> is key ID, ranging between 0-2147483647.

Command Mode:

Keychain mode and keychain-key mode

Usage Guide:

The command permits entering the keychain-key mode and set the passwords corresponding to the keys.

Example:

```
Switch# config terminal
Switch(config)# key chain mychain
Switch(config-keychain)# key 1
Switch(config-keychain-key)#
```

Relevant Commands:

key chain, key-string, accept-lifetime, send-lifetime

24.21 key chain

Command:

```
key chain <name-of-chain>  
no key chain < name-of-chain >
```

Function:

This command is for entering a keychain manage mode and configure a keychain. The “**no key chain < name-of-chain >**” deletes one keychain.

Parameter:

<name-of-chain> is the name string of the keychain the length of which is not specifically limited.

Command Mode:

Global Mode

Example:

```
Switch# config terminal  
Switch(config)# key chain mychain  
Switch(config-keychain)#
```

Relevant Commands:

key, key-string, accept-lifetime, send-lifetime

24.22 key-string

Command:

```
key-string <text>  
no key-string <text>
```

Function:

Configure a password corresponding to a key. The “**no key-string <text>**” command delete the corresponding password.

Parameter:

<text> is a character string without length limit. However when referred by RIP authentication only the first 16 characters will be used.

Command Mode:

Keychain-key mode

Usage Guide:

This command is for configure different passwords for keys with different ID.

Example:

```
Switch# config terminal
Switch(config)# key chain mychain
Switch(config-keychain)# key 1
Switch(config-keychain-key)# key-string prime
```

Related Command:

key, key chain, accept-lifetime, send-lifetime

24.23 maximum-prefix

Command:

```
maximum-prefix <maximum-prefix> [<threshold>]
no maximum-prefix
```

Function:

Configure the maximum number of RIP routes in the route table. The “**no maximum-prefix**” command cancels the limit.

Parameter:

<maximum-prefix> the maximum number of RIP route, ranging between 1-65535; a warning is given when the number rate of current route exceeds **<threshold>** ranging between 1-100, default at 75.

Command Mode:

router mode

Usage Guide:

The maximum RIP route only limits the number of routes learnt through RIP but not includes direct route or the RIP static route configured by the route command. The base on which the comparison is performed is the number of route marked R in the show ip route database, and also the number of RIP routes displayed in the show ip route statistics command.

Example:

```
Switch# config terminal
Switch(config)# router rip
Switch(config-router)# maximum-prefix 150
```

24.24 neighbor

Command:

```
neighbor <A.B.C.D>
no neighbor <A.B.C.D>
```

Function:

Specify the destination address requires targeted-peer sending. The “no neighbor <A.B.C.D>”command cancels the specified address and restores all gateways to trustable.

Parameter:

<A.B.C.D> is the specified destination address for the sending, shown in dotted decimal notation.

Default:

Not sending to any targeted-peer destination address.

Command Mode:

Router mode

Usage Guide:

When used accompany with passive-interface command it can be configured to only sending routing messages to specific neighbor.

Example:

```
Switch# config terminal
Switch(config)# router rip
Switch(config-router)# neighbor 1.1.1.1
```

Related Command:

passive-interface

24.25 network

Command:

```
network <A.B.C.C/M>|ifname>  
no network <A.B.C.C/M>|ifname>
```

Function:

Configure the RIP protocol network.

Parameter:

<A.B.C.C/M> is the IP address prefix and its length in the network.
<ifname> is the name of a interface.

Default:

Not running RIP protocol

Command Mode:

Router mode and address-family mode

Usage Guide:

Use this command to configure the network for sending or receiving RIP update packets. If the network is not configured, all interfaces of the network will not be able to send or receive data packets.

Example:

```
Switch# config terminal  
Switch(config)# router rip  
Switch(config-router)# network 10.0.0.0/8  
Switch(config-router)# network vlan 1
```

Related Command:

show ip rip, clear ip rip

24.26 offset-list

Command:

```
offset-list <access-list-number |access-list-name> {in|out} <number > [<ifname>]  
no offset-list <access-list-number |access-list-name> {in|out} <number > [<ifname>]
```

Function:

Add an offset value to the metric value of the routes learnt by RIP. The “**no offset-list <access-list-number |access-list-name> {in|out} <number > [<ifname>]**” command disables this function.

Parameter:

< **access-list-number |access-list-name** > is the access-list or name to be applied. <**number** > is the added offset value, ranging between 0-16; <**ifname**> is the specific interface name

Default:

Default offset value is the metric value defined by the system.

Command Mode:

Router mode and address-family mode

Example:

```
Switch# config terminal  
Switch(config)# router rip  
Switch(config-router)# offset-list 1 in 5 vlan 1
```

Related Command:

access-list

24.27 passive-interface

Command:

```
passive-interface <ifname>  
no passive-interface <ifname>
```

Function:

Set the RIP layer 3 switch blocks RIP broadcast on specified interface, on which the RIP data packets will only be sent to layer 3 switches configured with neighbor.

Parameter:

<ifname> is the name of specific interface.

Default:

Not configured

Command Mode:

Router mode

Example:

```
Switch# config terminal
Switch(config)# router rip
Switch(config-router)# passive-interface vlan 1
```

Related Command:

show ip rip

24.28 recv-buffer-size

Command:

recv-buffer-size<size>

no recv-buffer-size

Function:

This command configures the size of UDP receiving buffer zone of RIP; the “**no recv-buffer-size**” command restores the system default.

Parameter:

<size> is the buffer zone size in bytes, ranging between 8192-2147483647.

Default:

8192 bytes.

Command Mode:

Router mode

Example:

```
Switch# config terminal
Switch(config)# router rip
Switch(config-router)# recv-buffer-size 23456789
```

24.29 redistribute

Command:

```
redistribute {kernel |connected| static| ospf [<process-id>] | isis| bgp} [metric<value>] [route-map<word>]
no redistribute {kernel |connected| static| ospf [<process-id>] | isis| bgp} [metric<value>] [route-map<word>]
```

Function:

Introduce the routes learnt from other routing protocols into RIP.

Parameter:

kernel introduce from kernel routes;

connected introduce from direct routes;

static introduce from static routes;

ospf introduce from OSPF routes. process-id is OSPF process ID, if there is no parameter that means the process by default, range between 1 to 65535;

isis introduce from ISIS routes;

bgp introduce from BGP routes;

<value> is the metric value assigned to the introduced route, ranging between 0 to 16;

<word> is the probe pointing to the route map for introducing routes.

Command Mode:

Router Mode and address-family Mode

Usage Guide:

Under the address-family mode, the parameter kernel and ISIS is unavailable.

Example:

```
Switch# config terminal
Switch(config)# router rip
Switch(config-router)# redistribute kernel route-map ipi
```

To redistribute OSPFv2 routing information to RIP.

```
Switch(config)# router rip
Switch(config-router)# redistribute ospf 2
```

24.30 route

Command:

```
route <A.B.C.D/M>
no route <A.B.C.D/M>
```

Function:

This command configures a static RIP route. The “**no route <A.B.C.D/M>**” command deletes this route.

Parameter:

Specifies this destination IP address prefix and its length.

Command Mode:

Router mode

Usage Guide:

The command add a static RIP route, and is mainly used for debugging. Routes configured by this command will not appear in kernel route table but in the RIP route database.

Example:

```
Switch# config terminal
Switch(config)# router rip
Switch(config-router)# route 1.0.0.0/8
```

24.31 router rip

Command:

```
router rip
no router rip
```

Function:

Enable the RIP routing process and enter the RIP mode; the “**no router rip**” command closes the RIP routing protocol.

Default:

Not running RIP route.

Command Mode:

Global mode

Usage Guide:

This command is the switch for starting the RIP routing protocol which is required to be open before configuring other RIP protocol commands.

Example:

Enable the RIP protocol mode

```
Switch(config)#router rip
Switch(config-router)#
```

24.32 send-lifetime

Command:

```
send-lifetime <start-time> {<end-time>| duration<seconds>| infinite}
no send-lifetime
```

Function:

Use this command to specify a key on the keychain as the time period of sending keys. The “**no send-lifetime**” cancels this configuration.

Parameter:

<**start-time**> parameter specifies the starting time of the time period, which is:

<**start-time**>={<**hh:mm:ss**> <**month**> <**day**> <**year**>|<**hh:mm:ss**> <**day**> <**month**> <**year**>}

<**hh:mm:ss**> Specify the concrete valid time of **accept-lifetime** in hours, minutes and second

<**day**> Specifies the date of valid, ranging between 1 -31

<**month**> Specifies the month of valid shown with the first three letters of the month, such as Jan

<year> Specifies the year of valid start, ranging between 1993 - 2035

end-time> Specifies the due of the time period, of which the form should be:

end-time>={<hh:mm:ss> <month> <day> <year>|<hh:mm:ss> <day> <month> <year>}

<hh:mm:ss> Specify the concrete valid time of **accept-lifetime** in hours, minutes and second

<day> Specifies the date of valid, ranging between 1 -31

<month> Specifies the month of valid shown with the first three letters of the month, such as Jan

<year> Specifies the year of valid start, ranging between 1993 -2035

<seconds> is the valid period of the key in seconding and ranging between 1-2147483646

Default:

No default configuration

Command Mode:

Keychain-key mode

Example:

The example below shows the send-lifetime configuration on the keychain named mychain for key 1.

```
Switch# config terminal
Switch(config)# key chain mychain
Switch(config-keychain)# key 1
Switch(config-keychain-key)# send-lifetime 03:03:01 Dec 3 2004 04:04:02 Oct 6 2006
```

Related Command:

key, key-string, key chain, accept-lifetime

24.33 show debugging rip

Command:

show debugging rip

Function:

Show RIP event debugging, RIP packet debugging and RIP nsm debugging status.

Command Mode:

Admin and configuration mode

Example:

```
Switch# show debugging rip
RIP debugging status:
RIP event debugging is on
RIP packet detail debugging is on
RIP NSM debugging is on
```

24.34 show ip protocols rip

Command:

```
show ip protocols rip
```

Function:

Show the RIP process parameter and statistics information.

Command Mode:

Admin and configuration mode

Example:

```
show ip protocols rip
Routing Protocol is "rip"
Sending updates every 30 seconds with +/-50%, next due in 8 seconds
Timeout after 180 seconds, garbage collect after 120 seconds
Outgoing update filter list for all interface is not set
Incoming update filter list for all interface is not set
Default redistribution metric is 1
Redistributing: static
Default version control: send version 2, receive version 2
  Interface      Send Recv  Key-chain
  Vlan1          2      2
Routing for Networks:
  Vlan1
  Vlan2
Routing Information Sources:
  Gateway          Distance  Last Update  Bad Packets  Bad Routes
  20.1.1.1         120      00:00:31    0             0
```

Distance: (default is 120)

Displayed information	Explanation										
Sending updates every 30 seconds with +/-50%, next due in 8 seconds	Sending update every 30 secs										
Timeout after 180 seconds, garbage collect after 120 seconds	The route time-out event period is 180 secs, the garbage collect time is 120 seconds										
Outgoing update filter list for all interface is not set	Outgoing update filter list for all interface is not set										
Incoming update filter list for all interface is not set	Incoming update filter list for all interface is not set										
Default redistribution metric is 1	Default redistribution metric is 1										
Redistributing: static	Redistributing the static route into the RIP route										
Default version control: send version 2, receive version 2 <table border="1" style="margin-left: 20px;"> <thead> <tr> <th>Interface</th> <th>Send</th> <th>Recv</th> <th>Key-chain</th> </tr> </thead> <tbody> <tr> <td>Ethernet0/0/8</td> <td>2</td> <td>2</td> <td></td> </tr> </tbody> </table>	Interface	Send	Recv	Key-chain	Ethernet0/0/8	2	2		The configuration of interface receiving and sending packets. Receive version is 2, keychain 1 not configured.		
Interface	Send	Recv	Key-chain								
Ethernet0/0/8	2	2									
Routing for Networks: Vlan1 Vlan2	The segment running RIP is the Vlan 1 and Vlan 2										
Routing Information Sources: <table border="1" style="margin-left: 20px;"> <thead> <tr> <th>Gateway</th> <th>Distance</th> <th>Last Update</th> <th>Bad Packets</th> <th>Bad Routes</th> </tr> </thead> <tbody> <tr> <td>20.1.1.1</td> <td>120</td> <td>00:00:31</td> <td>0</td> <td>0</td> </tr> </tbody> </table>	Gateway	Distance	Last Update	Bad Packets	Bad Routes	20.1.1.1	120	00:00:31	0	0	Routing information sources The badpacketand bad routes from the gateway 20.1.1.1 are all 0. 31 seconds have passed since the last route update. The manage distance is 120
Gateway	Distance	Last Update	Bad Packets	Bad Routes							
20.1.1.1	120	00:00:31	0	0							
Distance: (default is 120)	Default manage distance is 120										

24.35 show ip rip

Command:

show ip rip

Function:

Show the routes in the RIP route data base.

Command Mode:

Admin mode

Example:

show ip rip

```
Codes: R - RIP, K - Kernel, C - Connected, S - Static, O - OSPF, I - IS-IS,
       B - BGP
```

Network	Next Hop	Metric From	If	Time
R 12.1.1.0/24	20.1.1.1	2 20.1.1.1	Vlan1	02:51
R 20.1.1.0/24		1	Vlan1	

Amongst R stands for RIP route, namely a RIP route with the destination network address 12.1.1.0, the network prefix length as 24, next-hop address at 20.1.1.1. It is learnt from the Ethernet port E1/8 with a metric value of 2, and still has 2 minutes 51 seconds before time out.

24.36 show ip rip database

Command:

show ip rip database

Function:

Show the routes in the RIP route database.

Command Mode:

Admin mode

Example:

```
Switch# show ip rip database
```

```
Codes: R - RIP, K - Kernel, C - Connected, S - Static, O - OSPF, I - IS-IS,
       B - BGP
```

Network	Next Hop	Metric From	If	Time
R 10.1.1.0/24		1	Vlan1	
R 20.1.1.0/24		1	Vlan2	

Command:

show ip rip

24.37 show ip rip interface

Command:

```
show ip rip interface [<ifname>]
```

Function:

Show the RIP related messages.

Parameter:

<ifname> is the name of the interface to show the messages.

Command Mode:

Admin mode

Example:

```
Switch# show ip rip interface vlan 1
Vlan1 is up, line protocol is up
  Routing Protocol: RIP
    Receive RIP packets
    Send RIP packets
    Passive interface: Disabled
    Split horizon: Enabled with Poisoned Reversed
    IP interface address:10.1.1.1/24
```

24.38 show ip rip aggregate

Command:

```
show ip rip aggregate
```

Function:

To display the information of IPv4 aggregation route.

Command Mode:

Admin and Configuration Mode.

Usage Guide:

This command is used to display which interface the aggregation route be configured, Metric, Count, Suppress and so on. If configured under global mode, then the interface display “----”, “Metric” is metric. “Count” is the number of learned aggregation routes. “Suppress” is the times of aggregation.

Example:

To display the information of IPv4 aggregation route.

```
Switch(Config-if-Vlan1)#show ip rip agg
Aggregate information of rip

      Network          Aggregated Ifname      Metric Count Suppress
192.168.0.0/16        Vlan1                   1     2     0
192.168.4.0/22        ----                   1     2     0
192.168.4.0/24        ----                   1     1     1
                        Vlan1                   1     1     1
```

Displayed information	Explanation
Network	Route prefix and prefix length.
Aggregated Ifname	To configure the interface name of the aggregation route. If the route aggregated globally, then display “----”.
Metric	Metric of aggregation route.
Count	The number of learned aggregation route.
Suppress	The times of aggregated for aggregation route.

24.39 timers basic

Command:

```
timers basic <update> <invalid> <garbage>
no timers basic
```

Function:

Adjust the RIP timer update, timeout, and garbage collecting time. The “no timers basic” command restores each parameters to their default values.

Parameter:

<update> time interval of sending update packet, shown in seconds and ranging between 5-2147483647;

<invalid> time period after which the RIP route is advertised dead, shown in seconds and ranging between 5-2147483647;

<garbage> is the hold time in which the a route remains in the routing table after advertised dead, shown in seconds and ranging between 5-2147483647.

Default:

<update> defaulted at 30;

<invalid> defaulted at 180;

<garbage> defaulted at 120

Command Mode:

Router mode

Usage Guide:

The system is defaulted broadcasting RIPv4 update packets every 30 seconds; and the route is considered invalid after 180 seconds but still exists for another 120 seconds before it is deleted from the routing table.

Example:

Set the RIP update time to 20 seconds and the timeout period to 80 second, the garbage collecting time to 60 seconds.

```
Switch(Config-Router)#timers basic 20 80 60
```

24.40 version

Command:

version {1| 2}

no version

Function:

Configure the version of all RIP data packets sent/received by router interfaces: the “**no version**” restores the default configuration.

Parameter:

1 is version 1 rip;

2 is version 2 rip.

Default:

Sent and received data packet is version 2 by default.

Command Mode:

Router mode and address-family mode

Usage Guide:

1. refers to that each interface of the layer 3 switch only sends/receives the RIP-I data packets.
2. refers to that each interface of the layer 3 switch only sends/receives the RIP-II data packets. The RIP-II data packet is the default version.

Example:

Configure the version of all RIP data packets sent/received by router interfaces to version 2.

```
Switch(config-router)#version 2
```

Related Command:

ip rip receive version

ip rip send version

Chapter 25 Commands for OSPF

25.1 area authentication

Command:

```
area <id> authentication [message-digest]
no area <id> authentication
```

Function:

Configure the authentication mode of the OSPF area; the “**no area <id> authentication**” command restores the default value.

Parameter:

<id> is the area number which could be shown in digit, ranging between 0 to 4294967295, or in IP address. **message-digest** is proved by MD5 authentication, or be proved by simple plaintext authentication if not choose this parameter.

Default:

No authentication.

Command Mode:

OSPF protocol mode

Usage Guide:

Set the authentication mode to plaintext authentication or MD5 authentication. The authentication mode is also configurable under interface mode of which the priority is higher than those in the area. It is required to use **ip ospf authentication-key** to set the password while no authentication mode configured at the interface and the area is plaintext authentication, and use `ip ospf message-digest key` command to configure MD5 key if is MD5 authentication. The area authentication mode could not affect the authentication mode of the interface in this area.

Example:

Set the authentication mode in area 0 to MD5.

```
Switch(config-router)#area 0 authentication message-digest
```


25.2 area default-cost

Command:

```
area <id> default-cost <cost>
no area <id> default-cost
```

Function:

Configure the cost of sending to the default summary route in stub or NSSA area; the “no area <id> default-cost” command restores the default value.

Parameter:

<id> is the area number which could be shown as digits 0~4294967295, or as an IP address; <cost> ranges between <0-16777215>.

Default:

Default OSPF cost is 1.

Command Mode:

OSPF protocol mode

Usage Guide:

The command is only adaptive to the ABR router connected to the stub area or NSSA area.

Example:

Set the default-cost of area 1 to 10.

```
Switch(config-router)#area 1 default-cost 10
```

25.3 area filter-list

Command:

```
area <id> filter-list {access|prefix} {in|out}
no area <id> filter-list {access|prefix} {in|out}
```

Function:

Configure the filter broadcasting summary routing on the ABR; the “no area <id> filter-list {access|prefix} {in|out}” command restores the default value.

Parameter:

<id> is the area number which could be shown in digits ranging between 0~4294967295, or as an IP address;
access-list is appointed for use in access, so is prefix-list for prefix;
<name> is the name of the filter, the length of which is between 1-256; in means from other areas to this area, out means from this area to other areas.

Default:

No filter configured.

Command Mode:

OSPF protocol mode

Usage Guide:

This command is used for restraining routes from specific area from spreading between this area and other areas.

Example:

Set a filter on the area 1.

```
Switch(config)#access-list 1 deny 172.22.0.0 0.0.0.255
Switch(config)#access-list 1 permit any
Switch(config)#router ospf 100
Switch(config-router)#area 1 filter-list access 1 in
```

25.4 area nssa

Command:

```
area <id> nssa [TRANSLATOR| no-redistribution |DEFAULT-ORIGINATE | no-summary]
no area <id> nssa [TRANSLATOR| no-redistribution | DEFAULT-ORIGINATE | no-summary]
```

Function:

Set the area to Not-So-Stubby-Area (NSSA) area.

Parameter:

<id> is the area number which could be digits ranging between 0~4294967295, and also as an IP address.

TRANLATOR = translator-role {candidate|never|always}, specifies the LSA translation mode for routes:
candidate means if the router is elected translator, Type 7 LSA can be translated to Type-5 LSA, the default is

candidate.

never means the router will never translate Type 7 LSA to Type 5 LSA.

always means the route always translate Type 7 LSA to Type 5 LSA.

no-redistribution means never distribute external-LSA to NSSA.

DEFAULT-ORIGINATE=default-information-originate [metric <0-16777214>] [metric-type <1-2>], generate the Type-7 LSA.

metric <0-16777214> specify the metric value.

metric-type <1-2> specifies the metric value type of external-LSA , default value is 2.

no-summary shows not injecting area route to the NSSA.

Default:

No NSSA area defined by default.

Command Mode:

OSPF protocol mode

Usage Guide:

The same area can not be both NSSA and stub at the same time.

Example:

Set area 3 to NSSA.

```
Switch#config terminal
Switch(config)#router ospf 100
Switch(config-router)#area 0.0.0.51 nssa
Switch(config-router)#area 3 nssa default-information-originate metric 34 metric-type 2
translator-role candidate no-redistribution
```

25.5 area range

Command:

area <id> range <address> [advertise| not-advertise| substitute]

no area <id> range <address>

Function:

Aggregate OSPF route on the area border. The “**no area <id> range <address>**”cancels this function.

Parameter:

<id> is the area number which could be digits ranging between 0~4294967295, and also as an IP address.

<address>=<A.B.C.D/M> specifies the area network prefix and its length.

advertise: Advertise this area, which is the default.

not-advertise : Not advertise this area.

substitute= substitute <A.B.C.D/M>: advertise this area as another prefix.

<A.B.C.D/M>: Replace the network prefix to be advertised in this area.

Default:

Not set.

Command Mode:

OSPF protocol mode

Usage Guide:

Use this command to aggregate routes inside an area. If the network IDs in this area are not configured continuously, a summary route can be advertised by configuring this command on ABR. This route consists of all single networks belong to specific range.

Example:

```
Switch#config terminal
Switch(config)# router ospf 100
Switch(config-router)# area 1 range 192.16.0.0/24
```

25.6 area stub

Command:

area <id> stub [no-summary]

no area <id> stub [no-summary]

Function:

Define a area to a stub area. The “**no area <id> stub [no-summary]**” command cancels this function.

Parameter:

<id> is the area number which could be digits ranging between 0~4294967295, and also as an IP address.

no-summary: The area border routes stop sending link summary announcement to the stub area.

Default:

Not defined.

Command Mode:

OSPF protocol mode

Usage Guide:

Configure area stub on all routes in the stub area. There are two configuration commands for the routers in the stub area: stub and default-cost. All routers connected to the stub area should be configured with area stub command. As for area border routers connected to the stub area, their introducing cost is defined with area default-cost command.

Example:

```
Switch # config terminal
Switch (config)# router ospf 100
Switch (config-router)# area 1 stub
```

Related Command:

area default-cost

25.7 area virtual-link

Command:

```
area <id> virtual-link A.B.C.D {AUTHENTICATION | AUTH_KEY | INTERVAL}
no area <id> virtual-link A.B.C.D [AUTHENTICATION | AUTH_KEY | INTERVAL]
```

Function:

Configure a logical link between two backbone areas physically divided by non-backbone area. The “no area <id> virtual-link A.B.C.D [AUTHENTICATION | AUTH_KEY | INTERVAL]” command removes this virtual-link.

Parameter:

<id> is the area number which could be digits ranging between 0~4294967295, and also as an IP address.

AUTHENTICATION = authentication [message-digest[message-digest-key <1-255> md5 <LINE>]
[null|AUTH_KEY].

authentication : Enable authentication on this virtual link.

message-digest: Authentication with MD-5.

null : Overwrite password or packet summary with null authentication.

AUTH_KEY= authentication-key <key>.

<key>: A password consists of less than 8 characters.

INTERVAL= [dead-interval | hello-interval | message-digest-key<1-255>md5<LINE> | retransmit-interval | transmit-delay] <value>.

<value>: The delay or interval seconds, ranging between 1~65535.

<dead-interval>: A neighbor is considered offline for certain dead interval without its group messages which the default is 40 seconds.

<hello-interval>: The time interval before the router sends a hello group message, default is 10 seconds.

<message-digest-key>: Authentication key with MD-5.

<retransmit-interval>: The time interval before a router retransmitting a group message, default is 5 seconds.

<transmit-delay>: The time delay before a router sending a group messages, default is 1 second.

Command Mode:

OSPF protocol mode

Usage Guide:

In the OSPF all non-backbone areas will be connected to a backbone area. If the connection to the backbone area is lost, virtual link will repair this connection. You can configure virtual link between any two backbone area routers connected with the public non-backbone area. The protocol treat routers connected by virtual links as a point-to-point network.

Example:

```
Switch#config terminal
Switch(config) #router ospf 100
Switch(config-router) #area 1 virtual-link 10.10.11.50 hello 5 dead 20
```

Relevant Commands:

area authentication, show ip ospf, show ip ospf virtual-links

25.8 auto-cost reference-bandwidth

Command:

auto-cost reference-bandwidth <bandwidth>

no auto-cost reference-bandwidth

Function:

This command sets the way in which OSPF calculate the default metric value. The “**no auto-cost reference-bandwidth**” command only configures the cost to the interface by types.

Parameter:

<*bandwidth*> reference bandwidth in Mbps, ranging between 1~4294967.

Default:

Default bandwidth is 100Mbps.

Command Mode:

OSPF protocol mode

Usage Guide:

The interface metric value is acquired by divide the interface bandwidth with reference bandwidth. This command is mainly for differentiate high bandwidth links. If several high bandwidth links exist, their cost can be assorted by configuring a larger reference bandwidth value.

Example:

```
Switch#config terminal
Switch(config)#router ospf 100
Switch(config-router)#auto-cost reference-bandwidth 50
```

Relative Command:

ip ospf cost

25.9 compatible rfc1583

Command:

compatible rfc1583
no compatible rfc1583

Function:

This command configures to rfc1583 compatible. The “**no compatible rfc1583**” command close the compatibility.

Default:

Rfc 2328 compatible by default.

Command Mode:

OSPF protocol mode

Example:

```
Switch#config terminal
Switch(config)#router ospf 100
Switch(config-router)#compatible rfc1583
```

25.10 clear ip ospf process

Command:

```
clear ip ospf [<process-id>] process
```

Function:

Use this command to clear and restart OSPF routing processes. One certain OSPF process will be cleared by specifying the process ID, or else all OSPF processes will be cleared.

Default:

No default configuration.

Command Mode:

Admin mode

Example:

```
Switch#clear ip ospf process
```

25.11 debug ospf events

Command:

```
debug ospf events [abr|asbr|lsa|nssa|os|router|vlink]
no debug ospf events [abr|asbr|lsa|nssa|os|router|vlink]
```


Function:

Open debugging switches showing various OSPF events messages; the “**no debug ospf events [abr|asbr|lsa|nssa|os|router|vlink]**” command closes the debugging switch.

Default:

Closed

Command Mode:

Admin and global mode

Example:

```
Switch#debug ospf events router
```

25.12 debug ospf ifsm

Command:

```
debug ospf ifsm [status|events|timers]  
no debug ospf ifsm [status|events|timers]
```

Function:

Open debugging switches showing the OSPF interface states; the “**no debug ospf ifsm [status|events|timers]**” command closes this debugging switches.

Default:

Closed

Command Mode:

Admin mode and global mode

Example:

```
Switch#debug ospf ifsm events
```

25.13 debug ospf lsa

Command:

```
debug ospf lsa [generate|flooding|install|maxage|refresh]
no debug ospf lsa [generate|flooding|install|maxage|refresh]
```

Function:

Open debugging switches showing link state announcements; the “**no debug ospf lsa [generate|flooding|install|maxage|refresh]**” closes the debugging switches.

Default:

Closed

Command Mode:

Admin mode and global mode

Example:

```
Switch#debug ospf lsa generate
```

25.14 debug ospf nfsm

Command:

```
debug ospf nfsm [status|events|timers]
no debug ospf nfsm [status|events|timers]
```

Function:

Open debugging switches showing OSPF neighbor state machine; the “**no debug ospf nfsm [status|events|timers]**” command closes this debugging switch.

Default:

Closed

Command Mode:

Admin mode and global mode

Example:

```
Switch#debug ospf nfsm events
```

25.15 debug ospf nsm

Command:

```
debug ospf nsm [interface|redistribute]
no debug ospf nsm [interface|redistribute]
```

Function:

Open debugging switches showing OSPF NSM, the “**no debug ospf nsm [interface|redistribute]**” command closes this debugging switch.

Default:

Closed

Command Mode:

Admin mode and global mode

Example:

```
Switch#debug ospf nsm interface
```

25.16 debug ospf packet

Command:

```
debug ospf packet [dd | detail | hello | ls-ack | ls-request | ls-update | rcv | detail]
no debug ospf packet [dd | detail | hello | ls-ack | ls-request | ls-update | rcv | detail]
```

Function:

Open debugging switches showing OSPF packet messages; the “**no debug ospf packet [dd | detail | hello | ls-ack | ls-request | ls-update | rcv | detail]**” command closes this debugging switch.

Default:

Closed

Command Mode:

Admin mode and global mode

Example:

```
Switch#debug ospf packet hello
```

25.17 debug ospf route

Command:

```
debug ospf route [ase|ia|install|spf]  
no debug ospf route [ase|ia|install|spf]
```

Function:

Open debugging switches showing OSPF related routes; the “**no debug ospf route [ase|ia|install|spf]**” command closes this debugging switch.

Default:

Closed

Command Mode:

Admin mode and global mode

Example:

```
Switch#debug ospf route spf
```

25.18 debug ospf redistribute message send

Command:

```
debug ospf redistribute message send  
no debug ospf redistribute message send
```

Function:

To enable debugging of sending command from OSPF process redistributed to other OSPF process routing. The no form of command disables debugging of sending command from OSPF process redistributed to other OSPF process routing.

Default:

Disabled.

Command Mode:

Admin Mode.

Example:

To enable debugging of sending command from OSPF process redistributed to other OSPF process routing.

```
Switch#debug ospf redistribute message send
```

25.19 debug ospf redistribute route receive

Command:

```
debug ospf redistribute route receive  
no debug ospf redistribute route receive
```

Function:

To enable/disable debugging switch of received routing message from NSM for OSPF process.

Parameter:

None.

Default:

Disabled.

Command Mode:

Admin Mode.

Usage Guide:

None.

Example:

To enable debugging switch of received routing message from NSM for OSPF process.

```
Switch# debug ospf redistribute route receive
```

25.20 default-information originate

Command:

```
default-information originate [always | METRIC | METRICTYPE | ROUTEMAP]
no default-information originate
```

Function:

This command create a default external route to OSPF route area; the “**no default-information originate**” closes this feature.

Parameter:

always: Whether default route exist in the software or not, the default route is always advertised.

METRIC = metric <value>: Set the metric value for creating default route, <value> ranges between 0~16777214, default metric value is 0.

METRICTYPE = metric-type {1|2} set the OSPF external link type of default route.

1 Set the OSPF external type 1 metric value.

2 Set the OSPF external type 2 metric value.

ROUTEMAP = route-map <WORD>.

<WORD> specifies the route map name to be applied.

Default:

Default metric value is 10, default OSPF external link type is 2.

Command Mode:

OSPF protocol mode

Usage Guide:

When introducing route into OSPF route area with this command, the system will behaves like an ASBR.

Example:

```
Switch#config terminal
Switch(config)#router ospf 100
Switch(config-router)#default-information originate always metric 23 metric-type 2 route-map
myinfo
```

Relevant Commands:

route-map

25.21 default-metric

Command:

```
default-metric <value>  
no default-metric
```

Function:

The command set the default metric value of OSPF routing protocol; the “**no default-metric**” returns to the default state.

Parameter:

<value>, metric value, ranging between 0~16777214.

Default:

Built-in, metric value auto translating.

Command Mode:

OSPF protocol mode

Usage Guide:

When the default metric value makes the metric value not compatible, the route introducing still goes through. If the metric value can not be translated, the default value provides alternative option to carry the route introducing on. This command will result in that all introduced route will use the same metric value. This command should be used associating redistribute.

Example:

```
Switch#config terminal  
Switch(config)#router ospf 100  
Switch(config-router)#default-metric 100
```

25.22 distance

Command:

```
distance {<value>|ROUTEPARAMETER}  
no distance ospf
```

Function:

Configure OSPF manage distance base on route type. The “**no distance ospf**” command restores the default value.

Parameter:

<value>, OSPF routing manage distance, ranging between 1~235

ROUTEPARAMETER= ospf {ROUTE1|ROUTE2|ROUTE3}.

ROUTE1= external <external-distance>, Configure the distance learnt from other routing area.

<external-distance>distance value, ranging between 1~255.

ROUTE2= inter-area <inter-distance>, configure the distance value from one area to another area.

<inter-distance> manage distance value, ranging between 1~255.

ROUTE3= intra-area <intra-distance> Configure all distance values in one area.

<intra-distance> Manage distance value, ranging between 1~255.

Default:

Default distance value is 110.

Command Mode:

OSPF protocol mode

Usage Guide:

Manage distance shows the reliability of the routing message source. The distance value may range between 1~255.

The larger the manage distance value is, the lower is its reliability.

Example:

```
Switch#config terminal
Switch(config)#router ospf 100
Switch(config-router)#distance ospf inter-area 20 intra-area 10 external 40
```

25.23 distribute-list

Command:

distribute-list <access-list-name> out {kernel |connected| static| rip| isis| bgp}

no distribute-list out {kernel |connected| static| rip| isis| bgp}

Function:

Filter network in the routing update. The “**no distribute-list out {kernel |connected| static| rip| isis| bgp}**” command disables this function.

Parameter:

< access-list-name > is the access-list name to be applied.

out: Filter the sent route update.

kernel Kernel route.

connected Direct route.

static Static route.

rip RIP route.

isis ISIS route.

bgp BGP route.

Command Mode:

OSPF protocol mode

Usage Guide:

When distributing route from other routing protocols into the OSPF routing table, we can use this command.

Example:

Example below is the advertisement based on the access-list list 1 of the BGP route.

```
Switch#config terminal
Switch(config)#access-list 11 permit 172.10.0.0 0.0.255.255
Switch(config)#router ospf 100
Switch(config-router)#distribute-list 1 out bgp
Switch(config-router)#redistribute bgp
```

25.24 filter-policy

Command:

filter-policy <access-list-name>

no filter-policy

Function:

Use access list to filter the route obtained by OSPF, the no command cancels the route filtering.

Parameter:

<access-list-name>: Access list name will be applied, it can use numeric standard IP access list and naming standard IP access list to configure.

Default:

There is no default configuration.

Command Mode:

OSPF protocol mode

Usage Guide:

This command is used to filter the route obtained by OSPF. Do not filter any routes when the specified access list is not exist, for the routes which do not match permit rule of access list, they will be filtered. One access list can be set for this command, only the last configuration takes effect when configuring many times.

Example:

Use access list 1 to filter the routes which do not belong to 172.10.0.0/16 segment.

```
Switch#config terminal
Switch(config)#access-list 1 permit 172.10.0.0 0.0.255.255
Switch(config)#router ospf
Switch(config-router)#filter-policy 1
```

25.25 host area

Command:

```
host <host-address> area <area-id> [cost <cost>]
no host <host-address> area <area-id> [cost <cost>]
```

Function:

Use this command to set a stub host entire belongs to certain area. The “[no] host <host-address> area <area-id> [cost <cost>]” command cancels this configuration.

Parameter:

<host-address> is host IP address show in dotted decimal notation.

<area-id> area ID shown in dotted decimal notation or integer ranging between 0~4294967295.

<cost> specifies the entire cost, which is a integer ranging between 0~65535 and defaulted at 0.

Default:

No entire set.

Command Mode:

OSPF protocol mode

Usage Guide:

With this command you can advertise certain specific host route out as stub link. Since the stub host belongs to special router in which setting host is not important.

Example:

```
Switch#config terminal
Switch(config)#router ospf 100
Switch(config-router)#host 172.16.10.100 area 1
Switch(config-router)#host 172.16.10.101 area 2 cost 10
```

25.26 ip ospf authentication

Command:

```
ip ospf [<ip-address>] authentication [message-digest|null]  
no ip ospf [<ip-address>] authentication
```

Function:

Specify the authentication mode required in sending and receiving OSPF packets on the interfaces; the “**no ip ospf [<ip-address>] authentication**” command cancels the authentication.

Parameter:

<ip-address> is the interface IP address, shown in dotted decimal notation.

message-digest: Use MD5 authentication.

null: no authentication applied, which resets the password or MD5 authentication applied on the interface.

Default:

Authentication not required in receiving OSPF packets on the interface.

Command Mode:

Interface Configuration Mode.

Example:

```
Switch#config terminal
Switch(config)#interface vlan 1
Switch(Config-if-Vlan1)#ip ospf authentication message-digest
```

25.27 ip ospf authentication-key

Command:

```
ip ospf [<ip-address>] authentication-key <LINE>
no ip ospf [<ip-address>] authentication
```

Function:

Specify the authentication key required in sending and receiving OSPF packet on the interface; the “**no ip ospf [<ip-address>] authentication**” cancels the authentication key.

Parameter:

<ip-address> is the interface IP address shown in dotted decimal notation;
<LINE> specifies the key required in the plaintext authentication.

Default:

Authentication not required in receiving OSPF packets on the interface.

Command Mode:

Interface Configuration Mode.

Example:

```
Switch#config terminal
Switch(config)#interface vlan 1
Switch(Config-if-Vlan1)#ip ospf authentication-key password
```

25.28 ip ospf cost

Command:

```
ip ospf [<ip-address>] cost <cost>
no ip ospf [<ip-address>] cost
```

Function:

Specify the cost required in running OSPF protocol on the interface; the “**no ip ospf [*<ip-address>*] cost**” command restores the default value.

Parameter:

<ip-address> is the interface IP address shown in dotted decimal notation.

<cost > is the cost of OSPF protocol ranging between 1~65535.

Default:

Default OSPF cost on the interface is auto-figure out based bandwidth.

Command Mode:

Interface Configuration Mode.

Example:

```
Switch#config terminal
Switch(config)#interface vlan 1
Switch(Config-if-Vlan1)#ip ospf cost 3
```

25.29 ip ospf database-filter

Command:

ip ospf [*<ip-address>*] database-filter all out

no ip ospf [*<ip-address>*] database-filter

Function:

The command opens LSA database filter switch on specific interface; the “**no ip ospf [*<ip-address>*] database-filter**” command closes the filter switch.

Parameter:

<ip-address> is the interface IP address shown in dotted decimal notation;

all: All LSAs.

out: Sent LSAs.

Default:

Filter switch Closed.

Command Mode:

Interface Configuration Mode.

Example:

```
Switch#config terminal
Switch(config)#interface vlan 1
Switch(Config-if-Vlan1)#ip ospf database-filter all out
```

25.30 ip ospf dead-interval

Command:

```
ip ospf [<ip-address>] dead-interval <time >
no ip ospf [<ip-address>] dead-interval
```

Function:

Specify the dead interval for neighboring layer 3 switch; the “**no ip ospf [*<ip-address>*] dead-interval**” command restores the default value.

Parameter:

<ip-address> is the interface IP address shown in dotted decimal notation;

<time > is the dead interval length of the neighboring layer 3 switches, shown in seconds and ranging between 1~65535.

Default:

The default dead interval is 40 seconds (normally 4 times of the hello-interval).

Command Mode:

Interface Configuration Mode.

Usage Guide:

If no Hello data packet received after the **dead-interval** period then this layer 3 switch is considered inaccessible and invalid. This command modifies the dead interval value of neighboring layer 3 switch according to the actual link state. The set **dead-interval** value is written into the Hello packet and transmitted. To ensure the normal operation of the OSPF protocol, the dead-interval between adjacent layer 3 switches should be in accordance or at least 4 times of the **hello-interval** value.

Example:

```
Switch#config terminal
Switch(config)#interface vlan 1
Switch(Config-if-Vlan1)#ip ospf dead-interval 80
```

25.31 ip ospf disable all

Command:

```
ip ospf disable all
no ip ospf disable all
```

Function:

Stop OSPF group process on the interface.

Command Mode:

Interface Configuration Mode.

Usage Guide:

This command resets the network area command and stops group process on specific interface.

Example:

```
Switch#config terminal
Switch(config)#interface vlan 1
Switch(Config-if-Vlan1)#ip ospf disable all
```

25.32 ip ospf hello-interval

Command:

```
ip ospf [<ip-address>] hello-interval <time>
no ip ospf [<ip-address>] hello-interval
```

Function:

Specify the hello-interval on the interface; the “no ip ospf [<ip-address>] hello-interval” restores the default value.

Parameter:

<ip-address> is the interface IP address shown in dotted decimal notation;

<time> is the interval sending HELLO packet, shown in seconds and ranging between 1 ~ 65535.

Default:

The hello-interval on the interface is 10 seconds.

Command Mode:

Interface Configuration Mode.

Usage Guide:

HELLO data packet is the most common packet which is periodically sent to adjacent layer 3 switch to discover and maintain adjacent relationship, elect DR and BDR. The user set **hello-interval** value will be written into the HELLO packet and transmitted. The less the **hello-interval** value is, the sooner the network topological structure is discovered as well larger the cost. To ensure the normal operation of OSPF protocol the **hello-interval** parameter between the layer 3 switches adjacent to the interface must be in accordance.

Example:

```
Switch#config terminal
Switch(config)#interface vlan 1
Switch(Config-if-Vlan1)#ip ospf hello-interval 20
```

Relevant Commands:

ip ospf dead-interval

25.33 ip ospf message-digest-key

Command:

ip ospf [<ip-address>] message-digest-key <key_id> MD5 <LINE>

no ip ospf [<ip-address>] message-digest-key <key_id>

Function:

Specify the key id and value of MD5 authentication on the interface; the **no ip ospf [<ip-address>] message-digest-key <key_id>** restores the default value.

Parameter:

<ip-address> is the interface IP address show in dotted decimal notation;

<key_id> ranges between 1-255;

<LINE> is the OSPF key.

Default:

MD5 key not configured.

Command Mode:

Interface Configuration Mode.

Usage Guide:

MD5 key encrypted authentication is used for ensure the safety between the OSPF routers on the network. Same key id and key should be configured between neighbors when using this command or else no adjacent relationship will not be created. The last configuration of this command will overwrite the previous one to prevent the system from communicating with the former key id.

Example:

```
Switch#config terminal
Switch(config)#interface vlan 1
Switch(Config-if-Vlan1)#ip ospf message-digest-key 2 MD5 yourpassword
```

25.34 ip ospf mtu

Command:

ip ospf mtu <mtu>

no ip ospf mtu

Function:

Specify the mtu value of the interface as the OSPF group structure according; the “**no ip ospf mtu**” command restores the default value.

Parameter:

<mtu> is the interface mtu value ranging between 576~65535.

Default:

Use the interface mtu acquired from the kernel.

Command Mode:

Interface Configuration Mode.

Usage Guide:

The interface value configured by this command is only used by OSPF protocol other than updated into kernel.

Example:

```
Switch#config terminal
Switch(config)#interface vlan 1
Switch(Config-if-Vlan1)#ip ospf mtu 1480
```

25.35 ip ospf mtu-ignore

Command:

```
ip ospf <ip-address> mtu-ignore
no ip ospf <ip-address> mtu-ignore
```

Function:

Use this command so that the mtu size is not checked when switching DD; the “**no ip ospf <ip-address> mtu-ignore**” will ensure the mtu size check when performing DD switch.

Parameter:

<ip-address> is the interface IP address show in dotted decimal notation.

Default:

Check mtu size in DD switch.

Command Mode:

Interface Configuration Mode.

Example:

```
Switch#config terminal
Switch(config)#interface vlan 1
Switch(Config-if-Vlan1)#ip ospf mtu-ignore
```

25.36 ip ospf network

Command:

```
ip ospf network {broadcast | non-broadcast | point-to-point | point-to-multipoint}
no ip ospf network
```

Function:

This command configures the OSPF network type of the interface; the “**no ip ospf network**” command restores the default value.

Parameter:

broadcast: Set the OSPF network type to broadcast.
non-broadcast: Set the OSPF network type to NBMA.
point-to-point: Set the OSPF network type to point-to-point.
point-to-multipoint: Set the OSPF network type to point-to-multipoint.

Default:

The default OSPF network type is broadcast.

Command Mode:

Interface Configuration Mode.

Example:

The configuration below set the OSPF network type of the interface vlan 1 to point-to-point.

```
Switch#config terminal
Switch(config)#interface vlan 1
Switch(Config-if-Vlan1)#ip ospf network point-to-point
```

25.37 ip ospf priority

Command:

```
ip ospf [<ip-address>] priority <priority>
no ip ospf [<ip-address>] priority
```

Function:

Configure the priority when electing “Defined layer 3 switch” at the interface. The “**no ip ospf [<ip-address>] priority**” command restores the default value.

Parameter:

<ip-address> is the interface IP address show in dotted decimal notation.

<priority> is the priority of which the valid value ranges between 0~255.

Default:

The default priority when electing DR is 1.

Command Mode:

Interface Configuration Mode.

Usage Guide:

When two layer 3 switches connected to the same segments both want to be the “Defined layer 3 switch”, the priority will decide which one should be chosen. Normally the one with higher priority will be elected, or the one with larger router-id number if the priorities are the same. A layer 3 switch with a priority equal to 0 will not be elected as “Defined layer 3 switch” or “Backup Defined layer 3 switch”.

Example:

Configure the priority of DR electing. Configure the interface vlan 1 to no election right, namely set the priority to 0.

```
Switch#config terminal
Switch(config)#interface vlan 1
Switch(Config-if-Vlan1)#ip ospf priority 0
```

25.38 ip ospf retransmit-interval

Command:

ip ospf [<ip-address>] retransmit-interval <time>

no ip ospf [<ip-address>] retransmit-interval

Function:

Specify the retransmit interval of link state announcements between the interface and adjacent layer 3 switches. The “no ip ospf [<ip-address>] retransmit-interval” command restores the default value.

Parameter:

<ip-address> is the interface IP address show in dotted decimal notation.

<time> is the retransmit interval of link state announcements between the interface and adjacent layer 3 switches, shown in seconds ranging between 1~65535.

Default:

Default retransmit interval is 5 seconds.

Command Mode:

Interface Configuration Mode.

Usage Guide:

When a layer 3 switch transmits LSA to its neighbor, it will maintain the link state announcements till confirm from the object side is received. If the confirm packet is not received within the interval, the LSA will be retransmitted. The retransmit interval must be larger than the time it takes to make a round between two layer 3 switches.

Example:

Configure the LSA retransmit interval of interface vlan 1 to 10 seconds.

```
Switch#config terminal
Switch(config)#interface vlan 1
Switch(Config-if-Vlan1)#ip ospf retransmit-interval 10
```

25.39 ip ospf transmit-delay

Command:

```
ip ospf [<ip-address>] transmit-delay <time>
no ip ospf [<ip-address>] transmit-delay
```

Function:

Set the transmit delay value of LSA transmitting; the “**no ip ospf [*<ip-address>*] transmit-delay**” restores the default value.

Parameter:

<ip-address> is the interface IP address show in dotted decimal notation.

<time> is the transmit delay value of link state announcements between the interface and adjacent layer 3 switches, shown in seconds ranging between 1 ~ 65535.

Default:

Default transmit delay value of link state announcements is 1 second.

Command Mode:

Interface Configuration Mode.

Usage Guide:

The LSA ages with time in the layer 3 switches, but not in the network transmitting process. By adding the **transit-delay** prior to sending the LSA, the LSA will be sent before aged.

Example:

Set the LSA transmit delay of interface vlan1 to 3 seconds.

```
Switch#config terminal
Switch(config)#interface vlan 1
Switch(Config-if-Vlan1)#ip ospf transmit-delay 3
```

25.40 key

Command:

```
key <keyid>
no key <keyid>
```

Function:

This command is for managing and adding keys in the key chain. The “**no key <keyid>**” command deletes one key.

Parameter:

<keyid> is key ID, ranging between 0-2147483647.

Command Mode:

keychain Mode and keychain-key Mode

Usage Guide:

The command permits entering the keychain-key mode and set the passwords corresponding to the keys.

Example:

```
Switch#config terminal
Switch(config)#key chain mychain
Switch(config-keychain)#key 1
Switch(config-keychain-key)#
```

Relevant Commands:

key chain, key-string, accept-lifetime, send-lifetime

25.41 key chain

Command:

```
key chain <name-of-chain>  
no key chain < name-of-chain >
```

Function:

This command is for entering a keychain manage mode and configure a keychain. The “**no key chain < name-of-chain >**” command deletes one keychain.

Parameter:

<name-of-chain> is the name string of the keychain the length of which is not specifically limited.

Command Mode:

Global Mode and Keychain Mode.

Example:

```
Switch#config terminal  
Switch(config)#key chain mychain  
Switch(config-keychain)#
```

25.42 log-adjacency-changes detail

Command:

```
log-adjacency-changes detail  
no log-adjacency-changes detail
```

Function:

Configure to keep a log for OSPF adjacency changes or not.

Default:

Don't I keep a log for OSPF adjacency changes by default.

Command Mode:

OSPF Protocol Configuration Mode

Usage Guide:

When this command is configured, the OSPF adjacency changes information will be recorded into a log.

Example:

```
Switch#config terminal
Switch(config)#router ospf 100
Switch(config-router)#log-adjacency-changes detail
```

25.43 max-concurrent-dd

Command:

```
max-concurrent-dd <value>
no max-concurrent-dd
```

Function:

This command set the maximum concurrent number of dd in the OSPF process; the “**no max-concurrent-dd**” command restores the default.

Parameter:

<value> ranges between <1-65535>, which is the capacity of processing the concurrent dd data packet.

Default:

Not set, no concurrent dd limit.

Command Mode:

OSPF protocol mode

Usage Guide:

Specify the max concurrent number of dd in the OSPF process.

Example:

Set the max concurrent dd to 20.

```
Switch#config terminal
Switch(config)#router ospf 100
Switch(config-router)#max-concurrent-dd 20
```


25.44 neighbor

Command:

```
neighbor A.B.C.D [<cost>| priority <value> | poll-interval <value>]
no neighbor A.B.C.D [<cost>| priority <value> | poll-interval <value>]
```

Function:

This command configures the OSPF router connecting NBMA network. The “no neighbor A.B.C.D [<cost>| priority <value> | poll-interval <value>]” command removes this configuration.

Parameter:

<cost>, OSPF neighbor cost value ranging between 1-65535;
priority <value>, neighbor priority defaulted at 0 and ranges between 0-255;
poll-interval <value>, 120s by default, which the polling time before neighbor relationship come into shape , ranging between 1-65535.

Default:

No default configuration.

Command Mode:

OSPF protocol mode

Usage Guide:

Use this command on NBMA network to configure neighbor manually. Every known non-broadcasting neighbor router should be configured with a neighbor entry. The configured neighbor address should be the main address of the interface. The poll-interval should be much larger than the hello-interval.

Example:

```
Switch#config terminal
Switch(config)#router ospf 100
Switch(config-router)#neighbor 1.2.3.4 priority 1 poll-interval 90
Switch(config-router)#neighbor 1.2.3.4 cost 15
```

25.45 network area

Command:

```
network NETWORKADDRESS area <area-id>
no network NETWORKADDRESS area <area-id>
```

Function:

This command enables OSPF routing function on the interface with IP address matched with the network address. The “**no network NETWORKADDRESS area <area-id>**” command removes the configuration and stop OSPF on corresponding interface.

Parameter:

NETWORKADDRESS = A.B.C.D/M | A.B.C.D X.Y.Z.W, Shown with the network address prefix or the mask.

Wildcard mask if shown in mask;

<area-id> is the ip address or area number shown in point divided decimal system, if shown in decimal integer, it ranges between 0~4294967295.

Default:

No default.

Command Mode:

OSPF protocol mode

Usage Guide:

When certain segment belongs to certain area, interface the segment belongs will be in this area, starting hello and database interaction with the connected neighbor.

Example:

```
Switch#config terminal
Switch(config)#router ospf 100
Switch(config-router)#network 10.1.1.0/24 area 1
```

25.46 ospf abr-type

Command:

ospf abr-type {cisco|ibm|shortcut|standard}

no ospf abr-type

Function:

Use this command to configure a OSPF ABR type. The “**no ospf abr-type**” command restores the default value.

Parameter:

cisco, Realize through cisco ABR;

ibm, Realize through ibm ABR;
shortcut, Specify a shortcut-ABR;
standard, Realize with standard (RFC2328) ABR.

Default:

Cisco by default.

Command Mode:

OSPF protocol mode

Usage Guide:

For Specifying the realizing type of abr. This command is good for interactive operation among different OSPF realizing method and is especially useful in the multiple host environment.

Example:

Configure abr as standard.

```
Switch#config terminal
Switch(config)#router ospf 100
Switch(config-router)#ospf abr-type standard
```

25.47 ospf router-id

Command:

ospf router-id <address>
no ospf router-id

Function:

Specify a router ID for the OSPF process. The “**no ospf router-id**” command cancels the ID number.

Parameter:

<address>, IPv4 address format of router-id.

Default:

No default configuration.

Command Mode:

OSPF protocol mode

Usage Guide:

The new router-id takes effect immediately.

Example:

Configure router-id of ospf 100 to 2.3.4.5.

```
Switch#config terminal
Switch(config)#router ospf 100
Switch(config-router)#ospf router-id 2.3.4.5
```

25.48 overflow database

Command:

```
overflow database <maxdbsize> [{hard|soft}]
no overflow database
```

Function:

This command is for configuring the max LSA number. The “**no overflow database**” command cancels the limit.

Default:

Not configured.

Parameter:

< **maxdbsize** >Max LSA numbers, ranging between 0~4294967294.

soft: Soft limit, warns when border exceeded.

hard: Hard limit, directly close ospf instance when border exceeded.

If there is not soft or hard configured, the configuration is taken as hard limit.

Command Mode:

OSPF Protocol Mode.

Example:

```
Switch#config terminal
Switch(config)#router ospf
Switch(config-router)#overflow database 10000 soft
```

25.49 overflow database external

Command:

```
overflow database external [<maxdbsize > <maxtime>]  
no overflow database external [<maxdbsize > <maxtime>]
```

Function:

The command is for configuring the size of external link database and the waiting time before the route exits overflow state. The “**no overflow database external [*<maxdbsize > <maxtime>*]**” restores the default value.

Parameter:

< maxdbsize > size of external link database, ranging between 0–4294967294, defaulted at 4294967294.
< maxtime > the seconds the router has to wait before exiting the database overflow, ranging between 0–65535.

Command Mode:

OSPF protocol mode

Example:

```
Switch#config terminal  
Switch(config)#router ospf  
Switch(config-router)#overflow database external 5 3
```

25.50 passive-interface

Command:

```
passive-interface <ifname> [<ip-address>]  
no passive-interface <ifname> [<ip-address>]
```

Function:

Configure that the hello group not sent on specific interfaces. The “**no passive-interface *<ifname>* [*<ip-address>*]**” command cancels this function.

Parameter:

<ifname> is the specific name of interface.
<ip-address> IP address of the interface in dotted decimal format.

Default:

Not configured.

Command Mode:

OSPF protocol mode

Example:

```
Switch#config terminal
Switch(config)#router ospf
Switch(config-router)#passive-interface vlan1
```

25.51 redistribute

Command:

```
redistribute {kernel |connected| static| rip| isis| bgp} [metric<value>] [metric-type
{1|2}][route-map<word>][tag<tag-value>]
no redistribute {kernel |connected| static| rip| isis| bgp} [metric<value>] [metric-type
{1|2}][route-map<word>][tag<tag-value>]
```

Function:

Introduce route learnt from other routing protocols into OSPF.

Parameter:

kernel introduce from kernel route.

connected introduce from direct route.

static introduce from static route.

rip introduce from the RIP route.

isis introduce from ISIS route.

bgp introduce from BGP route.

metric <value> is the introduced metric value, ranging between 0-16777214.

metric-type {1|2} is the metric value type of the introduced external route, which can be 1 or 2, and it is 2 by default.

route-map <word> point to the probe of the route map for introducing route.

tag <tag-value> external identification number of the external route, ranging between 0~4294967295, defaulted at 0.

Command Mode:

OSPF Protocol Mode.

Usage Guide:

Learn and introduce other routing protocol into OSPF area to generate AS-external_LSAs.

Example:

```
Switch#config terminal
Switch(config)#router ospf
Switch(config-router)#redistribute bgp metric 12
```

25.52 redistribute ospf

Command:

```
redistribute ospf [<process-id>] [metric<value>] [metric-type {1|2}][route-map<word>]
no redistribute ospf [<process-id>] [metric<value>] [metric-type {1|2}][route-map<word>]
```

Function:

To redistribute of process ID routing to this process. The no form of command deletes the redistribution of process ID routing to this process. When input the optional parameters of metric, metric type and routemap, then restores default configuration.

Parameter:

process-id is OSPF process ID, 0 by default.

metric <value> is the metric for redistributed routing, range between 0 to 16777214.

metric-type {1|2} is the metric type for redistributed routing, only can be 1 or 2, and 2 by default.

route-map <word> is the pointer to the introduced routing map.

Default:

Not redistributed any OSPF routing by default.

Command Mode:

OSPF Protocol Mode.

Usage Guide:

When process-id is not input, that means OSPF routing will be redistributed by default (Process-id is 0).

Example:

```
Switch(config-router)#redistribute ospf
```

25.53 router ospf

Command:

```
router ospf <process_id> <vrf-name>  
no router ospf <process_id> <vrf-name>
```

Function:

This command is for relating the OSPF process and one VPN, after the configuration succeeded, all configuration commands of this OSPF are relating with the VPN. The no command deletes the OSPF instance with VPN routing/forward instance.

Parameter:

<process_id> specifies the ID of the OSPF process to be created, the ranging from 1 to 65535.
<vrf-name> specifies the name of VPN routing/forward instance.

Command Mode:

Global mode

Usage Guide:

Before using this command, using ip vrf command creates one VPN routing/forward instance at first, VPN routing/forward instance is relating with OSPF instance by this command

Example:

```
Switch# config terminal  
Switch(config)# router ospf 100  
Switch(config-router)#network 10.1.1.0/24 area 0
```

25.54 show ip ospf

Command:

```
show ip ospf [<process-id>]
```

Function:

Display OSPF main messages.

Parameter:

<*process-id*> is the process ID, ranging between 0~65535.

Default:

Not displayed

Command Mode:

Admin and configuration mode

Example:

```
Switch#show ip ospf
Routing Process "ospf 0" with ID 192.168.1.1
  Process bound to VRF default
  Process uptime is 2 days 0 hour 30 minutes
  Conforms to RFC2328, and RFC1583Compatibility flag is disabled
  Supports only single TOS(TOS0) routes
  Supports opaque LSA
  SPF schedule delay 5 secs, Hold time between two SPFs 10 secs
  Refresh timer 10 secs
  Number of external LSA 0. Checksum Sum 0x000000
  Number of opaque AS LSA 0. Checksum Sum 0x000000
  Number of non-default external LSA 0
  External LSA database is unlimited.
  Number of LSA originated 0
  Number of LSA received 0
  Number of areas attached to this router: 1
  Area 0 (BACKBONE) (Inactive)
  Number of interfaces in this area is 0(0)
  Number of fully adjacent neighbors in this area is 0
  Area has message digest authentication
  SPF algorithm executed 0 times
  Number of LSA 0. Checksum Sum 0x000000

Routing Process "ospf 10" with ID 0.0.0.0
  Process bound to VRF DC1
  Process uptime is 4 days 23 hours 51 minutes
  Conforms to RFC2328, and RFC1583Compatibility flag is disabled
  Supports only single TOS(TOS0) routes
```

```
Supports opaque LSA
SPF schedule delay 5 secs, Hold time between two SPFs 10 secs
Refresh timer 10 secs
Number of external LSA 0. Checksum Sum 0x000000
Number of opaque AS LSA 0. Checksum Sum 0x000000
Number of non-default external LSA 0
External LSA database is unlimited.
Number of LSA originated 0
Number of LSA received 0
Number of areas attached to this router: 1
Area 0 (BACKBONE) (Inactive)
Number of interfaces in this area is 0(0)
Number of fully adjacent neighbors in this area is 0
Area has no authentication
SPF algorithm executed 0 times
Number of LSA 0. Checksum Sum 0x000000
```

25.55 show ip ospf border-routers

Command:

```
show ip ospf [<process-id>] border-routers
```

Function:

Display the intra-domain route entries for the switch to reach ABR and ASBR of all instances.

Parameter:

<process-id> is the process ID, ranging between 0~65535.

Default:

Not displayed

Command Mode:

Admin and configuration mode

Example:

```
Switch#show ip ospf border-routers
OSPF process 0 internal Routing Table
Codes: i - Intra-area route, I - Inter-area route
i 10.15.0.1 [10] via 10.10.0.1, Vlan1, ASBR, Area 0.0.0.0
i 172.16.10.1 [10] via 10.10.11.50, Vlan2, ABR, ASBR, Area 0.0.0.0
```

25.56 show ip ospf database

Command:

```
show ip ospf [<process-id>] database[{ adv-router [<linkstate_id>| self-originate |adv-router
<advertiser_router>}sbr-summary[<linkstate_id>| self-originate |adv-router <advertiser_router>]} | external
[<linkstate_id>| self-originate |adv-router <advertiser_router>]}] network [<linkstate_id>| self-originate
|adv-router <advertiser_router>}nssa-external [<linkstate_id>| self-originate |adv-router
<advertiser_router>} | opaque-area [<linkstate_id>| self-originate |adv-router <advertiser_router>}]
opaque-as [<linkstate_id>| self-originate |adv-router <advertiser_router>}]opaque-link [<linkstate_id>|
self-originate |adv-router <advertiser_router>} | router [<linkstate_id>| self-originate |adv-router
<advertiser_router>}] summary [<linkstate_id>| self-originate |adv-router <advertiser_router>}]
|self-originate | max-age }
```

Function:

Display the OSPF link state data base messages.

Parameter:

<process-id> is the process ID, ranging between 0~65535

<linkstate_id> Link state ID, shown in point divided domical system

<advertiser_router> is the ID of Advertising router, shown in point divided decimal IP address format

Default:

Not displayed

Command Mode:

Admin and configuration mode

Usage Guide:

According to the output messages of this command, we can view the OSPF link state database messages.

Example:

```
Switch#show ip ospf database

      Router Link States (Area 0.0.0.2)

Link ID        ADV Router    Age Seq#      CkSum Link count
192.168.1.2    192.168.1.2    254 0x80000031 0xec21 1
192.168.1.3    192.168.1.3    236 0x80000033 0x0521 2

      Net Link States (Area 0.0.0.2)

Link ID        ADV Router    Age Seq#      CkSum
20.1.1.2       192.168.1.2    254 0x8000002b 0xece4

      Summary Link States (Area 0.0.0.2)

Link ID        ADV Router    Age Seq#      CkSum  Route
6.1.0.0        192.168.1.2    68 0x8000002b 0x5757 6.1.0.0/22
6.1.1.0        192.168.1.2    879 0x8000002a 0xf8bc 6.1.1.0/24
22.1.1.0       192.168.1.2    308 0x8000000c 0xc8f0 22.1.1.0/24

      ASBR-Summary Link States (Area 0.0.0.2)

Link ID        ADV Router    Age Seq#      CkSum
192.168.1.1    192.168.1.2    1702 0x8000002a 0x89c7

      AS External Link States

Link ID        ADV Router    Age Seq#      CkSum  Route
2.2.2.0        192.168.1.1    1499 0x80000056 0x3a63 E2 2.2.2.0/24 [0x0]
2.2.3.0        192.168.1.1    1103 0x8000002b 0x0ec3 E2 2.2.3.0/24 [0x0]
```

25.57 show ip ospf interface

Command:

```
show ip ospf interface <interface>
```

Function:

Display the OSPF interface messages.

Parameter:

<interface> is the name of interface

Default:

Not displayed

Command Mode:

Admin and configuration mode

Example:

```
Switch#show ip ospf interface
Loopback is up, line protocol is up
  OSPF not enabled on this interface
Vlan1 is up, line protocol is up
  Internet Address 10.10.10.50/24, Area 0.0.0.0
    Process ID 0, Router ID 10.10.11.50, Network Type BROADCAST, Cost: 10
    Transmit Delay is 5 sec, State Waiting, Priority 1
    No designated router on this network
    No backup designated router on this network
    Timer intervals configured, Hello 35, Dead 35, Wait 35, Retransmit 5
      Hello due in 00:00:16
  Neighbor Count is 0, Adjacent neighbor count is 0
```

25.58 show ip ospf neighbor

Command:

```
show ip ospf [<process-id>] neighbor [{<neighbor_id> |all |detail [all] |interface <ifaddress>}]
```

Function:

Display the OSPF adjacent point messages.

Parameter:

<process-id> is the process ID ranging between 0~65535

<neighbor_id> is the dotted decimal notation neighbor ID

all: Display messages of all neighbors

detail: Display detailed messages of all neighbors

<ifaddress> Interface IP address

Default:

Not displayed

Command Mode:

Admin and configuration mode

Usage Guide:

OSPF neighbor state can be checked by viewing the output of this command.

Example:

```
Switch#show ip ospf neighbor
OSPF process 0:
Neighbor ID    Pri   State           Dead Time   Address     Interface
192.168.1.1    1     Full/Backup     00:00:32   6.1.1.1    Vlan1
192.168.1.3    1     Full/DR         00:00:36   20.1.1.3   Vlan2
192.168.1.3    1     Full/-         00:00:30   20.1.1.3   VLINK2
```

Displayed information	Explanation
Neighbor ID	ID Neighbor ID
Priority	Priority
State	Neighbor relation state
Dead time	Neighbor dead time
Address	Interface Address
Interface	Interface name

25.59 show ip ospf redistribute

Command:

show ip ospf [*<process-id>*] redistribute

Function:

To display the routing message redistributed from external process of OSPF.

Parameter:

<process-id> is the process ID ranging between 0~65535.

Command Mode:

Admin Mode and Configuration Mode.

Example:

```
Switch#show ip ospf redistribute
  ospf process 1 redistribute information :
    ospf process 2
    ospf process 3
    bgp
  ospf process 2 redistribute information :
    ospf process 1
    bgp
  ospf process 3 redistribute information :
    ospf process 1
bgp
```

```
Switch#show ip ospf 2 redistribute
  ospf process 2 redistribute information :
    ospf process 1
bgp
```

25.60 show ip ospf route

Command:

show ip ospf [<process-id>**] route**

Function:

Display the OSPF routing table messages.

Parameter: .

<process-id> is the process ID ranging between 0~65535

Default:

Not displayed

Command Mode:

Admin and configuration mode

Example:

```
Switch#show ip ospf route

O 10.1.1.0/24 [10] is directly connected, Vlan1, Area 0.0.0.0
O 10.1.1.4/32 [10] via 10.1.1.4, Vlan1, Area 0.0.0.0
IA 11.1.1.0/24 [20] via 10.1.1.1, Vlan1, Area 0.0.0.0
IA 11.1.1.2/32 [20] via 10.1.1.1, Vlan1, Area 0.0.0.0
IA 12.1.1.0/24 [20] via 10.1.1.2, Vlan1, Area 0.0.0.0
IA 12.1.1.2/32 [20] via 10.1.1.2, Vlan1, Area 0.0.0.0
O 13.1.1.0/24 [10] is directly connected, Vlan4, Area 0.0.0.3
O 14.1.1.0/24 [10] is directly connected, Vlan5, Area 0.0.0.4
IA 15.1.1.0/24 [20] via 13.1.1.2, Vlan4, Area 0.0.0.3
IA 15.1.1.2/32 [20] via 13.1.1.2, Vlan4, Area 0.0.0.3
E1 100.1.0.0/16 [21] via 10.1.1.1, Vlan1
E1 100.2.0.0/16 [21] via 10.1.1.1, Vlan1
```

25.61 show ip ospf virtual-links

Command:

```
show ip ospf [<process-id>] virtual-links
```

Function:

Display the OSPF virtual link message.

Parameter:

<process-id> is the process ID ranging between 0~65535.

Default:

Not displayed

Command Mode:

Admin and configuration mode

Example:

```
Switch#show ip ospf virtual-links
Virtual Link VLINK0 to router 10.10.0.9 is up
  Transit area 0.0.0.1 via interface Vlan1
  Transmit Delay is 1 sec, State Point-To-Point,
  Timer intervals configured, Hello 10, Dead 40, Wait 40, Retransmit 5
    Hello due in 00:00:02
    Adjacency state Full
Virtual Link VLINK1 to router 10.10.0.123 is down
  Transit area 0.0.0.1 via interface Vlan1
  Transmit Delay is 1 sec, State Down,
  Timer intervals configured, Hello 10, Dead 40, Wait 40, Retransmit 5
    Hello due in inactive
    Adjacency state Down
```

25.62 show ip route process-detail

Command:

```
show ip route [database] process-detail
```

Function:

Display the IP routing table with specific process ID or Tag.

Parameters:

The parameter of database means displaying all the routers, no parameter means only displaying effective routers.

Default:

Not importing any router of OSPF process by default.

Command Mode:

Admin mode and configure mode.

Usage Guide:

None.

Example:

```
Switch#show ip route database process-detail
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
      O - OSPF, IA - OSPF inter area
      N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
      E1 - OSPF external type 1, E2 - OSPF external type 2
      i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
      > - selected route, * - FIB route, p - stale info

C      *> 127.0.0.0/8 is directly connected, Loopback
O      192.168.2.0/24 [110/10] is directly connected, Vlan2, 00:06:13, process 12
C      *> 192.168.2.0/24 is directly connected, Vlan2
```

25.63 show ip protocols

Command:

```
show ip protocols
```

Function:

Display the running routing protocol messages.

Command Mode:

Admin and configuration mode

Example:

```
Switch#show ip protocols
Use "show ip protocols" command will show the messages of the routing protocol running on
current layer 3 switch
For example, the displayed messages are:
Routing Protocol is "ospf 0"
  Invalid after 0 seconds, hold down 0, flushed after 0
  Outgoing update filter list for all interfaces is
  Incoming update filter list for all interfaces is
  Redistributing:
  Routing for Networks:
    10.1.1.0/24
```

```

12.1.1.0/24
Routing Information Sources:
  Gateway          Distance      Last Update
Distance: (default is 110)
  Address          Mask          Distance List

Routing Protocol is "ospf 0"
  Outgoing update filter list for all interfaces is
  Incoming update filter list for all interfaces is
  IGP synchronization is disabled
  Automatic route summarization is disabled
  Neighbor(s):
  Address          Filtn Filtn DistIn DistOut Weight RouteMap
Incoming Route Filter:

```

25.64 summary-address

Command:

```
summary-address <A.B.C.D/M> [{not-advertise|tag<tag-value>}]
```

Function:

Summarize or restrain external route with specific address scope.

Parameter:

<A.B.C.D/M> address scope, shown in dotted decimal notation IPv4 address plus mask length.

not-advertised restrain the external routes.

tag<tag-value> is the identification label of the external routes, which ranges between 0-4294967295, and is defaulted at 0.

Command Mode:

OSPF protocol mode.

Usage Guide:

When routes are introduced into OSPF from other routing protocols, it is required to advertise every route in an external LSA. This command is for advertise one summary route for those introduced routes contained in specific network address and masks, which could greatly reduces the size of the link state database.

Example:

```
Switch#config terminal
Switch(config)#router ospf
Switch(config-router)#summary-address 172.16.0.0/16 tag 3
```

25.65 timers spf

Command:

```
timers spf <spf-delay> <spf-holdtime>
no timers spf
```

Function:

Adjust the value of the route calculating timer. The “**no timers spf**” command restores relevant values to default.

Parameter:

<spf-delay> 5 seconds by default.

<spf-holdtime> 10 seconds by default.

Command Mode:

OSPF protocol mode.

Usage Guide:

This command configures the delay time between receiving topology change and SPF calculation, further configured the hold item between two discontinuous SPF calculation.

Example:

```
Switch#config terminal
Switch(config)#router ospf
Switch(config-router)#timers spf 5 10
```

Chapter 26 IPv4 Multicast Protocol

26.1 anti-arpscan enable

Command:

anti-arpscan enable
no anti-arpscan enable

Function:

Globally enable ARP scanning prevention function; “**no anti-arpscan enable**” command globally disables ARP scanning prevention function.

Parameters:

None.

Default Settings:

Disable ARP scanning prevention function.

Command Mode:

Global configuration mode

User Guide:

When remotely managing a switch with a method like telnet, users should set the uplink port as a Super Trust port before enabling anti-ARP-scan function, preventing the port from being shutdown because of receiving too many ARP messages. After the anti-ARP-scan function is disabled, this port will be reset to its default attribute, that is, distrusted port.

Example:

Enable the ARP scanning prevention function of the switch.
Switch (config) #anti-arpscan enable

26.2 anti-arpscan port-based threshold

Command:

anti-arpscan port-based threshold <threshold-value>
no anti-arpscan port-based threshold

Function:

Set the threshold of received messages of the port-based ARP scanning prevention. If the rate of received ARP messages exceeds the threshold, the port will be closed. The unit is packet/second. The “no anti-arpscan port-based threshold” command will reset the default value, 10 packets/second.

Parameters:

rate threshold, ranging from 2 to 200.

Default Settings:

10 packets /second.

Command Mode:

Global Configuration Mode.

User Guide:

the threshold of port-based ARP scanning prevention should be larger than the threshold of IP-based ARP scanning prevention, or, the IP-based ARP scanning prevention will fail.

Example:

Set the threshold of port-based ARP scanning prevention as 10 packets /second.

```
Switch (config) #anti-arpscan port-based threshold 10
```

26.3 anti-arpscan ip-based threshold

Command:

```
anti-arpscan ip-based threshold <threshold-value>
```

```
no anti-arpscan ip-based threshold
```

Function:

Set the threshold of received messages of the IP-based ARP scanning prevention. If the rate of received ARP messages exceeds the threshold, the IP messages from this IP will be blocked. The unit is packet/second. The “no anti-arpscan ip-based threshold” command will reset the default value, 3 packets/second.

Parameters:

rate threshold, ranging from 1 to 200.

Default Settings:

3 packets/second.

Command Mode:

Global configuration mode

User Guide:

The threshold of port-based ARP scanning prevention should be larger than the threshold of IP-based ARP scanning prevention, or, the IP-based ARP scanning prevention will fail.

Example:

Set the threshold of IP-based ARP scanning prevention as 6 packets/second.

Switch (config) #anti-arp scan ip-based threshold 6

26.4 anti-arp scan trust

Command:

anti-arp scan trust [port | supertrust-port]

no anti-arp scan trust [port | supertrust-port]

Function:

Configure a port as a trusted port or a super trusted port;" **no anti-arp scan trust <port | supertrust-port>**" command will reset the port as an distrusted port.

Parameters:

None.

Default Settings:

By default all the ports are non- trustful.

Command Mode:

Port configuration mode

User Guide:

If a port is configured as a trusted port, then the ARP scanning prevention function will not deal with this port, even if the rate of received ARP messages exceeds the set threshold, this port will not be closed, but the non- trustful IP of this port will still be checked. If a port is set as a super non- trustful port, then neither the port nor the IP of the port will

be dealt with. If the port is already closed by ARP scanning prevention, it will be opened right after being set as a trusted port.

When remotely managing a switch with a method like telnet, users should set the uplink port as a Super Trust port before enabling anti-ARP-scan function, preventing the port from being shutdown because of receiving too many ARP messages. After the anti-ARP-scan function is disabled, this port will be reset to its default attribute, that is, distrusted port.

Example:

Set port ethernet 4/5 of the switch as a trusted port.

```
Switch (config) #in e4/5
```

```
Switch (Config-If-Ethernet4/5) # anti-arpscan trust port
```

26.5 anti-arpscan trust ip

Command:

```
anti-arpscan trust ip <ip-address> [<netmask>]
```

```
no anti-arpscan trust ip <ip-address> [<netmask>]
```

Function:

Configure trusted IP;" **no anti-arpscan trust ip <ip-address> [<netmask>]**" command reset the IP to non-trustful IP.

Parameters:

<ip-address>: Configure trusted IP address; **<netmask>**: Net mask of the IP.

Default Settings:

By default all the IP are non-trustful. Default mask is 255.255.255.255

Command Mode:

Global configuration mode

User Guide:

If a port is configured as a trusted port, then the ARP scanning prevention function will not deal with this port, even if the rate of received ARP messages exceeds the set threshold, this port will not be closed. If the port is already closed by ARP scanning prevention, its traffic will be recovered right immediately.

Example:

Set 192.168.1.0/24 as trusted IP.

```
Switch (config) #anti-arp scan trust ip 192.168.1.0 255.255.255.0
```

26.6 anti-arp scan recovery enable

Command:

```
anti-arp scan recovery enable
```

```
no anti-arp scan recovery enable
```

Function:

Enable the automatic recovery function, “**no anti-arp scan recovery enable**” command will disable the function.

Parameters:

None

Default Settings:

Enable the automatic recovery function

Command Mode:

Global configuration mode

User Guide:

If the users want the normal state to be recovered after a while the port is closed or the IP is disabled, they can configure this function.

Example:

Enable the automatic recovery function of the switch.

```
Switch (config) #anti-arp scan recovery enable
```

26.7 anti-arp scan recovery time

Command:

```
anti-arp scan recovery time <seconds>
```

```
no anti-arp scan recovery time
```

Function:

Configure automatic recovery time; "**no anti-arpscan recovery time**" command resets the automatic recovery time to default value.

Parameters:

Automatic recovery time, in second ranging from 5 to 86400.

Default Settings:

300 seconds.

Command Mode:

Global configuration mode

User Guide:

Automatic recovery function should be enabled first.

Example:

Set the automatic recovery time as 3600 seconds.

```
Switch (config) #anti-arpscan recovery time 3600
```

26.8 anti-arpscan log enable

Command:

```
anti-arpscan log enable
```

```
no anti-arpscan log enable
```

Function:

Enable ARP scanning prevention log function; "**no anti-arpscan log enable**" command will disable this function.

Parameters:

None.

Default Settings:

Enable ARP scanning prevention log function.

Command Mode:

Global configuration mode

User Guide:

After enabling ARP scanning prevention log function, users can check the detailed information of ports being closed or automatically recovered by ARP scanning prevention or IP being disabled and recovered by ARP scanning prevention. The level of the log is "Warning".

Example:

Enable ARP scanning prevention log function of the switch.

```
Switch(config)#anti-arp scan log enable
```

26.9 anti-arp scan trap enable

Command:

```
anti-arp scan trap enable
```

```
no anti-arp scan trap enable
```

Function:

Enable ARP scanning prevention SNMP Trap function; "**no anti-arp scan trap enable**" command disable ARP scanning prevention SNMP Trap function.

Parameters:

None.

Default Settings:

Disable ARP scanning prevention SNMP Trap function.

Command Mode:

Global configuration mode

User Guide:

After enabling ARP scanning prevention SNMP Trap function, users will receive Trap message whenever a port is closed or recovered by ARP scanning prevention, and whenever IP t is closed or recovered by ARP scanning prevention.

Example:

Enable ARP scanning prevention SNMP Trap function of the switch.

```
Switch(config)#anti-arp scan trap enable
```

26.10 show anti-arpscan

Command:

```
show anti-arpscan [trust [ip | port | supertrust-port] |prohibited [ip | port]]
```

Function:

Display the operation information of ARP scanning prevention function.

Parameters:

None.

Default Settings:

Display every port to tell whether it is a trusted port and whether it is closed. If the port is closed, then display how long it has been closed. Display all the trusted IP and disabled IP.

Command Mode:

Admin Mode

User Guide:

Use “**show anti-arpscan trust port**” if users only want to check trusted ports. The reset follow the same rule.

Example:

Check the operating state of ARP scanning prevention function after enabling it.

```
Switch(config)#show anti-arpscan
```

```
Total port: 28
```

Name	Port-property	beShut	shutTime(seconds)
Ethernet1/1	untrust	N	0
Ethernet1/2	untrust	N	0
Ethernet1/3	untrust	N	0
Ethernet1/4	untrust	N	0
Ethernet1/5	untrust	N	0
Ethernet1/6	untrust	N	0
Ethernet1/7	untrust	N	0
Ethernet1/8	untrust	N	0
Ethernet1/9	untrust	N	0
Ethernet1/10	untrust	N	0
Ethernet1/11	untrust	N	0
Ethernet1/12	untrust	N	0
Ethernet4/1	untrust	N	0

Ethernet4/2	untrust	N	0
Ethernet4/3	untrust	N	0
Ethernet4/4	trust	N	0
Ethernet4/5	untrust	N	0
Ethernet4/6	supertrust	N	0
Ethernet4/7	untrust	Y	30
Ethernet4/8	trust	N	0
Ethernet4/9	untrust	N	0
Ethernet4/10	untrust	N	0
Ethernet4/11	untrust	N	0
Ethernet4/12	untrust	N	0
Ethernet4/13	untrust	N	0
Ethernet4/14	untrust	N	0
Ethernet4/15	untrust	N	0
Ethernet4/16	untrust	N	0
Ethernet4/17	untrust	N	0
Ethernet4/18	untrust	N	0
Ethernet4/19	untrust	N	0
Ethernet4/20	untrust	N	0
Ethernet4/21	untrust	N	0
Ethernet4/22	untrust	N	0
Ethernet4/23	untrust	N	0
Ethernet4/24	untrust	N	0

Prohibited IP:

IP	shutTime(seconds)
1.1.1.2	132

Trust IP:

192.168.99.5	255.255.255.255
192.168.99.6	255.255.255.255

26.11 debug anti-arp scan

Command:

debug anti-arp scan [port | ip]

no debug anti-arp scan [port | ip]

Function:

Enable the debug switch of ARP scanning prevention; "no debug anti-arpscan [port | ip]" command disables the switch.

Parameters:

None.

Default Settings:

Disable the debug switch of ARP scanning prevention

Command Mode:

Admin Mode

User Guide:

After enabling debug switch of ARP scanning prevention users can check corresponding debug information or enable the port-based or IP-based debug switch separately whenever a port is closed by ARP scanning prevention or recovered automatically, and whenever IP t is closed or recovered .

Example:

Enable the debug function for ARP scanning prevention of the switch.

```
Switch(config)#debug anti-arpscan
```

Chapter 27 Commands for Preventing ARP Spoofing

27.1 ip arp-security updateprotect

Command:

```
ip arp-security updateprotect  
no ip arp-security updateprotect
```

Function:

Forbid ARP table automatic update. The "**no ip arp-security updateprotect**" command re-enables ARP table automatic update.

Parameter:

None.

Default:

ARP table automatic update.

Command Mode:

Global Mode/ Interface configuration.

User Guide:

Forbid ARP table automatic update, the ARP packets conflicting with current ARP item (e.g. with same IP but different MAC or port) will be dropped, the others will be received to update aging timer or create a new item; so, the current ARP item keep unchanged and the new item can still be learned.

Example:

```
Switch(Config-if-Vlan1)#ip arp-security updateprotect.  
Switch(config)#ip arp-security updateprotect
```

27.2 ip arp-security learnprotect

Command:

```
ip arp-security learnprotect  
no ip arp-security learnprotect
```

Function:

Forbid ARP learning function of IPv4 Version, the “**no ip arp-security learnprotect**” command re-enables ARP learning function.

Parameter:

None.

Default:

ARP learning enabled.

Command Mode:

Global Mode/ Interface Configuration.

Usage Guide:

This command is for preventing the automatic learning and updating of ARP. Unlike ip arp-security updateprotect, once this command implemented, there will still be timeout even if the switch keeps sending Request/Reply messages.

Example:

```
Switch(Config-if-Vlan1)# ip arp-security learnprotect  
Switch(config)# ip arp-security learnprotect
```

27.3 ip arp-security convert

Command:

ip arp-security convert

Function:

Change all of dynamic ARP to static ARP.

Parameter:

None

Command Mode:

Global Mode/ Interface configuration

Usage Guide:

This command will convert the dynamic ARP entries to static ones, which, in combination with disabling automatic learning, can prevent ARP binding. Once implemented, this command will lose its effect.

Example:

```
Switch(Config-if-Vlan1)#ip arp -security convert  
Switch(config)#ip arp -security convert
```

27.4 clear ip arp dynamic

Command:

```
clear ip arp dynamic
```

Function:

Clear all of dynamic ARP on interface.

Parameter:

None

Command Mode:

Interface Configuration

Usage Guide:

This command will clear dynamic entries before binding ARP. Once implemented, this command will lose its effect.

Example:

```
Switch(Config-if-Vlan1)#clear ip arp dynamic
```

27.5 clear ipv6 nd dynamic

Command:

```
clear ipv6 nd dynamic
```

Function:

Clear all dynamic ND on interface.

Parameter:

None

Command mode:

Interface Configuration

Usage Guide:

This command will clear dynamic entries before binding ND. Once implemented, this command will lose its effect.

Example:

```
Switch(Config-if-Vlan1)#clear ipv6 nd dynamic
```

Chapter 28 Command for ARP GUARD

28.1 arp-guard ip

Command:

```
arp-guard ip <addr>  
no arp-guard ip <addr>
```

Function:

Add an ARP GUARD address, the no command deletes ARP GUARD address.

Parameters:

<addr> is the protected IP address, in dotted decimal notation.

Default:

There is no ARP GUARD address by default.

Command Mode:

Port configuration mode

Usage Guide:

After configuring the ARP GUARD address, the ARP messages received from the ports configured ARP GUARD will be filtered. If the source IP addresses of the ARP message match the ARP GUARD address configured on this port, these messages will be judged as ARP cheating messages, which will be directly dropped instead of sending to the CPU of the switch or forwarding. 16 ARP GUARD addresses can be configured on each port.

Example:

Configure the ARP GUARD address on port ethernet1/1 as 100.1.1.1.

```
switch(config)#interface ethernet1/1
```

```
switch(Config-If-Ethernet 1/1)#arp-guard ip 100.1.1.1
```

Delete the ARP GUARD address on port ethernet1/1 as 100.1.1.1.

```
switch(config)#interface ethernet1/1
```

```
switch(Config-If-Ethernet 1/1)#no arp-guard ip 100.1.1.1
```

Chapter 29 Commands for Gratuitous ARP Configuration

29.1 ip gratuitous-arp

Command:

```
ip gratuitous-arp [<interval-time>]
no ip gratuitous-arp
```

Function:

To enable gratuitous ARP, and specify update interval for gratuitous ARP. The no form of this command will disable the gratuitous ARP configuration.

Parameters:

<interval-time> is the update interval for gratuitous ARP with its value limited between 5 and 1200 seconds and with default value as 300 seconds.

Command Mode:

Global Configuration Mode and Interface Configuration Mode.

Default:

Gratuitous ARP is disabled by default.

Usage Guide:

When configuring gratuitous ARP in global configuration mode, all the Layer 3 interfaces in the switch will be enabled to send gratuitous ARP request. If gratuitous ARP is configured in interface configuration mode, then only the specified interface is able to send gratuitous ARP requests. When configuring the gratuitous ARP, the update interval configuration from interface configuration mode has higher preference than that from the global configuration mode.

Example:

- 1) To enable gratuitous ARP in global configuration mode, and set the update interval to be 400 seconds.

```
Switch>enable
```

```
Switch#config
```

```
Switch(config)#ip gratuitous-arp 400
```

- 2) To enable gratuitous ARP for interface VLAN 10 and set the update interval to be 350 seconds.

```
Switch(config)#interface vlan 10
```

```
Switch(Config-if-Vlan10)#ip gratuitous-arp 350
```

29.2 show ip gratuitous-arp

Command:

```
show ip gratuitous-arp [interface vlan <vlan-id>]
```

Function:

To display configuration information about gratuitous ARP.

Parameters:

<vlan-id> is the VLAN ID. The valid range for <vlan-id> is between 1 and 4094.

Command Mode:

All the Configuration Modes.

Usage Guide:

In all the configuration modes, the command **show ip gratuitous arp** will display information about the gratuitous ARP configuration in global and interface configuration mode. The command **show ip gratuitous-arp interface vlan <vlan-id>** will display information about the gratuitous ARP configuration about the specified VLAN interface.

Example:

- 1) To display information about gratuitous ARP configuration in both global and interface configuration modes.

```
Switch#show ip gratuitous-arp
```

```
Gratuitous ARP send is Global enabled, Interval-Time is 300(s)
```

```
Gratuitous ARP send enabled interface vlan information:
```

Name	Interval-Time(seconds)
Vlan1	400
Vlan10	350

- 2) To display gratuitous ARP configuration information about interface VLAN 10.

```
Switch#show ip gratuitous-arp interface vlan 10
```

```
Gratuitous ARP send interface Vlan10 information:
```

Name	Interval-Time(seconds)
Vlan10	350

Chapter 30 Commands for DHCP

30.1 Commands for DHCP Server Configuration

30.1.1 bootfile

Command:

```
bootfile <filename>  
no bootfile
```

Function:

Sets the file name for DHCP client to import on boot up; the “**no bootfile**” command deletes this setting.

Parameters:

<**filename**> is the name of the file to be imported, up to 255 characters are allowed.

Command Mode:

DHCP Address Pool Mode

Usage Guide:

Specify the name of the file to be imported for the client. This is usually used for diskless workstations that need to download a configuration file from the server on boot up. This command is together with the “next sever”.

Example:

The path and filename for the file to be imported is “c:\temp\nos.img”

```
Switch(dhcp-1-config)#bootfile c:\temp\nos.img
```

Related Command: next-server

30.1.2 clear ip dhcp binding

Command:

```
clear ip dhcp binding {<address> | all}
```

Function:

Deletes the specified IP address-hardware address binding record or all IP address-hardware address binding records.

Parameters:

<address> is the IP address that has a binding record in decimal format. **all** refers to all IP addresses that have a binding record.

Command mode:

Admin Mode.

Usage Guide:

“**show ip dhcp binding**” command can be used to view binding information for IP addresses and corresponding DHCP client hardware addresses. If the DHCP server is informed that a DHCP client is not using the assigned IP address for some reason before the lease period expires, the DHCP server would not remove the binding information automatically. The system administrator can use this command to delete that IP address-client hardware address binding manually, if “all” is specified, then all auto binding records will be deleted, thus all addresses in the DHCP address pool will be reallocated.

Example:

Removing all IP-hardware address binding records.

```
Switch#clear ip dhcp binding all
```

Related Command: **show ip dhcp binding**

30.1.3 clear ip dhcp conflict

Command:

```
clear ip dhcp conflict {<address> | all }
```

Function:

Deletes an address present in the address conflict log.

Parameters:

<address> is the IP address that has a conflict record; **all** stands for all addresses that have conflict records.

Command mode:

Admin Mode.

Usage Guide:

“**show ip dhcp conflict**” command can be used to check which IP addresses are conflicting for use. The “**clear ip dhcp conflict**” command can be used to delete the conflict record for an address. If “all” is specified, then all conflict

records in the log will be removed. When records are removed from the log, the addresses are available for allocation by the DHCP server.

Example:

The network administrator finds 10.1.128.160 that has a conflict record in the log and is no longer used by anyone, so he deletes the record from the address conflict log.

```
Switch#clear ip dhcp conflict 10.1.128.160
```

Related Command: ip dhcp conflict logging, show ip dhcp conflict

30.1.4 clear ip dhcp server statistics

Command:

```
clear ip dhcp server statistics
```

Function:

Deletes the statistics for DHCP server, clears the DHCP server count.

Parameters:

None

Command mode:

Admin Mode.

Usage Guide:

DHCP count statistics can be viewed with “**show ip dhcp server statistics**” command, all information is accumulated. You can use the “**clear ip dhcp server statistics**” command to clear the count for easier statistics checking.

Example:

Clearing the count for DHCP server.

```
Switch#clear ip dhcp server statistics
```

Related Command: show ip dhcp server statistics

30.1.5 client-identifier

Command:

```
client-identifier <unique-identifier>  
no client-identifier
```

Function:

Specifies the unique ID of the user when binding an address manually; the “**no client-identifier**” command deletes the identifier.

Parameters:

<*unique-identifier*> is the user identifier, in dotted Hex format.

Command Mode:

DHCP Address Pool Mode

Usage Guide:

This command is used with “host” when binding an address manually. If the requesting client identifier matches the specified identifier, DHCP server assigns the IP address defined in “host” command to the client.

Example:

Specifying the IP address 10.1.128.160 to be bound to user with the unique id of 00-10-5a-60-af-12 in manual address binding.

```
Switch(dhcp-1-config)#client-identifier 00-10-5a-60-af-12
```

```
Switch(dhcp-1-config)#host 10.1.128.160 24
```

Related Command: host

30.1.6 debug ip dhcp client

Command:

```
debug ip dhcp client {event | packet}  
no debug ip dhcp server {event | packet}
```

Function:

Enable the debugging of DHCP client, no command disables the debugging of DHCP client.

Command mode:

Admin Mode

Default:

Disable the debugging.

30.1.7 debug ip dhcp relay

Command:

debug ip dhcp server packet
no debug ip dhcp server packet

Function:

Enable the debugging of DHCP relay, no command disables the debugging of DHCP relay.

Command mode:

Admin Mode

Default:

Disable the debugging.

30.1.8 debug ip dhcp server

Command:

debug ip dhcp server { events | linkage | packets }
no debug ip dhcp server { events | linkage | packets }

Function:

Enables DHCP server debug information: the “**no debug ip dhcp server {events | linkage | packets}**” command disables the debug information for DHCP server.

Default:

Debug information is disabled by default.

Command mode:

30.1.9 Admin Mode.default-router

Command:

```
default-router <address1>[<address2>[...<address8>]]  
no default-router
```

Function:

Configures default gateway(s) for DHCP clients; the “**no default-router**” command deletes the default gateway.

Parameters:

<address1>...<address8> are IP addresses, in decimal format.

Default:

No default gateway is configured for DHCP clients by default.

Command Mode:

DHCP Address Pool Mode

Usage Guide:

The IP address of default gateway(s) should be in the same subnet as the DHCP client IP, the switch supports up to 8 gateway addresses. The gateway address assigned first has the highest priority, and therefore address1 has the highest priority, and address2 has the second, and so on.

Example:

Configuring the default gateway for DHCP clients to be 10.1.128.2 and 10.1.128.100.

```
Switch(dhcp-1-config)#default-router 10.1.128.2 10.1.128.100
```

30.1.10 dns-server

Command:

```
dns-server <address1>[<address2>[...<address8>]]  
no dns-server
```

Function:

Configure DNS servers for DHCP clients; the “**no dns-server**” command deletes the default gateway.

Parameters:

<address1>...<address8> are IP addresses, in decimal format.

Default:

No DNS server is configured for DHCP clients by default.

Command Mode:

DHCP Address Pool Mode

Usage Guide:

Up to 8 DNS server addresses can be configured. The DNS server address assigned first has the highest priority, therefore address 1 has the highest priority, and address 2 has the second, and so on.

Example:

Set 10.1.128.3 as the DNS server address for DHCP clients.

```
Switch(dhcp-1-config)#dns-server 10.1.128.3
```

30.1.11 domain-name

Command:

```
domain-name <domain>
```

```
no domain-name
```

Function:

Configures the Domain name for DHCP clients; the “**no domain-name**” command deletes the domain name.

Parameters:

<domain> is the domain name, up to 255 characters are allowed.

Command Mode:

DHCP Address Pool Mode

Default:

None

Usage Guide:

Specifies a domain name for the client.

Example:

Specifying “switch.com.cn” as the DHCP clients’ domain name.

```
Switch(dhcp-1-config)#domain-name switch.com.cn
```

30.1.12 hardware-address

Command:

```
hardware-address <hardware-address> [{Ethernet | IEEE802|<type-number>}]  
no hardware-address
```

Function:

Specifies the hardware address of the user when binding address manually; the “**no hardware-address**” command deletes the setting.

Parameters:

<**hardware-address**> is the hardware address in Hex; **Ethernet | IEEE802** is the Ethernet protocol type, <**type-number**> should be the RFC number defined for protocol types, from 1 to 255, e.g., 0 for Ethernet and 6 for IEEE 802.

Default:

The default protocol type is Ethernet,

Command Mode:

DHCP Address Pool Mode

Usage Guide:

This command is used with the “host” when binding address manually. If the requesting client hardware address matches the specified hardware address, the DHCP server assigns the IP address defined in “host” command to the client.

Example:

Specify IP address 10.1.128.160 to be bound to the user with hardware address 00-00-e2-3a-26-04 in manual address binding.

```
Switch(dhcp-1-config)#hardware-address 00-00-e2-3a-26-04
```

```
Switch(dhcp-1-config)#host 10.1.128.160 24
```

Related Command: host

30.1.13 host

Command:

```
host <address> [<mask> | <prefix-length>]  
no host
```

Function:

Specifies the IP address to be assigned to the user when binding addresses manually; the “**no host**” command deletes the IP address.

Parameters:

<address> is the IP address in decimal format; **<mask>** is the subnet mask in decimal format; **<prefix-length>** means mask is indicated by prefix. For example, mask 255.255.255.0 in prefix is “24”, and mask 255.255.255.252 in prefix is “30”.

Command Mode:

DHCP Address Pool Mode

Default:

None

Usage Guide:

If no mask or prefix is configured when configuring the IP address, and no information in the IP address pool indicates anything about the mask, the system will assign a mask automatically according to the IP address class.

This command is used with “hardware address” command or “client identifier” command when binding addresses manually. If the identifier or hardware address of the requesting client matches the specified identifier or hardware address, the DHCP server assigns the IP address defined in “host” command to the client.

Example:

Specifying IP address 10.1.128.160 to be bound to user with hardware address 00-10-5a-60-af-12 in manual address binding.

```
Switch(dhcp-1-config)#hardware-address 00-10-5a-60-af-12
```

```
Switch(dhcp-1-config)#host 10.1.128.160 24
```

Related command: hardware-address, client-identifier

30.1.14 ip dhcp conflict logging

Command:

```
ip dhcp conflict logging
```

```
no ip dhcp conflict logging
```

Function:

Enables logging for address conflicts detected by the DHCP server; the “**no ip dhcp conflict logging**” command disables the logging.

Default:

Logging for address conflict is enabled by default.

Command mode:

Global Mode

Usage Guide:

When logging is enabled, once the address conflict is detected by the DHCP server, the conflicting address will be logged. Addresses present in the log for conflicts will not be assigned dynamically by the DHCP server until the conflicting records are deleted.

Example:

Disable logging for DHCP server.

```
Switch(config)#no ip dhcp conflict logging
```

Related Command: clear ip dhcp conflict

30.1.15 ip dhcp disable

Command:

```
ip dhcp disable
```

```
no ip dhcp disable
```

Function:

The port disables DHCP services, the no command enables DHCP services.

Parameter:

None.

Default:

Enable.

Command Mode:

Port mode.

Usage Guide:

After the port disables DHCP services, directly drop all DHCP packets sent by the port.

Example:

The port disables DHCP services.

```
switch(config-if-ethernet1/3)#ip dhcp disable
```

30.1.16 ip dhcp excluded-address

Command:

```
ip dhcp excluded-address <low-address> [<high-address>]
```

```
no ip dhcp excluded-address <low-address> [<high-address>]
```

Function:

Specifies addresses excluding from dynamic assignment; the “**no ip dhcp excluded-address <low-address> [<high-address>]**” command cancels the setting.

Parameters:

<low-address> is the starting IP address, [**<high-address>**] is the ending IP address.

Default:

Only individual address is excluded by default.

Command mode:

Global Mode

Usage Guide:

This command can be used to exclude one or several consecutive addresses in the pool from being assigned dynamically so that those addresses can be used by the administrator for other purposes.

Example:

Reserving addresses from 10.1.128.1 to 10.1.128.10 from dynamic assignment.

```
Switch(config)#ip dhcp excluded-address 10.1.128.1 10.1.128.10
```

30.1.17 ip dhcp pool

Command:

```
ip dhcp pool <name>
```

```
no ip dhcp pool <name>
```


Function:

Configures a DHCP address pool and enter the pool mode; the “**no ip dhcp pool <name>**” command deletes the specified address pool.

Parameters:

<name> is the address pool name, up to 32 characters are allowed.

Command mode:

Global Mode

Usage Guide:

This command is used to configure a DHCP address pool under Global Mode and enter the DHCP address configuration mode.

Example:

Defining an address pool named “1”.

```
Switch(config)#ip dhcp pool 1
```

```
Switch(dhcp-1-config)#
```

30.1.18 ip dhcp conflict ping-detection enable

Command:

```
ip dhcp conflict ping-detection enable
```

```
no ip dhcp conflict ping-detection enable
```

Function:

Enable Ping-detection of conflict on DHCP server; the no operation of this command will disable the function.

Parameters:

None.

Default Settings:

By default, Ping-detection of conflict is disabled.

Command Mode:

Global Configuration Mode.

Usage Guide:

To enable Ping-detection of conflict, one should enable the log of conflict addresses, when which is disabled, so will the ping-detection of conflict. When a client is unable to receive Ping request messages (when blocked by firewall, for example), this function will check local ARP according to allocated IP: if a designated IP has a corresponding ARP, then an address conflict exists; otherwise, allocate it to the client.

Examples:

Enable Ping-detection of conflict.

```
Switch(config)#ip dhcp conflict ping-detection enable
```

Related Command: ip dhcp conflict logging, ip dhcp ping packets, ip dhcp ping timeout

30.1.19 ip dhcp ping packets

Command:

```
ip dhcp ping packets <request-num>
```

```
no ip dhcp ping packets
```

Function:

Set the max number of Ping request (Echo Request) message to be sent in Ping-detection of conflict on DHCP server, whose default value is 2; the no operation of this command will restore the default value.

Parameters:

<request-num> is the number of Ping request message to be sent in Ping-detection of conflict.

Default Settings:

No more than 2 Ping request messages will be sent by default.

Command Mode:

Global Configuration Mode.

Examples:

Set the max number of Ping request (Echo Request) message to be sent in Ping-detection of conflict on DHCP server as 3.

```
Switch(config)#ip dhcp ping packets 3
```

Related Command: ip dhcp conflict ping-detection enable, ip dhcp ping timeout

30.1.20 ip dhcp ping timeout

Command:

```
ip dhcp ping timeout <timeout-value>  
no ip dhcp ping timeout
```

Function:

Set the timeout period (in ms) of waiting for a reply message (Echo Request) after each Ping request message (Echo Request) in Ping-detection of conflict on DHCP server, whose default value is 500ms. The no operation of this command will restore the default value.

Parameters:

<timeout-value> is the timeout period of waiting for a reply message after each Ping request message in Ping-detection of conflict.

Default Settings:

The timeout period is 500ms by default.

Command Mode:

Global Configuration Mode.

Examples:

Set the timeout period (in ms) of waiting for each reply message (Echo Request) in Ping-detection of conflict on DHCP server as 600ms.

```
Switch(config)# ip dhcp ping time out 600
```

Related Command: `ip dhcp conflict ping-detection enable`, `ip dhcp ping packets`

30.1.21 lease

Command:

```
lease { [<days>] [<hours>][<minutes>] | infinite }  
no lease
```

Function:

Sets the lease time for addresses in the address pool; the “**no lease**” command restores the default setting.

Parameters:

<days> is number of days from 0 to 365; **<hours>** is number of hours from 0 to 23; **<minutes>** is number of minutes from 0 to 59; **infinite** means perpetual use.

Default:

The default lease duration is 1 day.

Command Mode:

DHCP Address Pool Mode

Usage Guide:

DHCP is the protocol to assign network addresses dynamically instead of permanently, hence the introduction of lease duration. Lease settings should be decided based on network conditions: too long lease duration offsets the flexibility of DHCP, while too short duration results in increased network traffic and overhead. The default lease duration of switch is 1 day.

Example:

Setting the lease of DHCP pool "1" to 3 days 12 hours and 30 minutes.

```
Switch(dhcp-1-config)#lease 3 12 30
```

30.1.22 max-lease-time

Command:

```
max-lease-time {[<days>] [<hours>] [<minutes>] | infinite}  
no max-lease-time
```

Function:

Set the maximum lease time for the addresses in the address pool; the no command restores the default setting.

Parameters:

<days> is number of days from 0 to 365; **<hours>** is number of hours from 0 to 23; **<minutes>** is number of minutes from 0 to 59; **infinite** means perpetual use.

Default:

The default lease time is 1 day.

Command Mode:

DHCP Address Pool Mode

Usage Guide:

This command is used to DHCP request packets with option51. If the lease time (user requests the address) exceeds the maximum lease time configured, the lease that DHCP server assigns the address is the maximum lease time configured. If the lease time requested by the user is less than the maximum lease time configured, the lease that DHCP server assigns the address is the lease time requested by the user. The maximum lease time is able to be set by the administrator according to the actual network condition, and the maximum lease time is 1 day by default.

Example:

Set the maximum lease time of DHCP address pool1 to 3 days 12 hours and 30 minutes.

```
Switch(dhcp-1-config)#max-lease-time 3 12 30
```

30.1.23 netbios-name-server

Command:

```
netbios-name-server <address1>[<address2>[...<address8>]]  
no netbios-name-server
```

Function:

Configures WINS servers' address; the "no netbios-name-server" command deletes the WINS server.

Parameters:

<address1>...<address8> are IP addresses, in decimal format.

Default:

No WINS server is configured by default.

Command Mode:

DHCP Address Pool Mode

Usage Guide:

This command is used to specify WINS server for the client, up to 8 WINS server addresses can be configured. The WINS server address assigned first has the highest priority. Therefore, address 1 has the highest priority, and address 2 the second, and so on.

Example:

Setting the server address of DHCP pool "1" to 192.168.1.1.

```
Switch(dhcp-1-config)#netbios-name-server 192.168.1.1
```

30.1.24 netbios-node-type

Command:

```
netbios-node-type {b-node | h-node | m-node | p-node | <type-number>}  
no netbios-node-type
```

Function:

Sets the node type for the specified port; the “**no netbios-node-type**” command cancels the setting.

Parameters:

b-node stands for broadcasting node, **h-node** for hybrid node that broadcasts after point-to-point communication; **m-node** for hybrid node to communicate in point-to-point after broadcast; **p-node** for point-to-point node; **<type-number>** is the node type in Hex from 0 to FF.

Default:

No client node type is specified by default.

Command Mode:

DHCP Address Pool Mode

Usage Guide:

If client node type is to be specified, it is recommended to set the client node type to **h-node** that broadcasts after point-to-point communication.

Example:

Setting the node type for client of pool 1 to broadcasting node.

```
Switch(dhcp-1-config)#netbios-node-type b-node
```

30.1.25 network-address

Command:

```
network-address <network-number> [<mask> | <prefix-length>]  
no network-address
```

Function:

Sets the scope for assignment for addresses in the pool; the “**no network-address**” command cancels the setting.

Parameters:

<network-number> is the network number; **<mask>** is the subnet mask in the decimal format; **<prefix-length>** stands for mask in prefix form. For example, mask 255.255.255.0 in prefix is "24", and mask 255.255.255.252 in prefix is "30". Note: When using DHCP server, the pool mask should be longer or equal to that of layer 3 interface IP address in the corresponding segment.

Default:

If no mask is specified, default mask will be assigned according to the address class.

Command Mode:

DHCP Address Pool Mode

Usage Guide:

This command sets the scope of addresses that can be used for dynamic assignment by the DHCP server; one address pool can only have one corresponding segment. This command is exclusive with the manual address binding command "hardware address" and "host".

Example:

Configuring the assignable address in pool 1 to be 10.1.128.0/24.

```
Switch(dhcp-1-config)#network-address 10.1.128.0 24
```

30.1.26 next-server

Command:

```
next-server <address1>[<address2>[...<address8>]]
```

```
no next-server
```

Function:

Sets the server address for storing the client import file; the "**no next-server**" command cancels the setting.

Parameters:

<address1>...<address8> are IP addresses, in the decimal format.

Command Mode:

DHCP Address Pool Mode

Usage Guide:

This command configures the address for the server hosting client import file. This is usually used for diskless workstations that need to download configuration files from the server on boot up. This command is used together with “bootfile”.

Example:

Setting the hosting server address as 10.1.128.4.

```
Switch(dhcp-1-config)#next-server 10.1.128.4
```

30.1.27 option

Command:

```
option <code> {ascii <string> | hex <hex> | ipaddress <ipaddress>}
```

```
no option <code>
```

Function:

Sets the network parameter specified by the option code; the “no option <code>” command cancels the setting for option.

Parameters:

<code> is the code for network parameters; <string> is the ASCII string up to 255 characters; <hex> is a value in Hex that is no greater than 510 and must be of even length; <ipaddress> is the IP address in decimal format, up to 63 IP addresses can be configured.

Command Mode:

DHCP Address Pool Mode

Default:

None

Usage Guide:

The switch provides common commands for network parameter configuration as well as various commands useful in network configuration to meet different user needs. The definition of option code is described in detail in RFC2123.

Example:

Setting the WWW server address as 10.1.128.240.

```
Switch(dhcp-1-config)#option 72 ip 10.1.128.240
```


30.1.28 service dhcp

Command:

service dhcp
no service dhcp

Function:

Enables DHCP server; the “**no service dhcp**” command disables the DHCP service.

Parameters:

None

Default:

DHCP service is disabled by default.

Command mode:

Global Mode

Usage Guide:

Both DHCP server and DHCP relay are included in the DHCP service. When DHCP services are enabled, both DHCP server and DHCP relay are enabled. Switch can only assign IP address for the DHCP clients and enable DHCP relay when DHCP server function is enabled.

Example:

Enabling DHCP server.
Switch(config)#service dhcp

30.1.29 show ip dhcp binding

Command:

show ip dhcp binding [[<ip-addr>] [type {all | manual | dynamic}] [count]]

Function:

Displays IP-MAC binding information.

Parameters:

<ip-addr> is a specified IP address in decimal format; **all** stands for all binding types (manual binding and dynamic assignment); **manual** for manual binding; **dynamic** for dynamic assignment; **count** displays statistics for DHCP address binding entries.

Command mode:

Admin and Configuration Mode.

Example:

Switch# show ip dhcp binding

IP address	Hardware address	Lease expiration	Type
10.1.1.233	00-00-E2-3A-26-04	Infinite	Manual
10.1.1.254	00-00-E2-3A-5C-D3	60	Automatic

Displayed information	Explanation
IP address	IP address assigned to a DHCP client
Hardware address	MAC address of a DHCP client
Lease expiration	Valid time for the DHCP client to hold the IP address
Type	Type of assignment: manual binding or dynamic assignment.

30.1.30 show ip dhcp conflict

Command:

show ip dhcp conflict

Function:

Displays log information for addresses that have a conflict record.

Command mode:

Admin and Configuration Mode.

Example:

Switch# show ip dhcp conflict

IP Address	Detection method	Detection Time
10.1.1.1	Ping	FRI JAN 02 00:07:01 2002

Displayed information	Explanation
IP Address	Conflicting IP address

Detection method	Method in which the conflict is detected.
Detection Time	Time when the conflict is detected.

30.1.31 show ip dhcp relay information option

Command:

`show ip dhcp relay information option`

Function:

Show the relative configuration for DHCP relay option82.

Parameters:

None.

Command mode:

Admin and configuration mode

Default:

None.

Usage guide:

None.

Example:

Set the admin mode timeout value to 6 minutes.

```
Switch#show ip dhcp relay information option
```

```
ip dhcp server relay information option(i.e. option 82) is enabled
```

```
ip dhcp relay information option(i.e. option 82) is enabled
```

30.1.32 show ip dhcp server statistics

Command:

`show ip dhcp server statistics`

Function:

Displays statistics of all DHCP packets for a DHCP server.

Command mode:

Admin and Configuration Mode.

Example:

Switch# show ip dhcp server statistics

Address pools 3

Database agents 0

Automatic bindings 2

Manual bindings 0

Conflict bindings 0

Expired bindings 0

Malformed message 0

Message Received

BOOTREQUEST 3814

DHCPDISCOVER 1899

DHCPPREQUEST 6

DHCPDECLINE 0

DHCPRELEASE 1

DHCPINFORM 1

Message Send

BOOTREPLY 1911

DHCPPOFFER 6

DHCPACK 6

DHCPNAK 0

DHCPRELAY 1907

DHCPFORWARD 0

Switch#

Displayed information	Explanation
Address pools	Number of DHCP address pools configured.
Database agents	Number of database agents.
Automatic bindings	Number of addresses assigned automatically
Manual bindings	Number of addresses bound manually
Conflict bindings	Number of conflicting addresses
Expired bindings	Number of addresses whose leases are expired
Malformed message	Number of error messages.
Message Received	Statistics for DHCP packets received
BOOTREQUEST	Total packets received
DHCPDISCOVER	Number of DHCPDISCOVER packets

DHCPREQUEST	Number of DHCPREQUEST packets
DHCPDECLINE	Number of DHCPDECLINE packets
DHCPRELEASE	Number of DHCPRELEASE packets
DHCPINFORM	Number of DHCPINFORM packets
Message Send	Statistics for DHCP packets sent
BOOTREPLY	Total packets sent
DHCPOFFER	Number of DHCPOFFER packets
DHCPACK	Number of DHCPACK packets
DHCPNAK	Number of DHCPNAK packets
DHCPRELAY	Number of DHCPRELAY packets
DHCPFORWARD	Number of DHCPFORWARD packets

30.2 Commands for DHCP Relay Configuration

30.2.1 ip dhcp broadcast suppress

Command:

```
ip dhcp broadcast suppress
no ip dhcp broadcast suppress
```

Function:

Enable DHCP broadcast suppress function, the no command disables the function.

Parameter:

None.

Default:

Disable.

Command Mode:

Global mode

Usage Guide:

Suppress the forwarding about DHCP broadcast packets, namely, drop or copy DHCP broadcast packets to CPU.

Example:

Enable DHCP broadcast suppress function.

```
Switch(config)#ip dhcp broadcast suppress
```

30.2.2 ip dhcp relay share-vlan <vlanid> sub-vlan <vlanlist>

Command:

```
ip dhcp relay share-vlan <vlanid> sub-vlan <vlanlist>
```

```
no ip dhcp relay share-vlan
```

Function:

Specify sub-vlan of a share-vlan, the no command cancels sub-vlan.

Parameter:

<vlanid> is VLAN ID of share-vlan, <vlanlist> is sub-vlan list.

Default:

None.

Command Mode:

Global mode.

Usage Guide:

share-vlan may include many sub-vlan, but a sub-vlan only corresponds to a share-vlan. When layer 2 device of DHCP Relay receive DHCP Request, firstly judge whether VLAN with layer 3 interface for receiving package. If there is layer 3 interface in package, use the interface to process DHCP Relay, or else use layer 3 interface of share-vlan to process DHCP Relay when the vlan is sub-vlan of share-vlan.

30.2.3 ip forward-protocol udp bootps

Command:

```
ip forward-protocol udp bootps
```

```
no ip forward-protocol udp bootps
```

Function:

Sets DHCP relay to forward UDP broadcast packets on the port; the “**no ip forward-protocol udp bootps**” command cancels the service.

Parameter:

bootps forwarding UDP port as 67 DHCP broadcast packets.

Default:

Not forward UDP broadcast packets by default.

Command mode:

Global Mode

Usage Guide:

The forwarding destination address is set in the “**ip helper-address**” command and described later.

Example:

Setting DHCP packets to be forwarded to 192.168.1.5.

```
Switch(config)#ip forward-protocol udp bootps
```

```
Switch(config)#interface vlan 1
```

```
Switch(Config-if-Vlan1)#ip helper-address 192.168.1.5
```

30.2.4 ip helper-address

Command:

```
ip helper-address <ip-address>
```

```
no ip helper-address <ip-address>
```

Function:

Specifies the destination address for the DHCP relay to forward UDP packets. The “**no ip helper-address <ip-address>**” command cancels the setting.

Default:

None.

Command mode:

Interface Configuration Mode

Usage Guide:

The DHCP relay forwarding server address corresponds to the port forwarding UDP, i.e. DHCP relay forwards corresponding UDP packets only to the corresponding server instead of all UDP packets to all servers. When this command is run after “**ip forward-protocol udp <port>**” command, the forwarding address configured by this command receives the UDP packets from **<port>**. The combination of “**ip forward-protocol udp <port>**” command and this command should be used for configuration.

30.2.5 show ip forward-protocol

Command:

```
show ip forward-protocol
```

Function:

Show the configured port ID of the protocol which support the forwarding of broadcast packets, it means the port ID for forwarding DHCP packets.

Command mode:

Admin and configuration mode

Example:

```
Switch#show ip forward-protocol  
Forward protocol(UDP port): 67(active)
```

30.2.6 show ip helper-address

Command:

```
show ip helper-address
```

Function:

Show the configuration relation for the port ID of the protocol (It can forward broadcast packets), the interface (It supports forwarding function) and the forwarded destination IP.

Command mode:

Admin and configuration mode

Example:

```
Switch#show ip helper-address
```

```
Forward protocol    Interface
```

```
67(active)         Vlan1
```

```
Forward server
```

```
192.168.1.1
```

Chapter 31 Commands for DHCPv6

31.1 clear ipv6 dhcp binding

Command:

```
clear ipv6 dhcp binding [<ipv6-address>] [pd <ipv6-prefix | prefix-length>]
```

Function:

To clear one specified DHCPv6 assigned address binding record or all the IPv6 address binding records.

Parameter:

<ipv6-address> is the specified IPv6 address with binding record; <ipv6-prefix| prefix-length> is the specified IPv6 prefix with binding record; To clear all IPv6 address binding record if there is no specified record.

Command Mode:

Admin Configuration Mode.

Usage Guide:

DHCPv6 IPv6 address binding information can be displayed through the command **show ipv6 dhcp binding**. If DHCPv6 client does not use the DHCPv6 allocated IPv6 address but when the life time of the IPv6 address does not end, the DHCPv6 server will not remove its bind for this address. In this situation, the address binding information can be removed manually through this command; and if no parameter is appended, this command will remove all the address binding information, then all addresses and prefix will be assigned again in the DHCPv6 address pool.

Example:

To delete all binding record of IPv6 address and prefix.

```
Switch#clear ipv6 dhcp binding
```

Relative Command: show ipv6 dhcp binding

31.2 clear ipv6 dhcp conflict

Command:

```
clear ipv6 dhcp conflict [<address>]
```

Function:

Clear the address with the conflict record in address conflict log.

Parameter:

<address> is the specified address with the conflict record, no specified address will clear all conflict records.

Command mode:

Admin Mode

Usage Guide:

With **show ipv6 dhcp conflict** command, the user can check the conflict in which IP addresses. With this command, the user can clear the conflict record of an address. If no specified address will clear the conflict record of all addresses in log. After the conflict records are cleared in log, these addresses can be used by DHCPv6 server again.

Example:

When administrator checks the conflict logs, administrator discovers that address 2001::1 with the conflict record is not used, so its record will be cleared from address conflict files.

```
Switch#clear ipv6 dhcp conflict 2001::1
```

31.3 clear ipv6 dhcp statistics

Command:

```
clear ipv6 dhcp statistics
```

Function:

Clear the statistic records of DHCPv6 packets, the statistic counter of DHCPv6 packets is cleared.

Parameter:

None.

Command mode:

Admin Mode

Usage Guide:

With **show ipv6 dhcp statistics** command, the user can check the statistic information of the counter for DHCPv6 packets, all statistic information is an accumulative value. With this command will clear the counter to check the debugging conveniently.

Example:

Clear the counter of DHCPv6 packets.

```
Switch#clear ipv6 dhcp statistics
```

Relative Command: show ipv6 dhcp statistics

31.4 debug ipv6 dhcp client packet

Command:

```
debug ipv6 dhcp client {event | packet}
```

```
no debug ipv6 dhcp client {event | packet}
```

Function:

To enable the debugging messages for protocol packets of DHCPv6 prefix delegation client, the no form of this command will disable the debugging information.

Default:

Disabled.

Command Mode:

Admin Mode.

Example:

```
Switch# debug ipv6 dhcp client packet
```

31.5 debug ipv6 dhcp detail

Command:

```
debug ipv6 dhcp detail
```

```
no debug ipv6 dhcp detail
```

Function:

To display the debug information of all kinds of packets received or sent by DHCPv6, the no form of this command disabled this function.

Default:

Disabled.

Command Mode:

Admin Mode.

Example:

```
Switch# debug ipv6 dhcp detail
```

31.6 debug ipv6 dhcp relay packet

Command:

```
debug ipv6 dhcp relay packet  
no debug ipv6 dhcp relay packet
```

Function:

To enable the debugging information for protocol packets of DHCPv6 relay, the no form of this command will disable the debugging.

Default:

Disabled.

Command Mode:

Admin Mode.

Example:

```
Switch# debug ipv6 dhcp relay packet
```

31.7 debug ipv6 dhcp server

Command:

```
debug ipv6 dhcp server { event | packet }  
no debug ipv6 dhcp server { event | packet }
```

Function:

To enable the debugging information of DHCPv6 server, the no form of this command will disable the debugging.

Parameter:

event is to enable debugging messages for DHCPv6 server events, such as address allocation; packet is for debugging messages of protocol packets of DHCPv6 server.

Default:

Disabled.

Command Mode:

Admin Mode.

Example:

```
Switch#debug ipv6 dhcp server packet
```

31.8 dns-server

Command:

```
dns-server <ipv6-address>  
no dns-server <ipv6-address>
```

Function:

To configure the IPv6 address of the DNS server for DHCPv6 client; the no form of this command will remove the DNS configuration.

Parameter:

<ipv6-address> is the IPv6 address of DNS Server.

Default:

No configured address pool of DNS Server by default.

Command Mode:

DHCPv6 Address Pool Configuration Mode.

Usage Guide:

For each address pool, at most three DNS server can be configured, and the addresses of the DNS server must be valid IPv6 addresses.

Example:

To configure the DNS Server address of DHCPv6 client as 2001:da8::1.

```
Switch(dhcp-1-config)#dns-server 2001:da8::1
```

31.9 domain-name

Command:

```
domain-name <domain-name>
```

```
no domain-name <domain-name>
```

Function:

To configure domain name of DHCPv6 client; the no form of this command will delete the domain name.

Parameter:

<domain-name> is the domain name, less than 32 characters.

Command Mode:

DHCPv6 Address Pool Configuration Mode.

Default:

The domain name parameter of address pool is not configured by default.

Usage Guide:

At most 3 domain names can be configured for each address pool.

Example:

To set the domain name of DHCPv6 client as test.com.cn

```
Switch(dhcp-1-config)#domain-name test.com.cn
```

31.10 excluded-address

Command:

```
excluded-address <ipv6-address>
```

```
no excluded-address <ipv6-address>
```

Function:

To configure the specified IPv6 address to be excluded from the address pool, the excluded address will not be allocated to any hosts; the no form of this command will remove the configuration.

Parameter:

<ipv6-address> is the IPv6 address to be excluded from being allocated to hosts in the address pool.

Default:

Disabled

Command Mode:

DHCPv6 address pool configuration mode.

Usage Guide:

This command is used to preserve the specified address from DHCPv6 address allocation.

Example:

To configure to exclude 2001:da8:123::1 from DHCPv6 address allocation.

```
Switch(config)#excluded-address 2001:da8:123::1
```

31.11 ipv6 address

Command:

```
ipv6 address <prefix-name> <ipv6-prefix/prefix-length>
```

```
no ipv6 address <prefix-name> <ipv6-prefix/prefix-length>
```

Function:

To configure the specified interface to use prefix delegation for address allocation. The no form of this command will disable the using of prefix delegation for address allocation.

Parameters:

<prefix-name> is a string with its length no more than 32, designating or manual configuring the name of the address prefix defined in the prefix pool. **<ipv6-prefix/prefix-length>** is latter part of the IPv6 address excluding the address prefix, as well as its length.

Command Mode:

Interface Configuration Mode.

Default:

No global address is configured for interfaces by default.

Usage Guide:

The IPv6 address of an interface falls into two parts: **<prefix-name>** and **<ipv6-prefix>/<prefix-length>**. If routing advertisement has been enabled, the first 64 bits of the addresses will be advertised. The address generated by **<prefix-name>** and **<ipv6-prefix/prefix-length>** combination will be removed, and the advertising of the prefix will be disabled. Only one **<ipv6-prefix/prefix-length>** can be configured for one prefix name.

Example:

If the prefix name my-prefix designates 2001:da8:221::/48, then the following command will add the address 2001:da8:221:2008::2008 to interface VLAN1.

```
Switch(Config-if-Vlan1)# ipv6 address my-prefix 0:0:0:2008::2008/64
```

31.12 ipv6 dhcp client pd

Command:

```
ipv6 dhcp client pd <prefix-name> [rapid-commit]  
no ipv6 dhcp client pd
```

Function:

To configure DHCPv6 prefix delegation client for the specified interface. The no form of this command will disable the DHCPv6 prefix delegation client and remove the allocated address prefix.

Parameters:

<prefix-name> is the string with its length no more than 32, which designates the name of the address prefix. If **rapid-commit** optional is specified and the prefix delegation server enables the rapid-commit function, then the prefix delegation server will reply the prefix delegation client with the REPLY message directly. And the prefix delegation request will be accomplished by exchanging messages once.

Command Mode:

Interface Configuration Mode.

Default:

DHCPv6 prefix delegation client is not enabled by default.

Usage Guide:

This command is used to configure the prefix delegation client on the specified interface, an interface with prefix delegation client enabled will send SOLICIT packets to try to get address prefix from the server. If the prefix is retrieved correctly, the address prefix in the global address pool can be used by the **ipv6 address** command to generate a valid IPv6 address. This command is exclusive with **ipv6 dhcp server** and **ipv6 dhcp relay destination**. If the prefix delegation client is disabled for an interface, then the address prefix which is get from this interface through prefix delegation client, will be removed from the global address pool. Also the interface address which is generated by the prefix delegation client will be removed, and routing advertisement with the prefix will be disabled. If any general prefix has been configured by the **ipv6 general-prefix** command, the same prefix learnt from prefix delegation will be disagreed.

Example:

```
Switch(Config-if-Vlan1)#ipv6 dhcp client pd ClientA rapid-commit
```

31.13 ipv6 dhcp client pd hint

Command:

```
ipv6 dhcp client pd hint <prefix/prefix-length>  
no ipv6 dhcp client pd hint <prefix/prefix-length>
```

Function:

Designate the prefix demanded by the client and its length. The no operation of this command will delete that prefix and its length from the specified interface.

Parameters:

<prefix/prefix-length> means the prefix demanded by the client and its length.

Command Mode:

Interface Configure Mode.

Default Settings:

There is no such configuration in the system by default.

Usage Guide:

The system designates a prefix and its length on the interface for a client. If client prefix-proxy demanding function is enabled on the interface and hint function is enabled on the switch, the user will have prior claim to the prefix it demands and the prefix length when the server allocates them. Only one hint prefix is allowed in the system.

Examples:

```
Switch(vlan-1-config)#ipv6 dhcp client pd hint 2001::/48
```

31.14 ipv6 dhcp pool

Command:

```
ipv6 dhcp pool <poolname>  
no ipv6 dhcp pool <poolname>
```

Function:

To configure the address pool for DHCPv6, and enter the DHCPv6 address pool configuration mode. In this mode, information such as the address prefix to be allocated, the DNS server addresses, and domain names, can be configured for the DHCPv6 client. The no form of this command will remove the configuration of the address pool.

Parameter:

< *poolname* > is the address pool name of DHCPv6 with its length no more than 32.

Default:

Any DHCPv6 address pool are not configured by default.

Command Mode:

Global Mode.

Usage Guide:

This command should be launched in global configuration mode, and falls in DHCPv6 address pool configuration mode if launched successfully. To remove a configured address pool, interface bindings related to the address pool, as well as the related address bindings will be removed.

Example:

```
To define an address pool, named 1.  
Switch(config)#ipv6 dhcp pool 1
```

31.15 ipv6 dhcp relay destination

Command:

```
ipv6 dhcp relay destination { [<ipv6-address>] [interface { <interface-name> | vlan <1-4096> } ] }  
no ipv6 dhcp relay destination { [<ipv6-address>] [ interface { <interface-name> | vlan <1-4096> } ] }
```

Function:

To configure the destination to which the DHCPv6 relay forwards the DHCPv6 requests from the clients, the destination should be the address of an external DHCPv6 relay or the DHCPv6 server. The no form of this command will remove the configuration.

Parameters:

<ipv6-address> is the address of the destination to which the DHCPv6 relay forwards; **<interface-name>** or VLAN is the interface name or VLAN id which is used for forwarding of DHCPv6 requests, **<interface-name>** should be a layer three VLAN name, and the VLAN id is limited between 1 and 4096. If **<ipv6-address>** is a global unicast address, the **interface** parameter should not be configured; If **<ipv6-address>** is a local address, the **interface** parameter is required to be configured; The destination address for the DHCPv6 server will be the multicast address of **ALL_DHCP_Servers (FF05::1:3)**, if the interface parameter is configured only.

Command Mode:

Interface Configuration Mode.

Default:

By default, destination address for DHCPv6 relay is not configured.

Usage Guide:

This command is used to configure the DHCPv6 relay for the specified interface, the address should be the address of another DHCPv6 relay or the address of a DHCPv6 server. At most three relay addresses can be configured for an interface. To be mentioned, the DHCPv6 relay stops working only if all the relay destination address configurations have been removed. This command is mutually exclusive to "ipv6 dhcp server" and "ipv6 dhcp client pd" commands.

Example:

```
Switch(Config-if-Vlan1)#ipv6 dhcp relay destination 2001:da8::1
```

31.16 ipv6 dhcp server

Command:

```
ipv6 dhcp server <poolname> [preference <value>] [rapid-commit] [allow-hint]
no ipv6 dhcp server <poolname>
```

Function:

This command configures the address pool which will be allocated by the DHCPv6 server through the specified interface. The no form of this command will remove the address pool configuration.

Parameters:

<poolname> is a string with its length less than 32, which designates the name of the address pool which is associated with the specified interface. If the **rapid-commit** option has been specified, the DHCPv6 server send a REPLY packet to the client immediately after receiving the SOLICIT packet. If the **preference** option has been specified, **<value>** will be the priority of the DHCPv6 server, with its value allowed between 0 and 255, and with 0 by default, the bigger the preference value is, the higher the priority of the DHCPv6 server. If the **allow-hint** option has been specified, the client expected value of parameters will be appended in its request packets.

Command Mode:

Interface Configuration Mode.

Default:

DHCPv6 address pool based on port is not configured by default.

Usage Guide:

This command configure the DHCPv6 address pool which is applied by the DHCPv6 server for the specified interface, as well as optional parameters. One VLAN can bind many DHCPv6 address pools and assign the address for DHCPv6 request packet from direct-link and relay delegation.

Example:

```
Switch(Config-if-Vlan1)#ipv6 dhcp server PoolA preference 80 rapid-commit allow-hint
```

31.17 ipv6 general-prefix

Command:

```
ipv6 general-prefix <prefix-name> <ipv6-prefix/prefix-length>
no ipv6 general-prefix <prefix-name>
```

Function:

To define an IPv6 general prefix. The no form of this command will delete the configuration.

Parameter:

<prefix-name> is a character string less than 32 characters, to use as IPv6 general prefix name.

<ipv6-prefix/prefix-length> is defined as IPv6 general prefix.

Command Mode:

Global Mode.

Default:

IPv6 general prefix is not configured by default.

Usage Guide:

If IPv6 general prefix is configured, the interface will use the configured prefix for IPv6 address generating. Commonly, the general prefix is used for enterprise IPv6 prefix, and when entering an IPv6 address, users can simply add the address suffix of to the name of the general prefix. The configured address prefix will be reserved in the general address prefix pool. At most 8 general prefix can be configured at the same time. When trying to remove a configured general prefix name, the operation will fail if any interfaces used the configured prefix. Only one general prefix for a prefix name. The general prefix cannot use the same prefix definition with prefixes learnt from prefix delegation.

Example:

To set the prefix of 2001:da8:221::/48 to general prefix my-prefix.

```
Switch(config)# ipv6 general-prefix my-prefix 2001:da8:221::/48
```

31.18 ipv6 local pool

Command:

```
ipv6 local pool <poolname> <prefix/prefix-length> <assigned-length>
```

```
no ipv6 local pool <poolname>
```

Function:

To configure the address pool for prefix delegation. The no form of this command will remove the IPv6 prefix delegation configuration.

Parameters:

<poolname> is the name for the IPv6 address pool of the prefix delegation, the length name string should be less than 32. **<prefix/prefix-length>** is the address prefix and its length of the prefix delegation. **<assigned-length>** is the length of the prefix in the address pool which can be retrieved by the client, the assigned prefix length should be no less than the value of **<prefix-length>**

Command Mode:

Global Mode.

Default:

No IPv6 prefix delegation address pool is configured by default.

Usage Guide:

This command should be used with the “**prefix delegation pool**” command to allocate address prefixes to the clients. If IPv6 prefix delegation is removed, the associated “**prefix delegation**” command will be in-effective either.

31.19 lifetime

Command:

```
lifetime {<valid-time> | infinity} {<preferred-time> | infinity}  
no lifetime
```

Function:

To configure the life time for the addresses or the address prefixes allocated by DHCPv6. The no form of this command will restore the default setting.

Parameters:

<valid-time> and **<preferred-time>** are the valid life time and preferred life time respectively for the allocated IPv6 addresses in the local address pool. Its value is allowed to be between 1 and 31536000 in seconds, and **<preferred-time>** should never be bigger than **<valid-time>**. The **infinity** parameter designates the maximum life time.

Command Mode:

DHCPv6 Address Pool Configuration Mode.

Default:

The default valid life time and preferred life time are 2592000 seconds (30 days) and 604800 seconds (7 days) respectively.

Example:

To configure the valid life time as 1000 seconds, and the preferred life time as 600 seconds.

```
Switch(config)#lifetime 1000 600
```

31.20 network-address

Command:

```
network-address <ipv6-pool-start-address> {<ipv6-pool-end-address> | <prefix-length>} [eui-64]  
no network-address
```

Function:

To configure the DHCPv6 address pool; the no form of this command will remove the address pool configuration.

Parameters:

<ipv6-pool-start-address> is the start of the address pool; <ipv6-pool-end-address> is the end of the address pool; <prefix-length> is the length of the address prefix, which is allowed to be between 3 and 128, and 64 by default, the size of the pool will be determined by <prefix-length> if it has been specified. <ipv6-pool-end-address> and <prefix-length> alternative options to determine the size of the IPv6 address pool. If <prefix-length> is 64 and the eui-64 option has been configured, the DHCPv6 server will allocate IPv6 addresses according to the EUI-64 standard, or the DHCPv6 server will be allocating addresses sequentially.

Default:

No address pool is configured by default.

Command Mode:

DHCPv6 Address Pool Configuration Mode.

Usage Guide:

This command configures the address pool for the DHCPv6 server to allocate addresses, only one address range can be configured for each address pool. To be noticed, if the DHCPv6 server has been enabled, and the length of the IPv6 address prefix has been configured, the length of the prefix in the address pool should be no less than the length of the prefix of the IPv6 address of the respective layer three interfaces in the switch. If <ipv6-pool-end-address> is bigger than <ipv6-pool-start-address>, this command returns at once.

Example:

To configure the address range for address pool as 2001:da8:123::100-2001:da8:123::200.

```
Switch(dhcp-1-config)#network-address 2001:da8:123::100 2001:da8:123::200
```

Relative Command: excluded-address

31.21 prefix-delegation

Command:

```
prefix-delegation <ipv6-prefix/prefix-length> <client-DUID> [iaid <iaid>] [lifetime <valid-time>
<preferred-time>]
no prefix-delegation <ipv6-prefix/prefix-length> <client-DUID> [iaid <iaid>]
```

Function:

To configure dedicated prefix delegation for the specified user. The no form of this command will remove the dedicated prefix delegation.

Parameters:

<ipv6-prefix/prefix-length> is the length of the prefix to be allocated to the client. **<client-DUID>** is the DUID of the client. DUID with the type of DUID-LLT and DUID-LL are supported, the DUID of DUID-LLT type should be of 14 characters. **<iaid>** is the value to be appended in the IA_PD field of the clients' requests. **<valid-time>** and **<preferred-time>** are the valid life time and the preferred life time of the IPv6 address allocated to the clients respectively, in seconds, and its value is allowed between 1 and 31536000. However **<preferred-time>** should be less than **<valid-time>**. If not configured, the default **<valid-time>** will be 2592000, while **<preferred-time>** will be 604800.

Command Mode:

DHCPv6 Address Pool Configuration Mode.

Default:

Disabled.

Usage Guide:

This command configures the specified IPv6 address prefix to bind with the specified client. If no IAID is configured, any IA of any clients will be able to get this address prefix. At most eight static binding address prefix can be configured for each address pool. For prefix delegation, static binding is of higher priority than the prefix address pool.

Example:

The following command will allocate 2001:da8::/48 to the client with DUID as 0001000600000005000BBFAA2408, and IAID as 12.

```
Switch(dhcp-1-config)#prefix-delegation 2001:da8::/48 0001000600000005000BBFAA240812
```

31.22 prefix-delegation pool

Command:

```
prefix-delegation pool <poolname> [lifetime <valid-time> <preferred-time>]  
no prefix-delegation pool <poolname>
```

Function:

To configure prefix delegation name used by DHCPv6 address pool. The no form of this command deletes the configuration.

Parameters:

<poolname> is the name of the address prefix pool, the length name string should be less than 32. <valid-time> and <preferred-time> are the valid life time and the preferred life time of the IPv6 address allocated to the clients respectively, in seconds, and its value is allowed between 1 and 31536000. However <preferred-time> should be less than <valid-time>, if not configured, the default <valid-time> will be 2592000, while <preferred-time> will be 604800.

Command Mode:

DHCPv6 address pool configuration mode.

Default:

The prefix delegation name used by DHCPv6 address pool is not configured.

Usage Guide:

This command configures the name of the address prefix pool for address allocation. If configured, the addresses in the prefix address pool will be allocated to the clients. This command can be used in association with the **ipv6 local pool** command. For one address pool, only one prefix delegation pool can be bound. When trying to remove the prefix name configuration, the prefix delegation service of the server will be unavailable, if both the address pool is not associated with the prefix delegation pool and no static prefix delegation binding is enabled.

Example:

```
Switch(dhcp-1-config)#prefix-delegation pool abc
```

31.23 service dhcpv6

Command:

```
service dhcpv6
no service dhcpv6
```

Function:

To enable DHCPv6 server function; the no form of this command disables the configuration.

Parameter:

None.

Default:

Disabled.

Command Mode:

Global Mode.

Usage Guide:

The DHCPv6 services include DHCPv6 server function, DHCPv6 relay function, DHCPv6 prefix delegation function. All of the above services are configured on ports. Only when DHCPv6 server function is enabled, the IP address assignment of DHCPv6 client, DHCPv6 relay and DHCPv6 prefix delegation functions enabled can be configured on ports.

Example:

```
To enable DHCPv6 server.
Switch(config)#service dhcpv6
```

31.24 show ipv6 dhcp

Command:

```
show ipv6 dhcp
```

Function:

To show the enable switch and DUID of DHCPv6 service.

Command Mode:

Admin and Configuration Mode.

Usage Guide:

To show the enable switch and DUID of DHCPv6 service, server identifier options only use DUID of DUID-LLT type.

Example:

```
Switch#show ipv6 dhcp
DHCPv6 is enabled
LLT DUID is <00:01:00:01:43:b7:1b:81:00:30:4f:01:5f:9d>
LL DUID is <00:03:00:01:00:30:4f:01:5f:9d>
```

31.25 show ipv6 dhcp binding

Command:

```
show ipv6 dhcp binding [<ipv6-address>] pd <ipv6-prefix|prefix-length> [count]
```

Function:

To show all the address and prefix binding information of DHCPv6.

Parameter:

<ipv6-address> is the specified IPv6 address; **count** show the number of DHCPv6 address bindings.

Command Mode:

Admin and Configuration Mode.

Usage Guide:

To show all the address and prefix binding information of DHCPv6, include type, DUID, IAID, prefix, valid time and so on.

Example:

```
Switch#show ipv6 dhcp binding
Client: iatype IANA, iaid 0x0e001d92
DUID: 00:01:00:01:0f:55:82:4f:00:19:e0:3f:d1:83
IANA leased address: 2001:da8::10
Preferred lifetime 604800 seconds, valid lifetime 2592000 seconds
Lease obtained at %Jan 01 01:34:44 1970
Lease expires at %Jan 31 01:34:44 1970 (2592000 seconds left)
The number of DHCPv6 bindings is 1
```

31.26 show ipv6 dhcp conflict

Command:

```
show ipv6 dhcp conflict
```

Function:

Show the log for the address that have a conflict record.

Command mode:

Admin and Configuration Mode.

Example:

```
Switch# show ipv6 dhcp conflict
```

31.27 show ipv6 dhcp interface

Command:

```
show ipv6 dhcp interface [<interface-name>]
```

Function:

To show the information for DHCPv6 interface.

Parameter:

<interface-name> is the name and number of interface, if the <interface-name> parameter is not provided, then all the DHCPv6 interface information will be shown.

Command Mode:

Admin and Configuration Mode.

Usage Guide:

To show the information for DHCPv6 interface, include Port Mode (Prefix delegation client 、 DHCPv6 server 、 DHCPv6 relay) , and the relative conformation information under all kinds of mode.

Example:

```
Switch#show ipv6 dhcp interface vlan10
Vlan10 is in server mode
Using pool: poolv6
Preference value: 20
Rapid-Commit is disabled
```

31.28 show ipv6 dhcp pool

Command:

```
show ipv6 dhcp pool [<poolname>]
```

Function:

To show the DHCPv6 address pool information.

Parameter:

<poolname> is the DHCPv6 address pool name which configured already, and the length less than 32 characters. If the <poolname> parameter is not provided, then all the DHCPv6 address pool information will be shown.

Command Mode:

Admin and Configuration Mode.

Usage Guide:

To display the configuration and dynamic assignment information for DHCPv6 address pool, include the name of DHCPv6 address pool, the prefix of DHCPv6 address pool, excluded address, DNS server configuration, relative prefix information and so on. To display assigned address binding number of address pool that is used as address assignment server. To display assigned prefix number of address pool that is used as prefix delegation server.

Example:

```
Switch#show ipv6 dhcp pool poolv6
```

31.29 show ipv6 dhcp statistics

Command:

```
show ipv6 dhcp statistics
```

Function:

To show the statistic of all kinds of DHCPv6 packets by DHCPv6 server.

Command Mode:

Admin and Configuration Mode.

Example:

```
Switch#show ipv6 dhcp server statistics
```

```
Address pools          1
Active bindings        0
Expired bindings       0
Malformed message     0
```

```
Message                Recieved
DHCP6SOLICIT          0
DHCP6ADVERTISE         0
DHCP6REQUEST           0
DHCP6REPLY             0
DHCP6RENEW             0
DHCP6REBIND           0
DHCP6RELEASE           0
DHCP6DECLINE           0
DHCP6CONFIRM           0
DHCP6RECONFIGURE       0
DHCP6INFORMREQ         0
DHCP6RELAYFORW         0
DHCP6RELAYREPLY        0
```

```
Message                Send
DHCP6SOLICIT          0
DHCP6ADVERTISE         0
DHCP6REQUEST           0
DHCP6REPLY             0
DHCP6RENEW             0
DHCP6REBIND           0
DHCP6RELEASE           0
DHCP6DECLINE           0
DHCP6CONFIRM           0
DHCP6RECONFIGURE       0
DHCP6INFORMREQ         0
DHCP6RELAYFORW         0
DHCP6RELAYREPLY        0
```

Show information	Explanation
Address pools	To configure the number of DHCPv6 address pools;
Active bindings	The number of auto assign addresses;
Expired bindings	The number of expired bindings;
Malformed message	The number of malformed messages;
Message Received	The statistic of received DHCPv6 packets.
DHCP6SOLICIT	The number of DHCPv6 SOLICIT packets.
DHCP6ADVERTISE	The number of DHCPv6 ADVERTISE packets.
DHCPv6REQUEST	The number of DHCPv6 REQUEST packets.
DHCP6REPLY	The number of DHCPv6 REPLY packets.
DHCP6RENEW	The number of DHCPv6 RENEW packets.
DHCP6REBIND	The number of DHCPv6 REBIND packets.
DHCP6RELEASE	The number of DHCPv6 RELEASE packets.
DHCP6DECLINE	The number of DHCPv6 DECLINE packets.
DHCP6CONFIRM	The number of DHCPv6 CONFIRM packets.
DHCP6RECONFIGURE	The number of DHCPv6 RECONFIGURE packets.
DHCP6INFORMREQ	The number of DHCPv6 INFORMREQ packets.
DHCP6RELAYFORW	The number of DHCPv6 RELAYFORW packets.
DHCP6RELAYREPLY	The number of DHCPv6 RELAYREPLY packets.
Message Send	The statistic of sending DHCPv6 packets
DHCP6SOLICIT	The number of DHCPv6 SOLICIT packets.
DHCP6ADVERTISE	The number of DHCPv6 ADVERTISE packets.
DHCPv6REQUEST	The number of DHCPv6 REQUEST packets.
DHCP6REPLY	The number of DHCPv6 REPLY packets.
DHCP6RENEW	The number of DHCPv6 RENEW packets.
DHCP6REBIND	The number of DHCPv6 REBIND packets.
DHCP6RELEASE	The number of DHCPv6 RELEASE packets.
DHCP6DECLINE	The number of DHCPv6 DECLINE packets.
DHCP6CONFIRM	The number of DHCPv6 CONFIRM packets.
DHCP6RECONFIGURE	The number of DHCPv6 RECONFIGURE packets.
DHCP6INFORMREQ	The number of DHCPv6 INFORMREQ packets.
DHCP6RELAYFORW	The number of DHCPv6 RELAYFORW packets.

31.30 show ipv6 general-prefix

Command:

```
show ipv6 general-prefix
```

Function:

To show the IPv6 general prefix pool information.

Command Mode:

Admin and Configuration Mode.

Usage Guide:

To show the IPv6 general prefix pool information, include the prefix number in general prefix pool, the name of every prefix, the interface of prefix obtained, and the prefix value.

Example:

```
Switch#show ipv6 general-prefix
```

31.31 show ipv6 local pool

Command:

```
show ipv6 local pool
```

Function:

To show the statistic information of DHCPv6 prefix pool.

Command Mode:

Admin and Configuration Mode.

Usage Guide:

To show the statistic information of DHCPv6 prefix pool, include the name of prefix pool, the prefix and prefix length as well as assigned prefix length, the number of assigned prefix and information in DHCPv6 address pool.

Example:

```
Switch#show ipv6 local pool
```

Pool	Prefix	Free	In use
a	2010::1/48	65536	0

Chapter 32 Commands for DHCP Option 82

32.1 debug ip dhcp relay packet

Command:

debug ip dhcp relay packet

Function:

This command is used to display the information of data packets processing in DHCP Relay Agent, including the “add” and “peel” action of option 82.

Parameters:

None

Command Mode:

Admin Mode.

User Guide:

Use this command during the operation to display the procedure of data packets processing of the server and to display the corresponding option82 operation information. Identified option 82 information of the request message and the option 82 information returned by the reply message.

Example:

Display the information of data packets processing in DHCP Relay Agent.

```
Switch(config)# debug ip dhcp relay packet
```

32.2 ip dhcp relay information option

Command:

ip dhcp relay information option
no ip dhcp relay information option

Function:

Set this command to enable the option82 function of the switch Relay Agent. The “**no ip dhcp relay information option**” command is used to disable the option82 function of the switch Relay Agent.

Parameters:

None.

Default Settings:

The system disables the option82 function by default.

Command Mode:

Global configuration mode

Usage Guide:

Only the DHCP Relay Agents configuring with this command can add option82 to the DHCP request message, and let the server to process it. Before enabling this function, users should make sure that the DHCP service is enabled and the Relay Agent will transmit the udp broadcast messages whose destination port is 67.

Example:

Enable the option82 function of the Relay Agent.

```
Switch(config)#service dhcp
```

```
Switch(config)# ip forward-protocol udp bootps
```

```
Switch(config)# ip dhcp relay information option
```

32.3 ip dhcp relay information option delimiter

Command:

```
ip dhcp relay information option delimiter [colon | dot | slash | space]
```

```
no ip dhcp relay information option delimiter
```

Function:

Set the delimiter of each parameter for suboption of option82 in global mode, no command restores the delimiter as slash.

Parameters:

None.

Default Settings:

slash ("/").

Command Mode:

Global mode

Usage Guide:

Divide the parameters with the configured delimiters after users have defined them which are used to create suboption (remot-de, circuit-id) of option82 in global mode.

Example:

Set the parameter delimiters as dot (".") for suboption of option82.

```
Switch(config)#ip dhcp relay information option delimiter dot
```

32.4 ip dhcp relay information option remote-id

Command:

```
ip dhcp relay information option remote-id {standard | <remote-id>}
```

```
no ip dhcp relay information option remote-id
```

Function:

Set the suboption2 (remote ID option) content of option 82 added by DHCP request packets (They are received by the interface). The no command sets the additive suboption2 (remote ID option) format of option 82 as standard.

Parameters:

standard means the default VLAN MAC format. **<remote-id>** means the remote-id content of option 82 specified by users, its length can not exceed 64 characters.

Command Mode:

Global Mode

Default:

Use standard format to set remote-id of option 82.

Usage Guide:

The additive option 82 information needs to associate with third-party DHCP server, it is used to specify the remote-id content by users when the standard remote-id format cannot satisfy server's request.

Example:

Set the suboption remote-id of DHCP option82 as street-1-1.

```
Switch(config)#ip dhcp relay information option remote-id street-1-1
```

32.5 ip dhcp relay information option remote-id format

Command:

```
ip dhcp relay information option remote-id format {default | vs-hp}
```

Function:

Set remote-id format of Relay Agent option82.

Parameters:

default means that remote-id is the VLAN MAC address with hexadecimal format, vs-hp means that remote-id is compatible with the remote-id format of HP manufacturer.

Default:


default.

Command Mode:

Global mode


Usage Guide:

The default remote-id format defined as below:

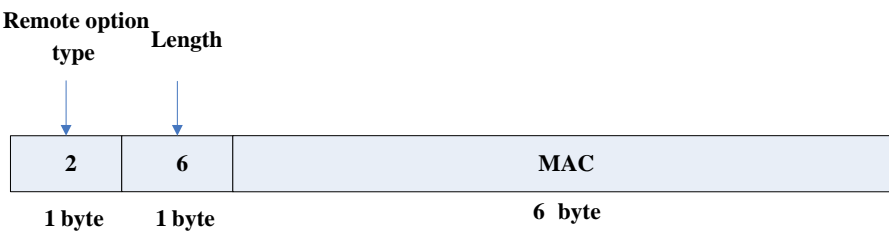

MAC means VLAN MAC address.

The compatible remote-id format with HP manufacturer defined as below:

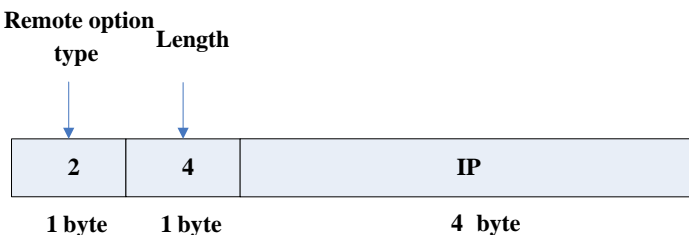

IP means the primary IP address of layer 3 interface where DHCP packets from.

Example:

Set remote-id of Relay Agent option82 as the compatible format with HP manufacturer.

```
Switch(config)#ip dhcp relay information option remote-id format vs-hp
```

32.6 ip dhcp relay information option self-defined remote-id

Command:

```
ip dhcp relay information option self-defined remote-id {hostname | mac | string WORD}
```

```
no ip dhcp relay information option self-defined remote-id
```

Function:

Set creation method for option82, users can define the parameters of remote-id suboption by themselves.

Parameters:

WORD the defined character string of remote-id by themselves, the maximum length is 64.

Command Mode:

Global Mode

Default:

Using standard method.

Usage Guide:

After configure this command, if users do not configure remote-id on interface, it will create remote-id suboption for option82 according to self-defined method. For mac, use the format such as 00-02-d1-2e-3a-0d if it is filled to packets with ascii format, but hex format occupies 6 bytes. Each option will be filled to packets according to the configured order of the commands and divide them with delimiter (delimiter is **ip dhcp relay information option delimiter** configuration).

Example:

Set self-defined method and character string of remote-id suboption are hostname and abc respectively for option82.

```
Switch(config)#ip dhcp relay information option self-defined remote-id hostname string abc
```

32.7 ip dhcp relay information option self-defined remote-id format

Command:

```
ip dhcp relay information option self-defined remote-id format [ascii | hex]
```

Function:

Set self-defined format of remote-id for relay option82.

Parameters:

None.

Command Mode:

Global Mode

Default:

ascii.

Usage Guide:

self-defined format use ip dhcp relay information option type self-defined remote-id to create remote-id format.

Example:

Set self-defined method of remote-id as hex for relay option82.

```
Switch(config)# ip dhcp relay information option self-defined remote-id format hex
```

32.8 ip dhcp relay information option self-defined subscriber-id

Command:

```
ip dhcp relay information option self-defined subscriber-id {vlan | port | id (switch-id (mac | hostname)| remote-mac)| string WORD }  
no ip dhcp relay information option self-defined subscriber-id
```

Function:

Set creation method for option82, users can define the parameters of circuit-id suboption by themselves.

Parameters:

WORD the defined character string of circuit-id by themselves, the maximum length is 64.

Command Mode:

Global Mode

Default:

Using standard method.

Usage Guide:

After configure this command, if users do not configure circuit-id on interface, it will create circuit-id suboption for option82 according to self-defined method. Self-defined format of circuit-id: if self-defined format is ascii, the filled format of vlan such as "Vlan2", the format of port such as "Ethernet1/1", the format of mac and remote-mac such as "00-02-d1-2e-3a-0d". If self-defined format is hex, the filled format of vlan occupies 2 bytes, port occupies 4 bytes, a byte means slot (for chassis switch, it means slot ID, for box switch, it is 1), a byte means Module (the default is 0), two bytes means port ID beginning from 1, mac and remote-mac occupy 6 bytes. Each option will be filled to packets according to the configured order of the commands and divide them with delimiter (delimiter is **ip dhcp relay information option delimiter** configuration).

Example:

Set self-defined method of circuit-id suboption as port, mac for option82.

```
Switch(config)# ip dhcp relay information option self-defined subscriber-id port id switch-id mac
```

32.9 ip dhcp relay information option self-defined subscriber-id format

Command:

```
ip dhcp relay information option self-defined subscriber-id format [ascii | hex]
```

Function:

Set self-defined format of circuit-id for relay option82.

Parameters:

None.

Command Mode:

Global Mode

Default:

ascii.

Usage Guide:

self-defined format use ip dhcp relay information option type self-defined subscriber-id to create circuit-id format.

Example:

Set self-defined format of circuit-id as hex for relay option82.

```
Switch(config)# ip dhcp relay information option self-defined subscriber-id format hex
```

32.10 ip dhcp relay information option subscriber-id

Command:

```
ip dhcp relay information option subscriber-id {standard | <circuit-id>}
```

```
no ip dhcp relay information option subscriber-id
```

Function:

This command is used to set the format of option82 sub-option1(Circuit ID option) added to the DHCP request messages from interface, **standard** means the standard vlan name and physical port name format, like "Vlan2+Ethernet1/12", **<circuit-id>** is the circuit-id contents of option82 specified by users, which is a string no longer than 64 characters. The " **no ip dhcp relay information option subscriber-id**" command will set the format of added option82 sub-option1 (Circuit ID option) as standard format.

Parameters:

None

Command Mode:

Interface configuration mode.

Default Settings:

The system uses the standard format to set the circuit-id of option 82 by default.

User Guide:

Because the option 82 information added for the switch should cooperate with the third party DHCP server, if the standard circuit-id format of the switch cannot satisfy the server's request, this method will be provided for users to specify the contents of circuit-id according to the situation of the server.

Example:

Set the sub-option circuit-id of DHCP option82 as foobar.

```
Switch(config-if-vlan1)#ip dhcp relay information option subscriber-id foobar
```

32.11 ip dhcp relay information option subscriber-id format

Command:

```
ip dhcp relay information option subscriber-id format {hex | acsii | vs-hp}
```

Function:

Set subscriber-id format of Relay Agent option82.

Parameters:

hex means that subscriber-id is VLAN and port information with hexadecimal format, acsii means that subscriber-id is VLAN and port information with ACSII format. vs-hp means that subscriber-id is compatible with the format of HP manufacturer.

Command Mode:

Global mode

Default:

ascii.

User Guide:

VLAN and port information with ASCII format, such as "Vlan1+Ethernet1/11", VLAN and port information with hexadecimal format defined as below:

Suboption type	Length	Circuit ID type	Length								
↓	↓	↓	↓	1	8	0	6	VLAN	Slot	Module	Port
				1 byte	1 byte	1 byte	1 byte	2 byte	1 byte	1 byte	2 byte

VLAN field fills in VLAN ID. For chassis switch, Slot means slot number, for box switch, Slot is 1; default Module is 0; Port means port number which begins from 1.

The compatible subscriber-id format with HP manufacturer defined as below:

Suboption type	Length	
↓	↓	Port
1	2	Port
1 byte	1 byte	2 byte

Port means port number which begins from 1.

Example:

Set subscriber-id format of Relay Agent option82 as hexadecimal format.
Switch(config)#ip dhcp relay information option subscriber-id format hex

32.12 ip dhcp relay information policy

Command:

```
ip dhcp relay information policy {drop | keep | replace}
no ip dhcp relay information policy
```

Function:

This command is used to set the retransmitting policy of the system for the received DHCP request message which contains option82. The drop mode means that if the message has option82, then the system will drop it without processing; keep mode means that the system will keep the original option82 segment in the message, and forward it to the server to process; replace mode means that the system will replace the option 82 segment in the existing message with its own option 82, and forward the message to the server to process. The “no ip dhcp relay information policy” will set the retransmitting policy of the option 82 DHCP message as “replace”.

Parameters:

None

Command Mode:

Interface configuration mode.

Default Settings:

The system uses replace mode to replace the option 82 segment in the existing message with its own option 82.

User Guide:

Since the DHCP client messages might go through several DHCP Relay Agents when passed to the DHCP server, the latter Relay Agents on the path should set policies to decide how to process the option82 added by Relay Agents before them. The selection of option 82 retransmitting policies should take the configuration policy of the DHCP server into account.

Example:

Set the retransmitting policy of DHCP messages option 82 as keep.
Switch(Config-if-Vlan1)# ip dhcp relay information policy keep

32.13 ip dhcp server relay information enable

Command:

```
ip dhcp server relay information enable
no ip dhcp server relay information enable
```

Function:

This command is used to enable the switch DHCP server to identify option82. The “no ip dhcp server relay information enable” command will make the server ignore the option 82.

Parameters:

None

Command Mode:

Global configuration mode

Default Setting:

The system disable the option82 identifying function by default.

User Guide:

If the users want the switch DHCP server to identify option82 and return option 82 information in the reply message, this command needs to be set, or, the switch DHCP server will ignore the option82.

Example:

```
Set the DHCP server to support option82
Switch(Config-if-Vlan1)# ip dhcp server relay information enable
```

32.14 show ip dhcp relay information option

Command:

```
show ip dhcp relay information option
```

Function:

This command will display the state information of the DHCP option 82 in the system, including option82 enabling switch, the interface retransmitting policy, the circuit ID mode and the switch DHCP server option82 enabling switch.

Parameters:

None.

Command Mode:

Admin and Global Configuration Mode.

User Guide:

Use this command to check the state information of Relay Agent option82 during operation.

Example:

```
Switch#show ip dhcp relay information option
ip dhcp server relay information option(i.e. option 82) is disabled
ip dhcp relay information option(i.e. option 82) is enabled
Vlan2:
    ip dhcp relay information policy keep
    ip dhcp relay information option subscriber-id standard
Vlan3:
    ip dhcp relay information policy replace
    ip dhcp relay information option subscriber-id foobar
```

Chapter 33 IPv4 Multicast Protocol

33.1 option 43 ascii LINE

Command:

option 43 ascii LINE
no option 43

Function:

Configure option 43 character string with ascii format in ip dhcp pool mode. The no command deletes the configured option 43.

Parameter:

LINE: The configured option 43 character string with ascii format, its length range between 1 and 255.

Default:

No option 43 character string is configured.

Command Mode:

ip dhcp pool mode

Usage Guide:

None.

Example:

Configure option 43 with ascii format to be "AP 1000".

```
switch(config)#ip dhcp pool a
```

```
switch (dhcp-a-config)#option 43 ascii AP 1000
```

33.2 option 43 hex WORD

Command:

option 43 hex WORD
no option 43

Function:

Configure option 43 character string with hex format in ip dhcp pool mode. The no command deletes the configured option 43.

Parameter:

WORD: The configured option 43 character string with hex format, such as a1241b.

Default:

No option 43 is configured.

Command Mode:

ip dhcp pool mode

Usage Guide:

When using hex method to configure option 43, the string needs to be written according to TLV (Type-Length-Value) format. For example, issue ip address of 10.1.1.1 through option 43, then the hex string here should be 01040A010101; Type=0x01, it means IP address; Length=0x04, it means the length of IP address is 4 Bytes; Value=0x0A010101, it means the hexadecimal format of 10.1.1.1.

Example:

Configure option 43 with hex format to be "01040a010101".

```
switch(config)#ip dhcp pool a
```

```
switch (dhcp-a-config)#option 43 hex 01040a010101
```

33.3 option 43 ip A.B.C.D

Command:

option 43 ip A.B.C.D
no option 43

Function:

Configure option 43 character string with IP format in ip dhcp pool mode. The no command deletes the configured option 43.

Parameter:

A.B.C.D: The configured option 43 with IP format, such as 192.168.1.1.

Default:

No option 43 is configured.

Command Mode:

ip dhcp pool mode

Usage Guide:

Using this command to configure option 43, such as "192.168.1.1", then option 43 filled in packets is "C0A80101".

Example:

Configure option 43 with IP format to be "192.168.1.1".

```
switch(config)#ip dhcp pool a
```

```
switch (dhcp-a-config)#option 43 ip 192.168.1.1
```

33.4 option 60 ascii LINE

Command:

option 60 ascii LINE

no option 60

Function:

Configure option 60 character string with ascii format in ip dhcp pool mode. The no command deletes the configured option 60.

Parameter:

LINE: The configured option 60 character string with ascii format, its length range between 1 and 255.

Default:

No option 60 character string is configured.

Command Mode:

ip dhcp pool mode

Usage Guide:

None.

Example:

Configure option 60 with ascii format to be "AP 1000".

```
switch(config)#ip dhcp pool a
```

```
switch (dhcp-a-config)#option 60 ascii AP 1000
```

33.5 option 60 hex WORD

Command:

option 60 hex WORD

no option 60

Function:

Configure option 60 character string with hex format in ip dhcp pool mode. The no command deletes the configured option 60.

Parameter:

WORD: The configured option 60 character string with hex format, such as a1241b.

Default:

No option 60 is configured.

Command Mode:

ip dhcp pool mode

Usage Guide:

None.

Example:

Configure option 60 with hex format to be "41502031303030".

```
switch(config)#ip dhcp pool a
```

```
switch(dhcp-a-config)#option 60 hex 41502031303030
```

33.6 option 60 ip A.B.C.D

Command:

```
option 60 ip A.B.C.D  
no option 60
```

Function:

Configure option 60 character string with IP format in ip dhcp pool mode. The no command deletes the configured option 60.

Parameter:

A.B.C.D: The configured option 60 with IP format, such as 192.168.1.1.

Default:

No option 60 is configured.

Command Mode:

```
ip dhcp pool mode
```

Usage Guide:

Using this command to configure option 60, such as "192.168.1.1", option 60 of packets matched with the configured option 60 is "C0A80101".

Example:

Configure option 60 with IP format to be "192.168.1.1".

```
switch(config)#ip dhcp pool a
```

```
switch (dhcp-a-config)#option 60 ip 192.168.1.1
```

Chapter 34 Commands for DHCPv6 option37, 38

34.1 Commands for DHCPv6 option37, 38

34.1.1 address range

Command:

address range <start-ip> <end-ip>

no address range <start-ip> <end-ip>

Function:

This command is used to set address range for a DHCPv6 class in DHCPv6 address pool configuration mode, the no command is used to remove the address range. The prefix/plen form is not supported.

Parameters:

start-ip, defines the start address of the address pool

end-ip, defines the end address of the address pool

Default:

None.

Command Mode:

DHCPv6 address pool class configuration mode

Usage Guide:

It is necessary to check the address range assigned to class in order to make sure that it doesn't exceed the address range of relevant address pool. A class is assigned a single address range and the address range assigned to different class in the same address pool can overlap. If you do not use this command to assign address range for a DHCPv6 class, then the range for it will be the whole subnet of the address pool by default.

Example:

Associate a DHCPv6 class named CLASS1 to dhcpv6 pool 1 and assign the address range from 2001:da8:100:1::2 to 2001:da8:100:1::30 for CLASS1.

```
Switch(Config)#ipv6 dhcp pool 1
```

```
Switch(dhcp-1-config)#class CLASS1
```

```
Switch(dhcp-1-class-CLASS1-config)#address range 2001:da8:100:1::2 2001:da8:100:1::30
```

34.1.2 class

Command:

```
class <class-name>
no class <class-name>
```

Function:

This command associates class to address pool in DHCPv6 address pool configuration mode and enters class configuration mode in address pool. Use the no command to remove the link.

Parameters:

class-name, the name of DHCPv6 class.

Default:

None.

Command Mode:

DHCPv6 address pool configuration mode

Usage Guide:

It is recommended to define this class first using global command of IPv6 DHCP class. No class will be created if you input a class name which doesn't exist.

Example:

Associate the DHCPv6 class named CLASS1 to dhcpv6 pool 1.

```
Switch(Config)#ipv6 dhcp pool 1
```

```
Switch(dhcp-1-config)#class CLASS1
```

34.1.3 ipv6 dhcp class

Command:

```
ipv6 dhcp class <class-name>
no ipv6 dhcp class <class-name>
```

Function:

This command defines a DHCPv6 class and enters DHCPv6 class configuration mode, the no operation of this command removes this DHCPv6 class.

Parameters:

class-name, the name of DHCPv6 class which is a string with a length of less than 32

Default:

None.

Command Mode:

Global configuration mode

Usage Guide:

Configure a group of option 37 or option 38, or configure option 37 and option 38 simultaneously in a DHCPv6 class.

This command can be used when the server supports DHCPv6 class only.

Example:

Define a DHCPv6 class named CLASS1.

```
Switch(Config)# ipv6 dhcp class CLASS1
```

34.1.4 ipv6 dhcp relay remote-id

Command:

```
ipv6 dhcp relay remote-id <remote-id>  
no ipv6 dhcp relay remote-id
```

Function:

This command is used to set the form of adding option 37 in received DHCPv6 request packets, of which <remote-id> is the remote-id in user-defined option 37 and it is a string with a length of less than 128. The no operation of this command restores remote-id in option 37 to enterprise-number together with vlan MAC address.

Parameters:

remote-id, user-defined content of option 37.

Default:

Using vlan MAC address as remote-id content by default such as "00-01-ac-12-23" with '-' hyphen.

Command Mode:

Interface configuration mode

Usage Guide:

Because the option 37 information added by switch may associate with third-party DHCPv6 servers, users can specify the remote-id content based on server condition when default remote-id of the switch cannot satisfy the demand of server. The enterprise-number together with vlan MAC address is used as the remote-id by default.

Example:

Enable abc as the remote-id of DHCPv6 option 37.

```
Switch(Config-if-vlan1)# ipv6 dhcp relay remote-id abc
```

34.1.5 ipv6 dhcp relay remote-id option

Command:

```
ipv6 dhcp relay remote-id option  
no ipv6 dhcp relay remote-id option
```

Function:

This command enables switch relay to support the option 37, the no form of this command disables it.

Parameters:

None.

Default:

Disable the relay option 37.

Command Mode:

Global configuration mode

Usage Guide:

Only after this command is configured, DHCPv6 relay agent can add option 37 in DHCPv6 request packets before sending it to server or next relay agent. Make sure that DHCPv6 service has been enabled before execute this command.

Example:

Enable the switch relay to support option 37.

```
Switch(Config)#service dhcpv6
```

```
Switch(Config)#ipv6 dhcp relay remote-id option
```

34.1.6 ipv6 dhcp relay subscriber-id

Command:

```
ipv6 dhcp relay subscriber-id <subscriber-id>  
no ipv6 dhcp relay subscriber-id
```

Function:

This command is used to set the form of adding option 38 in received DHCPv6 request packets, of which <subscriber-id> is the subscriber-id in user-defined option 38 and it is a string with a length of less than 128. The no operation of this command restores subscriber-id in option 38 to vlan name together with port name such as "Vlan2+Ethernet1/2".

Parameters:

subscriber-id, user-defined content of option 38

Default:

Set subscriber-id in option 38 to vlan name together with port name.

Command Mode:

Interface configuration mode

Usage Guide:

Because the option 38 information added by switch may associate with third-party DHCPv6 servers, users can specify the subscriber-id content based on server condition when standard subscriber-id of the switch cannot satisfy the demand of server. The vlan name together with physical port name is used as the subscriber-id in option 38 by default.

Example:

```
Enable abc as the subscriber-id of DHCPv6 option 38.  
Switch(Config-if-vlan1)# ipv6 dhcp relay subscriber-id abc
```

34.1.7 ipv6 dhcp relay subscriber-id option

Command:

```
ipv6 dhcp relay subscriber-id option  
no ipv6 dhcp relay subscriber-id option
```

Function:

This command enables switch relay to support the option 38, the no form of this command disables it.

Parameters:

None.

Default:

Disable the relay option 38.

Command Mode:

Global configuration mode

Usage Guide:

Only after this command is configured, DHCPv6 relay agent can add option 38 in DHCPv6 request packets before sending it to server or next relay agent. Make sure that DHCPv6 service has been enabled before execute this command. The option 38 of switch relay is disabled by default.

Example:

Enable the switch relay to support option 38.

```
Switch(Config)#service dhcpv6
```

```
Switch(Config)#ipv6 dhcp relay subscriber-id option
```

34.1.8 ipv6 dhcp relay subscriber-id select delimiter

Command:

```
ipv6 dhcp relay subscriber-id select (sp | sv | pv | spv) delimiter WORD (delimiter WORD )
```

```
no ipv6 dhcp relay subscriber-id select delimiter
```

Function:

Configures user configuration options to generate subscriber-id. The no form of this command restores to its original default configuration, i.e. vlan name together with port name.

Parameters:

(**sp** | **sv** | **pv** | **spv**): a selection in combinations of slot, port and vlan, among which **sp** represents slot and port, **sv** represents slot and vlan, **pv** represents port and vlan, and **spv** represents slot, port and vlan.

WORD: the delimiter between slot, port and vlan which ranges among (#|.|.|:|/|space). Note that there're two **delimiter WORDs** here, of which the former is the delimiter between slot and port and the latter is the one between port and vlan.

Default:

Null.

Command Mode:

Global configuration mode

Usage Guide:

The command has no effect on ports with self-defined subscriber-id. If user redefines the subscriber-id of the port after using the command, the user-defined one prevails. This configuration is null by default.

Example:

```
Switch(config)# ipv6 dhcp relay subscriber-id select sp delimiter #
```

34.1.9 ipv6 dhcp server remote-id option

Command:

```
ipv6 dhcp server remote-id option  
no ipv6 dhcp server remote-id option
```

Function:

This command enables DHCPv6 server to support the identification of option 37, the no form of this command disables it.

Parameters:

None.

Default:

Do not support option 37.

Command Mode:

Global configuration mode

Usage Guide:

Configure this command if option 37 options is expected to be identified and processed by DHCPv6 server, otherwise they will be ignored. Option 37 is not supported by default.

Example:

Enable the DHCPv6 server to support option 37.
Switch(Config)# ipv6 dhcp server remote-id option

34.1.10 ipv6 dhcp server select relay-forw

Command:

```
ipv6 dhcp server select relay-forw  
no ipv6 dhcp server select relay-forw
```

Function:

This command enables the DHCPv6 server to support selections when multiple option 37 or option 38 options exist and the option 37 and option 38 of relay-forw in the innermost layer are selected. The no operation of it restores the default configuration, i.e. selecting option 37 and option 38 of the original packets.

Parameters:

None.

Default:

Selecting option 37 and option 38 of the original packets.

Command Mode:

Interface configuration mode

Usage Guide:

Make sure that the server has been enabled to support option 37 and option 38 before use this command. The system selects option 37 and option 38 of the original packets by default.

Example:

Configure that the vlan1 interface of DHCPv6 server selects option 37 and option 38 of relay-forw in the innermost layer.
Switch(Config-if-vlan1)# ipv6 dhcp server select relay-forw

34.1.11 ipv6 dhcp server subscriber-id option

Command:

```
ipv6 dhcp server subscriber-id option
no ipv6 dhcp server subscriber-id option
```

Function:

This command enables DHCPv6 server to support the identification of option 38, the no operation of this command disables it.

Parameters:

None.

Default:

Do not support option 38.

Command Mode:

Global configuration mode

Usage Guide:

Configure this command if option 38 is expected to be identified and processed by DHCPv6 server, otherwise they will be ignored. option 38 is not supported by default.

Example:

```
Enable DHCPv6 server to support option 38.
Switch(Config)# ipv6 dhcp server subscriber-id option
```

34.1.12 ipv6 dhcp snooping remote-id

Command:

```
ipv6 dhcp snooping remote-id <remote-id>
no ipv6 dhcp snooping remote-id
```

Function:

This command is used to set the form of adding option 37 in received DHCPv6 request packets, of which <remote-id> is the content of remote-id in user-defined option 37 and it is a string with a length of less than 128. The no form of this command restores remote-id in option 37 to enterprise-number together with vlan MAC address.

Parameters:

remote-id, user-defined content of option 37.

Default:

Using vlan MAC address as remote-id content by default such as "00-01-ac-12-23" with '-' hyphen.

Command Mode:

Port mode

Usage Guide:

Because option 37 information added by switch may associate with third-party DHCPv6 servers, users can specify remote-id content based on server condition when standard remote-id of the switch cannot satisfy the demand of server. The enterprise-number together with vlan MAC address is used as the remote-id by default.

Example:

Enable abc as remote-id of DHCPv6 option 37.

```
Switch(Config-if-Ethernet1/1)# ipv6 dhcp snooping remote-id abc
```

34.1.13 ipv6 dhcp snooping remote-id option

Command:

```
ipv6 dhcp snooping remote-id option  
no ipv6 dhcp snooping remote-id option
```

Function:

This command enables DHCPv6 SNOOPING to support option 37, the no form of this command disables it.

Parameters:

None.

Default:

Disable.

Command Mode:

Global configuration mode

Usage Guide:

Only after this command is configured, DHCPv6 SNOOPING can add option 37 in DHCPv6 packets before sending it to server or relay agent. Make sure that DHCPv6 SNOOPING has been enabled before execute this command. The system disables option 37 of DHCPv6 SNOOPING by default.

Example:

```
Enable option 37 in DHCPv6 SNOOPING.  
Switch(Config)#ipv6 dhcp snooping enable  
Switch(Config)#ipv6 dhcp snooping remote-id option
```

34.1.14 ipv6 dhcp snooping remote-id policy

Command:

```
ipv6 dhcp snooping remote-id policy {drop | keep | replace}  
no ipv6 dhcp snooping remote-id policy
```

Function:

This command is used to configure the reforward policy of the system when receiving DHCPv6 packets with option 37, among which the **drop** mode means that the system simply discards it with option 37, **keep** mode means that the system keeps option 37 unchanged and forwards the packets to the server and **replace** mode means that the system replaces option 37 of current packets with its own before forwarding it to the server. The no operation of this command sets reforward policy of DHCPv6 packets with option 37 as replace.

Parameters:

None.

Default:

Using replace mode to replace option 37 of current packets with system's own.

Command Mode:

Global configuration mode

Usage Guide:

Since DHCPv6 client packets may already include option 37 information, corresponding processing policy of DHCPv6 SNOOPING is required to develop. If the forwarding policy is set as **replace**, option 37 has to be enabled in advance. Use replace mode to replace option 37 of current packets with system's own by default.

Example:

Configure the reforward policy of DHCPv6 packets with option 37 as keep for DHCPv6 SNOOPING.

```
Switch(Config)# ipv6 dhcp snooping remote-id policy keep
```

34.1.15 ipv6 dhcp snooping subscriber-id

Command:

```
ipv6 dhcp snooping subscriber-id <subscriber-id>  
no ipv6 dhcp snooping subscriber-id
```

Function:

This command is used to set the form of adding option 38 in received DHCPv6 request packets, of which <subscriber-id> is the content of subscriber-id in user-defined option 38 and it is a string with a length of less than 128. The no operation of this command restores subscriber-id in option 38 to vlan name together with port name such as "Vlan2+Ethernet1/2".

Parameters:

subscriber-id, user-defined content of option 38

Default:

Set subscriber-id in option 38 to vlan name together with port name.

Command Mode:

Port mode

Usage Guide:

Because option 38 information added by switch may associate with third-party DHCPv6 servers, users can specify subscriber-id content based on server condition when standard subscriber-id of the switch cannot satisfy the demand of server. The vlan name together with physical port name is used as subscriber-id in option 38 by default.

Example:

Enable abc as subscriber-id of DHCPv6 option 38.

```
Switch(Config-if-Ethernet1/1)#ipv6 dhcp snooping subscriber-id abc
```

34.1.16 ipv6 dhcp snooping subscriber-id option

Command:

```
ipv6 dhcp snooping subscriber-id option  
no ipv6 dhcp snooping subscriber-id option
```

Function:

This command enables DHCPv6 SNOOPING to support option 38, the no form of this command disables it.

Parameters:

None.

Default:

Disable option 38 of DHCPv6 SNOOPING.

Command Mode:

Global configuration mode

Usage Guide:

Only after this command is configured, DHCPv6 SNOOPING can add option 38 in DHCPv6 packets before sending it to server or relay agent. Make sure that DHCPv6 SNOOPING has been enabled before executing this command.

The system disables option 38 of DHCPv6 SNOOPING by default.

Example:

```
Enable option 38 in DHCPv6 SNOOPING.  
Switch(Config)#ipv6 dhcp snooping enable  
Switch(Config)#ipv6 dhcp snooping subscriber-id option
```

34.1.17 ipv6 dhcp snooping subscriber-id policy

Command:

```
ipv6 dhcp snooping subscriber-id policy {drop | keep | replace}  
no ipv6 dhcp snooping subscriber-id policy
```

Function:

This command is used to set the reforward policy of the system when receiving DHCPv6 packets with option 38, among which the **drop** mode means that the system simply discards it with option 38, **keep** mode means that the system keeps option 38 unchanged and forwards the packets to the server and **replace** mode means that the system replaces option 38 of current packets with its own before forwarding it to the server. The no operation of this command sets the reforward policy of DHCPv6 packets with option 38 as replace.

Parameters:

None.

Default:

Using replace mode to replace option 38 of current packets with system's own.

Command Mode:

Global configuration mode

Usage Guide:

Since DHCPv6 client packets may already include option 38 information, corresponding processing policy of DHCPv6 SNOOPING is requested to develop. If the reforward policy is set as **replace**, option 38 has to be enabled in advance. The system disables option 38 of DHCPv6 SNOOPING by default.

Example:

Set the reforward policy of DHCPv6 packets with option 38 as keep for DHCPv6 SNOOPING.

```
Switch(Config)# ipv6 dhcp snooping subscriber-id policy keep.
```

34.1.18 ipv6 dhcp snooping subscriber-id select delimiter

Command:

```
ipv6 dhcp snooping subscriber-id select (sp | sv | pv | spv) delimiter WORD (delimiter WORD | )  
no ipv6 dhcp snooping subscriber-id select delimiter
```

Function:

Configure user configuration options to generate subscriber-id. The no form of this command restores to its original default configuration, i.e. vlan name together with port name.

Parameters:

(**sp** | **sv** | **pv** | **spv**), a selection from combinations of slot, port and vlan, among which **sp** represents slot and port, **sv** represents slot and vlan, **pv** represents port and vlan, and **spv** represents slot, port and vlan.

WORD, the delimiter between slot, port and vlan which ranges among (#|.|.|:|/|space). Note that there're two delimiter WORDs here, of which the former is the delimiter between slot and port while the latter is that between port and vlan.

Default:

Null.

Command Mode:

Global configuration mode

Usage Guide:

This command has no effect on ports with self-defined subscriber-id. If a user redefines subscriber-id of the port after configuring the command, the user-defined one prevails. This configuration is null by default.

Example:

```
Switch(config)# ipv6 dhcp snooping subscriber-id select sv delimiter #
```

34.1.19 ipv6 dhcp use class

Command:

```
ipv6 dhcp use class
```

```
no ipv6 dhcp use class
```

Function:

This command enables DHCPv6 server to support DHCPv6 class during address assignment, the no operation of this command disables it without removing the relative DHCPv6 class information that has been configured.

Parameters:

None.

Default:

DHCPv6 server supports DHCPv6 class during address assignment.

Command Mode:

Global configuration mode

Usage Guide:

By default, DHCPv6 servers support DHCPv6 class during address assignment and the no form of this command doesn't remove DHCPv6 class information that has been configured. Make sure that DHCPv6 service has been enabled before using this command. DHCPv6 server supports DHCPv6 class during address assignment by default.

Example:

Configure DHCPv6 server to support DHCPv6 class during address assignment.

```
Switch(Config)# ipv6 dhcp use class
```

34.1.20 remote-id subscriber-id

Command:

```
{remote-id [*] <remote-id> [*] | subscriber-id [*] <subscriber-id> [*]}  
no {remote-id [*] <remote-id> [*] | subscriber-id [*] <subscriber-id> [*]}
```

Function:

This command configures option 37 and option 38 that match the class in IPv6 DHCP class configuration mode.

Parameters:

<remote-id>, a string with a length ranging from 1 to 128 bytes is used to match remote-id in option 37.

<subscriber-id>, a string with a length ranging from 1 to 128 bytes is used to match subscriber-id in option 38.

[*], match zero or more characters.

Default:

None.

Command Mode:

IPv6 DHCP Class configuration mode

Usage Guide:

This command configures a mode which matches with the already-defined DHCPv6 class, and a DHCPv6 class may configure multiple commands. If this command is ignored and no mode configured in IPv6 DHCP Class mode, any remote-id or subscriber-id is considered to match with the DHCPv6 class, however, remote-id or subscriber-id must exist in DHCPv6 packet.

Example:

Configure some remote-id or subscriber-id belonging to DHCPv6 class named CLASS1.

```
Switch(Config)# ipv6 dhcp class CLASS1
```

```
Switch(Dhcpv6-class)#remote-id abc* subscriber-id bcd*
```

```
Switch(Dhcpv6-class)#remote-id edf*
```

```
Switch(Dhcpv6-class)#subscriber *mmn
```

34.2 Commands for Monitoring and Debugging

34.2.1 debug ipv6 dhcp detail

Command:

```
debug ipv6 dhcp detail
```

Function:

Display the debug about detailed content of various packets sent and received by DHCPv6. If packets with option 37 and option 38, they will also be displayed. This command is applied in the server side as well as the relay side.

Parameters:

None.

Command Mode:

Admin mode

Usage Guide:

Enable/disable the display of detailed debug about packets sent and received by DHCPv6.

Example:

```
Switch# debug ipv6 dhcp detail
```

```
%Jan 01 01:38:45 2006 DHCPv6 DETAILS: contents of SOLICIT packet
```

```
%Jan 01 01:38:45 2006      transaction-ID: 0x00b2d47c
```

```
%Jan 01 01:38:45 2006      elapsed time option(8), option-len 2
```

```
%Jan 01 01:38:45 2006      elapsed time: 0
```

```
%Jan 01 01:38:45 2006      client ID option(1), option-len 14
```

```
%Jan 01 01:38:45 2006      DUID: 00:01:00:01:0f:55:82:4f:00:19:e0:3f:d1:83
```

```
%Jan 01 01:38:45 2006      identity association option(3), option-len 12
```

```
%Jan 01 01:38:45 2006      IANA: 0x0e001d92, T1 0, T2 0
```

```
%Jan 01 01:38:45 2006 vendor class option(16), option-len 14
%Jan 01 01:38:45 2006 enterprise number : 311
%Jan 01 01:38:45 2006 option request option(6), option-len 6
%Jan 01 01:38:45 2006 requested-option: domain search list
%Jan 01 01:38:45 2006 requested-option: DNS server list
%Jan 01 01:38:45 2006 requested-option: vendor specific info
%Jan 01 01:38:45 2006 remote-id option(37), option-len 14
%Jan 01 01:38:45 2006 remote-id : 0x0a0b0c
%Jan 01 01:38:45 2006 subscriber-id option(38), option-len 16
%Jan 01 01:38:45 2006 subscriber-id : 0x0a0b0c0d
```

34.2.2 debug ipv6 dhcp relay packet

Command:

```
debug ip dhcp relay packet
```

Function:

Display the information of relay packet processing.

Parameters:

None.

Command Mode:

Admin mode

Usage Guide:

This command is used to display the process of relay packet processed by relay agent together with the action information of option 37 and option 38.

Example:

```
Switch# debug ip dhcpv6 relay packet
%May 19 16:45:34 2010 DHCPv6 RELAY PACKET: received msg0 from <fe80::211:22ff:fe33:4455> on <Vlan8>
%May 19 16:45:34 2010 DHCPv6 RELAY PACKET: add subscriber-id option "Vlan8+Ethernet1/12"
```

34.2.3 debug ipv6 dhcp snooping packet

Command:

```
debug ipv6 dhcp snooping packet
```

Function:

Debug the packets of DHCPv6 SNOOPING. Corresponding information will also be displayed when adding or deleting option 37 and option 38.

Parameters:

None.

Command Mode:

Admin mode

Usage Guide:

Enable/disable the information of DHCPv6 packets processed by DHCPv6 Snooping, including the type of received packet, source MAC and destination MAC, client DUID, i.e. the client identification, IA address, preferred lifetime, valid lifetime, and packet discard and so on.

Example:

```
switch#debug ipv6 dhcp snooping packet
dhcpv6 snooping packet debug is on
switch#%Jan 05 00:26:40 2006 DHCP6SNP EVENT: Parse packet SOLICIT from fe80::200:ff:fe00:1
src MAC 00-00-00-00-00-01 interface Ethernet1/23 vlan 24
%Jan 05 00:26:40 2006 DHCP6SNP PACKET: Receive DHCPv6 packet SOLICIT from fe80::200:ff:fe00:1
src MAC 00-00-00-00-00-01, dst MAC 33-33-00-01-00-02,
interface Ethernet1/23 vlan 24,
transaction-ID 6137412, smac host flag 0, dmac host flag 0
%Jan 05 00:26:40 2006 DHCP6SNP PACKET: Forward packet SOLICIT (protocol 0x37)
%Jan 05 00:26:40 2006 DHCP6SNP PACKET: to vlan 24 except port Ethernet1/23 (designPort flag 0)
%Jan 05 00:26:40 2006 DHCP6SNP PACKET: and return packet to network stack
switch#
```

34.2.4 show ipv6 dhcp relay option

Command:

```
show ipv6 dhcp relay option
```

Function:

Display the configuration of system relay agent, including the enable switch for option 37 and option 38.

Parameters:

None.

Command Mode:

Admin mode

Usage Guide:

Use this command to check relay agents' configuration status for option 37 and option 38.

Example:

```
Switch#show ipv6 dhcp relay option
remote-id option enable
subscriber-id option enable
Interface Vlan 1: remote-id option configure "abc"
```

34.2.5 show ipv6 dhcp snooping option

Command:

```
show ipv6 dhcp snooping option
```

Function:

Display the configuration information of system snooping, including the enable switch for option 37 and option 38.

Parameters:

None.

Command Mode:

Admin mode

Usage Guide:

Use this command to check snooping configuration status for option 37 and option 38.

Example:

```
Switch#show ipv6 dhcp snooping option
```

```
remote-id option enable
```

```
subscriber-id option enable
```

```
The slot port vlan select option is : port and vlan
```

```
The delimiter is : #
```

Chapter 35 Commands for DHCP Snooping

35.1 debug ip dhcp snooping binding

Command:

debug ip dhcp snooping binding
no debug ip dhcp snooping binding

Function:

This command is use to enable the DHCP SNOOPING debug switch to debug the state of binding data of DHCP SNOOPING.

Command Mode:

Admin mode

Usage Guide:

This command is mainly used to debug the state of DHCP SNOOPING task when it adds ARP list entries, dot1x users and trusted user list entries according to binding data.

35.2 debug ip dhcp snooping event

Command:

debug ip dhcp snooping event
no debug ip dhcp snooping event

Function:

This command is use to enable the DHCP SNOOPING debug switch to debug the state of DHCP SNOOPING task.

Command Mode:

Admin mode.

Usage Guide:

This command is mainly used to debug the state of DHCP SNOOPING task and available of outputting the state of checking binding data and executing port action and so on.

35.3 debug ip dhcp snooping packet

Command:

debug ip dhcp snooping packet
no debug ip dhcp snooping packet

Function:

This command is used to enable the DHCP SNOOPING debug switch to debug the message-processing procedure of DHCP SNOOPING.

Command Mode:

Admin Mode.

Usage Guide:

The debug information that the DHCP SNOOPING is processing messages, including every step in the message-processing procedure: adding alarm information, adding binding information, transmitting DHCP messages, adding/peeling option 82 and etc.

35.4 debug ip dhcp snooping packet interface

Command:

debug ip dhcp snooping packet interface {[ethernet] <InterfaceName>}
no debug ip dhcp snooping packet {[ethernet] <InterfaceName>} **Function:** This command is used to enable the DHCP SNOOPING debug switch to debug the information that DHCP SNOOPING is receiving a packet.

Parameters:

<InterfaceName>: Interface name.

Command Mode:

Admin Mode.

Usage Guide:

The information that DHCP Snooping is receiving messages from a specific port.

35.5 debug ip dhcp snooping update

Command:

debug ip dhcp snooping update
no debug ip dhcp snooping update

Function:

This command is use to enable the DHCP snooping debug switch to debug the communication information between DHCP snooping and helper server.

Command Mode:

Admin Mode.

Usage Guide:

Debug the information of communication messages received and sent by DHCP snooping and helper server.

35.6 enable trustview key

Command:

enable trustview key {0 | 7} <password>
no enable trustview key

Function:

To configure DES encrypted key for private packets, this command is also the switch for the private packets encrypt and hash function enabled or not.

Parameter:

<password> is character string length less than 16, which use as encrypted key. 0 for un-encrypted text for the password, while 7 for encrypted.

Command Mode:

Global Mode.

Default:

Disabled.

Usage Guide:

The switch communicates with the TrustView management system through private protocols. By default these packets are not encrypted. In order to prevent spoofing, it can be configured to encrypt these packets. And at the same time, the same password should be configured on TrustView server.

Example:

Enable encrypt or hash function of private message.

```
Switch(config)# enable trustview key 0 switch
```

35.7 ip dhcp snooping

Command:

```
ip dhcp snooping enable
```

```
no ip dhcp snooping enable
```

Function:

Enable the DHCP Snooping function.

Parameters:

None.

Command Mode:

Global mode.

Default Settings:

DHCP Snooping is disabled by default.

Usage Guide:

When this function is enabled, it will monitor all the DHCP Server packets of non-trusted ports.

Example:

Enable the DHCP Snooping function.

```
switch(config)#ip dhcp snooping enable
```

35.8 ip dhcp snooping action

Command:

```
ip dhcp snooping action {shutdown | blackhole} [recovery <second>]  
no ip dhcp snooping action
```

Function:

Set or delete the automatic defense action of a port.

Parameters:

shutdown: When the port detects a fake DHCP Server, it will be shutdown.

blackhole: When the port detects a fake DHCP Server, the vid and source MAC of the fake packet will be used to block the traffic from this MAC.

recovery: Users can set to recover after the automatic defense action being executed.(no shut ports or delete corresponding blackhole) .

second: Users can set how long after the execution of defense action to recover. The unit is second, and valid range is 10-3600.

Command Mode:

Port mode

Default Settings:

No default defense action.

Usage Guide:

Only when DHCP Snooping is globally enabled, can this command be set. Trusted port will not detect fake DHCP Server, so, will never trigger the corresponding defense action. When a port turns into a trusted port from a non-trusted port, the original defense action of the port will be automatically deleted.

Example:

Set the DHCP Snooping defense action of port ethernet1/1 as setting blackhole, and the recovery time is 30 seconds.

```
switch(config)#interface ethernet 1/1
```

```
switch(Config-Ethernet1/1)#ip dhcp snooping action blackhole recovery 30
```

35.9 ip dhcp snooping action MaxNum

Command:

```
ip dhcp snooping action {<maxNum>|default}
```

Function:

Set the number of defense action that can be simultaneously took effect.

Parameters:

<maxNum>: the number of defense action on each port, the range of which is 1-200, and the value of which is 10 by default.

default: recover to the default value.

Command Mode:

Globe mode

Default Settings:

The default value is 10.

Usage Guide:

Set the max number of defense actions to avoid the resource exhaustion of the switch caused by attacks. If the number of alarm information is larger than the set value, then the earliest defense action will be recovered forcibly in order to send new defense actions.

Example:

Set the number of port defense actions as 100.

```
switch(config)#ip dhcp snooping action 100
```

35.10 ip dhcp snooping binding

Command:

```
ip dhcp snooping binding enable  
no ip dhcp snooping binding enable
```

Function:

Enable the DHCP Snooping binding function

Parameters:

None.

Command Mode:

Global mode

Default Settings:

DHCP Snooping binding is disabled by default.

Usage Guide:

When the function is enabled, it will record the binding information allocated by DHCP Server of all trusted ports.

Only after the DHCP SNOOPING function is enabled, the binding function can be enabled.

Example:

Enable the DHCP Snooping binding function.

```
switch(config)#ip dhcp snooping binding enable
```

Relative Command: ip dhcp snooping enable

35.11 ip dhcp snooping binding dot1x

Command:

```
ip dhcp snooping binding dot1x
```

```
no ip dhcp snooping binding dot1x
```

Function:

Enable the DHCP Snooping binding DOT1X function.

Parameters:

None

Command Mode:

Port mode

Default Settings:

By default, the binding DOT1X function is disabled on all ports.

Usage Guide:

When this function is enabled, DHCP SNOOPING will notify the DOT1X module about the captured binding information as a DOT1X controlled user. This command is mutually exclusive to "ip dhcp snooping binding user-control" command.

Only after the DHCP SNOOPING binding function is enabled, the binding dot1x function can be set.

Example:

Enable the binding DOT1X function on port ethernet1/1.

```
switch(config)#interface ethernet 1/1
```

```
switch(Config-Ethernet 1/1)# ip dhcp snooping binding dot1x
```

Relative Command: ip dhcp snooping binding enable

ip dhcp snooping binding user-control

35.12 ip dhcp snooping binding user

Command:

```
ip dhcp snooping binding user <mac> address <ipaddress> interface [Ethernet] <ifname>
```

```
no ip dhcp snooping binding user <mac> interface [Ethernet] <ifname>
```

Function:

Configure the information of static binding users.

Parameters:

<mac>: The MAC address of the static binding user, which is the only index of the binding user.

<ipaddress>: The IP address of the static binding user.

<ifname>: The access interface of static binding user.

Command Mode:

Global mode

Default Settings:

DHCP Snooping has no static binding list entry by default.

Usage Guide:

The static binding users is deal in the same way as the dynamic binding users captured by DHCP SNOOPING; the following actions are all allowed: notifying DOT1X to be a controlled user of DOT1X, adding a trusted user list entry directly, adding a binding ARP list entry. The static binding users will never be aged, and have a priority higher than dynamic binding users. Only after the DHCP SNOOPING binding function is enabled, the static binding users can be enabled.

Example:

Configure static binding users.

```
switch(config)#ip dhcp snooping binding user 00-30-4f-12-34-56 address 192.168.1.16 interface Ethernet 1/16
```

Relative Command: ip dhcp snooping binding enable

35.13 ip dhcp snooping binding user-control

Command:

ip dhcp snooping binding user-control

no ip dhcp snooping binding user-control

Function:

Enable the binding user function.

Parameters:

None.

Command Mode:

Port Mode.

Default Settings:

By default, the binding user function is disabled on all ports.

Usage Guide:

When this function is enabled, DHCP SNOOPING will treat the captured binding information as trusted users allowed to access all resources. This command is mutually exclusive to "ip dhcp snooping binding dot1x" command.

Only after DHCP SNOOPING binding function is enabled, the binding user function can be set. This command is not limited by "ip dhcp snooping" based on VLAN, but it is only limited by the global "ip dhcp snooping enable" command.

Example:

Enable the binding USER function on port ethernet1/1.

```
switch(config)#interface ethernet 1/1
```

```
switch(Config-Ethernet 1/1)# ip dhcp snooping binding user-control
```

Relative Command: ip dhcp snooping binding enable

ip dhcp snooping binding dot1x

35.14 ip dhcp snooping binding user-control max-user

Command:

```
ip dhcp snooping binding user-control max-user <number>  
no ip dhcp snooping binding user-control max-user
```

Function:

Set the max number of users allowed to access the port when enabling DHCP Snooping binding user function; the no operation of this command will restore default value.

Parameters:

<number> the max number of users allowed to access the port, from 0 to 1024.

Command Mode:

Port Configuration Mode.

Default Settings:

The max number of users allowed by each port to access is 1024.

Usage Guide:

This command defines the max number of trust users distributed according to binding information, with **ip dhcp snooping binding user-control** enabled on the port. By default, the number is 1024. Considering the limited hardware resources of the switch, the actual number of trust users distributed depends on the resource amount. If a bigger max number of users is set using this command, DHCP Snooping will distribute the binding information of untrust users to hardware to be trust users as long as there is enough available resources. Otherwise, DHCP Snooping will change the distributed binding information according to the new smaller max user number. When the number of distributed binding information entries reaches the max limit, no new DHCP will be able to become trust user or to access other network resources via the switch.

Examples:

Enable DHCP Snooping binding user function on Port ethernet1/1, setting the max number of user allowed to access by Port Ethernet1/1 as 5.

```
Switch(Config-If-Ethernet1/1)# ip dhcp snooping binding user-control max-user 5
```

Related Command: **ip dhcp snooping binding user-control**

35.15 ip dhcp snooping information enable

Command:

ip dhcp snooping information enable
no ip dhcp snooping information enable

Function:

This command will enable option 82 function of DHCP Snooping on the switch, the no operation of this command will disable that function.

Parameters:

None.

Default Settings:

Option 82 function is disabled in DHCP Snooping by default.

Command Mode:

Global Configuration Mode.

Usage Guide:

Only by implementing this command, can DHCP Snooping add standard option 82 to DHCP request messages and forward the message. The format of option1 in option 82 (Circuit ID option) is standard vlan name plus physical port name, like vlan1+ethernet1/12. That of option2 in option 82 (remote ID option) is CPU MAC of the switch, like 00304f023301. If a DHCP request message with option 82 options is received, DHCP Snooping will replace those options in the message with its own. If a DHCP reply message with option 82 options is received, DHCP Snooping will dump those options in the message and forward it.

Examples:

Enable option 82 function of DHCP Snooping on the switch.

```
Switch(config)#ip dhcp snooping enable  
Switch(config)# ip dhcp snooping binding enable  
Switch(config)# ip dhcp snooping information enable
```

35.16 ip dhcp snooping information option allow-untrusted (replace)

Command :

```
ip dhcp snooping information option allow-untrusted (replace)
no ip dhcp snooping information option allow-untrusted (replace)
```

Function:

This command is used to set that allow untrusted ports of DHCP snooping to receive DHCP packets with option82 option. When the "replace" is setting, the option82 option is allowed to replace. When disabling this command, all untrusted ports will drop DHCP packets with option82 option.

Parameter:

None.

Command Mode:

Global Mode

Default:

Drop DHCP packets with option82 option received by untrusted ports.

Usage Guide:

Usually the switch with DHCP snooping function connects the terminal user directly, so close allow-untrusted by default to avoid option82 option added by user privately. Please set uplink port as trust port when enabling the uplink of DHCP snooping function.

Example:

```
Enable the function that receives DHCP packets with option82.
Switch(config)#ip dhcp snooping information option allow-untrusted
```

35.17 ip dhcp snooping information option delimiter

Command:

```
ip dhcp snooping information option delimiter [colon | dot | slash | space]
no ip dhcp snooping information option delimiter
```

Function:

Set the delimiter of each parameter for suboption of option82 in global mode, no command restores the delimiter as slash.

Parameters:

None.

Default Settings:

slash ("/").

Command Mode:

Global mode

Usage Guide:

Divide parameters with the configured delimiters after users have defined them which are used to create suboption (remote-id, circuit-id) of option82 in global mode.

Example:

Set the parameter delimiters as dot (".") for suboption of option82.

```
Switch(config)# ip dhcp snooping information option delimiter dot
```

35.18 ip dhcp snooping information option remote-id

Command:

```
ip dhcp snooping information option remote-id {standard | <remote-id>}
```

```
no ip dhcp snooping information option remote-id
```

Function:

Set the suboption2 (remote ID option) content of option 82 added by DHCP request packets (they are received by the port). The no command sets the additive suboption2 (remote ID option) format of option 82 as standard.

Parameters:

standard means the default VLAN MAC format. <remote-id> means the remote-id content of option 82 specified by users, its length can not exceed 64 characters.

Command Mode:

Global Mode

Default:

Use standard format to set remote-id.

Usage Guide:

The additive option 82 needs to associate with third-party DHCP server, it is used to specify the remote-id content by users when the standard remote-id format can not satisfy server's request.

Example:

Set the suboption remote-id of DHCP option82 as street-1-1.

```
Switch(config)#ip dhcp snooping information option remote-id street-1-1
```

35.19 ip dhcp snooping information option self-defined remote-id

Command:

```
ip dhcp snooping information option self-defined remote-id {hostname | mac | string WORD}  
no ip dhcp snooping information option self-defined remote-id
```

Function:

Set creation method for option82, users can define the parameters of remote-id suboption by themselves.

Parameters:

WORD the defined character string of remote-id by themselves, the maximum length is 64.

Command Mode:

Global Mode

Default:

Using standard method.

Usage Guide:

After configure this command, if users do not configure ip dhcp snooping information option remote-id globally, it will create remote-id suboption for option82 according to self-defined method. For mac, use the format such as 00-02-d1-2e-3a-0d if it is filled to packets with ascii format, but hex format occupies 6 bytes. Each option will be filled to packets according to the configured order of the commands and divide them with delimiter (delimiter is **ip dhcp snooping information option delimiter** configuration).

Example:

Set self-defined method and character string of remote-id suboption are mac and abc respectively for option82.

```
Switch(config)# ip dhcp snooping information option self-defined remote-id mac string abc
```

35.20 ip dhcp snooping information option self-defined remote-id format

Command:

```
ip dhcp snooping information option self-defined remote-id format [ascii | hex]
```

Function:

Set self-defined format of remote-id for snooping option82.

Parameters:

None.

Command Mode:

Global Mode

Default:

ascii.

Usage Guide:

self-defined format use ip dhcp snooping information option type self-defined remote-id to create remote-id format.

Example:

Set self-defined format of remote-id as hex for snooping option82.

```
Switch(config)# ip dhcp snooping information option self-defined remote-id format hex
```

35.21 ip dhcp snooping information option self-defined subscriber-id

Command:

```
ip dhcp snooping information option self-defined subscriber-id {vlan | port | id (switch-id (mac | hostname)|  
remote-mac) | string WORD}  
no ip dhcp snooping information option type self-defined subscriber-id
```

Function:

Set creation method for option82, users can define the parameters of circuit-id suboption by themselves.

Parameters:

WORD the defined character string of circuit-id by themselves, the maximum length is 64.

Command Mode:

Global Mode

Default:

Using standard method.

Usage Guide:

After configure this command, if users do not configure circuit-id on port, it will create circuit-id suboption for option82 according to self-defined method. Self-defined format of circuit-id: if self-defined subscriber-id format is ascii, the filled format of vlan such as "Vlan2", the format of port such as "Ethernet1/1", the format of mac and remote-mac such as "00-02-d1-2e-3a-0d". If self-defined format is hex, the filled format of vlan occupies 2 bytes, port occupies 4 bytes, a byte means slot (for chassis switch, it means slot ID, for box switch, it is 1), a byte means Module (the default is 0), two bytes means port ID beginning from 1, mac and remote-mac occupy 6 bytes. Each option will be filled to packets according to the configured order of the commands and divide them with delimiter (delimiter is **ip dhcp snooping information option delimiter** configuration).

Example:

Set self-defined method of circuit-id suboption as vlan, port, mac and remote-mac for option82.

```
Switch(config)#ip dhcp snooping information option self-defined subscriber-id vlan port id remote-mac
```

35.22 ip dhcp snooping information option self-defined subscriber-id format

Command:

```
ip dhcp snooping information option self-defined subscriber-id format [ascii | hex]
```

Function:

Set self-defined format of circuit-id for snooping option82.

Parameters:

None.

Command Mode:

Global Mode

Default:

ascii.

Usage Guide:

self-defined format uses ip dhcp snooping information option type self-defined subscriber-id to create circuit-id format.

Example:

Set self-defined format of circuit-id as hex for snooping option82.

```
Switch(config)#ip dhcp snooping information option self-defined subscriber-id format hex
```

35.23 ip dhcp snooping information option subscriber-id

Command:

```
ip dhcp snooping information option subscriber-id {standard | <circuit-id>}
```

```
no ip dhcp snooping information option subscriber-id
```

Function:

Set the suboption1 (circuit ID option) content of option 82 added by DHCP request packets (they are received by the port). The no command sets the additive suboption1 (circuit ID option) format of option 82 as standard.

Parameters:

standard means the standard format of VLAN name and physical port name, such as Vlan2+Ethernet1/12.

<circuit-id> means the circuit-id content of option 82 specified by users, its length can not exceed 64 characters.

Command Mode:

Port Mode

Default:

Use standard format to set circuit-id.

Usage Guide:

The additive option 82 needs to associate with third-party DHCP server, it is used to specify the circuit-id content by user when the standard circuit-id format can not satisfy server's request.

Example:

Set the suboption circuit-id of DHCP option82 as P2.

```
Switch(config)#ip dhcp snooping information option subscriber-id P2
```

35.24 ip dhcp snooping information option subscriber-id format

Command:

```
ip dhcp snooping information option subscriber-id format {hex | ascii | vs-hp}
```

Function:

This command is used to set subscriber-id format of DHCP snooping option82.

Parameters:

hex means that subscriber-id is VLAN and port information with hexadecimal format, ascii means that subscriber-id is VLAN and port information with ASCII format. vs-hp means that subscriber-id is compatible with the format of HP manufacturer.

Command Mode:


Global mode

Default:

ascii.


User Guide:

VLAN and port information with ASCII format, such as Vlan1+Ethernet1/11, VLAN and port information with hexadecimal format defined as below:

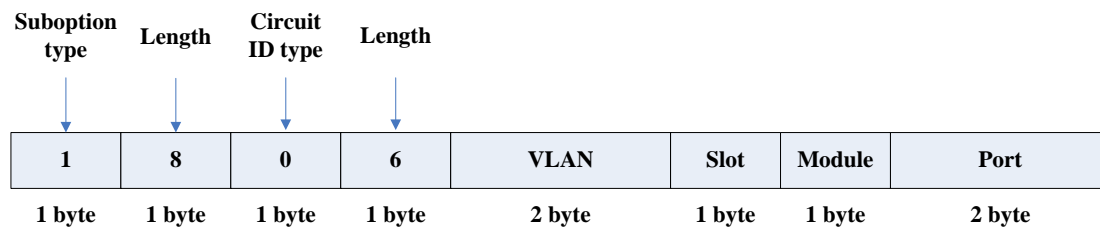

VLAN field fill in VLAN ID. For chassis switch, Slot means slot number, for box switch, Slot is 1; default Module is 0; Port means port number which begins from 1.

The compatible subscriber-id format with HP manufacturer defined as below:

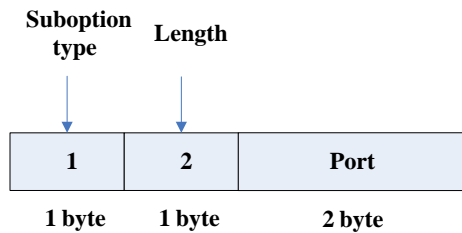

Port means port number which begins from 1.

Example:

Set subscriber-id format of DHCP snooping option82 as hexadecimal format.

Switch(config)#ip dhcp snooping information option subscriber-id format hex

35.25 ip dhcp snooping limit-rate

Command:

ip dhcp snooping limit-rate <pps>

no ip dhcp snooping limit-rate

Function:

Set the DHCP message rate limit

Parameters:

<pps>: The number of DHCP messages transmitted in every minute, ranging from 0 to 100. Its default value is 100. 0 means that no DHCP message will be transmitted.

Command Mode:

Global mode

Default Settings:

The default value is 100.

Usage Guide:

After enabling DHCP snooping, the switch will monitor all the DHCP messages and implement software transmission.

The software performance of the switch is relative to the type of the switch, its current load and so on.

Example:

Set the message transmission rate as 50pps.

switch(config)#ip dhcp snooping limit-rate 50

35.26 ip dhcp snooping trust

Command:

```
ip dhcp snooping trust
no ip dhcp snooping trust
```

Function:

Set or delete the DHCP Snooping trust attributes of a port.

Parameters:

None

Command Mode:

Port mode

Default Settings:

By default, all ports are non-trusted ports

Usage Guide:

Only when DHCP Snooping is globally enabled, can this command be set. When a port turns into a trusted port from a non-trusted port, the original defense action of the port will be automatically deleted; all the security history records will be cleared (except the information in system log).

Example:

```
Set port ethernet1/1 as a DHCP Snooping trusted port
switch(config)#interface ethernet 1/1
switch(Config- Ethernet 1/1)#ip dhcp snooping trust
```

35.27 ip user helper-address

Command:

```
ip user helper-address <svr_addr> [port <udp_port>] source <src_addr> [secondary]
no ip user helper-address [secondary]
```

Function:

Set the address and port of HELPER SERVER.

Parameters:

<svr_addr>: The IP address of HELPER SERVER IP in dotted-decimal notation.

udp_port: The UDP port of HELPER SERVER, the range of which is 1 – 65535, and its default value is 9119.

src_addr: The local management IP address of the switch, in dotted-decimal notation.

secondary: Whether it is a secondary SERVER address.

Command Mode:

Global mode

Default Settings:

There is no HELPER SERVER address by default.

Usage Guide:

DHCP SNOOPING will send the monitored binding information to HELPER SERVER to save it. If the switch starts abnormally, it can recover the binding data from HELPER SERVER. The HELPER SERVER function usually is integrated into DCBI packet. The DHCP SNOOPING and HELPER SERVER use the UDP protocol to communicate, and guarantee the arrival of retransmitted data. HELPER SERVER configuration can also be used to sent DOT1X user data from the server, the detail of usage is described in the chapter of **dot1x configuration**.

Two HELPER SERVER addresses are allowed, DHCP SNOOPING will try to connect to PRIMARY SERVER in the first place. Only when the PRIMARY SERVER is unreachable, will the switch HELPER SERVER connects to SECONDARY SERVER.

Please pay attention: source address is the effective management IP address of the switch, if the management IP address of the switch changes, this configuration should be updated in time.

Example:

Set the local management IP address as 100.1.1.1, primary HELPER SERVER address as 100.1.1.100 and the port as default value.

```
switch(config)#interface vlan 1
```

```
switch(Config-If-Vlan1)#ip address 100.1.1.1 255.255.255.0
```

```
switch(Config-if-Vlan1)exit
```

```
switch(config)#ip user helper-address 100.1.1.100 source 100.1.1.1
```

35.28 ip user private packet version two

Command:

```
ip user private packet version two
```

```
no ip user private packet version two
```

Function:

The switch choose private packet version two to communicate with trustview.

Parameter:

None.

Command Mode:

Global Mode.

Default:

The switch choose private packet version one to communicate with DCBI.

Usage Guide:

If the DCBI access control system is applied, the switch should be configured to use private protocol of version one to communicate with the DCBI server. However, if TrustView is applied, version two should be applied.

Example:

To configure the switch choose private packet version two to communicate with inter security management background system.

```
switch(config)#ip user private packet version two
```

35.29 show ip dhcp snooping

Command:

```
show ip dhcp snooping [interface [ethernet] <interfaceName>]
```

Function:

Display the current configuration information of dhcp snooping or display the records of defense actions of a specific port.

Parameters:

<interfaceName>: The name of the specific port.

Command Mode:

Admin and Global Configuration Mode.

Default Settings:

None.

Usage Guide:

If there is no specific port, then display the current configuration information of dhcp snooping, otherwise, display the records of defense actions of the specific port.

Example:

```
switch#show ip dhcp snooping
```

```
DHCP Snooping is enabled
```

```
DHCP Snooping binding arp: disabled
```

```
DHCP Snooping maximum of action info:10
```

```
DHCP Snooping limit rate: 100(pps), switch ID: 0030.4F12.3456
```

```
DHCP Snooping dropped packets: 0, discarded packets: 0
```

```
DHCP Snooping alarm count: 0, binding count: 0,
```

```
expired binding: 0, request binding: 0
```

interface	trust	action	recovery	alarm num	bind num
Ethernet1/1	trust	none	0second	0	0
Ethernet1/2	untrust	none	0second	0	0
Ethernet1/3	untrust	none	0second	0	0
Ethernet1/4	untrust	none	0second	0	1
Ethernet1/5	untrust	none	0second	2	0
Ethernet1/6	untrust	none	0second	0	0
Ethernet1/7	untrust	none	0second	0	0
Ethernet1/8	untrust	none	0second	0	1
Ethernet1/9	untrust	none	0second	0	0
Ethernet1/10	untrust	none	0second	0	0
Ethernet1/11	untrust	none	0second	0	0
Ethernet1/12	untrust	none	0second	0	0
Ethernet1/13	untrust	none	0second	0	0
Ethernet1/14	untrust	none	0second	0	0
Ethernet1/15	untrust	none	0second	0	0
Ethernet1/16	untrust	none	0second	0	0
Ethernet1/17	untrust	none	0second	0	0
Ethernet1/18	untrust	none	0second	0	0

Ethernet1/19	untrust	none	0second	0	0
Ethernet1/20	untrust	none	0second	0	0
Ethernet1/21	untrust	none	0second	0	0
Ethernet1/22	untrust	none	0second	0	0
Ethernet1/23	untrust	none	0second	0	0
Ethernet1/24	untrust	none	0second	0	0

Displayed Information	Explanation
DHCP Snooping is enable	Whether the DHCP Snooping is globally enabled or disabled.
DHCP Snooping binding arp	Whether the ARP binding function is enabled.
DHCP Snooping maxnum of action info	The number limitation of port defense actions
DHCP Snooping limit rate	The rate limitation of receiving packets
switch ID	The switch ID is used to identify the switch, usually using the CPU MAC address.
DHCP Snooping dropped packets	The number of dropped messages when the received DHCP messages exceeds the rate limit.
discarded packets	The number of discarded packets caused by the communication failure within the system. If the CPU of the switch is too busy to schedule the DHCP SNOOPING task and thus can not handle the received DHCP messages, such situation might happen.
DHCP Snooping alarm count:	The number of alarm information.
binding count	The number of binding information.
expired binding	The number of binding information which is already expired but has not been deleted. The reason why the expired information is not deleted immediately might be that the switch needs to notify the helper server about the information, but the helper server has not acknowledged it.
request binding	The number of REQUEST information
interface	The name of port
trust	The trust attributes of the port
action	The automatic defense action of the port
recovery	The automatic recovery time of the port
alarm num	The number of history records of the port automatic defense actions
bind num	The number of port-relative binding information.

switch#show ip dhcp snooping int Ethernet1/1

interface Ethernet1/1 user config:

trust attribute: untrust

action: none

binding dot1x: disabled

binding user: disabled

recovery interval:0(s)

Alarm info: 0

Binding info: 0

Expired Binding: 0

Request Binding: 0

Displayed Information	Explanation
interface	The name of port
trust attribute	The truest attributes of the port
action	The automatic defense action of the port
recovery interval	The automatic recovery time of the port
maximum of alarm info	The max number of automatic defense actions that can be recorded by the port
binding dot1x	Whether the binding dot1x function is enabled on the port
binding user	Whether the binding user function is enabled on the port.
Alarm info	The number of alarm information.
Binding info	The number of binding information.
Expired Binding	The expired binding information
Request Binding	REQUEST information

35.30 show ip dhcp snooping binding all

Command:

show ip dhcp snooping binding all

Function:

Display the current global binding information of DHCP snooping.

Parameters:

None.

Command Mode:

Admin and Global Configuration Mode.

Default Settings:

None.

Usage Guide:

This command can check the global binding information of DHCP snooping, each table entry includes the corresponding MAC address, IP address, port name, VLAN ID and the flag of the binding state. Besides, DHCP Snooping must be enabled globally, this command can be configured.

Example:

```
switch#show ip dhcp snooping binding all
ip dhcp snooping static binding count:1169, dynamic binding count:0
```

MAC	IP address	Interface	Vlan ID	Flag
00-00-00-00-11-11	192.168.40.1	Ethernet1/1	1	S
00-00-00-00-00-10	192.168.40.10	Ethernet1/2	1	D
00-00-00-00-00-11	192.168.40.11	Ethernet1/4	1	D
00-00-00-00-00-12	192.168.40.12	Ethernet1/4	1	D
00-00-00-00-00-13	192.168.40.13	Ethernet1/4	1	SU
00-00-00-00-00-14	192.168.40.14	Ethernet1/4	1	SU
00-00-00-00-00-15	192.168.40.15	Ethernet1/5	1	SL
00-00-00-00-00-16	192.168.40.16	Ethernet1/5	1	SL

The flag explanation of the binding state:

S The static binding is configured by shell command

D The dynamic binding type

U The binding is uploaded to the server

R The static binding is configured by the server

O DHCP response with the option82

L The hardware drive is announced by the binding

X Announcing dot1x module is successful

E Announcing dot1x module is failing

35.31 show trustview status

Command:

show trustview status

Function:

To show all kinds of private packets state information, which sending or receiving from TrustView (inter security management background system).

Parameter:

None.

Command Mode:

Admin and Global Configuration Mode.

Default:

None.

Usage Guide:

This command can be used for debugging the communication messages between the switch and the TrustView server, messages such as protocol version notification, encryption negotiation, free resource and web URL redirection, and the number of forced log-off messages, as well as the number of forced accounting update messages, can be displayed.

Example:

```
Switch#show trustview status
Primary TrustView Server 200.101.0.9:9119
    TrustView version2 message inform succeeded
    TrustView inform free resource succeeded
    TrustView inform web redirect address succeeded
    TrustView inform user binding data succeeded
TrustView version2 message encrypt/digest enabled
Key: 08:02:33:34:35:36:37:38
Rcvd 106 encrypted messages, in which MD5-error 0 messages, DES-error 0 messages
Sent 106 encrypted messages
Free resource is 200.101.0.9/255.255.255.255
Web redirect address for unauthenticated users is <http://200.101.0.9:8080>
Rcvd 0 force log-off packets
Rcvd 19 force accounting update packets
Using version two private packet
```

Chapter 36 Commands for DHCP Snooping option 82

36.1 ip dhcp snooping information enable

Command:

```
ip dhcp snooping information enable  
no ip dhcp snooping information enable
```

Function:

This command will enable option 82 function of DHCP Snooping on the switch, the no operation of this command will disable that function.

Parameters:

None.

Default Settings:

Option 82 function is disabled in DHCP Snooping by default.

Command Mode:

Global Configuration Mode.

Usage Guide:

Only by implementing this command, can DHCP Snooping add standard option 82 to DHCP request messages and forward the message. The format of option1 in option 82 (Circuit ID option) is standard vlan name plus physical port name, like "vlan1+ethernet1/12". That of option2 in option 82 (remote ID option) is CPU MAC of the switch, like "00304f023301". If a DHCP request message with option 82 options is received, DHCP Snooping will replace those options in the message with its own. If a DHCP reply message with option 82 options is received, DHCP Snooping will dump those options in the message and forward it.

Examples:

Enable option 82 function of DHCP Snooping on the switch.

```
Switch(config)#ip dhcp snooping enable  
Switch(config)#ip dhcp snooping binding enable  
Switch(config)#ip dhcp snooping information enable
```

Chapter 37 IPv4 Multicast Protocol

37.1 Commands for DCSCM

37.1.1 access-list (Multicast Destination Control)

Command:

```
access-list <6000-7999> {deny|permit} ip {{<source> <source-wildcard>}|{host-source  
<source-host-ip>{range<2-65535>|}}|any-source} {{<destination> <destination-wildcard>}|{host-destination  
<destination-host-ip>{range<2-255>|}}|any-destination}  
no access-list <6000-7999> {deny|permit} ip {{<source> <source-wildcard>}|{host-source  
<source-host-ip>{range<2-65535>|}}|any-source} {{<destination> <destination-wildcard>}|{host-destination  
<destination-host-ip>{range<2-255>|}}|any-destination}
```

Function:

Configure destination control multicast access-list, the “**no access-list <6000-7999> {deny|permit} ip {{<source> <source-wildcard>}|{host <source-host-ip>}|any-source} {{<destination> <destination-wildcard>}|{host-destination <destination-host-ip>}|any-destination}**” command deletes the access-list.

Parameter:

- <6000-7999>: destination control access-list number.
- {deny|permit}: deny or permit.
- <source>: multicast source address.
- <source-wildcard>: multicast source address wildcard character..
- <source-host-ip>: multicast source host address.
- range<2-65535>: the range of source host IP address.
- <destination>: multicast destination address.
- <destination-wildcard>: multicast destination address wildcard character.
- <destination-host-ip>: multicast destination host address
- range<2-255> : the range of destination host IP address.

Default:

None

Command Mode:

Global Mode

Usage Guide:

ACL of Multicast destination control list item is controlled by specific ACL number from 6000 to 7999, the command applies to configure this ACL. ACL of Multicast destination control only needs to configure source IP address and destination IP address controlled (group IP address), the configuration mode is basically the same to other ACLs, and use wildcard character to configure address range, and also specify a host address or all address. Remarkable, "all address" is 224.0.0.0/4 according to group IP address, not 0.0.0.0/0 in other access-list.

Example:

```
Switch(config)#access-list 6000 permit ip 10.1.1.0 0.0.0.255 232.0.0.0 0.0.0.255
Switch(config)#
```

37.1.2 access-list (Multicast Source Control)

Command:

```
access-list <5000-5099> {deny|permit} ip {{<source> <source-wildcard>}}{host<source-host-ip>|any-source}
{{<destination> <destination-wildcard>}}{host-destination <destination-host-ip>|any-destination}
no access-list <5000-5099> {deny|permit} ip {{<source> <source-wildcard>}}{host <source-host-ip>|any}
{{<destination> <destination-wildcard>}}{host-destination <destination-host-ip>|any-destination}
```

Function:

Configure source control multicast access-list; the "no access-list <5000-5099> {deny|permit} ip {{<source> <source-wildcard>}}{host <source-host-ip>|any-source} {{<destination> <destination-wildcard>}}{host-destination <destination-host-ip>|any-destination}" command deletes the access-list.

Parameter:

<5000-5099>: source control access-list number.
{deny|permit}: deny or permit.
<source>: multicast source address..
<source-wildcard>: multicast source address wildcard character.
<source-host-ip>: multicast source host address.
<destination>: multicast destination address.
<destination-wildcard>: multicast destination address wildcard character.
<destination-host-ip>: multicast destination host address.

Default:

None

Command Mode:

Global Mode

Usage Guide:

ACL of Multicast source control list item is controlled by specific ACL number from 5000 to 5099, the command applies to configure this ACL. ACL of Multicast source control only needs to configure source IP address and destination IP address controlled (group IP address), the configuration mode is basically the same to other ACLs, and use wildcard character to configure address range, and also specify a host address or all address. Remarkable, "all address" is 224.0.0.0/4 according to group IP address, not 0.0.0.0/0 in other access-list.

Example:

```
Switch(config)#access-list 5000 permit ip 10.1.1.0 0.0.0.255 232.0.0.0 0.0.0.255
```

37.1.3 ip multicast destination-control access-group

Command:

```
ip multicast destination-control access-group <6000-7999>  
no ip multicast destination-control access-group <6000-7999>
```

Function:

Configure multicast destination-control access-list used on interface, the "**no ip multicast destination-control access-group <6000-7999>**" command deletes the configuration.

Parameter:

<6000-7999>: destination-control access-list number.

Default:

None

Command Mode:

Interface Configuration Mode

Usage Guide:

The command is only working under global multicast destination-control enabled, after configuring the command, if IGMP-SPOOPING is enabled, for adding the interface to multicast group, and match configured access-list, such as matching: permit, the interface can be added, otherwise do not be added.

Example:

```
Switch(config)#inter e 1/4
Switch(Config-If-Ethernet 1/4)#ip multicast destination-control access-group 6000
Switch (Config-If-Ethernet1/4)#
```

37.1.4 ip multicast destination-control access-group (sip)

Command:

```
ip multicast destination-control <IPADDRESS/M> access-group <6000-7999>
no ip multicast destination-control <IPADDRESS/M> access-group <6000-7999>
```

Function:

Configure multicast destination-control access-list used on specified net segment, the “**no ip multicast destination-control <IPADDRESS/M> access-group <6000-7999>**” command deletes this configuration.

Parameter:

<IPADDRESS/M>: IP address and mask length;
<6000-7999>: Destination control access-list number.

Default:

None

Command Mode:

Global Mode

Usage Guide:

The command is only working under global multicast destination-control enabled, after configuring the command, if IGMP-SPOOPING or IGMP is enabled, for adding the members to multicast group. If configuring multicast destination-control on specified net segment of transmitted igmp-report, and match configured access-list, such as matching permit, the interface can be added, otherwise do not be added. If relevant group or source in show ip igmp groups detail has been established before executing the command, it needs to execute clear ip igmp groups command to clear relevant groups in Admin mode.

Example:

```
Switch(config)#ip multicast destination-control 10.1.1.0/24 access-group 6000
```

37.1.5 ip multicast destination-control access-group (vmac)

Command:

```
ip multicast destination-control <1-4094> <macaddr >access-group <6000-7999>  
no ip multicast destination-control <1-4094> <macaddr >access-group <6000-7999>
```

Function:

Configure multicast destination-control access-list used on specified vlan-mac, the “**no ip multicast destination-control <1-4094> <macaddr >access-group <6000-7999>**” command deletes this configuration.

Parameter:

<1-4094>: VLAN-ID;

<macaddr>: Transmitting source MAC address of IGMP-REPORT, the format is “xx-xx-xx-xx-xx-xx”;

<6000-7999>: Destination-control access-list number.

Default:

None

Command Mode:

Global Mode

Usage Guide:

The command is only working under global multicast destination-control enabled, after configuring the command, if IGMP-SPOOPING is enabled, for adding the members to multicast group. If configuring multicast destination-control to source MAC address of transmitted igmp-report, and match configured access-list, such as matching: permit, the interface can be added, otherwise do not be added.

Example:

```
Switch(config)#ip multicast destination-control 1 00-01-03-05-07-09 access-group 6000
```

37.1.6 ip multicast policy

Command:

```
ip multicast policy <IPADDRESS/M> <IPADDRESS/M> cos <priority>  
no ip multicast policy <IPADDRESS/M> <IPADDRESS/M> cos
```


Function:

Configure multicast policy, the “**no ip multicast policy <IPADDRESS/M> <IPADDRESS/M> cos**” command deletes it.

Parameter:

<IPADDRESS/M>: are multicast source address, mask length, destination address, and mask length separately.
<priority>: specified priority, range from 0 to 7

Default:

None

Command Mode:

Global Mode

Usage Guide:

The command configuration modifies to a specified value through the switch matching priority of specified range multicast data packet, and the TOS is specified to the same value simultaneously. Carefully, the packet transmitted in UNTAG mode does not modify its priority.

Example:

```
Switch(config)#ip multicast policy 10.1.1.0/24 225.1.1.0/24 cos 7
```

37.1.7 ip multicast source-control

Command:

```
ip multicast source-control  
no ip multicast source-control
```

Function:

Configure to globally enable multicast source control, the “**no ip multicast source-control**” command restores global multicast source control disabled.

Parameter:

None

Default:

Disabled

Command Mode:

Global Mode

Usage Guide:

The source control access-list applies to interface with only enabling global multicast source control, and configure to disabled global multicast source control without configuring source control access-list on every interface. After configuring the command, multicast data received from every interface does not have matching multicast source control list item, and then they will be thrown away by switches, namely only multicast data matching to PERMIT can be received and forwarded.

Example:

```
Switch(config)#ip multicast source-control
```

37.1.8 ip multicast source-control access-group

Command:

```
ip multicast source-control access-group <5000-5099>  
no ip multicast source-control access-group <5000-5099>
```

Function:

Configure multicast source control access-list used on interface, the “no ip multicast source-control access-group <5000-5099>” command deletes the configuration.

Parameter:

<5000-5099>: Source control access-list number.

Default:

None

Command Mode:

Interface Configuration Mode

Usage Guide:

The command configures with only enabling global multicast source control. After that, it will match multicast data message imported from the interface according to configured access-list, such as matching: permit, the message will be received and forwarded; otherwise the message will be thrown away.

Example:

```
Switch (config)#interface ethernet1/4
Switch (Config-If-Ethernet1/4)#ip multicast source-control access-group 5000
Switch (Config-If-Ethernet1/4)#
Switch(router-msdp)#default-rpf-peer 10.0.0.1 rp-policy 10
```

37.1.9 multicast destination-control

Command:

```
multicast destination-control
no multicast destination-control
```

Function:

Configure to globally enable multicast destination control, the NO command is to recover and disable the multicast destination control globally.

Parameters:

None.

Default:

Disabled.

Command Mode:

Global Configuration Mode.

Usage Guide:

Only after globally enabling the multicast destination control, the other destination control configuration can take effect; the destination access list can be applied to ports, VLAN-MAC and SIP. After configuring this command, IGMP-SNOOPING and IGMP will match according to the rules mentioned above when they try to add ports after receiving IGMP-REPORT.

Example:

```
switch(config)# multicast destination-control
```

37.1.10 show ip multicast destination-control

Command:

```
show ip multicast destination-control [detail]
show ip multicast destination-control interface <Interfacename> [detail]
show ip multicast destination-control host-address <ipaddress> [detail]
show ip multicast destination-control <vlan-id> <mac-address> [detail]
```

Function:

Display multicast destination control

Parameter:

detail: expresses if it display information in detail or not..

<Interfacename>: interface name or interface aggregation name, such as Ethernet1/1, port-channel 1 or ethernet1/1.

Default:

None

Command Mode:

Admin Mode and Global Mode

Usage Guide:

The command displays multicast destination control rules of configuration, including detail option, and access-list information applied in detail.

Example:

```
Switch (config)#show ip multicast destination-control
ip multicast destination-control is enabled
ip multicast destination-control 11.0.0.0/8 access-group 6003
ip multicast destination-control 1 00-03-05-07-09-11 access-group 6001
multicast destination-control access-group 6000 used on interface Ethernet1/13
switch(config)#
```

37.1.11 show ip multicast destination-control access-list

Command:

```
show ip multicast destination-control access-list
show ip multicast destination-control access-list <6000-7999>
```

Function:

Display destination control multicast access-list of configuration.

Parameter:

<6000-7999>: access-list number.

Default:

None

Command Mode:

Admin Mode and Global Mode

Usage Guide:

The command displays destination control multicast access-list of configuration.

Example:

```
Switch# sh ip multicast destination-control acc
access-list 6000 deny ip any any-destination
access-list 6000 deny ip any host-destination 224.1.1.1
access-list 6000 deny ip host 2.1.1.1 any-destination
access-list 6001 deny ip host 2.1.1.1 225.0.0.0 0.255.255.255
access-list 6002 permit ip host 2.1.1.1 225.0.0.0 0.255.255.255
access-list 6003 permit ip 2.1.1.0 0.0.0.255 225.0.0.0 0.255.255.255
```

37.1.12 show ip multicast policy

Command:

```
show ip multicast policy
```

Function:

Display multicast policy of configuration

Parameter:

None

Default:

None

Command Mode:

Admin Mode and Global Mode

Usage Guide:

The command displays multicast policy of configuration

Example:

```
Switch#show ip multicast policy
ip multicast-policy 10.1.1.0/24 225.0.0.0/8 cos 5
```

37.1.13 show ip multicast source-control

Command:

```
show ip multicast source-control [detail]
show ip multicast source-control interface <Interfacename> [detail]
```

Function:

Display multicast source control configuration

Parameter:

detail: expresses if it displays information in detail.

<Interfacename>: interface name, such as Ethernet 1/1 or ethernet1/1.

Default:

None

Command Mode:

Admin Mode and Global Mode

Usage Guide:

The command displays multicast source control rules of configuration, including detail option, and access-list information applied in detail.

Example:

```
Switch#show ip multicast source-control detail
ip multicast source-control is enabled
Interface Ethernet1/13 use multicast source control access-list 5000
access-list 5000 permit ip 10.1.1.0 0.0.0.255 232.0.0.0 0.0.0.255
access-list 5000 deny ip 10.1.1.0 0.0.0.255 233.0.0.0 0.255.255.255
```

37.1.14 show ip multicast source-control access-list

Command:

```
show ip multicast source-control access-list
show ip multicast source-control access-list <5000-5099>
```

Function:

Display source control multicast access-list of configuration

Parameter:

<5000-5099>: access-list number

Default:

None

Command Mode:

Admin Mode and Global Mode

Usage Guide:

The command displays source control multicast access-list of configuration

Example:

```
Switch#sh ip multicast source-control access-list
access-list 5000 permit ip 10.1.1.0 0.0.0.255 232.0.0.0 0.0.0.255
access-list 5000 deny ip 10.1.1.0 0.0.0.255 233.0.0.0 0.255.255.255
```

37.2 Commands for IGMP Snooping

37.2.1 clear ip igmp snooping vlan

Command:

```
clear ip igmp snooping vlan <1-4094> groups [A.B.C.D]
```

Function:

Delete the group record of the specific VLAN.

Parameters:

<1-4094> the specific VLAN ID; A.B.C.D the specific group address.

Command Mode:

Admin Configuration Mode

Usage Guide:

Use show command to check the deleted group record.

Example:

Delete all groups.

```
Switch#clear ip igmp snooping vlan 1 groups
```

Relative Command: show ip igmp snooping vlan <1-4094>

37.2.2 clear ip igmp snooping vlan <1-4094> mrouter-port

Command:

```
clear ip igmp snooping vlan <1-4094> mrouter-port [ethernet IFNAME | IFNAME]
```

Function:

Delete the mrouter port of the specific VLAN.

Parameters:

<1-4094> the specific VLAN ID; ethernet the Ethernet port name; IFNAME the port name.

Command Mode:

Admin Configuration Mode

Usage Guide:

Use show command to check the deleted mrouter port of the specific VLAN.

Example:

Delete mrouter port in vlan 1.

```
Switch# clear ip igmp snooping vlan 1 mrouter-port
```

Relative Command: show ip igmp snooping mrouter-port

37.2.3 debug igmp snooping all/packet/event/timer/mfc

Command:

```
debug igmp snooping all/packet/event/timer/mfc  
no debug igmp snooping all/packet/event/timer/mfc
```

Function:

Enable the IGMP Snooping switch of the switch; the “no debug igmp snooping all/packet/event/timer/mfc” disables the debugging switch.

Command Mode:

Admin Mode

Default:

IGMP Snooping debugging switch is disabled on the switch by default.

Usage Guide:

The command is used for enable the IGMP Snooping debugging switch of the switch, switch IGMP data packet message can be shown with “packet” parameter, event message with “event”, timer message with “time”, downsending hardware entries message with “mfc”, and all debugging messages with “all”.

37.2.4 ip igmp snooping

Command:

```
ip igmp snooping  
no ip igmp snooping
```

Function:

Enable the IGMP Snooping function; the “**no ip igmp snooping**” command disables this function.

Command mode:

Global Mode

Default:

IGMP Snooping is disabled by default.

Usage Guide:

Use this command to enable IGMP Snooping, that is permission every VLAN config the function of IGMP snooping. The “**no ip igmp snooping**” command disables this function.

Example:

Enable IGMP Snooping.

```
Switch(config)#ip igmp snooping
```

37.2.5 ip igmp snooping proxy

Command:

```
ip igmp snooping proxy
```

```
no ip igmp snooping proxy
```

Function:

Enable IGMP Snooping proxy function, the no command disables the function.

Parameter:

None.

Command Mode:

Global Mode

Default:

Enable.

Example:

```
Switch(config)#no ip igmp snooping proxy
```

37.2.6 ip igmp snooping vlan

Command:

```
ip igmp snooping vlan <vlan-id>  
no ip igmp snooping vlan <vlan-id>
```

Function:

Enable the IGMP Snooping function for the specified VLAN; the “**no ip igmp snooping vlan <vlan-id>**” command disables the IGMP Snooping function for the specified VLAN.

Parameter:

<vlan-id> is the VLAN number.

Command mode:

Global Mode

Default:

IGMP Snooping is disabled by default.

Usage Guide:

To configure IGMP Snooping on specified VLAN, the global IGMP Snooping should be first enabled. Disable IGMP Snooping on specified VLAN with the “**no ip igmp snooping vlan <vlan-id>**” command.

Example:

Enable IGMP Snooping for VLAN 100 in Global Mode.
Switch(config)#ip igmp snooping vlan 100

37.2.7 ip igmp snooping vlan immediate-leave

Command:

```
ip igmp snooping vlan <vlan-id> immediate-leave  
no ip igmp snooping vlan <vlan-id> immediate-leave
```

Function:

Enable the IGMP Snooping fast leave function for the specified VLAN; the “**no ip igmp snooping vlan <vlan-id> immediate-leave**” command disables the IGMP Snooping fast leave function.

Parameter:

<*vlan-id*> is the VLAN number specified.

Command mode:

Global Mode

Default:

This function is disabled by default.

Usage Guide:

Enable immediate-leave function of the IGMP Snooping in specified VLAN; the "no" form of this command disables the immediate-leave function of the IGMP Snooping.

Example:

Enable the IGMP Snooping fast leave function for VLAN 100.

```
Switch(config)#ip igmp snooping vlan 100 immediate-leave
```

37.2.8 ip igmp snooping vlan l2-general-querier

Command:

```
ip igmp snooping vlan < vlan-id > l2-general-querier
```

```
no ip igmp snooping vlan < vlan-id > l2-general-querier
```

Function:

Set this VLAN to layer 2 general querier.

Parameter:

vlan-id: is ID number of the VLAN, ranging is <1-4094>.

Command Mode:

Global mode

Default:

VLAN is not as the IGMP Snooping layer 2 general querier.

Usage Guide:

It is recommended to configure a layer 2 general querier on a segment. IGMP Snooping function will be enabled by this command if not enabled on this VLAN before configuring this command, IGMP Snooping function will not be disabled when disabling the layer 2 general querier function. This command is mainly for sending general queries regularly to help switches within this segment learn mrouter ports.

Comment:

There are three paths IGMP snooping learn mrouter

- 1 Port receives the IGMP query messages
- 2 Port receives multicast protocol packets, and supports DVMRP, PIM
- 3 Static configured port

37.2.9 ip igmp snooping vlan l2-general-querier-source

Command:

```
ip igmp snooping vlan <vlanid> L2-general-query-source <A.B.C.D>  
no ip igmp snooping vlan <vlanid> L2-general-query-source
```

Function:

Configure source address of query of igmp snooping

Parameters:

<vlanid>: the id of the VLAN, with limitation to <1-4094>. <A.B.C.D> is the source address of the query operation.

Command Mode:

Global mode.

Default:

0.0.0.0

Usage Guide:

It is not supported on Windows 2000/XP to query with the source address as 0.0.0.0. So the layer 2 query source address configuration does not function. The client will stop sending requesting datagrams after one is sent. And after a while, it can not receive multicast datagrams.

Example:

```
Switch(config)#ip igmp snooping vlan 2 L2-general-query-source 192.168.1.2
```

37.2.10 ip igmp snooping vlan l2-general-querier-version

Command:

```
ip igmp snooping vlan <vlanid> L2-general-query-version <version>
```

Function:

Configure igmp snooping.

Parameters:

vlan-id is the id of the VLAN, limited to <1-4094>. **version** is the version number, limited to <1-3>.

Command Mode:

Global mode.

Default:

version 3.

Usage Guide:

When the switch is connected to V1 and V2 capable environment, and for VLAN which has source of layer 2 query configuration, the VLAN can be queried only if the version number has been specified. This command is used to query the layer 2 version number.

Example:

```
Switch(config)#ip igmp snooping vlan 2 L2-general-query-version 2
```

37.2.11 ip igmp snooping vlan limit

Command:

```
ip igmp snooping vlan <vlan-id> limit {group <g_limit> | source <s_limit>}  
no ip igmp snooping vlan <vlan-id> limit
```

Function:

Configure the max group count of VLAN and the max source count of every group. The “**no ip igmp snooping vlan <vlan-id> limit**” command cancels this configuration.

Parameter:

<vlan-id> is the VLAN number.

g_limit : <1-65535>, max number of groups joined.

s_limit : <1-65535>, max number of source entries in each group, consisting of include source and exclude source.

Command mode:

Global Mode.

Default:

Maximum 50 groups by default, with each group capable with 40 source entries.

Usage Guide:

When number of joined group reaches the limit, new group requesting for joining in will be rejected for preventing hostile attacks. To use this command, IGMP snooping must be enabled on VLAN. The “no” form of this command restores the default other than set to “no limit”. For the safety considerations, this command will not be configured to “no limit”. It is recommended to use default value and if layer 3 IGMP is in operation, please make this configuration in accordance with the IGMP configuration as possible.

Example:

```
Switch(config)#ip igmp snooping vlan 2 limit group 300
```

37.2.12 ip igmp snooping vlan interface (ethernet | port-channel) IFNAME limit

Command :

```
ip igmp snooping vlan <1-4094> interface (ethernet | port-channel) IFNAME limit {group <1-65535>| source <1-65535>} strategy (replace | drop)
```

```
no ip igmp snooping vlan <1-4094> interface (ethernet | port-channel) IFNAME limit group source strategy
```

Function :

Configure the number of groups which are allowed joining and the maximum of the source in each group under the IGMP Snooping port. Configure the strategy when it is up to the upper limit, including “replace” and “drop”.

Parameters :

vlan-id: VLAN ID range is <1-4094>

ethernet : Ethernet port name

ifname : Interface name

port-channel: ports aggregation

<1-65535> : The maximum number of groups allowed joining

<1-65535> : The maximum number of source table entries in each group, including include source and exclude source.

replace : Replace the group and source information

drop : Drop the new group and source information

Command mode:

Global Mode.

Default:

There is no limitation as default.

Usage Guide:

When the number of the groups joined under the port or the number of sources in this group exceeds the limit, it will be dealt according to the configured strategy. If it is drop, drop the new group and source information; if it is replace, find a dynamic group and source from the port to conduct deleting and replacing, and then add the new group and source information. The premise of using this command is that this VLAN is enabled IGMP Snooping function. No command configures as “no limitation”.

Example :

```
Switch(config)#ip igmp snooping vlan 2 interface ethernet 1/11 limit group 300 source 200 strategy replace
Switch(config)#
```

37.2.13 ip igmp snooping vlan mrouter-port interface

Command:

```
ip igmp snooping vlan <vlan-id> mrouter-port interface[<ehernet> | <port-channel>] <ifname>
no ip igmp snooping vlan <vlan-id> mrouter-port interface[<ehernet> | <port-channel>] <ifname>
```

Function:

Configure static mrouter port of VLAN. The no form of the command cancels this configuration.

Parameter:

vlan-id: ranging between <1-4094>

ehernet: Name of Ethernet port

ifname: Name of interface

port-channel: Port aggregation

Command Mode:

Global mode

Default:

No static mrouter port on VLAN by default.

Usage Guide:

When a port is a static mrouter port while also a dynamic mrouter port, it should be taken as a static mrouter port.

Deleting static mrouter port can only be realized by the no command.

Example:

```
Switch(config)#ip igmp snooping vlan 2 mrouter-port interface ethernet1/13
```

37.2.14 ip igmp snooping vlan mrouter-port learnpim

Command:

```
ip igmp snooping vlan <vlan-id> mrouter-port learnpim
```

```
no ip igmp snooping vlan <vlan-id> mrouter-port learnpim
```

Function:

Enable the function that the specified VLAN learns mrouter-port (according to pim packets), the no command will disable the function.

Parameter:

<vlan-id>: The specified VLAN ID, ranging from 1 to 4094.

Command Mode:

Global Mode

Default:

Enable

Usage Guide:

Enable the function that the specified VLAN learns mrouter-port (according to pim packets). After a port received pim packets, it will be set to mrouter port for implementing the automatic learning.

Example:

Disable the function that vlan 100 learns mrouter-port (according to pim packets).

```
Switch(config)#no ip igmp snooping vlan 100 mrouter-port learnpim
```

37.2.15 ip igmp snooping vlan mrpt

Command:

```
ip igmp snooping vlan <vlan-id> mrpt <value>
```

```
no ip igmp snooping vlan <vlan-id> mrpt
```

Function:

Configure this survive time of mrouter port.

Parameter:

vlan-id: VLAN ID, ranging between <1-4094>

value: mrouter port survive period, ranging between <1-65535>seconds

Command Mode:

Global mode

Default:

255s

Usage Guide:

This command validates on dynamic mrouter ports but not on mrouter port. To use this command, IGMP Snooping of this VLAN should be enabled previously.

Example:

```
Switch(config)#ip igmp snooping vlan 2 mrpt 100
```

37.2.16 ip igmp snooping vlan query-interval

Command:

```
ip igmp snooping vlan <vlan-id> query-interval <value>
```

```
no ip igmp snooping vlan <vlan-id> query-interval
```

Function:

Configure this query interval.

Parameter:

vlan-id: VLAN ID, ranging between <1-4094>

value: query interval, ranging between <1-65535>seconds

Command Mode:

Global mode

Default:

125s

Usage Guide:

It is recommended to use the default settings. Please keep this configure in accordance with IGMP configuration as possible if layer 3 IGMP is running.

Example:

```
Switch(config)#ip igmp snooping vlan 2 query-interval 130
```

37.2.17 ip igmp snooping vlan query-mrsp

Command:

```
ip igmp snooping vlan <vlan-id> query-mrsp <value>
```

```
no ip igmp snooping vlan <vlan-id> query-mrsp
```

Function:

Configure the maximum query response period. The “no ip igmp snooping vlan <vlan-id> query-mrsp” command restores to the default value.

Parameter:

vlan-id: VLAN ID, ranging between <1-4094>

value: ranging between <1-25> seconds

Command Mode:

Global mode

Default:

10s

Usage Guide:

It is recommended to use the default settings. Please keep this configure in accordance with IGMP configuration as possible if layer 3 IGMP is running.

Example:

```
Switch(config)#ip igmp snooping vlan 2 query-mrsp 18
```

37.2.18 ip igmp snooping vlan query-robustness

Command:

```
ip igmp snooping vlan <vlan-id> query-robustness <value>  
no ip igmp snooping vlan <vlan-id> query-robustness
```

Function:

Configure the query robustness. The “**no ip igmp snooping vlan <vlan-id> query-robustness**” command restores to the default value.

Parameter:

vlan-id: VLAN ID, ranging between <1-4094>

value: ranging between <2-10>

Command Mode:

Global mode

Default:

2

Usage Guide:

It is recommended to use the default settings. Please keep this configure in accordance with IGMP configuration as possible if layer 3 IGMP is running.

Example:

```
Switch(config)#ip igmp snooping vlan 2 query-robustness 3
```

37.2.19 ip igmp snooping vlan report source-address

Command:

```
ip igmp snooping vlan <vlan-id> report source-address <A.B.C.D>  
no ip igmp snooping vlan <vlan-id> report source-address
```

Function:

Configure forward report source-address for IGMP, the “**no ip igmp snooping vlan <vlan-id> report source-address**” command restores the default setting.

Parameter:

vlan-id: VLAN ID range<1-4094>;
A.B.C.D: IP address, can be 0.0.0.0.

Command Mode:

Global Mode.

Default:

Disabled.

Usage Guide:

Default configuration is recommended here. If IGMP snooping needs to be configured, the source address for forwarded IGMP messages can be 0.0.0.0. If it is required by the upstream that IGMP messages should use the same network address, the source address of IGMP messages should be configured to be the same with upstream.

Example:

```
Switch (config)#ip igmp snooping vlan 2 report source-address 10.1.1.1
```

37.2.20 ip igmp snooping vlan specific-query-mrsp

Command:

```
ip igmp snooping vlan <vlan-id> specific-query-mrsp <value>  
no ip igmp snooping vlan <vlan-id> specific-query-mrsp
```

Function:

Configure the maximum query response time of the specific group or source, the no command restores the default value.

Parameters:

<vlan-id>: the specific VLAN ID, the range from 1 to 4094.

<value>: the maximum query response time, unit is second, the range from 1 to 25, default value is 1.

Command Mode:

Global mode

Default:

Enable the function.

Usage Guide:

After enable vlan snooping in global mode, input this command to configure the maximum query response time of the specific group.

Example:

Configure/cancel the specific-query-mrsp of vlan3 as 2s.

```
SwiTh(config)#ip igmp snooping vlan 3 specific-query-mrsp 2
```

```
SwiTh(config)#no ip igmp snooping vlan 3 specific-query-mrspt
```

37.2.21 ip igmp snooping vlan static-group

Command:

```
ip igmp snooping vlan <vlan-id> static-group <A.B.C.D> [source <A.B.C.D>] interface [ethernet | port-channel] <IFNAME>
```

```
no ip igmp snooping vlan <vlan-id> static-group <A.B.C.D> [source <A.B.C.D>] interface [ethernet | port-channel] <IFNAME>
```

Function:

Configure static-group on specified port of the VLAN. The no form of the command cancels this configuration.

Parameter:

vlan-id: ranging between <1-4094>

A.B.C.D: the address of group or source

ethernet: Name of Ethernet port

port-channel: Port aggregation

ifname: Name of interface

Command Mode:

Global mode

Default:

No configuration by default.

Usage Guide:

When a group is a static while also a dynamic group, it should be taken as a static group. Deleting static group can only be realized by the no form of the command.

Example:

```
Switch(config)#ip igmp snooping vlan 1 static-group 224.1.1.1 source 192.168.1.1 interface ethernet 1/1
```

37.2.22 ip igmp snooping vlan suppression-query-time

Command:

```
ip igmp snooping vlan <vlan-id> suppression-query-time <value>  
no ip igmp snooping vlan <vlan-id> suppression-query-time
```

Function:

Configure the suppression query time. The “no ip igmp snooping vlan <vlan-id> suppression-query-time” command restores to the default value.

Parameter:

vlan-id: VLAN ID, ranging between <1-4094>

value: ranging between<1-65535> seconds

Command Mode:

Global mode

Default:

255s

Usage Guide:

This command can only be configured on L2 general querier. The Suppression-query-time refers to the period of suppression state in which the querier enters when receives query from the layer 3 IGMP in the segments.

Example:

```
Switch(config)#ip igmp snooping vlan 2 suppression-query-time 270
```

37.2.23 show ip igmp snooping

Command:

```
show ip igmp snooping [vlan <vlan-id>]
```

Parameter:

<vlan-id> is the VLAN number specified for displaying IGMP Snooping messages.

Command Mode:

Admin Mode

Usage Guide:

If no VLAN number is specified, it will show whether global IGMP Snooping switch is on, which VLAN is configured with I2-general-querier function, and if a VLAN number is specified, detailed IGMP messages for this VLAN will be shown.

Example:

1. Show IGMP Snooping summary messages of the switch

```
Switch(config)#show ip igmp snooping
Global igmp snooping status:  Enabled
L3 multicasting:              running
Igm p snooping is turned on for vlan 1(querier)
Igm p snooping is turned on for vlan 2
-----
```

Displayed Information	Explanation
Global igmp snooping status	Whether the global igmp snooping switch on the switch is on
L3 multicasting	whether the layer 3 multicast protocol of the switch is running
Igm p snooping is turned on for vlan 1(querier)	which VLANs on the switch is enabled with igmp snooping function, whether they are I2-general-querier

2. Display the IGMP Snooping summary messages of vlan1.

```
Switch#show ip igmp snooping vlan 1
Igm p snooping information for vlan 1
```


Icmp snooping L2 general querier :Yes(COULD_QUERY)
 Icmp snooping query-interval :125(s)
 Icmp snooping max response time :10(s)
 Icmp snooping robustness :2
 Icmp snooping mrouter port keep-alive time :255(s)
 Icmp snooping query-suppression time :255(s)

IGMP Snooping Connect Group Membership

Note:*-All Source, (S)- Include Source, [S]-Exclude Source

Groups	Sources	Ports	Exptime	System Level
238.1.1.1	(192.168.0.1)	Ethernet1/8	00:04:14	V2
	(192.168.0.2)	Ethernet1/8	00:04:14	V2

Icmp snooping vlan 1 mrouter port

Note:"!"-static mrouter port

!Ethernet1/2

Displayed Information	Explanation
Icmp snooping L2 general querier	Whether the VLAN enables I2-general-querier function and show whether the querier state is could-query or suppressed
Icmp snooping query-interval	Query interval of the VLAN
Icmp snooping max response time	Max response time of the VLAN
Icmp snooping robustness	IGMP Snooping robustness configured on the VLAN
Icmp snooping mrouter port keep-alive time	keep-alive time of dynamic mrouter of the VLAN
Icmp snooping query-suppression time	Suppression timeout of VLAN when as I2-general-querier
IGMP Snooping Connect Group Membership	Group membership of this VLAN, namely the correspondence between ports and (S,G)
Icmp snooping vlan 1 mrouter port	mrouter port of the VLAN, including both static and dynamic

Chapter 38 IPv6 Multicast Protocol

38.1 Commands for MLD Snooping Configuration

38.1.1 clear ipv6 mld snooping vlan

Command:

```
clear ipv6 mld snooping vlan <1-4094> groups [X:X::X:X]
```

Function:

Delete the group record of the specific VLAN.

Parameters:

<1-4094> the specific VLAN ID; X:X::X:X the specific group address.

Command Mode:

Admin Configuration Mode

Usage Guide:

Use show command to check the deleted group record.

Example:

Delete all groups.

```
Switch#clear ipv6 mld snooping vlan 1 groups
```

Relative Command: show ipv6 mld snooping vlan <1-4094>

38.1.2 clear ipv6 mld snooping vlan <1-4094> mrouter-port

Command:

```
clear ipv6 mld snooping vlan <1-4094> mrouter-port [ethernet IFNAME|IFNAME]
```

Function:

Delete the mrouter port of the specific VLAN.

Parameters:

<1-4094> the specific VLAN ID; ethernet the Ethernet port name; IFNAME the port name.

Command Mode:

Admin Configuration Mode

Usage Guide:

Use show command to check the deleted group record.

Example:

Delete the mrouter port in vlan 1.

```
Switch# clear ipv6 mld snooping vlan 1 mrouter-port
```

Relative Command: show ipv6 mld snooping mrouter-port

38.1.3 debug mld snooping all/packet/event/timer/mfc

Command:

```
debug mld snooping all/packet/event/timer/mfc  
no debug mld snooping all/packet/event/timer/mfc
```

Function:

Enable the debugging of the switch MLD Snooping; the “no” form of this command disables the debugging.

Command Mode:

Admin Mode

Default:

The MLD Snooping Debugging of the switch is disabled by default

Usage Guide:

This command is used for enabling the switch MLD Snooping debugging, which displays the MLD data packet message processed by the switch——packet, event messages——event, timer messages——timer, messages of down streamed hardware entry——mfc, all debug messages——all.

38.1.4 ipv6 mld snooping

Command:

```
ipv6 mld snooping
no ipv6 mld snooping
```

Function:

Enable the MLD Snooping function on the switch; the “**no ipv6 mld snooping**” command disables MLD Snooping.

Command Mode:

Global Mode

Default:

MLD Snooping disabled on the switch by default

Usage Guide:

Enable global MLD Snooping on the switch, namely allow every VLAN to be configured with MLD Snooping; the “no” form of this command will disable MLD Snooping on all the VLANs as well as the global MLD snooping

Example:

Enable MLD Snooping under global mode.

```
Switch (config)#ipv6 mld snooping
```

38.1.5 ipv6 mld snooping vlan

Command:

```
ipv6 mld snooping vlan <vlan-id>
no ipv6 mld snooping vlan <vlan-id>
```

Function:

Enable MLD Snooping on specified VLAN; the “no” form of this command disables MLD Snooping on specified VLAN.

Parameter:

<vlan-id> is the id number of the VLAN, with a valid range of <1-4094>.

Command Mode:

Global Mode

Default:

MLD Snooping disabled on VLAN by default

Usage Guide:

To configure MLD snooping on certain VLAN, the global MLD snooping should be first enabled. Disable MLD snooping on specified VLAN with the `no ipv6 mld snooping vlan vid` command

Example:

Enable MLD snooping on VLAN 100 under global mode.

```
Switch (config)#ipv6 mld snooping vlan 100
```

38.1.6 ipv6 mld snooping vlan immediate-leave

Command:

```
ipv6 mld snooping vlan <vlan-id> immediate-leave  
no ipv6 mld snooping vlan <vlan-id> immediate-leave
```

Function:

Enable immediate-leave function of the MLD protocol in specified VLAN; the “no” form of this command disables the immediate-leave function of the MLD protocol

Parameter:

<vlan-id> is the id number of specified VLAN, with valid range of <1-4094>.

Command Mode:

Global Mode

Default:

Disabled by default

Usage Guide:

Enabling the immediate-leave function of the MLD protocol will hasten the process the port leaves one multicast group, in which the specified group query of the group will not be sent and the port will be directly deleted.

Example:

Enable the MLD immediate-leave function on VLAN 100.

```
Switch (config)#ipv6 mld snooping vlan 100 immediate-leave
```

38.1.7 ipv6 mld snooping vlan l2-general-querier

Command:

```
ipv6 mld snooping vlan < vlan-id > l2-general-querier
```

```
no ipv6 mld snooping vlan < vlan-id > l2-general-querier
```

Function:

Set the VLAN to Level 2 general querier.

Parameter:

vlan-id: is the id number of the VLAN, with a valid range of <1-4094>

Command Mode:

Global Mode

Default:

VLAN is not a MLD Snooping L2 general querier by default.

Usage Guide:

It is recommended to configure an L2 general querier on a segment. If before configure with this command, MLD snooping is not enabled on this VLAN, this command will no be executed. When disabling the L2 general querier function, MLD snooping will not be disabled along with it. Main function of this command is sending general queries periodically to help the switches within this segment learn mrouter port.

Comment:

There are three ways to learn mrouter port in MLD Snooping:

1. The port which receives MLD query messages
2. The port which receives multicast protocol packets and support PIM
3. The port statically configured.

Example:

Set VLAN 100 to L2 general querier.

```
Switch (config)# ipv6 mld snooping vlan 100 l2-general-querier
```

38.1.8 ipv6 mld snooping vlan limit

Command:

```
ipv6 mld snooping vlan < vlan-id > limit {group <g_limit> | source <s_limit>}  
no ipv6 mld snooping vlan < vlan-id > limit
```

Function:

Configure number of groups the MLD snooping can join and the maximum number of sources in each group.

Parameter:

vlan-id: VLAN ID, the valid range is <1-4094>

g_limit: <1-65535>, max number of groups joined

s_limit: <1-65535>, max number of source entries in each group, consisting of include source and exclude source

Command Mode:

Global Mode

Default:

Maximum 50 groups by default, with each group capable with 40 source entries.

Usage Guide:

When number of joined group reaches the limit, new group requesting for joining in will be rejected for preventing hostile attacks. To use this command, MLD snooping must be enabled on VLAN. The “no” form of this command restores the default other than set to “no limit”. For the safety considerations, this command will not be configured to “no limit”. It is recommended to use default value and if layer 3 MLD is in operation, please make this configuration in accordance with the MLD configuration as possible.

Example:

```
Switch(config)#ipv6 mld snooping vlan 2 limit group 300
```

38.1.9 ipv6 mld snooping vlan mrouter-port interface

Command:

```
ipv6 mld snooping vlan <vlan-id> mrouter-port interface [<ethernet>|<port-channel>] <ifname>  
no ipv6 mld snooping vlan <vlan-id> mrouter-port interface [<ethernet>|<port-channel>] <ifname>
```

Function:

Set the static mrouter port of the VLAN; the “no” form of this command cancels the configuration.

Parameter:

vlan-id: VLAN id, the valid range is <1-4094>

Ethernet: name of Ethernet port

ifname: Name of interface

port-channel: port aggregate

Command Mode:

Global Mode

Default:

When a port is made static and dynamic mrouter port at the same time, it's the static mrouter properties is preferred.

Deleting the static mrouter port can only be done with the "no" form of this command.

Example:

```
Switch(config)#ipv6 mld snooping vlan 2 mrouter-port interface ethernet1/13
```

38.1.10 ipv6 mld snooping vlan mrouter-port learnpim6

Command:

```
ipv6 mld snooping vlan <vlan-id> mrouter-port learnpim6
```

```
no ipv6 mld snooping vlan <vlan-id> mrouter-port learnpim6
```

Function:

Enable the function that the specified VLAN learns mrouter-port (according to pimv6 packets), the no command will disable the function.

Parameter:

<vlan-id>: The specified VLAN ID, ranging from 1 to 4094.

Command Mode:

Global Mode

Default:

Enable

Usage Guide:

Enable the function that the specified VLAN learns mrouter-port (according to pimv6 packets). After a port received pimv6 packets, it will be set to mrouter port for implementing the automatic learning.

Example:

Disable the function that vlan 100 learns mrouter-port (according to pimv6 packets).

```
Switch(config)#no ipv6 mld snooping vlan 100 mrouter-port learnpim6
```

38.1.11 ipv6 mld snooping vlan mrpt

Command:

```
ipv6 mld snooping vlan <vlan-id> mrpt <value>
```

```
no ipv6 mld snooping vlan <vlan-id> mrpt
```

Function:

Configure the keep-alive time of the mrouter port.

Parameter:

vlan-id: VLAN ID, the valid range is <1-4094>

value: mrouter port keep-alive time with a valid range of <1-65535> secs.

Command Mode:

Global Mode

Default:

255s

Usage Guide:

This configuration is applicable on dynamic mrouter port, but not on static mrouter port. To use this command, MLD snooping must be enabled on the VLAN.

Example:

```
Switch(config)#ipv6 mld snooping vlan 2 mrpt 100
```

38.1.12 ipv6 mld snooping vlan query-interval

Command:

```
ipv6 mld snooping vlan <vlan-id> query-interval <value>
```

```
no ipv6 mld snooping vlan <vlan-id> query-interval
```

Function:

Configure the query interval.

Parameter:

vlan-id: VLAN ID, the valid range is <1-4094>

value: query interval, valid range: <1-65535>secs.

Command Mode:

Global Mode

Default:

125s

Usage Guide:

It is recommended to use default value and if layer 3 MLD is in operation, please make this configuration in accordance with the MLD configuration as possible.

Example:

```
Switch(config)#ipv6 mld snooping vlan 2 query-interval 130
```

38.1.13 ipv6 mld snooping vlan query-mrsp

Command:

```
ipv6 mld snooping vlan <vlan-id> query-mrsp <value>
```

```
no ipv6 mld snooping vlan <vlan-id> query-mrsp
```

Function:

Configure the maximum query response period. The “no” form of this command restores the default value.

Parameter:

vlan-id: VLAN ID, the valid range is <1-4094>

value: the valid range is <1-25> secs .

Command Mode:

Global Mode

Default:

10s

Usage Guide:

It is recommended to use default value and if layer 3 MLD is in operation, please make this configuration in accordance with the MLD configuration as possible.

Example:

```
Switch(config)#ipv6 mld snooping vlan 2 query-mrsp 18
```

38.1.14 ipv6 mld snooping vlan query-robustness

Command:

```
ipv6 mld snooping vlan <vlan-id> query-robustness <value>  
no ipv6 mld snooping vlan <vlan-id> query-robustness
```

Function:

Configure the query robustness; the “no” form of this command restores to the default value.

Parameter:

vlan-id: VLAN ID, the valid range is <1-4094>

value: the valid range is <2-10>.

Command Mode:

Global Mode

Default:

2

Usage Guide:

It is recommended to use default value and if layer 3 MLD is in operation, please make this configuration in accordance with the MLD configuration as possible.

Example:

```
Switch(config)#ipv6 mld snooping vlan 2 query-robustness 3
```

38.1.15 ipv6 mld snooping vlan static-group

Command:

```
ipv6 mld snooping vlan<vlan-id> static-group <X:X::X:X> [source< X:X::X:X>] interface [ethernet |  
port-channel] <IFNAME>  
no ipv6 mld snooping vlan <vlan-id> static-group <X:X::X:X> [source< X:X::X:X>] interface [ethernet |  
port-channel] <IFNAME>
```

Function:

Configure static-group on specified port of the VLAN. The no form of the command cancels this configuration.

Parameter:

vlan-id: ranging between <1-4094>
X:X::X:X:The address of group or source.
ethernet: Name of Ethernet port
port-channel: Port aggregation
ifname: Name of interface

Command Mode:

Global mode

Default:

No configuration by default.

Usage Guide:

When a group is a static while also a dynamic group, it should be taken as a static group. Deleting static group can only be realized by the no form of the command.

Example:

```
Switch(config)#ip igmp snooping vlan 1 static-group ff1e::15 source 2000::1 interface ethernet 1/1
```

38.1.16 ipv6 mld snooping vlan suppression-query-time

Command:

```
ipv6 mld snooping vlan <vlan-id> suppression-query-time <value>  
no ipv6 mld snooping vlan <vlan-id> suppression-query-time
```

Function:

Configure the suppression query time; the “no” form of this command restores the default value.

Parameter:

vlan-id: VLAN ID, valid range: <1-4094>

value: valid range: <1-65535>secs.

Command Mode:

Global Mode

Default:

255s

Usage Guide:

This command can only be configured on L2 general querier. The Suppression-query-time represents the period the suppression state maintains when general querier receives queries from layer 3 MLD within the segment. To use this command, the query-intervals in different switches within the same segment must be in accordance. It is recommended to use the default value.

Example:

```
Switch(config)#ipv6 mld snooping vlan 2 suppression-query-time 270
```

38.1.17 show ipv6 mld snooping

Command:

```
show ipv6 mld snooping [vlan <vlan-id>]
```

Parameter:

<vlan-id> is the number of VLAN specified to display the MLD Snooping messages

Command Mode:

Admin Mode

Usage Guide:

If no VLAN number is specified, it will show whether the global MLD snooping is enabled and layer 3 multicast protocol is running, as well as on which VLAN the MLD Snooping is enabled and configured l2-general-querier. If a VLAN number is specified, the detailed MLD Snooping messages of this VLAN will be displayed.

Example:

1. Summary of the switch MLD snooping

```
Switch(config)#show ipv6 mld snooping
```

```
Global mld snooping status: Enabled
```

```
L3 multicasting: running
```

```
Mld snooping is turned on for vlan 1(querier)
```

```
Mld snooping is turned on for vlan 2
```

Displayed Information	Explanation
Global mld snooping status	Whether or not the global MLD Snooping is enabled on the switch
L3 multicasting	Whether or not the layer 3 multicast protocol is running on the switch.
Mld snooping is turned on for vlan 1(querier)	On which VLAN of the switch is enabled MLD Snooping, if the VLAN are I2-general-querier.

2. Display the detailed MLD Snooping information of vlan1

```
Switch#show ipv6 mld snooping vlan 1
```

```
Mld snooping information for vlan 1
```

```
Mld snooping L2 general querier :Yes(COULD_QUERY)
```

```
Mld snooping query-interval :125(s)
```

```
Mld snooping max response time :10(s)
```

```
Mld snooping robustness :2
```

```
Mld snooping mrouter port keep-alive time :255(s)
```

```
Mld snooping query-suppression time :255(s)
```

MLD Snooping Connect Group Membership

Note:*-All Source, (S)- Include Source, [S]-Exclude Source

Groups	Sources	Ports	Exptime	System Level
Ff1e::15	(2000::1)	Ethernet1/8	00:04:14	V2
	(2000::2)	Ethernet1/8	00:04:14	V2

```
Mld snooping vlan 1 mrouter port
```

```
Note:"!"-static mrouter port
```

```
!Ethernet1/2
```

Displayed information	Explanation
Mld snooping L2 general querier	whether or not I2-general-querier is enabled on VLAN, the querier

	display status is set to could-query or suppressed
Mld snooping query-interval	Query interval time of the VLAN
Mld snooping max response time	Max response time of this VLAN
Mld snooping robustness	Robustness configured on the VLAN
Mld snooping mrouter port keep-alive time	Keep-alive time of the dynamic mrouter on this VLAN
Mld snooping query-suppression time	timeout of the VLAN as I2-general-querier at suppressed status.
MLD Snooping Connect Group Membership	Group membership of the VLAN, namely the correspondence between the port and (S,G) .
Mld snooping vlan 1 mrouter port	Mrouter port of the VLAN, including both static and dynamic.

Chapter 39 Commands for Multicast VLAN

39.1 multicast-vlan

Command:

multicast-vlan
no multicast-vlan

Function:

Enable multicast VLAN function on a VLAN; the “no” form of this command disables the multicast VLAN function.

Parameter:

None.

Command Mode:

VLAN Configuration Mode.

Default:

Multicast VLAN function not enabled by default.

Usage Guide:

The multicast VLAN function can not be enabled on Private VLAN. To disabling the multicast VLAN function of the VLAN, configuration of VLANs associated with the multicast VLAN should be deleted. Note that the default VLAN can not be configured with this command and only one multicast VLAN is allowed on a switch.

Examples:

```
Switch(config)#vlan 2
Switch(Config-Vlan2)# multicast-vlan
```

39.2 multicast-vlan association

Command:

multicast-vlan association <vlan-list>
no multicast-vlan association <vlan-list>

Function:

Associate several VLANs with a multicast VLAN; the “no” form of this command cancels the association relations.

Parameter:

<vlan-list> the VLAN ID list associated with multicast VLAN. Each VLAN can only be associated with one multicast VLAN and the association will only succeed when every VLAN listed in the VLAN ID table exists.

Command Mode:

VLAN Mode.

Default:

The multicast VLAN is not associated with any VLAN by default.

Usage Guide:

After a VLAN is associated with the multicast VLAN, when there comes the multicast order in the port of this VLAN, then the multicast data will be sent from the multicast VLAN to this port, so to reduce the data traffic. The VLAN associated with the multicast VLAN should not be a Private VLAN. A VLAN can only be associated with another VLAN after the multicast VLAN is enabled. Only one multicast VLAN can be enabled on a switch.

Examples:

```
Switch(config)#vlan 2
```

```
Switch(Config-Vlan2)# multicast-vlan association 3, 4
```

39.3 multicast-vlan association interface

Command:

```
multicast-vlan association interface (ethernet | port-channel) IFNAME
```

```
no multicast-vlan association interface (ethernet | port-channel) IFNAME
```

Function:

Associate the specified port with the multicast VLAN, so the associated ports are able to receive the multicast flow. The no command cancels the association between the ports and the multicast VLAN.

Parameter:

IFNAME: The name of the ethernet port or port-channel port

Command Mode:

VLAN configuration mode

Default:

None.

Usage Guide:

1. 'associated VLAN' and 'associated port' of the multicast VLAN are absolute, they do not affect each other when happening the cross.
2. The port of the aggregation member cannot be associated, but the associated port is able to be added to port-group and cancelling the association.
3. The configured port type includes port-channel port or ethernet port and the port is only configured as ACCESS mode.
4. The port (it will be associated) cannot belong to the multicast VLAN, in the same way, the associated port cannot be divided in multicast VLAN.
5. When the associated port mode is set as non ACCESS mode, the mode cannot be changed.

Example:

Suppose vlan2 is multicast VLAN.

```
Switch(config-vlan2)#multicast-vlan association interface ethernet 1/2
```

```
Switch(config-vlan2)#multicast-vlan association interface port-channel 2
```

```
Switch(config-vlan2)#no multicast-vlan association interface ethernet 1/2
```

```
Switch(config-vlan2)#no multicast-vlan association interface port-channel 2
```

Chapter 40 Commands for ACL

40.1 absolute-periodic/periodic

Command:

```
[no] absolute-periodic {Monday|Tuesday|Wednesday|Thursday|Friday  
|Saturday|Sunday}<start_time>to{Monday|Tuesday|Wednesday|Thursday|Friday|Saturday| Sunday}  
<end_time>  
[no]periodic{(Monday+Tuesday+Wednesday+Thursday+Friday+Saturday+Sunday)|daily| weekdays |  
weekend} <start_time> to <end_time>
```

Functions:

Define the time-range of different commands within one week, and every week to circulate subject to this time.

Parameters:

Friday (Friday)
Monday (Monday)
Saturday (Saturday)
Sunday (Sunday)
Thursday (Thursday)
Tuesday (Tuesday)
Wednesday (Wednesday)
daily (Every day of the week)
weekdays (Monday thru Friday)
weekend (Saturday thru Sunday)
start_time start time ,HH:MM:SS (hour: minute: second)
end_time end time,HH:MM:SS (hour: minute: second)

Remark: time-range polling is one minute per time, so the time error shall be <= one minute.

Command Mode:

time-range mode

Default:

No time-range configuration.

Usage Guide:

Periodic time and date. The definition of period is specific time period of Monday to Saturday and Sunday every week.

day1 hh:mm:ss To day2 hh:mm:ss or

{[day1+day2+day3+day4+day5+day6+day7][weekend|weekdays|daily] hh:mm:ss To hh:mm:ss

Examples:

Make configurations effective within the period from 9:15:30 to 12:30:00 during Tuesday to Saturday.

Switch(config)#time-range admin_timer

Switch(Config-Time-Range-admin_timer)#absolute-periodic Tuesday 9:15:30 to Saturday 12:30:00

Make configurations effective within the period from 14:30:00 to 16:45:00 on Monday, Wednesday, Friday and Sunday.

Switch(Config-Time-Range-admin_timer)#periodic Monday Wednesday Friday Sunday 14:30:00 to 16:45:00

40.2 absolute start

Command:

[no] absolute start <start_time> <start_data> [end <end_time> <end_data>]

Functions:

Define an absolute time-range, this time-range operates subject to the clock of this equipment.

Parameters:

start_time : start time, HH:MM:SS (hour: minute: second)

end_time : end time, HH:MM:SS (hour: minute: second)

start_data : start data, the format is, YYYY.MM.DD (year.month.day)

end_data : end data, the format is, YYYY.MM.DD (year.month.day)

Remark: time-range is one minute per time, so the time error shall be <= one minute.

Command Mode:

Time-range mode

Default:

No time-range configuration.

Usage Guide:

Absolute time and date, assign specific year, month, day, hour, minute of the start, shall not configure multiple absolute time and date, when in repeated configuration, the latter configuration covers the absolute time and date of the former configuration.

Examples:

Make configurations effective from 6:00:00 to 13:30:00 from Oct. 1, 2004 to Jan. 26, 2005.

```
Switch(config)#Time-range admin_timer
```

```
Switch(Config-Time-Range-admin_timer)#absolute start 6:00:00 2004.10.1 end 13:30:00 2005.1.26
```

40.3 access-list (ip extended)

Command:

```
access-list <num> {deny | permit} icmp {{<slpAddr> <sMask>} | any-source | {host-source <slpAddr>}}
{{<dIpAddr> <dMask>} | any-destination | {host-destination <dIpAddr>}} [<icmp-type> [<icmp-code>]]
[precedence <prec>] [tos <tos>][time-range<time-range-name>]
access-list <num> {deny | permit} igmp {{<slpAddr> <sMask>} | any-source | {host-source <slpAddr>}}
{{<dIpAddr> <dMask>} | any-destination | {host-destination <dIpAddr>}} [<igmp-type>] [precedence <prec>]
[tos <tos>][time-range<time-range-name>]
access-list <num> {deny | permit} tcp {{ <slpAddr> <sMask> } | any-source | {host-source <slpAddr> } }
[s-port { <sPort> | range <sPortMin> <sPortMax> } ] {{ <dIpAddr> <dMask> } | any-destination |
{host-destination <dIpAddr> } } [d-port { <dPort> | range <dPortMin> <dPortMax> } ] [ack+ fin+ psh+ rst+ urg+
syn] [precedence <prec> ] [tos <tos> ][time-range <time-range-name> ]
access-list <num> {deny / permit} udp {{ <slpAddr> <sMask> } | any-source | {host-source <slpAddr> } }
[s-port { <sPort> | range <sPortMin> <sPortMax> } ] {{ <dIpAddr> <dMask> } | any-destination |
{host-destination <dIpAddr> } } [d-port { <dPort> / range <dPortMin> <dPortMax> } ] [precedence <prec> ] [tos
<tos> ][time-range<time-range-name> ]
access-list <num> {deny / permit} {eigrp | gre | igrp | ipinip | ip | ospf | <protocol-num> } {{ <slpAddr>
<sMask> } / any-source / {host-source <slpAddr> } } {{ <dIpAddr> <dMask> } | any-destination /
{host-destination <dIpAddr> } } [precedence <prec> ] [tos <tos> ][time-range <time-range-name> ]
no access-list <num>
```

Functions:

Create a numeric extended IP access rule to match specific IP protocol or all IP protocol; if access-list of this coded numeric extended does not exist, thus to create such a access-list.

Parameters:

<num> is the No. of access-list, 100-299; **<protocol>** is the No. of upper-layer protocol of ip, 0-255; **<slpAddr>** is the source IP address, the format is dotted decimal notation; **<sMask >** is the reverse mask of source IP, the format is dotted decimal notation; **<dIpAddr>** is the destination IP address, the format is dotted decimal notation; **<dMask>** is the reverse mask of destination IP, the format is dotted decimal notation, attentive position 0, ignored position 1; **<igmp-type>**, the type of igmp, 0-15; **<icmp-type>**, the type of icmp, 0-255; **<icmp-code>**, protocol No. of icmp, 0-255; **<prec>**, IP priority, 0-7; **<tos>**, to value, 0-15; **<sPort>**, source port No., 0-65535; **<sPortMin>**, the down boundary of source port; **<sPortMax>**, the up boundary of source port; **<dPortMin>**, the down boundary of destination port; **<dPortMax>**, the up boundary of destination port; **<dPort>**, destination port No., 0-65535; **<time-range-name>**, the name of time-range.

Command Mode:

Global mode

Default:

No access-lists configured.

Usage Guide:

When the user assign specific **<num>** for the first time, ACL of the serial number is created, then the lists are added into this ACL; the access list which marked 200-299 can configure not continual reverse mask of IP address.

<igmp-type> represent the type of IGMP packet, and usual values please refer to the following description:

17(0x11): IGMP QUERY packet

18(0x12): IGMP V1 REPORT packet

22(0x16): IGMP V2 REPORT packet

23(0x17): IGMP V2 LEAVE packet

34(0x22): IGMP V3 REPORT packet

19(0x13): DVMR packet

20(0x14): PIM V1 packet

Particular notice: The packet types included here are not the types excluding IP OPTION. Normally, IGMP packet contains OPTION fields, and such configuration is of no use for this type of packet. If you want to configure the packets containing OPTION, please directly use the manner where OFFSET is configured.

Examples:

Create the numeric extended access-list whose serial No. is 110. deny icmp packet to pass, and permit udp packet with destination address 192. 168. 0. 1 and destination port 32 to pass.

```
Switch(config)#access-list 110 deny icmp any any-destination
```

```
Switch(config)#access-list 110 permit udp any host-destination 192.168.0.1 d-port 32
```

40.4 access-list (ip standard)

Command:

```
access-list <num> {deny | permit} {{<slpAddr> <sMask >} | any-source| {host-source <slpAddr>}}  
no access-list <num>
```

Functions:

Create a numeric standard IP access-list. If this access-list exists, then add a rule list; the “no access-list <num>” operation of this command is to delete a numeric standard IP access-list.

Parameters:

<num> is the No. of access-list, 100-199; <slpAddr> is the source IP address, the format is dotted decimal notation; <sMask > is the reverse mask of source IP, the format is dotted decimal notation.

Command Mode:

Global mode

Default:

No access-lists configured.

Usage Guide:

When the user assign specific <num> for the first time, ACL of the serial number is created, then the lists are added into this ACL.

Examples:

Create a numeric standard IP access-list whose serial No. is 20, and permit date packets with source address of 10.1.1.0/24 to pass, and deny other packets with source address of 10.1.1.0/16.

```
Switch(config)#access-list 20 permit 10.1.1.0 0.0.0.255
```

```
Switch(config)#access-list 20 deny 10.1.1.0 0.0.255.255
```

40.5 access-list(mac extended)

Command:

```
access-list <num> {deny | permit} {any-source-mac | {host-source-mac <host_smac>} | {<smac>  
<smac-mask>}} {any-destination-mac | {host-destination-mac <host_dmac>} | {<dmac> <dmac-mask>}}  
[untagged-eth2 | tagged-eth2 | untagged-802-3 | tagged-802-3]  
no access-list <num>
```

Functions:

Define an extended numeric MAC ACL rule, “**no access-list <num>**” command deletes an extended numeric MAC access-list rule.

Parameters:

<num> is the access-list No. which is a decimal's No. from 1100-1199; **deny** if rules are matching, deny access; **permit** if rules are matching, permit access; **<any-source-mac>** any source address; **<any-destination-mac>** any destination address; **<host_smac>**, **<smac>** source MAC address; **<smac-mask>** mask (reverse mask) of source MAC address; **<host_dmac>** , **<dmac>** destination MAC address; **<dmac-mask>** mask (reverse mask) of destination MAC address; **untagged-eth2** format of untagged ethernet II packet; **tagged-eth2** format of tagged ethernet II packet; **untagged-802-3** format of untagged ethernet 802.3 packet; **tagged-802-3** format of tagged ethernet 802.3 packet.

Command Mode:

Global mode

Default Configuration:

No access-list configured

Usage Guide:

When the user assign specific **<num>** for the first time, ACL of the serial number is created, then the lists are added into this ACL.

Examples:

Permit tagged-eth2 with any source MAC addresses and any destination MAC addresses and the packets pass.
Switch(config)#access-list 1100 permit any-source-mac any-destination-mac tagged-eth2

40.6 access-list(mac-ip extended)

Command:

```
access-list<num>{deny|permit}{any-source-mac| {host-source-mac<host_smac>}{<smac><smac-mask>}}
{any-destination-mac|{host-destination-mac <host_dmac>}{<dmac><dmac-mask>}}icmp
{{<source><source-wildcard>}|any-source|{host-source<source-host-ip>}}
{{<destination><destination-wildcard>}|any-destination|
{host-destination<destination-host-ip>}}[<icmp-type> [<icmp-code>]] [precedence <precedence>] [tos
<tos>][time-range<time-range-name>]
access-list<num>{deny|permit}{any-source-mac| {host-source-mac<host_smac>}{<smac><smac-mask>}}
```



```

{<any-destination-mac>|{<host-destination-mac <host_dmac>}&#123;&#123;<dmac><dmac-mask>&#125;&#125;igmp
&#123;&#123;<source><source-wildcard>&#125;&#123;&#123;any-source|{<host-source <source-host-ip>&#125;&#125;
&#123;&#123;<destination><destination-wildcard>&#125;&#123;&#123;any-destination | {<host-destination <destination-host-ip>&#125;&#125;
[<igmp-type>] [precedence <precedence>] [tos <tos>][&#123;&#123;time-range <time-range-name>
access-list <num> {deny|permit}{&#123;&#123;any-source-mac | {<host-source-mac <host_smac> }&#123;&#123; <smac>
<smac-mask> }&#123;&#123;any-destination-mac | {<host-destination-mac <host_dmac> }&#123;&#123; <dmac> <dmac-mask> }&#125;&#125;tcp
&#123;&#123; <source> <source-wildcard> }&#123;&#123;any-source | {<host-source <source-host-ip> }&#123;&#123;[s-port { <port1> | range
<sPortMin> <sPortMax> } ] &#123;&#123; <destination> <destination-wildcard> } | any-destination | {<host-destination
<destination-host-ip> } } [d-port { <port3> | range <dPortMin> <dPortMax> } ] [ack+fin+psh+rst+urg+syn]
[precedence <precedence> ] [tos <tos> ] [time-range <time-range-name> ]
access-list <num> {deny|permit}{&#123;&#123;any-source-mac | {<host-source-mac <host_smac> }&#123;&#123; <smac>
<smac-mask> }&#123;&#123;any-destination-mac | {<host-destination-mac <host_dmac> }&#123;&#123; <dmac> <dmac-mask> }&#125;&#125;udp
&#123;&#123; <source> <source-wildcard> }&#123;&#123;any-source | {<host-source <source-host-ip> }&#123;&#123;[s-port { <port1> | range
<sPortMin> <sPortMax> } ] &#123;&#123; <destination> <destination-wildcard> }|any-destination/ {<host-destination
<destination-host-ip> }&#123;&#123;[d-port { <port3> | range <dPortMin> <dPortMax> } ] [precedence
<precedence> ] [tos <tos> ] [time-range <time-range-name> ]
access-list <num> {deny|permit}{&#123;&#123;any-source-mac | {<host-source-mac <host_smac> }&#123;&#123; <smac>
<smac-mask> }&#123;&#123;any-destination-mac|{<host-destination-mac <host_dmac> }&#123;&#123; <dmac> <dmac-mask> }&#125;&#125;
{eigrp|gre|igrp|ip|ipinip|ospf}{ <protocol-num> } &#123;&#123; <source> <source-wildcard> }|any-source|{<host-source
<source-host-ip> }&#123;&#123; &#123;&#123; <destination> <destination-wildcard> }|any-destination| {<host-destination
<destination-host-ip> }&#123;&#123; [precedence <precedence> ] [tos <tos> ][&#123;&#123;time-range <time-range-name> ]

```

Functions:

Define an extended numeric MAC-IP ACL rule, no command deletes a extended numeric MAC-IP ACL access-list rule.

Parameters:

num access-list serial No. this is a decimal's No. from 3100-3299; **deny** if rules are matching, deny to access; **permit** if rules are matching, permit to access; **any-source-mac**: any source MAC address; **any-destination-mac**: any destination MAC address; **host_smac** , **smac**: source MAC address; **smac-mask**: **mask** (reverse mask) of source MAC address ; **host_dmac** , **dmas** destination MAC address; **dmac-mask** mask (reverse mask) of destination MAC address; **protocol** No. of name or IP protocol. It can be a key word: eigrp, gre, icmp, igmp, igrp, ip, ipinip, ospf, tcp, or udp, or an integer from 0-255 of list No. of IP address. Use key word 'ip' to match all Internet protocols (including ICMP, TCP, AND UDP) list; **source-host-ip**, **source** No. of source network or source host of packet delivery. Numbers of 32-bit binary system with dotted decimal notation expression; **host**: means the address is the IP address of source host, otherwise the IP address of network; **source-wildcard**: reverse of source IP. Numbers of 32-bit binary system expressed by decimal's numbers with four-point separated, reverse mask; **destination-host-ip**, **destination** No. of destination network or host to which packets are delivered. Numbers of 32-bit binary system with dotted decimal notation expression; **host**: means the address is the that the destination

host address, otherwise the network IP address; **destination-wildcard**: mask of destination. | Numbers of 32-bit binary system expressed by decimal's numbers with four-point separated, reverse mask; **s-port(optional)**: means the need to match TCP/UDP source port; **port1(optional)**: value of TCP/UDP source interface No., Interface No. is an integer from 0-65535; **d-port(optional)**: means need to match TCP/UDP destination interface; **<sPortMin>**, the down boundary of source port; **<sPortMax>**, the up boundary of source port; **port3(optional)**: value of TCP/UDP destination interface No., Interface No. is an integer from 0-65535; **<dPortMin>**, the down boundary of destination port; **<dPortMax>**, the up boundary of destination port; **[ack] [fin] [psh] [rst] [urg] [syn]**, (optional) only for TCP protocol, multi-choices of tag positions are available, and when TCP data reports the configuration of corresponding position, then initialization of TCP data report is enabled to form a match when in connection; **precedence** (optional) packets can be filtered by priority which is a number from 0-7; **tos** (optional) packets can be filtered by service type which is a number from 0-15; **icmp-type** (optional) ICMP packets can be filtered by packet type which is a number from 0-255; **icmp-code** (optional) ICMP packets can be filtered by packet code which is a number from 0-255; **igmp-type** (optional) ICMP packets can be filtered by IGMP packet name or packet type which is a number from 0-255; **<time-range-name>**, name of time range

Command Mode:

Global mode

Default Configuration:

No access-list configured.

Usage Guide:

When the user assign specific <num> for the first time, ACL of the serial number is created, then the lists are added into this ACL; the access list which marked 3200-3299 can configure not continual reverse mask of IP address.

Examples:

Permit the passage of TCP packet with source MAC 00-12-34-45-XX-XX, any destination MAC address, source IP address 100.1.1.0 0.255.255.255, and source port 100.

```
Switch(config)#access-list 3199 permit 00-12-34-45-67-00 00-00-00-00-FF-FF any-destination-mac tcp 100.1.1.0
0.255.255.255 s-port 100 any-destination
```

40.7 access-list(mac standard)

Command:

```
access-list <num> {deny|permit} {any-source-mac | {host-source-mac <host_smac> } | {<smac>
<smac-mask>}}
no access-list <num>
```

Functions:

Define a standard numeric MAC ACL rule, no command deletes a standard numeric MAC ACL access-list rule.

Parameters:

<num> is the access-list No. which is a decimal's No. from 700-799; **deny** if rules are matching, deny access; **permit** if rules are matching, permit access; **<host_smac>**, **<sumac>** source MAC address; **<sumac-mask>** mask (reverse mask) of source MAC address.

Command Mode:

Global mode

Default Configuration:

No access-list configured.

Usage Guide:

When the user assign specific **<num>** for the first time, ACL of the serial number is created, then the lists are added into this ACL.

Examples:

Permit the passage of packets with source MAC address 00-00-XX-XX-00-01, and deny passage of packets with source MAC address 00-00-00-XX-00-ab.

```
Switch(config)# access-list 700 permit 00-00-00-00-00-01 00-00-FF-FF-00-00
```

```
Switch(config)# access-list 700 deny 00-00-00-00-00-ab 00-00-00-FF-00-00
```

40.8 clear access-group statistic

Command:

```
clear access-group statistic [ethernet <interface-name> ]
```

Functions:

Empty packet statistics information of the specified interface.

Parameters:

<interface-name>: Interface name.

Command Mode:

Admin mode

Default:

None

Examples:

Empty packet statistics information of interface.

Switch#clear access-group statistic

40.9 firewall

Command:

firewall {enable | disable}

Functions:

Enable or disable firewall.

Parameters:

enable means to enable of firewall; **disable** means to disable firewall.

Default:

It is no use if default is firewall.

Command Mode:

Global mode

Usage Guide:

Whether enabling or disabling firewall, access rules can be configured. But only when the firewall is enabled, the rules can be used in specific orientations of specific ports. When disabling the firewall, all ACL tied to ports will be deleted.

Examples:

Enable firewall.

Switch(config)#firewall enable

40.10 ip access extended

Command:

```
ip access extended <name>  
no ip access extended <name>
```

Function:

Create a named extended IP access list. The no prefix will remove the named extended IP access list including all the rules.

Parameters:

<name> is the name of the access list. The name can be formed by non-all-digit characters of length of 1 to 32.

Command Mode:

Global Mode.

Default:

No access list is configured by default.

Usage Guide:

When this command is issued for the first time, an empty access list will be created.

Example:

```
To create a extended IP access list name tcpFlow.  
Switch(config)#ip access-list extended tcpFlow
```

40.11 ip access standard

Command:

```
ip access standard <name>  
no ip access standard <name>
```

Function:

Create a named standard access list. The no prefix will remove the named standard access list including all the rules in the list.

Parameters:

<name> is the name of the access list. The name can be formed by non-all-digit characters of length of 1 to 32.

Command Mode:

Global Mode.

Default:

No access list is configured by default.

Usage Guide:

When this command is issued for the first time, an empty access list will be created.

Example:

To create a standard IP access list name ipFlow.

```
Switch(config)#ip access-list standard ipFlow
```

40.12 ipv6 access-list

Command:

```
ipv6 access-list <num-std> {deny | permit} {<sIPv6Prefix/sPrefixlen> | any-source | {host-source  
<sIPv6Addr>}}  
no ipv6 access-list <num-std>
```

Functions:

Creates a numbered standard IP access-list, if the access-list already exists, then a rule will add to the current access-list; the “**no access-list {<num-std>|<num-ext>}**” command deletes a numbered standard IP access-list.

Parameters:

<num-std> is the list number, list range is between 500~599; **<sIPv6Prefix>** is the prefix of the ipv6 source address; **<sPrefixlen>** is the length of prefix of the ipv6 source address, **range** is between 1~128; **<sIPv6Addr>** is the ipv6 source address.

Command Mode:

Global Mode.

Default:

No access-list configured.

Usage Guide:

Creates a numbered 520 standard IP access-list first time, the following configuration will add to the current access-list.

Examples:

Creates a numbered 520 standard IP access-list, allow the source packet from 2003:1:2:3::1/64 pass through the net, and deny all the other packet from the source address 2003:1:2::1/48 pass through.

```
Switch (config)#ipv6 access-list 520 permit 2003:1:2:3::1/64
```

```
Switch (config)#ipv6 access-list 520 deny 2003:1:2::1/48
```

40.13 ipv6 access standard

Command:

```
ipv6 access-list standard <name>
```

```
no ipv6 access-list standard <name>
```

Function:

Create a name-based standard IPv6 access list; the “**no ipv6 access-list standard<name>**”command deletes the name-based standard IPv6 access list (including all entries).

Parameter:

<name> is the name for access list, the character string length is from 1 to 32.

Command Mode:

Global Mode.

Default:

No access list is configured by default.

Usage Guide:

When this command is run for the first time, only an empty access list with no entry will be created.

Example:

Create a standard IPv6 access list named ip6Flow.

```
Switch(config)#ipv6 access-list standard ip6Flow
```

40.14 ipv6 access extended

Command:

```
ipv6 access-list extended <name>  
no ipv6 access-list extended <name>
```

Function:

Create a name-based extended IPv6 access list; the no command delete the name-based extended IPv6 access list.

Parameter:

<name> is the name for access list, the character string length is from 1 to 32.

Command Mode:

Global Mode.

Default:

No IP address is configured by default.

Usage Guide:

When this command is run for the first time, only an empty access list with no entry will be created.

Example:

```
Create an extensive IPv6 access list named tcpFlow.  
Switch (config)#ipv6 access-list extended tcpFlow
```

40.15 {ip|ipv6|mac|mac-ip} access-group

Command:

```
{ip|ipv6|mac|mac-ip} access-group <name> {in} [traffic-statistic]  
no {ip|ipv6|mac|mac-ip} access-group <name> {in}
```

Function:

Apply an access-list on some direction of port, and determine if ACL rule is added statistic counter or not by options; the no command deletes access-list binding on the port.

Parameter:

<name> is the name for access list, the character string length is from 1 to 32.

Command Mode:

Port Mode

Default:

The entry of port is not bound ACL.

Usage Guide:

One port can bind ingress rules. Note: when a ACL has multiple rules, traffic-statistic can't configure.

There are four kinds of packet head field based on concerned: MAC ACL, IP ACL, MAC-IP ACL and IPv6 ACL; to some extent, ACL filter behavior (permit, deny) has a conflict when a data packet matches multi types of four ACLs. The strict priorities are specified for each ACL based on outcome veracity. It can determine final behavior of packet filter through priority when the filter behavior has a conflict.

When binding ACL to port, there are some limits as below:

1. Each port can bind a MAC-IP ACL, a IP ACL, a MAC ACL and a IPv6 ACL; It only supports the standard ipv6 type when binding the IPV6 ACL to the port.
2. When binding four ACLs and data packet matching the multi ACLs simultaneity, the priority from high to low are shown as below,

Ingress IPv6 ACL

Ingress MAC-IP ACL

Ingress MAC ACL

Ingress IP ACL

Example:

Binding AAA access-list to entry direction of port.

```
Switch(Config-If-Ethernet1/5)#ip access-group aaa in
```

40.16 mac access extended

Command:

```
mac-access-list extended <name>
```

```
no mac-access-list extended <name>
```

Functions:

Define a name-manner MAC ACL or enter access-list configuration mode, "no mac-access-list extended <name>" command deletes this ACL.

Parameters:

<name> name of access-list excluding blank or quotation mark, and it must start with letter, and the length cannot exceed 32. (remark: sensitivity on capital or small letter.)

Command Mode:

Global mode

Default Configuration:

No access-lists configured.

Usage Guide:

After assigning this command for the first time, only an empty name access-list is created and no list item included.

Examples:

Create an MAC ACL named mac_acl.

```
Switch(config)# mac-access-list extended mac_acl
```

```
Switch(Config-Mac-Ext-Nacl-mac_acl)#
```

40.17 mac-ip access extended

Command:

```
mac-ip-access-list extended <name>
```

```
no mac-ip-access-list extended <name>
```

Functions:

Define a name-manner MAC-IP ACL or enter access-list configuration mode, "**no mac-ip-access-list extended <name>**" command deletes this ACL.

Parameters:

<name>: name of access-list excluding blank or quotation mark, and it must start with letter, and the length cannot exceed 32 (remark: sensitivity on capital or small letter).

Command Mode:

Global Mode.

Default:

No named MAC-IP access-list.

Usage Guide:

After assigning this command for the first time, only an empty name access-list is created and no list item included.

Examples:

Create an MAC-IP ACL named macip_acl.

```
Switch(config)# mac-ip-access-list extended macip_acl
```

```
Switch(Config-Maclp-Ext-Nacl-macip_acl)#
```

40.18 permit | deny (ip extended)

Command:

```
[no] {deny | permit} icmp {{<slpAddr> <sMask>} | any-source | {host-source <slpAddr>}} {{<dIpAddr> <dMask>} | any-destination | {host-destination <dIpAddr>}} [<icmp-type> [<icmp-code>]] [precedence <prec>] [tos <tos>][time-range<time-range-name>]
```

```
[no] {deny | permit} igmp {{<slpAddr> <sMask>} | any-source | {host-source <slpAddr>}} {{<dIpAddr> <dMask>} | any-destination | {host-destination <dIpAddr>}} [<igmp-type>] [precedence <prec>] [tos <tos>][time-range<time-range-name>]
```

```
[no] {deny | permit} tcp {{ <slpAddr> <sMask> } | any-source | {host-source <slpAddr> }} [s-port { <sPort> | range <sPortMin> <sPortMax> }] {{ <dIpAddr> <dMask> } | any-destination | {host-destination <dIpAddr> }} [d-port { <dPort> | range <dPortMin> <dPortMax> }] [ack+fin+psh+rst+urg+syn] [precedence <prec> ] [tos <tos> ][time-range <time-range-name> ]
```

```
[no] {deny | permit} udp {{ <slpAddr> <sMask> } / any-source | {host-source <slpAddr> }} [s-port { <sPort> | range <sPortMin> <sPortMax> }] {{ <dIpAddr> <dMask> } | any-destination | {host-destination <dIpAddr> }} [d-port { <dPort> | range <dPortMin> <dPortMax> }] [precedence <prec> ] [tos <tos> ][time-range<time-range-name> ]
```

```
[no] {deny | permit} {eigrp | gre | igmp | ipinip | ip | ospf | <protocol-num>} {{<slpAddr> <sMask>} | any-source | {host-source <slpAddr>}} {{<dIpAddr> <dMask>} | any-destination | {host-destination <dIpAddr>}} [precedence <prec>] [tos <tos>][time-range<time-range-name>]
```

Functions:

Create a name extended IP access rule to match specific IP protocol or all IP protocol.

Parameters:

<slpAddr> is the source IP address, the format is dotted decimal notation; **<sMask>** is the reverse mask of source IP, the format is dotted decimal notation; **<dIpAddr>** is the destination IP address, the format is dotted decimal notation; **<dMask>** is the reverse mask of destination IP, the format is dotted decimal notation, attentive position 0, ignored position 1; **<igmp-type>**, the type of igmp, 0-15; **<icmp-type>**, the type of icmp, 0-255 ; **<icmp-code>**, protocol No. of icmp, 0-255; **<prec>**, IP priority, 0-7; **<tos>**, to value, 0-15; **<sPort>**, source port No., 0-65535; **<sPortMin>**, the down boundary of source port; **<sPortMax>**, the up boundary of source port; **<dPort>**, destination port No. 0-65535; **<dPortMin>**, the down boundary of destination port; **<dPortMax>**, the up boundary of destination port; **<time-range-name>**, time range name.

Command Mode:

Name extended IP access-list configuration mode

Default:

No access-list configured.

Examples:

Create the extended access-list, deny icmp packet to pass, and permit udp packet with destination address 192. 168. 0. 1 and destination port 32 to pass.

```
Switch(config)# access-list ip extended udpFlow
```

```
Switch(Config-IP-Ext-Nacl-udpFlow)#deny igmp any any-destination
```

```
Switch(Config-IP-Ext-Nacl-udpFlow)#permit udp any host-destination 192.168.0.1 d-port 32
```

40.19 permit | deny(ip standard)

Command:

```
{deny | permit} {{<slpAddr> <sMask>} | any-source | {host-source <slpAddr>}}
no {deny | permit} {{<slpAddr> <sMask>} | any-source | {host-source <slpAddr>}}
```

Functions:

Create a name standard IP access rule, and “no {deny | permit} {{<slpAddr> <sMask>} | any-source | {host-source <slpAddr>}}” action of this command deletes this name standard IP access rule.

Parameters:

<slpAddr> is the source IP address, the format is dotted decimal notation; **<sMask>** is the reverse mask of source IP, the format is dotted decimal notation.

Command Mode:

Name standard IP access-list configuration mode

Default:

No access-list configured.

Example:

Permit packets with source address 10.1.1.0/24 to pass, and deny other packets with source address 10.1.1.0/16.

```
Switch(config)# access-list ip standard ipFlow
```

```
Switch(Config-Std-Nacl-ipFlow)# permit 10.1.1.0 0.0.0.255
```

```
Switch(Config-Std-Nacl-ipFlow)# deny 10.1.1.0 0.0.255.255
```

40.20 permit | deny(ipv6 extended)

Command:

```
[no] {deny | permit} icmp {<slIPv6Prefix/sPrefixlen>} | any-source | {host-source <slIPv6Addr>}}
{<dIPv6Prefix/dPrefixlen> | any-destination | {host-destination <dIPv6Addr>}} [<icmp-type> [<icmp-code>]]
[dscp <dscp>] [flow-label <fl>][time-range <time-range-name>]

[no] {deny | permit} tcp { <slIPv6Prefix/sPrefixlen> | any-source | {host-source <slIPv6Addr> }} [s-port
{ <sPort> | range <sPortMin> <sPortMax> }] { <dIPv6Prefix/dPrefixlen> | any-destination | {host-destination
<dIPv6Addr> }} [d-port { <dPort> | range <dPortMin> <dPortMax> }] [syn | ack | urg | rst | fin | psh] [dscp
<dscp>] [flow-label <fl>][time-range <time-range-name> ]

[no] {deny | permit} udp { <slIPv6Prefix/sPrefixlen> | any-source | {host-source <slIPv6Addr> }} [s-port
{ <sPort> | range <sPortMin> <sPortMax> }] { <dIPv6Prefix/dPrefixlen> | any-destination | {host-destination
<dIPv6Addr> }} [d-port { <dPort> | range <dPortMin> <dPortMax> }] [dscp <dscp> ] [flow-label
<fl>][time-range <time-range-name> ]

[no] {deny | permit} <next-header> {<slIPv6Prefix/sPrefixlen> | any-source | {host-source <slIPv6Addr>}}
{<dIPv6Prefix/dPrefixlen> | any-destination | {host-destination <dIPv6Addr>}} [dscp <dscp>] [flow-label
<fl>][time-range <time-range-name>]

[no] {deny | permit} {<slIPv6Prefix/sPrefixlen> | any-source | {host-source <slIPv6Addr>}}
{<dIPv6Prefix/dPrefixlen> | any-destination | {host-destination <dIPv6Addr>}} [dscp <dscp>] [flow-label <fl>]
[time-range<time-range-name>]
```

Function:

Create an *extended* nomenclature IPv6 access control *rule* for specific IPv6 protocol.

Parameter:

<sIPv6Addr> is the source IPv6 address; **<sPrefixlen>** is the length of the IPv6 address prefix, the range is 1~128; **<dIPv6Addr>** is the destination IPv6 address; **<dPrefixlen>** is the length of the IPv6 address prefix, the range is 1~128; **<igmp-type>**, type of the IGMP; **<icmp-type>**, icmp type; **<icmp-code>**, icmp protocol number; **<dscp>**, IPv6 priority ,the range is 0 ~ 63; **<flowlabel>**, value of the flow label, the range is 0 ~ 1048575; **syn,ack,urg,rst,fin,psh,tcp** label position; **<sPort>**, source port number, the range is 0~65535; **<sPortMin>**, the down boundary of source port; **<sPortMax>**, the up boundary of source port; **<dPort>**, destination port number, the range is 0~65535; **<dPortMin>**, the down boundary of destination port; **<dPortMax>**, the up boundary of destination port. **<next-header>**, the IPv6 next-header. **<time-range-name>**, time range name.

Command Mode:

IPv6 nomenclature extended access control list mode

Default:

No access control list configured.

Example:

Create an extended access control list named udpFlow, denying the igmp packets while allowing udp packets with destination address 2001:1:2:3::1 and destination port 32.

```
Switch(config)#ipv6 access-list extended udpFlow
```

```
Switch(Config-IPv6-Ext-Nacl-udpFlow)#deny igmp any any-destination
```

```
Switch(Config-IPv6-Ext-Nacl-udpFlow)#permit udp any-source host-destination 2001:1:2:3::1 dPort 32
```

40.21 permit | deny(ipv6 standard)

Command:

```
[no] {deny | permit} {{<sIPv6Prefix/sPrefixlen>} | any-source | {host-source <sIPv6Addr>}}
```

Function:

Create a standard nomenclature IPv6 access control rule; the no form of this command deletes the nomenclature standard IPv6 access control rule.

Parameter:

<sIPv6Prefix> is the prefix of the source IPv6 address, **<sPrefixlen>** is the length of the IPv6 address prefix, the valid range is 1~128. **<sIPv6Addr>** is the source IPv6 address.

Command Mode:

Standard IPv6 nomenclature access list mode

Default:

No access list configured by default.

Example:

Permit packets with source address of 2001:1:2:3::1/64 while denying those with source address of 2001:1:2:3::1/48.

```
Switch(config)#ipv6 access-list standard ipv6Flow
```

```
Switch(Config-IPv6-Std-Nacl-ipv6Flow)# permit 2001:1:2:3::1/64
```

```
Switch(Config-IPv6-Std-Nacl-ipv6Flow)# deny 2001:1:2:3::1/48
```

40.22 permit | deny(mac extended)

Command:

```
[no]{deny|permit} {any-source-mac}{host-source-mac <host_smac> }{ <smac> <smac-mask> }}
{any-destination-mac}{host-destination-mac <host_dmac> }{ <dmac> <dmac-mask> }} [cos <cos-val>
[ <cos-bitmask> ]] [vlanId <vid-value> [ <vid-mask> ]] [ethertype <protocol> [ <protocol-mask> ]]
[no]{deny|permit} {any-source-mac}{host-source-mac <host_smac> }{ <smac> <smac-mask> }}
{any-destination-mac}{host-destination-mac <host_dmac> }{ <dmac> <dmac-mask> }} [untagged-eth2
[ethertype <protocol> [protocol-mask]]]
[no]{deny|permit}{any-source-mac}{host-source-mac <host_smac> }{ <smac> <smac-mask> }}
{any-destination-mac}{host-destination-mac <host_dmac> }{ <dmac> <dmac-mask> }} [untagged-802-3]
[no]{deny|permit} {any-source-mac}{host-source-mac <host_smac> }{ <smac> <smac-mask> }}
{any-destination-mac}{host-destination-mac <host_dmac> }{ <dmac> <dmac-mask> }} [tagged-eth2 [cos
<cos-val> [ <cos-bitmask> ]] [vlanId <vid-value> [ <vid-mask> ]] [ethertype <protocol> [ <protocol-mask> ]]]
[no]{deny|permit}{any-source-mac}{host-source-mac <host_smac> }{ <smac> <smac-mask> }}
{any-destination-mac}{host-destination-mac <host_dmac> }{ <dmac> <dmac-mask> }} [tagged-802-3 [cos
<cos-val> [ <cos-bitmask> ]] [vlanId <vid-value> [ <vid-mask> ]]]
```

Functions:

Define an extended name MAC ACL rule, and no command deletes this extended name IP access rule.

Parameters:

any-source-mac: any source of MAC address; **any-destination-mac**: any destination of MAC address; **host_smac**, **smac**: source MAC address; **smac-mask**: mask (reverse mask) of source MAC address; **host_dmac**, **dmas** destination MAC address; **dmac-mask** mask (reverse mask) of destination MAC address; **untagged-eth2** format of untagged ethernet II packet; **tagged-eth2** format of tagged ethernet II packet; **untagged-802-3** format of untagged ethernet 802.3 packet; **tagged-802-3** format of tagged ethernet 802.3 packet; **cos-val**: cos value, 0-7; **cos-bitmask**: cos mask, 0-7 reverse mask and mask bit is consecutive; **vid-value**: VLAN No, 1-4094; **vid-bitmask**: VLAN mask, 0-4095, reverse mask and mask bit is consecutive; **protocol**: specific Ethernet protocol No., 1536-65535; **protocol-bitmask**: protocol mask, 0-65535, reverse mask and mask bit is consecutive.

Notice: mask bit is consecutive means the effective bit must be consecutively effective from the first bit on the left, no ineffective bit can be added through. For example: the reverse mask format of one byte is: 00001111b; mask format is 11110000; and this is not permitted: 00010011.

Command Mode:

Name extended MAC access-list configuration mode

Default configuration:

No access-list configured.

Example:

The forward source MAC address is not permitted as 00-12-11-23-XX-XX of 802.3 data packet.

```
Switch(config)# mac-access-list extended macExt
```

```
Switch(Config-Mac-Ext-Nacl-macExt)#deny 00-12-11-23-00-00 00-00-00-00-ff-ff any-destination-mac
untagged-802-3
```

```
Switch(Config-Mac-Ext-Nacl-macExt)#deny 00-12-11-23-00-00 00-00-00-00-ff-ff any tagged-802
```

40.23 permit | deny(mac-ip extended)

Command:

```
[no] {deny|permit} {any-source-mac}{host-source-mac<host_smac>}{<smac><smac-mask>}}
{any-destination-mac}{host-destination-mac<host_dmac>}{<dmac><dmac-mask>}}
icmp{{<source><source-wildcard>}any-source|{host-source<source-host-ip>}}
{{<destination><destination-wildcard>}any-destination|{host-destination <destination-host-ip>}}
[<icmp-type> [<icmp-code>]] [precedence <precedence>] [tos <tos>][time-range<time-range-name>]
[no]{deny|permit}
{any-source-mac}{host-source-mac<host_smac>}{<smac><smac-mask>}}
{any-destination-mac}{host-destination-mac<host_dmac>}{<dmac><dmac-mask>}}
igmp{{<source><source-wildcard>}any-source| {host-source<source-host-ip>}}
```



```

{{<destination><destination-wildcard>}}any-destination|{host-destination <destination-host-ip>}}
[<igmp-type>] [precedence <precedence>] [tos <tos>][time-range<time-range-name>]
[no]{deny|permit}{any-source-mac|{host-source-mac <host_smac> }} { <smac>
<smac-mask> }}{any-destination-mac|{host-destination-mac <host_dmac> }}{ <dmac>
<dmac-mask> }}tcp{{ <source> <source-wildcard> }}any-source| {host-source <source-host-ip> }}{s-port
{ <port1> | range <sPortMin> <sPortMax> }} {{ <destination> <destination-wildcard> } | any-destination|
{host-destination <destination-host-ip> }} [d-port { <port3> | range <dPortMin> <dPortMax> }} [ack+fin+psh
+rst+urg+syn] [precedence <precedence> ] [tos <tos> ][time-range <time-range-name> ]

[no]{deny|permit}{any-source-mac|{host-source-mac <host_smac> }}{ <smac>
<smac-mask> }}{any-destination-mac|{host-destination-mac <host_dmac> }} { <dmac>
<dmac-mask> }}udp{{ <source> <source-wildcard> }}any-source| {host-source
<source-host-ip> }}{s-port{ <port1> | range <sPortMin> <sPortMax> }} {{ <destination>
<destination-wildcard> }}any-destination| {host-destination <destination-host-ip> }} [d-port { <port3> / range
<dPortMin> <dPortMax> }} [precedence <precedence> ] [tos <tos> ][time-range <time-range-name> ]
[no]{deny|permit}{any-source-mac|{host-source-mac<host_smac>}}{<smac>
<smac-mask>}}{any-destination-mac|{host-destination-mac<host_dmac>}}|
{<dmac><dmac-mask>}}{eigrp|gre|igrp|ip|ipinip|ospf|{<protocol-num>}}
{{<source><source-wildcard>}}any-source|{host-source<source-host-ip>}}
{{<destination><destination-wildcard>}}any-destination|{host-destination <destination-host-ip>}}
[precedence <precedence>] [tos <tos>][time-range<time-range-name>]

```

Functions:

Define an extended name MAC-IP ACL rule, no form deletes one extended numeric MAC-IP ACL access-list rule.

Parameters:

num access-list serial No. this is a decimal's No. from 3100-3199; **deny** if rules are matching, deny to access; **permit** if rules are matching, permit to access; **any-source-mac**: any source MAC address; **any-destination-mac**: any destination MAC address; **host_smac**, smac: source MAC address; smac-mask: mask (reverse mask) of source MAC address ; **host_dmac** , dmas destination MAC address; **dmac-mask** mask (reverse mask) of destination MAC address; **protocol** No. of name or IP protocol. It can be a key word: eigrp, gre, icmp, igmp, igrp, ip, ipinip, ospf, tcp, or udp, or an integer from 0-255 of list No. of IP address. Use key word 'ip' to match all Internet protocols (including ICMP, TCP, AND UDP) list; **source-host-ip**, source No. of source network or source host of packet delivery. Numbers of 32-bit binary system with dotted decimal notation expression; **host**: means the address is the IP address of source host, otherwise the IP address of network; **source-wildcard**: reverse of source IP. Numbers of 32-bit binary system expressed by decimal's numbers with four-point separated, reverse mask; **destination-host-ip**, destination No. of destination network or host to which packets are delivered. Numbers of 32-bit binary system with dotted decimal notation expression; **host**: means the address is that the destination host

address, otherwise the network IP address; **destination-wildcard**: mask of destination. I Numbers of 32-bit binary system expressed by decimal's numbers with four-point separated, reverse mask; **s-port(optional)**: means the need to match TCP/UDP source port; **port1(optional)**: value of TCP/UDP source interface No., Interface No. is an integer from 0-65535; **<sPortMin>**, the down boundary of source port; **<sPortMax>**, the up boundary of source port; **d-port(optional)**: means need to match TCP/UDP destination interface; **port3(optional)**: value of TCP/UDP destination interface No., Interface No. is an integer from 0-65535; **<dPortMin>**, the down boundary of destination port; **<dPortMax>**, the up boundary of destination port; **[ack] [fin] [psh] [rst] [urg] [syn]**, (optional) only for TCP protocol, multi-choices of tag positions are available, and when TCP data reports the configuration of corresponding position, then initialization of TCP data report is enabled to form a match when in connection; **precedence (optional)** packets can be filtered by priority which is a number from 0-7; **tos (optional)** packets can be filtered by service type which ia number from 0-15; **icmp-type (optional)** ICMP packets can be filtered by packet type which is a number from 0-255; **icmp-code (optional)** ICMP packets can be filtered by packet code which is a number from 0-255; **igmp-type (optional)** ICMP packets can be filtered by IGMP packet name or packet type which is a number from 0-255; **<time-range-name>**, name of time range.

Command Mode:

Name extended MAC-IP access-list configuration mode

Default:

No access-list configured.

Examples:

Deny the passage of UDP packets with any source MAC address and destination MAC address, any source IP address and destination IP address, and source port 100.

```
Switch(config)# mac-ip-access-list extended macIpExt
```

```
Switch(Config-MacIp-Ext-Nacl-macIpExt)# deny any-source-mac any-destination-mac udp any-source s-port 100 any-destination
```

40.24 show access-lists

Command:

```
show access-lists [<num>|<acl-name>]
```

Functions:

Reveal ACL of configuration.

Parameters:

<acl-name>, specific ACL name character string; **<num>**, specific ACL No.

Default:

None.

Command Mode:

Admin Mode

Usage Guide:

When not assigning names of ACL, all ACL will be revealed, used x time (s) indicates the times of ACL to be used.

Examples:

```
Switch#show access-lists
```

```
access-list 10(used 0 time(s))
```

```
access-list 10 deny any-source
```

```
access-list 100(used 1 time(s))
```

```
access-list 100 deny ip any any-destination
```

```
access-list 100 deny tcp any any-destination
```

```
access-list 1100(used 0 time(s))
```

```
access-list 1100 permit any-source-mac any-destination-mac tagged-eth2 14 2 0800
```

Displayed information	Explanation
access-list 10(used 1 time(s))	Number ACL10, 0 time to be used
access-list 10 deny any-source	Deny any IP packets to pass
access-list 100(used 1 time(s))	Nnumber ACL100, 1 time to be used
access-list 100 deny ip any-source any-destination	Deny IP packet of any source IP address and destination address to pass
access-list 100 deny tcp any-source any-destination	Deny TCP packet of any source IP address and destination address to pass
access-list 1100 permit any-source-mac any-destination-mac tagged-eth2 14 2 0800	Permit tagged-eth2 with any source MAC addresses and any destination MAC addresses and the packets whose 15th and 16th byte is respectively 0x08 , 0x0 to pass.

40.25 show access-group

Command:

show access-group in (interface {Ethernet | Ethernet IFNAME})

Functions:

Display the ACL binding status on the port.

Parameters:

IFNAME, Port name.

Default:

None.

Command Mode:

Admin and Configuration Mode.

Usage Guide:

When not assigning interface names, all ACL tied to port will be revealed.

Examples:

```
Switch#show access-group
```

```
interface name: Ethernet 1/1
```

```
IP Ingress access-list used is 100, traffic-statistics Disable.
```

```
interface name: Ethernet1/2
```

```
IP Ingress access-list used is 1, packet(s) number is 11110.
```

Displayed information	Explanation
interface name: Ethernet 1/1	Tying situation on port Ethernet1/1
IP Ingress access-list used is 100	No. 100 numeric expansion ACL tied to entrance of port Ethernet1/1
packet(s) number is 11110	Number of packets matching this ACL rule

40.26 show firewall

Command:

show firewall

Functions:

Reveal configuration information of packet filtering functions.

Parameters:

None.

Default:

None.

Command Mode:

Admin and Configuration Mode.

Examples:

Switch#show firewall

Firewall status: Enable.

Displayed information	Explanation
fire wall is enable	Packet filtering function enabled

40.27 show ipv6 access-lists

Command:

show ipv6 access-lists [*<num>/<acl-name>*]

Function:

Show the configured IPv6 access control list.

Parameter:

<num> is the number of specific access control list, the valid range is 500~699, amongst 500~599 is digit standard IPv6 ACL number, 600~699 is the digit extended IPv6 ACL number; *<acl-name>* is the nomenclature character string of a specific access control list, lengthening within 1~32.

Default:

None.

Command Mode:

Admin and Configuration Mode.

Usage Guide:

When no access control list is specified, all the access control lists will be displayed; in used x time (s) is shown the times the ACL had been quoted.

Example:

```
Switch #show ipv6 access-lists
ipv6 access-list 500(used 1 time(s))
    ipv6 access-list 500 deny any-source

    ipv6 access-list 510(used 1 time(s))
    ipv6 access-list 510 deny ip any-source any-destination
    ipv6 access-list 510 deny tcp any-source any-destination

    ipv6 access-list 520(used 1 time(s))
    ipv6 access-list 520 permit ip any-source any-destination
```

40.28 show time-range

Command:

```
show time-range <word>
```

Functions:

Reveal configuration information of time range functions.

Parameters:

word assign name of time-range needed to be revealed.

Default:

None.

Command Mode:

Admin Mode

Usage Guide:

When not assigning time-range names, all time-range will be revealed.

Examples:

```
Switch#show time-range
time-range timer1 (inactive, used 0 times)
    absolute-periodic Saturday 0:0:0 to Sunday 23:59:59
time-range timer2 (inactive, used 0 times)
    absolute-periodic Monday 0:0:0 to Friday 23:59:59
```

40.29 time-range

Command:

```
[no] time-range <time_range_name>
```

Functions:

Create the name of time-range as time range name, enter the time-range mode at the same time.

Parameters:

time_range_name, time range name must start with letter or number, and the length cannot exceed 32 characters long.

Command Mode:

Global mode

Default:

No time-range configuration.

Usage Guide:

None

Examples:

```
Create a time-range named admin_timer.
Switch(config)#Time-range admin_timer
```

Chapter 41 Commands for 802.1x

41.1 debug dot1x detail

Command:

```
debug dot1x detail {pkt-send | pkt-receive | internal | all | userbased} interface [ethernet] <interface-name>
no debug dot1x detail { pkt-send | pkt-receive | internal | all | userbased} interface [ethernet]
<interface-name>
```

Function:

Enable the debug information of dot1x details; the no operation of this command will disable that debug information.

Parameters:

pkt-send: Enable the debug information of dot1x about sending packets;
pkt-receive: Enable the debug information of dot1x about receiving packets;
internal: Enable the debug information of dot1x about internal details;
all: Enable the debug information of dot1x about all details mentioned above;
userbased: user-based authentication;
<interface-name>: the name of the interface.

Command Mode:

Admin Mode.

Usage Guide:

By enabling the debug information of dot1x details, users can check the detailed processes of the Radius protocol operation, which might help diagnose the cause of faults if there is any.

Example:

Enable all debug information of dot1x details on interface1/1.
Switch#debug dot1x detail all interface ethernet1/1

41.2 debug dot1x error

Command:

```
debug dot1x error
no debug dot1x error
```

Function:

Enable the debug information of dot1x about errors; the no operation of this command will disable that debug information.

Parameters:

None.

Command Mode:

Admin Mode.

Usage Guide:

By enabling the debug information of dot1x about errors, users can check the information of errors that occur in the processes of the Radius protocol operation, which might help diagnose the cause of faults if there is any.

Example:

```
Enable the debug information of dot1x about errors.
Switch#debug dot1x error
```

41.3 debug dot1x fsm

Command:

```
debug dot1x fsm {all | aksm | asm | basm | ratsm} interface <interface-name>
no debug dot1x fsm {all | aksm | asm | basm | ratsm} interface <interface-name>
```

Function:

Enable the debug information of dot1x state machine; the no operation of this command will disable that debug information.

Command Mode:

Admin Mode.

Parameters:

- all:** Enable the debug information of dot1x state machine;
- aksm:** Enable the debug information of Authenticator Key Transmit state machine;
- asm:** Enable the debug information of Authenticator state machine;
- basn:** Enable the debug information of Backend Authentication state machine;
- ratsm:** Enable the debug information of Re-Authentication Timer state machine;
- <interface-name>:** the name of the interface.

Usage Guide:

By enabling the debug information of dot1x, users can check the negotiation process of dot1x protocol, which might help diagnose the cause of faults if there is any.

Example:

Enable the debug information of dot1x state machine.
Switch#debug dot1x fsm asm interface ethernet1/1

41.4 debug dot1x packet

Command:

```
debug dot1x packet {all | receive | send} interface <interface-name>  
no debug dot1x packet {all | receive | send} interface <interface-name>
```

Function:

Enable the debug information of dot1x about messages; the no operation of this command will disable that debug information.

Command Mode:

Admin Mode.

Parameters:

- send:** Enable the debug information of dot1x about sending packets;
- receive:** Enable the debug information of dot1x about receiving packets;
- all:** Enable the debug information of dot1x about both sending and receiving packets;
- <interface-name>:** The name of the interface.

Usage Guide:

By enabling the debug information of dot1x about messages, users can check the negotiation process of dot1x protocol, which might help diagnose the cause of faults if there is any.

Example:

Enable the debug information of dot1x about messages.

```
Switch#debug dot1x packet all interface ethernet1/1
```

41.5 dot1x accept-mac

Command:

```
dot1x accept-mac <mac-address> [interface <interface-name>]  
no dot1x accept-mac <mac-address> [interface <interface-name>]
```

Function:

Add a MAC address entry to the dot1x address filter table. If a port is specified, the entry added applies to the specified port only. If no port is specified, the entry added applies to all the ports. The “no dot1x accept-mac <mac-address> [interface <interface-name>]” command deletes the entry from dot1x address filter table.

Parameters:

<mac-address> stands for MAC address;

<interface-name> for interface name and port number.

Command mode:

Global Mode.

Default:

N/A.

Usage Guide:

The dot1x address filter function is implemented according to the MAC address filter table, dot1x address filter table is manually added or deleted by the user. When a port is specified in adding a dot1x address filter table entry, that entry applies to the port only; when no port is specified, the entry applies to all ports in the switch. When dot1x address filter function is enabled, the switch will filter the authentication user by the MAC address. Only the authentication request initiated by the users in the dot1x address filter table will be accepted, the rest will be rejected.

Example:

Adding MAC address 00-01-34-34-2e-0a to the filter table of Ethernet 1/5.

```
Switch(config)#dot1x accept-mac 00-01-34-34-2e-0a interface ethernet 1/5
```

41.6 dot1x eapor enable

Command:

dot1x eapor enable
no dot1x eapor enable

Function:

Enables the EAP relay authentication function in the switch; the "no dot1x eapor enable" command sets EAP local end authentication.

Command mode:

Global Mode.

Default:

EAP relay authentication is used by default.

Usage Guide:

The switch and RADIUS may be connected via Ethernet or PPP. If an Ethernet connection exists between the switch and RADIUS server, the switch needs to authenticate the user by EAP relay (EAPoR authentication); if the switch connects to the RADIUS server by PPP, the switch will use EAP local end authentication (CHAP authentication). The switch should use different authentication methods according to the connection between the switch and the authentication server.

Example:

Setting EAP local end authentication for the switch.
Switch(config)#no dot1x eapor enable

41.7 dot1x enable

Command:

dot1x enable
no dot1x enable

Function:

Enables the 802.1x function in the switch and ports: the "no dot1x enable" command disables the 802.1x function.

Command mode:

Global Mode and Port Mode.

Default:

802.1x function is not enabled in global mode by default; if 802.1x is enabled under Global Mode, 802.1x will not be enabled for the ports by default.

Usage Guide:

The 802.1x authentication for the switch must be enabled first to enable 802.1x authentication for the respective ports. If Spanning Tree or MAC binding is enabled on the port, or the port is a Trunk port or member of port aggregation group, 802.1x function cannot be enabled for that port unless such conditions are removed.

Example:

Enabling the 802.1x function of the switch and enable 802.1x for port1/12.

```
Switch(config)#dot1x enable
```

```
Switch(config)#interface ethernet 1/12
```

```
Switch(Config-If-Ethernet1/12)#dot1x enable
```

41.8 dot1x ipv6 passthrough

Command:

```
dot1x ipv6 passthrough
```

```
no dot1x ipv6 passthrough
```

Function:

Enable IPv6 passthrough function on a switch port, only applicable when access control mode is userbased; the no operation of this command will disable the function.

Command Mode:

Port Configuration Mode.

Default Settings:

IPv6 passthrough function is disabled on the switch by default.

Usage Guide:

The function can only be enabled when 802.1x function is enabled both globally and on the port, with userbased being the control access mode. After it is enabled, users can send IPv6 messages without authentication.

Examples:

Enable IPv6 passthrough function on port Ethernet1/12.

```
Switch(config)#dot1x enable
```

```
Switch(config)#interface ethernet 1/12
```

```
Switch(Config-If-Ethernet1/12)#dot1x enable
```

```
Switch(Config-If-Ethernet1/12)#dot1x ipv6 passthrough
```

41.9 dot1x guest-vlan

Command:

```
dot1x guest-vlan <vlanid>
```

```
no dot1x guest-vlan
```

Function:

Set the guest-vlan of the specified port; the “**no dot1x guest-vlan**” command is used to delete the guest-vlan.

Parameters:

<vlanid> the specified VLAN id, ranging from 1 to 4094.

Command Mode:

Port Mode.

Default Settings:

There is no 802.1x guest-vlan function on the port.

User Guide:

The access device will add the port into Guest VLAN if there is no supplicant getting authenticated successfully in a certain stretch of time because of lacking exclusive authentication supplicant system or the version of the supplicant system being too low.

In Guest VLAN, users can get 802.1x supplicant system software, update supplicant system or update some other applications (such as anti-virus software, the patches of operating system). When a user of a port within Guest VLAN starts an authentication, the port will remain in Guest VLAN in the case of a failed authentication. If the authentication finishes successfully, there are two possible results:

The authentication server assigns an Auto VLAN, causing the port to leave Guest VLAN to join the assigned Auto VLAN. After the user gets offline, the port will be allocated back into the specified Guest VLAN.

The authentication server assigns an Auto VLAN, then the port leaves Guest VLAN and joins the specified VLAN. When the user becomes offline, the port will be allocated to the specified Guest VLAN again.

Attention:

There can be different Guest VLAN set on different ports, while only one Guest VLAN is allowed on one port.

Only when the access control mode is portbased, the Guest VLAN can take effect. If the access control mode of the port is macbased or userbased, the Guest VLAN can be successfully set without taking effect.

Examples :

Set Guest-VLAN of port Ethernet1/3 as VLAN 10.

```
Switch(Config-If-Ethernet1/3)#dot1xguest-vlan 10
```

41.10 dot1x macfilter enable

Command:

```
dot1x macfilter enable
```

```
no dot1x macfilter enable
```

Function:

Enables the dot1x address filter function in the switch; the "**no dot1x macfilter enable**" command disables the dot1x address filter function.

Command mode:

Global Mode

Default:

dot1x address filter is disabled by default.

Usage Guide:

When dot1x address filter function is enabled, the switch will filter the authentication user by the MAC address. Only the authentication request initiated by the users in the dot1x address filter table will be accepted.

Example:

Enabling dot1x address filter function for the switch.

```
Switch(config)#dot1x macfilter enable
```

41.11 dot1x macbased port-down-flush

Command:

```
dot1x macbased port-down-flush
no dot1x macbased port-down-flush
```

Function:

Enables this command, when the dot1x certification according to mac is down, delete the user who passed the certification of the port; The no command does not make the down operation.

Command mode:

Global Mode

Default:

The command is not enabled by default.

Usage Guide:

When users who passed the certification according to mac changed among different ports, delete the user for the new certification. The command should be enable to delete the user.

Example:

When the dot1x certification according to mac is down, delete the user who passed the certification of the port.

```
Switch(config)#dot1x macbased port-down-flush
```

41.12 dot1x max-req

Command:

```
dot1x max-req <count>
no dot1x max-req
```

Function:

Sets the number of EAP request/MD5 frame to be sent before the switch re-initials authentication on no supplicant response; the “no dot1x max-req” command restores the default setting.

Parameters:

<count> is the times to re-transfer EAP request/ MD5 frames, the valid range is 1 to 10.

Command mode:

Global Mode.

Default:

The default maximum for retransmission is 2.

Usage Guide:

The default value is recommended in setting the EAP request/ MD5 retransmission times.

Example:

Changing the maximum retransmission times for EAP request/ MD5 frames to 5 times.

```
Switch(config)#dot1x max-req 5
```

41.13 dot1x user allow-movement

Command:

```
dot1x user allow-movement  
no dot1x user allow-movement
```

Function:

Enable the authentication function after the user moves the port, the no command disables the function.

Command Mode:

Global mode

Default:

Disable the authentication function after the user moves the port.

Usage Guide:

Enable the authentication function after the user moves the port, so the switch allows user to process this authentication. In the condition that the switch connects with hub, when the user will be moved to other port, dot1x user allow-movement command should be enabled.

Example:

Enable the authentication function after the user moves the port.

```
Switch(config)#dot1x user allow-movement
```

41.14 dot1x user free-resource

Command:

```
dot1x user free-resource <prefix> <mask>  
no dot1x user free-resource
```

Function:

To configure 802.1x free resource; the no form command closes this function.

Parameter:

<prefix> is the segment for limited resource, in dotted decimal format;
<mask> is the mask for limited resource, in dotted decimal format.

Command Mode:

Global Mode.

Default:

There is no free resource by default.

Usage Guide:

This command is available only if user based access control is applied. If user based access control has been applied, this command configures the limited resources which can be accessed by the un-authenticated users. For port based and MAC based access control, users could access no network resources before authentication.

If TrustView management system is available, the free resource can be configured in TrustView server, and the TrustView server will distribute the configuration to the switches.

To be noticed, only one free resource can be configured for the overall network.

Example:

To configure the free resource segment as 1.1.1.0, the mask is 255.255.255.0.

```
Switch(Config)#dot1x user free-resource 1.1.1.0 255.255.255.0
```

41.15 dot1x max-user macbased

Command:

```
dot1x max-user macbased <number>  
no dot1x max-user macbased
```

Function:

Sets the maximum users allowed connect to the port; the “no dot1x max-user” command restores the default setting.

Parameters:

<number> is the maximum users allowed, the valid range is 1 to 256.

Command mode:

Port configuration Mode.

Default:

The default maximum user allowed is 1.

Usage Guide:

This command is available for ports using MAC-based access management, if MAC address authenticated exceeds the number of allowed user, additional users will not be able to access the network.

Example:

Setting port 1/3 to allow 5 users.

```
Switch(Config-If-Ethernet1/3)#dot1x max-user macbased 5
```

41.16 dot1x max-user userbased

Command:

```
dot1x max-user userbased <number>
```

```
no dot1x max-user userbased
```

Function:

Set the upper limit of the number of users allowed access the specified port when using user-based access control mode; the no command is used to reset the default value.

Parameters:

<number> the maximum number of users allowed to access the network, ranging from 1 to 1~256.

Command Mode:

Port Mode.

Default Settings:

The maximum number of users allowed to access each port is 10 by default.

User Guide:

This command can only take effect when the port adopts user-based access control mode. If the number of authenticated users exceeds the upper limit of the number of users allowed access the network, those extra users can not access the network.

Examples:

Setting port 1/3 to allow 5 users.

```
Switch(Config-If-Ethernet1/3)#dot1x max-user userbased 5
```

41.17 dot1x portbased mode single-mode

Command:

```
dot1x portbased mode single-mode
```

```
no dot1x portbased mode single-mode
```

Function:

Set the single-mode based on portbase authentication mode; the no command disables this function.

Parameters:

None.

Command mode:

Port Mode

Default:

Disable the single-mode.

Usage Guide:

This command takes effect when the access mode of the port is set as portbase only. Before configuring the single-mode, if the port has enabled dot1x port-method portbased command and exist online users, the switch will enforce all users of this port are offline. After that, this port only allows a user to pass the authentication, the user can access the specified network resource, but other authentication users of this port will be denied and cannot access the network. After disabling the single-mode, the switch also enforce the authenticated user is offline.

Example:

```
Switch(Config-If-Ethernet1/1)#dot1x portbased mode single-mode
```

41.18 dot1x port-control

Command:

```
dot1x port-control {auto | force-authorized | force-unauthorized}  
no dot1x port-control
```

Function:

Sets the 802.1x authentication status; the “no dot1x port-control” command restores the default setting.

Parameters:

auto enable 802.1x authentication, the port authorization status is determined by the authentication information between the switch and the supplicant; **force-authorized** sets port to authorized status, unauthenticated data is allowed to pass through the port; **force-unauthorized** will set the port to non-authorized mode, the switch will not provide authentication for the supplicant and prohibit data from passing through the port.

Command mode:

Port configuration Mode

Default:

When 802.1x is enabled for the port, **auto** is set by default.

Usage Guide:

If the port needs to provide 802.1x authentication for the user, the port authentication mode should be set to auto.

Example:

Setting port1/1 to require 802.1x authentication mode.

```
Switch(config)#interface ethernet 1/1
```

```
Switch(Config-If-Ethernet1/1)#dot1x port-control auto
```

41.19 dot1x port-method

Command:

```
dot1x port-method {macbased | portbased | userbased {standard | advanced}}  
no dot1x port-method
```

Function:

To configure the access control method of appointed interface. The no form command restores the default access control method.

Parameter:

macbased means the access control method based on MAC address

portbased means the access control method based on port

userbased means the access control method based on user, it can be divided into two types, one is standard access control method, and the other is advanced access control method

Command mode:

Port Configuration Mode.

Default:

Advanced access control method based on user is used by default.

Usage Guide:

This command is used to configure the dot1x authentication method for the specified port. When port based authentication is applied, only one host can authenticate itself through one port. And after authentication, the host will be able to access all the resources. When MAC based authentication is applied, multiple host which are connected to one port can access all the network resources after authentication. When either of the above two kinds of access control is applied, un-authenticated host cannot access any resources in the network.

When user based access control is applied, un-authenticated users can only access limited resources of the network. The user based access control falls into two kinds – the standard access control and the advanced access control. The standard user based access control does not limit the access to the limited resources when the host is not authenticated yet. While the user based advanced access control can control the access to the limited resources before authentication is done.

Notes: For standard control method based on user, the 802.1x free resource must be configured first, and it needs to be used with dot1x privateclient enable.

Example:

To configure the access control method based on port for Ethernet1/4.
Switch(Config-If-Ethernet1/4)#dot1x port-method portbased

41.20 dot1x privateclient enable

Command:

dot1x privateclient enable
no dot1x privateclient enable

Function:

To configure the switch to force the authentication client to use private 802.1x authentication protocol. The no prefix will disable the command and allow the authentication client to use the standard 802.1x authentication protocol.

Command Mode:

Global Mode.

Default:

Private 802.1x authentication packet format is disabled by default.

Usage Guide:

To implement integrated solution, the switch must be enabled to use private 802.1x protocol, or many applications will not be able to function. For detailed information, please refer to DCBI integrated solution. If the switch forces the authentication client to use private 802.1x protocol, the standard client will not be able to work.

Example:

To force the authentication client to use private 802.1x authentication protocol.
Switch(config)#dot1x privateclient enable

41.21 dot1x privateclient protect enable

Command:

dot1x privateclient protect enable
no dot1x privateclient protect enable

Function:

Enable the privateclient protect function of the switch, the no command disables the protect function.

Parameter:

None.

Command mode:

Global Mode

Default:

Disable the privateclient protect function.

Usage Guide:

Support the partial encryption of the privateclient protocol to advance the security of the privateclient.

Example:

Enable the privateclient protect function of the switch.

```
Switch(config)#dot1x privateclient protect enable
```

41.22 dot1x re-authenticate

Command:

```
dot1x re-authenticate [interface <interface-name>]
```

Function:

Enables real-time 802.1x re-authentication (no wait timeout requires) for all ports or a specified port.

Parameters:

<interface-name> stands for port number, omitting the parameter for all ports.

Command mode:

Global Mode.

Usage Guide:

This command is a Global Mode command. It makes the switch to re-authenticate the client at once without waiting for re-authentication timer timeout. This command is no longer valid after authentication.

Example:

Enabling real-time re-authentication on port1/8.

```
Switch(config)#dot1x re-authenticate interface ethernet 1/8
```


41.23 dot1x re-authentication

Command:

```
dot1x re-authentication
no dot1x re-authentication
```

Function:

Enables periodical supplicant authentication; the “no dot1x re-authentication” command disables this function.

Command mode:

Global Mode.

Default:

Periodical re-authentication is disabled by default.

Usage Guide:

When periodical re-authentication for supplicant is enabled, the switch will re-authenticate the supplicant at regular interval. This function is not recommended for common use.

Example:

```
Enabling the periodical re-authentication for authenticated users.
Switch(config)#dot1x re-authentication
```

41.24 dot1x timeout quiet-period

Command:

```
dot1x timeout quiet-period <seconds>
no dot1x timeout quiet-period
```

Function:

Sets time to keep silent on supplicant authentication failure; the “no dot1x timeout quiet-period” command restores the default value.

Parameters:

<seconds> is the silent time for the port in seconds, the valid range is 1 to 65535.

Command mode:

Global Mode.

Default:

The default value is 10 seconds.

Usage Guide:

Default value is recommended.

Example:

Setting the silent time to 120 seconds.

```
Switch(config)#dot1x timeout quiet-period 120
```

41.25 dot1x timeout re-authperiod

Command:

```
dot1x timeout re-authperiod <seconds>
```

```
no dot1x timeout re-authperiod
```

Function:

Sets the supplicant re-authentication interval; the “**no dot1x timeout re-authperiod**” command restores the default setting.

Parameters:

<seconds> is the interval for re-authentication, in seconds, the valid range is 1 to 65535.

Command mode:

Global Mode.

Default:

The default value is 3600 seconds.

Usage Guide:

dot1x re-authentication must be enabled first before supplicant re-authentication interval can be modified. If authentication is not enabled for the switch, the supplicant re-authentication interval set will not take effect.

Example:

Setting the re-authentication time to 1200 seconds.

```
Switch(config)#dot1x timeout re-authperiod 1200
```

41.26 dot1x timeout tx-period

Command:

```
dot1x timeout tx-period <seconds>
```

```
no dot1x timeout tx-period
```

Function:

Sets the interval for the supplicant to re-transmit EAP request/identity frame; the “**no dot1x timeout tx-period**” command restores the default setting.

Parameters:

<seconds> is the interval for re-transmission of EAP request frames, in seconds; the valid range is 1 to 65535.

Command mode:

Global Mode.

Default:

The default value is 30 seconds.

Usage Guide:

Default value is recommended.

Example:

Setting the EAP request frame re-transmission interval to 1200 seconds.

```
Switch(config)#dot1x timeout tx-period 1200
```

41.27 dot1x unicast enable

Command:

```
dot1x unicast enable
```

```
no dot1x unicast enable
```

Function:

Enable the 802.1x unicast passthrough function of switch; the no operation of this command will disable this function.

Command mode:

Global Configuration Mode.

Default:

The 802.1x unicast passthrough function is not enabled in global mode.

Usage Guide:

The 802.1x unicast passthrough authentication for the switch must be enabled first to enable the 802.1x unicast passthrough function, then the 802.1x function is configured.

Example:

Enabling the 802.1x unicast passthrough function of the switch and enable the 802.1x for port 1/1.

```
Switch(config)#dot1x enable
```

```
Switch(config)# dot1x unicast enable
```

```
Switch(config)#interface ethernet1/1
```

```
Switch(Config-If-Ethernet1/1)#dot1x enable
```

41.28 show dot1x

Command:

```
show dot1x [interface <interface-list>]
```

Function:

Displays dot1x parameter related information, if parameter information is added, corresponding dot1x status for corresponding port is displayed.

Parameters:

<interface-list> is the port list. If no parameter is specified, information for all ports is displayed.

Command mode:

Admin and Configuration Mode.

Usage Guide:

The dot1x related parameter and dot1x information can be displayed with “show dot1x” command.

Example:

1. Display information about dot1x global parameter for the switch.

```
Switch#show dot1x
```

```
Global 802.1x Parameters
```

```
reauth-enabled      no
reauth-period       3600
quiet-period        10
tx-period           30
max-req             2
authenticator mode  passive
```

```
Mac Filter Disable
```

```
MacAccessList :
```

```
dot1x-EAPoR Enable
```

```
dot1x-privateclient Disable
```

```
dot1x-unicast Disable
```

```
802.1x is enabled on ethernet Ethernet1/1
```

```
Authentication Method:Port based
```

```
Max User Number:1
```

```
Status           Authorized
Port-control      Auto
SupPLICant        00-30-4f-FE-2E-D3
```

```
Authenticator State Machine
```

```
State            Authenticated
```

```
Backend State Machine
```

```
State            Idle
```

```
Reauthentication State Machine
```

```
State            Stop
```

Displayed information	Explanation
Global 802.1x Parameters	Global 802.1x parameter information
reauth-enabled	Whether re-authentication is enabled or not
reauth-period	Re-authentication interval
quiet-period	Silent interval

tx-period	EAP retransmission interval
max-req	EAP packet retransmission interval
authenticator mode	Switch authentication mode
Mac Filter	Enables dot1x address filter or not
MacAccessList	Dot1x address filter table
dot1x-EAPoR	Authentication method used by the switch (EAP relay, EAP local end)
dot1x-privateclient	Whether the switch supports the privateclient
802.1x is enabled on ethernet Ethernet1/1	Indicates whether dot1x is enabled for the port
Authentication Method:	Port authentication method (MAC-based, port-based, user-based)
Status	Port authentication status
Port-control	Port authorization status
Supplicant	Authenticator MAC address
Authenticator State Machine	Authenticator state machine status
Backend State Machine	Backend state machine status
Reauthentication State Machine	Re-authentication state machine status

Chapter 42 Commands for the Number Limitation Function of MAC and IP in Port, VLAN

42.1 debug ip arp count

Command:

debug ip arp count
no debug ip arp count

Function:

When the number limitation function debug of ARP in the VLAN, if the number of dynamic ARP and the number of ARP in the VLAN is larger than the max number allowed, users will see debug information.” **no debug ip arp count**” command is used to disable the number limitation function debug of ARP in the VLAN.

Parameters:

None.

Command Mode:

Admin Mode.

Default Settings:

None.

Usage Guide:

Display the debug information of the number of dynamic ARP in the VLAN.

Examples:

```
Switch#debug vlan mac count
%Jun 14 16:04:40 2007 Current arp count 21 is more than or equal to the maximum limit in vlan 1!!
%Jun 14 16:04:40 2007Arp learning will be stopped and some arp will be delete !!
```

42.2 debug ipv6 nd count

Command:

```
debug ipv6 nd count
no debug ipv6 nd count
```

Function:

When the number limitation function debug of neighbor in the VLAN, if the number of dynamic neighbor and the number of neighbor in the VLAN is larger than the max number allowed, users will see debug information. "**no debug ip neighbor count**" command is used to disable the number limitation function debug of neighbor in the VLAN.

Parameters:

None.

Command Mode:

Admin Mode.

Default Settings:

None.

Usage Guide:

Display the debug information of the number of dynamic neighbor in the VLAN.

Examples:

```
Switch#debug vlan mac count
%Jun 14 16:04:40 2007 Current neighbor count 21 is more than or equal to the maximum limit in vlan 1!!
```

42.3 debug switchport arp count

Command:

```
debug switchport arp count
no debug switchport arp count
```

Function:

When the number limitation function debug of ARP on the port, if the number of dynamic ARP and the number of ARP on the port is larger than the max number allowed, users will see debug information." **no debug switchport arp count**" command is used to disable the number limitation function debug of ARP on the port.

Parameters:

None

Command Mode:

Admin Mode

Default Settings:

None

Usage Guide:

Display the debug information of the number of dynamic ARP on the port.

Examples:

```
Switch#debug switchport arp count
```

```
%Jun 14 16:04:40 2007 Current arp count 21 is more than or equal to the maximum limit in port Ethernet3/1
```

```
!!%Jun 14 16:04:40 2007 Arp learning will be stopped and some mac will be delete !!
```

42.4 debug switchport mac count

Command:

```
debug switchport mac count
```

```
no debug switchport mac count
```

Function:

When the number limitation function debug of MAC on the port, if the number of dynamic MAC and the number of MAC on the port is larger than the max number allowed, users will see debug information. "**no debug switchport mac count**" command is used to disable the number limitation function debug of MAC on the port.

Parameters:

None

Command Mode:

Admin Mode

Default Settings:

None

Usage Guide:

Display the debug information of the number of dynamic MAC on the port.

Examples:

```
Switch#debug switchport mac count
```

```
%Jun 14 16:04:40 2007 Current mac count 21 is more than or equal to the maximum limit in port Ethernet3/1
```

```
!!%Jun 14 16:04:40 2007 Mac learning will be stopped and some mac will be delete !!
```

42.5 debug switchport nd count

Command:

```
debug switchport nd count
```

```
no debug switchport nd count
```

Function:

When the number limitation function debug of ND on the port, if the number of dynamic ND and the number of ND on the port is larger than the max number allowed, users will see debug information. "**no debug switchport nd count**" command is used to disable the number limitation function debug of ND on the port.

Parameters:

None

Command Mode:

Admin Mode

Default Settings:

None

Usage Guide:

Display the debug information of the number of dynamic ND on the port

Examples:

```
Switch#debug switchport arp count
```

```
%Jun 14 16:04:40 2007 Current neighbor count 21 is more than or equal to the maximum limit in port Ethernet3/1
```

```
!!%Jun 14 16:04:40 2007 Neighbor learning will be stopped and some mac will be delete !!
```

42.6 debug vlan mac count

Command:

```
debug vlan mac count
no debug vlan mac count
```

Function:

When the number limitation function debug of MAC in the VLAN, if the number of dynamic MAC and the number of MAC in the VLAN is larger than the max number allowed, users will see debug information. "**no debug vlan mac count**" command is used to disable the number limitation function debug of MAC in the VLAN.

Parameters:

None.

Command Mode:

Admin Mode.

Default Settings:

None.

Usage Guide:

Display the debug information of the number of dynamic MAC in the VLAN.

Examples:

```
Switch#debug vlan mac count
%Jun 14 16:04:40 2007 Current mac count 21 is more than or equal to the maximum limit in vlan 1!!
%Jun 14 16:04:40 2007 Mac learning will be stopped and some mac will be delete !!
```

42.7 ip arp dynamic maximum

Command:

```
ip arp dynamic maximum <value>
no ip arp dynamic maximum
```

Function:

Set the max number of dynamic ARP allowed in the VLAN, and, at the same time, enable the number limitation function of dynamic ARP in the VLAN; "**no ip arp dynamic maximum**" command is used to disable the number limitation function of dynamic ARP in the VLAN.

Parameters:

<value> upper limit of the number of dynamic ARP in the VLAN, ranging from 1 to 4096.

Default Settings:

The number limitation function of dynamic ARP in the VLAN is disabled.

Command Mode:

Interface Configuration Mode.

Usage Guide:

When configuring the max number of dynamic ARP allowed in the VLAN, if the number of dynamically learnt ARP in the VLAN is already larger than the max number to be set, the extra dynamic ARP will be deleted.

Examples:

Enable the number limitation function of dynamic ARP in VLAN 1, the max number to be set is 50.

```
Switch(config)#interface ethernet
```

```
Switch(Config-if-Vlan1)# ip arp dynamic maximum 50
```

Disable the number limitation function of dynamic ARP in VLAN 1.

```
Switch(Config-if-Vlan1)#no ip arp dynamic maximum
```

42.8 ipv6 nd dynamic maximum

Command:

```
ipv6 nd dynamic maximum <value>
```

```
no ipv6 nd dynamic maximum
```

Function:

Set the max number of dynamic NEIGHBOR allowed in the VLAN, and, at the same time, enable the number limitation function of dynamic NEIGHBOR in the VLAN; “**no ipv6 nd dynamic maximum**” command is used to disable the number limitation function of dynamic NEIGHBOR in the VLAN.

Parameters:

<value> upper limit of the number of dynamic NEIGHBOR in the VLAN, ranging from 1 to 4096.

Default Settings:

The number limitation function of dynamic NEIGHBOR in the VLAN is disabled.

Command Mode:

Interface Configuration Mode.

Usage Guide:

When configuring the max number of dynamic NEIGHBOR allowed in the VLAN, if the number of dynamically learnt NEIGHBOR in the VLAN is already larger than the max number to be set, the extra dynamic NEIGHBOR will be deleted.

Examples:

Enable the number limitation function of dynamic NEIGHBOR in VLAN 1, the max number to be set is 50.

```
Switch(config)#interface ethernet
```

```
Switch(Config-if-Vlan1)# ipv6 nd dynamic maximum 50
```

Disable the number limitation function of dynamic NEIGHBOR in VLAN 1.

```
Switch(Config-if-Vlan1)#no ipv6 nd dynamic maximum
```

42.9 mac-address query timeout

Command:

```
mac-address query timeout <seconds>
```

Function:

Set the timeout value of querying dynamic MAC.

Parameter:

<seconds> is timeout value, in second, ranging from 30 to 300.

Default Settings:

Default value is 60 seconds.

Command Mode:

Global mode

Usage Guide:

After enabling the number limitation of MAC, users can use this command to configure the timeout value of querying dynamic MAC. If the data traffic is very large, the timeout value can be shorter, otherwise, it can be longer. Users can set it according to actual situation.

Examples:

Set the timeout value of querying dynamic MAC as 30 seconds.

```
Switch(config)#mac-address query timeout 30
```

42.10 show arp-dynamic count

Command:

```
show arp-dynamic count {(vlan <1-4096>)| interface ethernet <portName>}
```

Function:

Display the number of dynamic ARP of corresponding port and VLAN.

Parameters:

<vlan-id> is the specified vlan ID.

<portName> is the name of layer-2 port.

Command Mode:

Admin and Configuration Mode.

Usage Guide:

Use this command to display the number of dynamic ARP of corresponding port and VLAN.

Examples:

Display the number of dynamic ARP of the port and VLAN which are configured with number limitation function of ARP.

```
Switch(config)# show arp-dynamic count interface ethernet 1/3
```

Port	MaxCount	CurrentCount
Ethernet1/3	5	1

```
Switch(config)# show arp-dynamic count vlan 1
```

Vlan	MaxCount	CurrentCount
1	55	15

42.11 show mac-address dynamic count

Command:

```
show mac-address dynamic count { (vlan <1-4096>)| interface ethernet <portName>}
```

Function:

Display the number of dynamic MAC of corresponding port and VLAN.

Parameters:

<vlan-id> display the specified VLAN ID.

<portName> is the name of layer-2 port.

Command Mode:

Any mode

Usage Guide:

Use this command to display the number of dynamic MAC of corresponding port and VLAN.

Examples:

Display the number of dynamic MAC of the port and VLAN which are configured with number limitation function of MAC.

```
Switch(config)# show mac-address dynamic count interface ethernet 1/3
```

Port	MaxCount	CurrentCount
Ethernet1/3	5	1

```
Switch(config)# show mac-address dynamic count vlan 1
```

Vlan	MaxCount	CurrentCount
1	55	15

42.12 show nd-dynamic count

Command:

```
show nd-dynamic count {(vlan <1-4096>)| interface ethernet <portName>}
```

Function:

Display the number of dynamic ND of corresponding port and VLAN.

Parameters:

<vlan-id> is play the specified vlan ID. **<portName>** is the name of layer-2 port.

Command Mode:

Admin and Configuration Mode.

Usage Guide:

Use this command to display the number of dynamic ND of corresponding port and VLAN.

Examples:

Display the number of dynamic ND of the port and VLAN which are configured with number limitation function of ND.

```
Switch(config)# show nd-dynamic count interface ethernet 1/3
```

Port	MaxCount	CurrentCount
Ethernet1/3	5	1

```
Switch(config)# show nd-dynamic count vlan 1
```

Vlan	MaxCount	CurrentCount
1	55	15

42.13 switchport arp dynamic maximum

Command:

```
switchport arp dynamic maximum <value>
```

```
no switchport arp dynamic maximum
```

Function:

Set the max number of dynamic ARP allowed by the port, and, at the same time, enable the number limitation function of dynamic ARP on the port; “**no switchport arp dynamic maximum**” command is used to disable the number limitation function of dynamic ARP on the port.

Parameters:

<*value*> upper limit of the number of dynamic ARP of the port, ranging from 1 to 4096.

Default Settings:

The number limitation function of dynamic ARP on the port is disabled.

Command Mode:

Port mode.

Usage Guide:

When configuring the max number of dynamic ARP allowed by the port, if the number of dynamically learnt ARP on the port is already larger than the max number to be set, the extra dynamic ARP will be deleted. TRUNK ports do not supports this function.

Examples:

Enable the number limitation function of dynamic ARP in port 1/2 mode, the max number to be set is 20

```
Switch(config)#interface ethernet 1/2
```

```
Switch(Config-If-Ethernet1/2)# switchport arp dynamic maximum 20
```

Disable the number limitation function of dynamic ARP in port 1/2 mode

```
Switch(Config-If-Ethernet1/2)#no switchport arp dynamic maximum
```

42.14 switchport mac-address dynamic maximum

Command:

```
switchport mac-address dynamic maximum <value>
```

```
no switchport mac-address dynamic maximum
```

Function:

Set the max number of dynamic MAC address allowed by the port, and, at the same time, enable the number limitation function of dynamic MAC address on the port; “**no switchport mac-address dynamic maximum**” command is used to disable the number limitation function of dynamic MAC address on the port.

Parameters:

<*value*> upper limit of the number of dynamic MAC address of the port, ranging from 1 to 4096.

Default Settings:

The number limitation function of dynamic MAC address on the port is disabled.

Command Mode:

Port mode.

Usage Guide:

When configuring the max number of dynamic MAC address allowed by the port, if the number of dynamically learnt MAC address on the port is already larger than the max number of dynamic MAC address to be set, the extra dynamic MAC addresses will be deleted. This function is mutually exclusive to functions such as dot1x, MAC binding, if the functions of dot1x, MAC binding or TRUNK are enabled on the port, this function will not be allowed.

Examples:

Enable the number limitation function of dynamic MAC address in port 1/2 mode, the max number to be set is 20

```
Switch(config)#interface ethernet 1/2
```

```
Switch(Config-If-Ethernet1/2)# switchport mac-address dynamic maximum 20
```

Disable the number limitation function of dynamic MAC address in port 1/2 mode

```
Switch(Config-If-Ethernet1/2)#no switchport mac-address dynamic maximum
```

42.15 switchport mac-address violation

Command:

```
switchport mac-address violation {protect | shutdown} [recovery <5-3600>]  
no switchport mac-address violation
```

Function:

Set the violation mode of the port, the no command restores the violation mode to **protect**.

Parameters:

protect: protect mode

shutdown: shutdown mode

recovery: Configure the border port to automatically restore after execute **shutdown** violation mode

<5-3600>: Recovery time, do not restore by default

Command Mode:

Port mode

Default:

protect mode

Usage Guide:

The port sets the violation mode after enable the number limit function of MAC only. If the violation mode is **protect**, the port only disable the dynamic MAC address learning function when the MAC address number of the port exceeds the upper limit of secure MAC. If the violation mode is **shutdown**, the port will be disabled when the MAC address number exceeds the upper limit of secure MAC, and the user can enable the port by configuring **no shutdown** command manually or the automatic recovery timeout.

Example:

Set the violation mode as shutdown, the recovery time as 60s for port1.

```
Switch(config)#interface Ethernet 1/1
```

```
Switch(Config-If-Ethernet1/1)#switchport mac-address violation shutdown recovery 60
```

42.16 switchport nd dynamic maximum

Command:

```
switchport nd dynamic maximum <value>
```

```
no switchport nd dynamic maximum
```

Function:

Set the max number of dynamic NEIGHBOR allowed by the port, and, at the same time, enable the number limitation function of dynamic NEIGHBOR on the port; “**no switchport nd dynamic maximum**” command is used to disable the number limitation function of dynamic NEIGHBOR on the port.

Parameters:

<value> upper limit of the number of dynamic NEIGHBOR of the port, ranging from 1 to 4096.

Default Settings:

The number limitation function of dynamic ARP on the port is disabled.

Command Mode:

Port mode.

Usage Guide:

When configuring the max number of dynamic NEIGHBOR allowed by the port, if the number of dynamically learnt NEIGHBOR on the port is already larger than the max number to be set, the extra dynamic NEIGHBOR will be deleted. TRUNK ports do not supports this function.

Examples:

Enable the number limitation function of dynamic NEIGHBOR in port 1/2 mode, the max number to be 20.

```
Switch(config)#interface ethernet 1/2
```

```
Switch(Config-If-Ethernet1/2)# switchport nd dynamic maximum 20
```

Disable the number limitation function of dynamic NEIGHBOR in port 1/2 mode

```
Switch(Config-If-Ethernet1/2)#no switchport nd dynamic maximum
```

42.17 vlan mac-address dynamic maximum

Command:

```
vlan mac-address dynamic maximum <value>
```

```
no vlan mac-address dynamic maximum
```

Function:

Set the max number of dynamic MAC address allowed in the VLAN, and, at the same time, enable the number limitation function of dynamic MAC address in the VLAN; “**no ip mac-address dynamic maximum**” command is used to disable the number limitation function of dynamic MAC address in the VLAN.

Parameters:

<value> upper limit of the number of MAC address in the VLAN, ranging from 1 to 4096.

Default Settings:

The number limitation function of dynamic MAC address in the VLAN is disabled.

Command Mode:

VLAN Configuration Mode.

Usage Guide:

When configuring the max number of dynamic MAC allowed in the VLAN, if the number of dynamically learnt MAC address in the VLAN is already larger than the max number to be set, the extra dynamic MAC addresses will be deleted. After enabling number limitation function of dynamic MAC in the VLAN, the number limitation of MAC is only applied to general access port, the number of MAC on TURNK ports and special ports which has enabled dot1x, MAC binding function will not be limited or counted.

Examples:

Enable the number limitation function of dynamic MAC address in VLAN 1, the max number to be set is 50.

```
Switch(config)#vlan1
```

```
Switch(Config-if-Vlan1)#vlan mac-address dynamic maximum 50
```

Enable the number limitation function of dynamic MAC address in VLAN 1.

```
Switch(Config-if-Vlan1)#no vlan mac-address dynamic maximum
```

Chapter 43 Commands for AM Configuration

43.1 am enable

Command:

am enable
no am enable

Function:

Globally enable/disable AM function.

Parameters:

None.

Default:

AM function is disabled by default.

Command Mode:

Global Mode.

Usage Guide:

None.

Example:

Enable AM function on the switch.
Switch(config)#am enable
Disable AM function on the switch.
Switch(config)#no am enable

43.2 am port

Command:

am iport
no am port

Function:

Enable/disable AM function on port.

Parameters:

None.

Default:

AM function is disabled on all port.

Command Mode:

Port Mode.

Example:

Enable AM function on interface 1/3 of the switch.

```
Switch(Config-If-Ethernet 1/3)#am port
```

Disable AM function on interface 1/3 of the switch.

```
Switch(Config-If-Ethernet 1/3)#no am port
```

43.3 am ip-pool

Command:

```
am ip-pool <ip-address> <num>
```

```
no am ip-pool <ip-address> <num>
```

Function:

Set the AM IP segment of the interface, allow/deny the IP messages or APR messages from a source IP within that segment to be forwarded via the interface.

Parameters:

<ip-address> the starting address of an address segment in the IP address pool; **<num>** is the number of consecutive addresses following ip-address, less than or equal with 32.

Default:

IP address pool is empty.

Command Mode:

Port Mode.

Usage Guide:

None.

Example:

Configure that interface 1/3 of the switch will forward data packets from an IP address which is one of 10 consecutive IP addresses starting from 10.10.10.1.

```
Switch(Config-If-Ethernet 1/3)#am ip-pool 10.10.10.1 10
```

43.4 am mac-ip-pool

Command:

```
am mac-ip-pool <mac-address> <ip-address>  
no am mac-ip-pool <mac-address> <ip-address>
```

Function:

Set the AM MAC-IP address of the interface, allow/deny the IP messages or APR messages from a source IP within that segment to be forwarded via the interface.

Parameter:

<mac-address> is the source MAC address; <ip-address> is the source IP address of the packets, which is a 32 bit binary number represented in four decimal numbers.

Default:

MAC-IP address pool is empty.

Command Mode:

Port Mode.

Usage Guide:

None.

Example:

Configure that the interface 1/3 of the switch will allow data packets with a source MAC address of 11-22-22-11-11-11 and a source IP address of 10.10.10.1 to be forwarded.

```
Switch(Config-If-Ethernet1/3)#am mac-ip-pool 11-22-22-11-11-11 10.10.10.1
```


43.5 no am all

Command:

no am all [ip-pool | mac-ip-pool]

Function:

Delete MAC-IP address pool or IP address pool or both pools configured by all users.

Parameters:

ip-pool is the IP address pool; **mac-ip-pool** is the MAC-IP address pool; no parameter means both address pools.

Default:

Both address pools are empty at the beginning.

Command Mode:

Global Mode

Usage Guide:

None.

Example:

Delete all configured IP address pools.

Switch(config)#no am all ip-pool

43.6 show am

Command:

show am [interface <interface-name>]

Function:

Display the configured AM entries.

Parameters:

<interface-name> is the name of the interface of which the configuration information will be displayed. No parameter means to display the AM configuration information of all interfaces.

Command Mode:

Admin and Configuration Mode.

Example:

Display all configured AM entries.

```
Switch#show am
```

AM is enabled

```
Interface Ethernet1/3
```

```
    am interface
```

```
    am ip-pool 30.10.10.1 20
```

```
Interface Ethernet1/5
```

```
    am port
```

```
    am ip-pool 50.10.10.1 30
```

```
    am mac-ip-pool 00-02-04-06-08-09 20.10.10.5
```

```
    am ip-pool 50.20.10.1 20
```

```
Interface Ethernet1/6
```

```
    am port
```

```
Interface Ethernet1/1
```

```
    am interface
```

```
    am ip-pool 10.10.10.1 20
```

```
    am ip-pool 10.20.10.1 20
```

Display the AM configuration entries of ethernet1/5 of the switch.

```
Switch#show am interface ethernet 1/5
```

AM is enabled

```
Interface Etherne1/5
```

```
    am interface
```

```
    am ip-pool 50.10.10.1 30
```

```
    am mac-ip-pool 00-02-04-06-08-09 20.10.10.5
```

```
    am ip-pool 50.20.10.1 20
```

Chapter 44 Commands for Security Feature

44.1 dosattack-check srcip-equal-dstip enable

Command:

`[no] dosattack-check srcip-equal-dstip enable`

Function:

Enable the function by which the switch checks if the source IP address is equal to the destination IP address; the “no” form of this command disables this function.

Parameter:

None

Default:

Disable the function by which the switch checks if the source IP address is equal to the destination IP address.

Command Mode:

Global Mode

Usage Guide:

By enabling this function, data packet whose source IP address is equal to its destination address will be dropped.

Example:

Drop the data packet whose source IP address is equal to its destination address.

```
Switch(config)# dosattack-check srcip-equal-dstip enable
```

44.2 dosattack-check tcp-flags enable

Command:

`[no] dosattack-check tcp-flags enable`

Function:

Enable the function by which the switch will check the unauthorized TCP label function; the “no” form of this command will disable this function.

Parameter:

None

Default:

This function disable on the switch by default

Command Mode:

Global Mode

Usage Guide:

With this function enabled, the switch will be able to drop follow four data packets containing unauthorized TCP label: SYN=1 while source port is smaller than 1024;TCP label positions are all 0 while its serial No.=0;FIN=1,URG=1,PSH=1 and the TCP serial No.=0;SYN=1 and FIN=1. This function can be used associating the “dosattack-check ipv4-first-fragment enable” command.

Example:

Drop one or more types of above four packet types.

Switch(config)#dosattack-check tcp-flags enable

44.3 dosattack-check srcport-equal-dstport enable

Command:

```
dosattack-check srcport-equal-dstport enable  
no dosattack-check srcport-equal-dstport enable
```

Function:

Enable the function by which the switch will check if the source port is equal to the destination port; the no command disables this function.

Parameter:

None

Default:

Disable the function by which the switch will check if the source port is equal to the destination port.

Command Mode:

Global Mode

Usage Guide:

With this function enabled, the switch will be able to drop TCP and UDP data packet whose destination port is equal to the source port. This function can be used associating the “dosattack-check ipv4-first-fragment enable” function so to block the IPv4 fragment TCP and UDP data packet whose destination port is equal to the source port.

Example:

Drop the non-fragment TCP and UDP data packet whose destination port is equal to the source port.

```
Switch(config)#dosattack-check srcport-equal-dstport enable
```

44.4 dosattack-check icmp-attacking enable

Command:

```
[no] dosattack-check icmp-attacking enable
```

Function:

Enable the ICMP fragment attack checking function on the switch; the “no” form of this command disables this function.

Parameter:

None

Default:

Disable the ICMP fragment attack checking function on the switch

Command Mode:

Global Mode

Usage Guide:

With this function enabled the switch will be protected from the ICMP fragment attacks, dropping the fragment ICMPv4/v6 data packets whose net length is smaller than the specified value.

Example:

Enable the ICMP fragment attack checking function.

```
Switch(config)#dosattack-check icmp-attacking enable
```

44.5 dosattack-check icmpV4-size

Command:

dosattack-check icmpV4-size <64-1023>

Function:

Configure the max net length of the ICMPv4 data packet permitted by the switch.

Parameter:

<64-1023> is the max net length of the ICMPv4 data packet permitted by the switch.

Default:

The value is 0x200 by default

Command Mode:

Global Mode

Usage Guide:

To use this function you have to enable “dosattack-check icmp-attacking enable” first.

Example:

Set the max net length of the ICMPv4 data packet permitted by the switch to 100.

```
Switch(config)#dosattack-check icmp-attacking enable
```

```
Switch(config)#dosattack-check icmpV4-size 100
```

Chapter 45 Commands for TACACS+

45.1 tacacs-server authentication host

Command:

```
tacacs-server authentication host <ip-address> [port <port-number>] [timeout <seconds>] [key {0 | 7} <string>] [primary]  
no tacacs-server authentication host <ip-address>
```

Function:

Configure the IP address, listening port number, the value of timeout timer and the key string of the TACACS+ server; the no form of this command deletes TACACS+ authentication server.

Parameter:

<ip-address> is the IP address of the server; **<port-number>** is the listening port number of the server, the valid range is 0~65535, amongst 0 indicates it will not be an authentication server; **<seconds>** is the value of TACACS+ authentication timeout timer, shown in seconds and the valid range is 1~60; **<string>** is the key string, If key option is set as 0, the key is not encrypted and its range should not exceed 64 characters, if key option is set as 7, the key is encrypted and its range should not exceed 64 characters; **primary** indicates it's a primary server.

Command Mode:

Global Mode

Default:

No TACACS+ authentication configured on the system by default.

Usage Guide:

This command is for specifying the IP address, port number, timeout timer value and the key string of the TACACS+ server used on authenticating with the switch. The parameter port is for define an authentication port number which must be in accordance with the authentication port number of specified TACACS+ server which is 49 by default. The parameters key and timeout is used to configure the self-key and self-timeout, if the switch is not configure the timeout<seconds> and key<string>, it will use the global value and key by command tacacs-server timeout<seconds> and tacacs-server key <string>. This command can configure several TACACS+ servers communicate with the switch. The configuration sequence will be used as authentication server sequence. And in case **primary** is configured on one TACACS+ server, the server will be the primary server.

Example:

Configure the TACACS+ authentication server address to 192.168.1.2, and use the global configured key.
Switch(config)#tacacs-server authentication host 192.168.1.2

45.2 tacacs-server key

Command:

```
tacacs-server key {0 | 7} <string>  
no tacacs-server key
```

Function:

Configure the key of TACACS+ authentication server; the “**no tacacs-server key**” command deletes the TACACS+ server key.

Parameter:

<*string*> is the key string of the TACACS+ server. If key option is set as 0, the key is not encrypted and its range should not exceed 64 characters, if key option is set as 7, the key is encrypted and its range should not exceed 64 characters.

Command Mode:

Global Mode

Usage Guide:

The key is used on encrypted packet communication between the switch and the TACACS+ server. The configured key must be in accordance with the one on the TACACS+ server or else no correct TACACS+ authentication will be performed. It is recommended to configure the authentication server key to ensure the data security.

Example:

Configure test as the TACACS+ server authentication key.
Switch(config)#tacacs-server key 0 test

45.3 tacacs-server nas-ipv4

Command:

```
tacacs-server nas-ipv4 <ip-address>  
no tacacs-server nas-ipv4
```

Function:

Configure the source IP address of TACACS+ packet sent by the switch; the “**no tacacs-server nas-ipv4**” command deletes the configuration.

Parameter:

<ip-address> is the source IP address of TACACS+ packet, in dotted decimal notation, it must be a valid unicast IP address.

Default:

No specific source IP address for TACACS+ packet is configured, the IP address of the interface from which the TACACS+ packets are sent is used as source IP address of TACACS+ packet.

Command Mode:

Global Mode

Usage Guide:

The source IP address must belong to one of the IP interfaces of the switch, otherwise an error message of binding IP address will be returned when the switch sends TACACS+ packets. We suggest using the IP address of a loopback interface as the source IP address, it avoids that the packets from the TACACS+ server are dropped when the interface goes down.

Example:

Configure the source IP address of TACACS+ packet as 192.168.2.254.

```
Switch#tacacs-server nas-ipv4 192.168.2.254
```

45.4 tacacs-server timeout

Command:

```
tacacs-server timeout <seconds>
```

```
no tacacs-server timeout
```

Function:

Configure a TACACS+ server authentication timeout timer; the “**no tacacs-server timeout**” command restores the default configuration.

Parameter:

<seconds> is the value of TACACS+ authentication timeout timer, shown in seconds and the valid range is 1–60.

Command Mode:

Global Mode

Default:

3 seconds by default.

Usage Guide:

The command specifies the period the switch wait for the authentication through TACACS+ server. When connected to the TACACS+, and after sent the authentication query data packet to the TACACS+ server, the switch waits for the response. If no replay is received during specified period, the authentication is considered failed.

Example:

Configure the timeout timer of the tacacs+ server to 30 seconds.

```
Switch(config)#tacacs-server timeout 30
```

45.5 debug tacacs-server

Command:

```
debug tacacs-server
```

```
no debug tacacs-server
```

Function:

Open the debug message of the TACACS+; the “**no debug tacacs-server**” command closes the TACACS+ debugging messages.

Command Mode:

Admin Mode

Parameter:

None.

Usage Guide:

Enable the TACACS+ debugging messages to check the negotiation process of the TACACS+ protocol which can help detecting the failure.

Example:

Enable the debugging messages of the TACACS+ protocol.

```
Switch#debug tacacs-server
```

Chapter 46 Commands for RADIUS

46.1 aaa enable

Command:

aaa enable
no aaa enable

Function:

Enables the AAA authentication function in the switch; the "no AAA enable" command disables the AAA authentication function.

Command mode:

Global Mode.

Parameters:

No.

Default:

AAA authentication is not enabled by default.

Usage Guide:

The AAA authentication for the switch must be enabled first to enable IEEE 802.1x authentication for the switch.

Example:

Enabling AAA function for the switch.
Switch(config)#aaa enable

46.2 aaa-accounting enable

Command:

aaa-accounting enable
no aaa-accounting enable

Function:

Enables the AAA accounting function in the switch: the "no aaa-accounting enable" command disables the AAA accounting function.

Command mode:

Global Mode

Default:

AAA accounting is not enabled by default.

Usage Guide:

When accounting is enabled in the switch, accounting will be performed according to the traffic or online time for port the authenticated user is using. The switch will send an “accounting started” message to the RADIUS accounting server on starting the accounting, and an accounting packet for the online user to the RADIUS accounting server every five seconds, and an “accounting stopped” message is sent to the RADIUS accounting server on accounting end. Note: The switch send the “user offline” message to the RADIUS accounting server only when accounting is enabled, the “user offline” message will not be sent to the RADIUS authentication server.

Example:

Enabling AAA accounting for the switch.

```
Switch(config)#aaa-accounting enable
```

46.3 aaa-accounting update

Command:

```
aaa-accounting update {enable | disable}
```

Function:

Enable or disable the AAA update accounting function.

Command Mode:

Global Mode.

Default:

Enable the AAA update accounting function.

Usage Guide:

After the update accounting function is enabled, the switch will sending accounting message to each online user on time.

Example:

Disable the AAA update accounting function for switch.

```
Switch(config)#aaa-accounting update disable
```

46.4 debug aaa packet

Command:

```
debug aaa packet {send | receive | all} interface {ethernet <interface-number> | <interface-name>}  
no debug aaa packet {send | receive | all} interface {ethernet <interface-number> | <interface-name>}
```

Function:

Enable the debug information of AAA about receiving and sending packets; the no operation of this command will disable such debug information.

Parameters:

send: Enable the debug information of AAA about sending packets.

receive: Enable the debug information of AAA about receiving packets.

all: Enable the debug information of AAA about both sending and receiving packets.

<interface-number>: the number of interface.

<interface-name>: the name of interface.

Command Mode:

Admin Mode.

Usage Guide:

By enabling the debug information of AAA about sending and receiving packets, users can check the messages received and sent by Radius protocol, which might help diagnose the cause of faults if there is any.

Example:

Enable the debug information of AAA about sending and receiving packets on interface1/1.

```
Switch#debug aaa packet all interface Ethernet 1/1
```

46.5 debug aaa detail attribute

Command:

```
debug aaa detail attribute interface {ethernet <interface-number> | <interface-name>}  
no debug aaa detail attribute interface {ethernet <interface-number> | <interface-name>}
```

Function:

Enable the debug information of AAA about Radius attribute details; the no operation of this command will disable that debug information.

Parameters:

<interface-number>: the number of the interface.

<interface-name>: the name of the interface.

Command Mode:

Admin Mode.

Usage Guide:

By enabling the debug information of AAA about Radius attribute details, users can check Radius attribute details of Radius messages, which might help diagnose the cause of faults if there is any.

Example:

Enable the debug information of aaa about Radius attribute details on interface 1/1.
Switch#debug detail attribute interface Ethernet 1/1

46.6 debug aaa detail connection

Command:

```
debug aaa detail connection  
no debug aaa detail connection
```

Function:

Enable the debug information of aaa about connection details; the no operation of this command will disable that debug information.

Parameters:

None.

Command Mode:

Admin Mode.

Usage Guide:

By enabling the debug information of aaa about connection details, users can check connection details of aaa, which might help diagnose the cause of faults if there is any.

Example:

Enable the debug information of aaa about connection details.

```
Switch#debug aaa detail connection
```

46.7 debug aaa detail event

Command:

```
debug aaa detail event
```

```
no debug detail event
```

Function:

Enable the debug information of aaa about events; the no operation of this command will disable that debug information.

Parameters:

None.

Command Mode:

Admin Mode.

Usage Guide:

By enabling the debug information of aaa about events, users can check the information of all kinds of event generated in the operation process of Radius protocol, which might help diagnose the cause of faults if there is any.

Example:

Enable the debug information of aaa about events.

```
Switch#debug aaa detail event
```

46.8 debug aaa error

Command:

```
debug aaa error
no debug error
```

Function:

Enable the debug information of aaa about errors; the no operation of this command will disable that debug information.

Parameters:

None.

Command Mode:

Admin Mode.

Usage Guide:

By enabling the debug information of aaa about errors, users can check the information of all kinds of errors that occurs in the operation process of Radius protocol, which might help diagnose the cause of faults if there is any.

Example:

```
Enable the debug information of aaa about errors.
Switch#debug aaa error
```

46.9 radius nas-ipv4

Command:

```
radius nas-ipv4 <ip-address>
no radius nas-ipv4
```

Function:

Configure the source IP address for RADIUS packet sent by the switch. The “**no radius nas-ipv4**” command deletes the configuration.

Parameter:

<ip-address> is the source IP address of the RADIUS packet, in dotted decimal notation, it must be a valid unicast IP address.

Default:

No specific source IP address for RADIUS packet is configured, the IP address of the interface from which the RADIUS packets are sent is used as source IP address of RADIUS packet.

Command mode:

Global Mode.

Usage guide:

The source IP address must belongs to one of the IP interface of the switch, otherwise an failure message of binding IP address will be returned when the switch send RADIUS packet. We suggest using the IP address of loopback interface as source IP address, it avoids that the packets from RADIUS server are dropped when the interface link-down.

Example:

Configure the source ip address of RADIUS packet as 192.168.2.254.

```
Switch#radius nas-ipv4 192.168.2.254
```

46.10 radius nas-ipv6

Command:

```
radius nas-ipv6 <ipv6-address>
```

```
no radius nas-ipv6
```

Function:

Configure the source IPv6 address for RADIUS packet sent by the switch. The no command deletes the configuration.

Parameter:

<ipv6-address> is the source IPv6 address of the RADIUS packet, it must be a valid unicast IPv6 address.

Default:

No specific source IPv6 address for RADIUS packet is configured, the IPv6 address of the interface from which the RADIUS packets are sent is used as source IPv6 address of RADIUS packet.

Command mode:

Global Mode.

Usage guide:

The source IPv6 address must belong to one of the IPv6 interfaces of the switch, otherwise a failure message of binding IPv6 address will be returned when the switch sends a RADIUS packet. We suggest using the IPv6 address of the loopback interface as the source IPv6 address, it avoids that the packets from the RADIUS server are dropped when the interface link-downs.

Example:

Configure the source IPv6 address of the RADIUS packet as 2001:da8:456::1.

```
Switch#radius nas-ipv6 2001:da8:456::1
```

46.11 radius-server accounting host

Command:

```
radius-server accounting host {<ipv4-address> | <ipv6-address>} [port <port-number>] [key {0 | 7} <string>]
[primary]
no radius-server accounting host {<ipv4-address> | <ipv6-address>}
```

Function:

Specifies the IPv4/IPv6 address and the port number, whether be the primary server for the RADIUS accounting server; the `no` command deletes the RADIUS accounting server.

Parameters:

<ipv4-address> | <ipv6-address> stands for the server IPv4/IPv6 address;

<port-number> for server listening port number from 0 to 65535;

<string> is the key string. If the key option is set as 0, the key is not encrypted and its range should not exceed 64 characters; if the key option is set as 7, the key is encrypted and its range should not exceed 64 characters;

primary for primary server. Multiple RADIUS servers can be configured and would be available. The RADIUS server will be searched by the configured order if **primary** is not configured, otherwise, the specified RADIUS server will be used first.

Command Mode:

Global Mode

Default:

No RADIUS accounting server is configured by default.

Usage Guide:

This command is used to specify the IPv4/IPv6 address and port number of the specified RADIUS server for switch accounting, multiple command instances can be configured. The **<port-number>** parameter is used to specify accounting port number, which must be the same as the specified accounting port in the RADIUS server; the default port number is 1813. If this port number is set to 0, accounting port number will be generated at random and can result in invalid configuration. This command can be used repeatedly to configure multiple RADIUS servers communicating with the switch, the switch will send accounting packets to all the configured accounting servers, and all the accounting servers can be backup servers for each other. If **primary** is specified, then the specified RADIUS server will be the primary server. It only configures a RADIUS primary server whether the server use IPv4 address or IPv6 address.

Example:

Sets the RADIUS accounting server of IPv6 address to 2004:1:2:3::2, as the primary server, with the accounting port number as 3000.

```
Switch(config)#radius-server accounting host 2004:1:2:3::2 port 3000 primary
```

46.12 radius-server authentication host

Command:

```
radius-server authentication host {<ipv4-address> | <ipv6-address>} [port <port-number>] [key {0 | 7} <string>] [primary] [access-mode {dot1x | telnet}]  
no radius-server authentication host {<ipv4-address> | <ipv6-address>}
```

Function:

Specifies the IPv4 address or IPv6 address and listening port number, cipher key, whether be primary server or not and access mode for the RADIUS server; the no command deletes the RADIUS authentication server.

Parameters:

<ipv4-address> | <ipv6-address> stands for the server IPv4/IPv6 address;

<port-number> for listening port number, from 0 to 65535, where 0 stands for non-authentication server usage;

<string> is the key string. If key option is set as 0, the key is not encrypted and its range should not exceed 64 characters, if key option is set as 7, the key is encrypted and its range should not exceed 64 characters;

primary for primary server. Multiple RADIUS Sever can be configured and would be available. RADIUS Server will be searched by the configured order if **primary** is not configured, otherwise, the specified RADIUS server will be used last.

[access-mode {dot1x|telnet}] designates the current RADIUS server only use 802.1x authentication or telnet authentication, all services can use current RADIUS server by default.

Command mode:

Global Mode

Default:

No RADIUS authentication server is configured by default.

Usage Guide:

This command is used to specify the IPv4 address or IPv6 address and port number, cipher key string and access mode of the specified RADIUS server for switch authentication, multiple command instances can be configured. The port parameter is used to specify authentication port number, which must be the same as the specified authentication port in the RADIUS server, the default port number is 1812. If this port number is set to 0, the specified server is regard as non-authenticating. This command can be used repeatedly to configure multiple RADIUS servers communicating with the switch, the configured order is used as the priority for the switch authentication server. When the first server has responded (whether the authentication is succeeded or failed), switch does not send the authentication request to the next. If **primary** is specified, then the specified RADIUS server will be the primary server. It will use the cipher key which be configured by **radius-server key <string>** global command if the current RADIUS server not configure key<string>. Besides, it can designate the current RADIUS server only use 802.1x authentication or telnet authentication via access-mode option. It is not configure access-mode option and all services can use current RADIUS server by default.

Example:

Setting the RADIUS authentication server address as 2004:1:2:3::2.

```
Switch(config)#radius-server authentication host 2004:1:2:3::2
```

46.13 radius-server dead-time

Command:

```
radius-server dead-time <minutes>
```

```
no radius-server dead-time
```

Function:

Configures the restore time when RADIUS server is down; the “**no radius-server dead-time**” command restores the default setting.

Parameters:

<minute> is the down -restore time for RADIUS server in minutes, the valid range is 1 to 255.

Command mode:

Global Mode

Default:

The default value is 5 minutes.

Usage Guide:

This command specifies the time to wait for the RADIUS server to recover from inaccessible to accessible. When the switch acknowledges a server to be inaccessible, it marks that server as having invalid status, after the interval specified by this command; the system resets the status for that server to valid.

Example:

Setting the down-restore time for RADIUS server to 3 minutes.

```
Switch(config)#radius-server dead-time 3
```

46.14 radius-server key

Command:

```
radius-server key {0 | 7} <string>
```

```
no radius-server key
```

Function:

Specifies the key for the RADIUS server (authentication and accounting); the “no radius-server key” command deletes the key for RADIUS server.

Parameters:

<string> is a key string for RADIUS server, If key option is set as 0, the key is not encrypted and its range should not exceed 64 characters, if key option is set as 7, the key is encrypted and its range should not exceed 64 characters.

Command mode:

Global Mode

Usage Guide:

The key is used in the encrypted communication between the switch and the specified RADIUS server. The key set must be the same as the RADIUS server set, otherwise, proper RADIUS authentication and accounting will not perform properly.

Example:

Setting the RADIUS authentication key to be "test".

```
Switch(config)#radius-server key 0 test
```

46.15 radius-server retransmit

Command:

```
radius-server retransmit <retries>
```

```
no radius-server retransmit
```

Function:

Configures the re-transmission times for RADIUS authentication packets; the "no radius-server retransmit" command restores the default setting.

Parameters:

<retries> is a retransmission times for RADIUS server, the valid range is 0 to 100.

Command mode:

Global Mode

Default:

The default value is 3 times.

Usage Guide:

This command specifies the retransmission time for a packet without a RADIUS server response after the switch sends the packet to the RADIUS server. If authentication information is missing from the authentication server, AAA authentication request will need to be re-transmitted to the authentication server. If AAA request retransmission count reaches the retransmission time threshold without the server responding, the server will be considered to as not work, the switch sets the server as invalid.

Example:

Setting the RADIUS authentication packet retransmission time to five times.

```
Switch(config)#radius-server retransmit 5
```

46.16 radius-server timeout

Command:

```
radius-server timeout <seconds>  
no radius-server timeout
```

Function:

Configures the timeout timer for RADIUS server; the “**no radius-server timeout**” command restores the default setting.

Parameters:

<seconds> is the timer value (second) for RADIUS server timeout, the valid range is 1 to 1000.

Command mode:

Global Mode

Default:

The default value is 3 seconds.

Usage Guide:

This command specifies the interval for the switch to wait RADIUS server response. The switch waits for corresponding response packets after sending RADIUS Server request packets. If RADIUS server response is not received in the specified waiting time, the switch resends the request packet or sets the server as invalid according to the current conditions.

Example:

Setting the RADIUS authentication timeout timer value to 30 seconds.
Switch(config)#radius-server timeout 30

46.17 radius-server accounting-interim-update timeout

Command:

```
radius-server accounting-interim-update timeout <seconds>  
no radius-server accounting-interim-update timeout
```

Function:

Set the interval of sending fee-counting update messages; the no operation of this command will reset to the default configuration.

Parameters:

<**seconds**> is the interval of sending fee-counting update messages, in seconds, ranging from 60 to 3600.

Command Mode:

Global Mode.

Default:

The default interval of sending fee-counting update messages is 300 seconds.

User Guide:

This command set the interval at which NAS sends fee-counting update messages. In order to realize the real time fee-counting of users, from the moment the user becomes online, NAS will send a fee-counting update message of this user to the RADIUS server at the configured interval.

The interval of sending fee-counting update messages is relative to the maximum number of users supported by NAS. The smaller the interval, the less the maximum number of the users supported by NAS; the bigger the interval, the more the maximum number of the users supported by NAS. The following is the recommended ratio of interval of sending fee-counting update messages to the maximum number of the users supported by NAS:

The maximum number of users	The interval of sending fee-counting update messages(in seconds)
1~299	300 (default value)
300~599	600
600~1199	1200
1200~1799	1800
≥1800	3600

Example:

The maximum number of users supported by NAS is 700, the interval of sending fee-counting update messages 1200 seconds.

```
Switch(config)#radius-server accounting-interim-update timeout 1200
```

46.18 show aaa authenticated-user

Command:

```
show aaa authenticated-user
```

Function:

Displays the authenticated users online.

Command mode:

Admin and Configuration Mode.

Usage Guide:

Usually the administrator concerns only information about the online user, the other information displayed is used for troubleshooting by technical support.

Example:

```
Switch#show aaa authenticated-user
----- authenticated users -----
UserName  Retry RadID Port EapID ChapID OnTime   UserIP      MAC
-----
----- total: 0 -----
```

46.19 show aaa authenticating-user

Command:

show aaa authenticating-user

Function:

Display the authenticating users.

Command mode:

Admin and Configuration Mode.

Usage Guide:

Usually the administrator concerns only information about the authenticating user, the other information displays is used for troubleshooting by the technical support.

Example:

```
Switch#show aaa authenticating-user
----- authenticating users -----
User-name  Retry-time  Radius-ID  Port  Eap-ID  Chap-ID  Mem-Addr  State
-----
----- total: 0 -----
```

46.20 show aaa config

Command:

show aaa config

Function:

Displays the configured commands for the switch as a RADIUS client.

Command mode:

Admin and Configuration Mode.

Usage Guide:

Displays whether aaa authentication, accounting are enabled and information for key, authentication and accounting server specified.

Example:

Switch#show aaa config (For Boolean value, 1 stands for TRUE and 0 for FALSE)

----- AAA config data -----

Is Aaa Enabled = 1 :1 means AAA authentication is enabled, 0 means is not enabled

Is Account Enabled= 1 :1 means AAA account is enabled, 0 means is not enabled

MD5 Server Key = yangshifeng : Authentication key

authentication server sum = 2 :Configure the number of authentication server

authentication server[0].sock_addr = 2:100.100.100.60.1812 :The address protocol group, IP and interface number of the first authentication server

.Is Primary = 1 :Is the primary server

.Is Server Dead = 0 :The server whether dead

.Socket No = 0 :The local socket number lead to this server

authentication server[1].sock_addr = 10:2004:1:2::2.1812

.Is Primary = 0

.Is Server Dead = 0

.Socket No = 0

accounting server sum = 2 :Configure the number of the accounting server

accounting server[0].sock_addr = 2:100.100.100.65.1813 :The address protocol group, IP and interface number of the accounting server

.Is Primary = 1 :Is primary server

.Is Server Dead = 0 :This server whether dead

.Socket No = 0 :The local socket number lead to this server

accounting server[1].sock_addr = 10:2004::7.1813

.Is Primary = 1

.Is Server Dead = 0

.Socket No = 0

Time Out = 5s :After send the require packets, wait for response time out

Retransmit = 3 :The number of retransmit

Dead Time = 5min :The tautology interval of the dead server

Account Time Interval = 0min :The account time interval

46.21 show radius authenticated-user count

Command:

show radius authenticated-user count

Function:

Show the number of on-line users who have already passed the authentication.

Parameter:

None.

Command mode:

Admin and configuration mode

Default:

None.

Usage guide:

None.

Example:

Switch#show radius authenticated-user count

The authenticated online user num is: 105

46.22 show radius authenticating-user count

Command:

show radius authenticating-user count

Function:

Show the number of the authenticating-user.

Parameter:

None.

Command mode:

Admin and configuration mode.

Default:

None.

Usage Guide:

None.

Example:

```
Switch#show radius authenticating-user count
The authenticating user num is:      10
```

46.23 show radius count

Command:

show radius {authenticated-user|authenticating-user} count

Function:

Displays the statistics for users of RADIUS authentication.

Parameters:

authenticated-user displays the authenticated users online; **authenticating-user** displays the authenticating users.

Command mode:

Admin and Configuration Mode.

Usage Guide:

The statistics for RADIUS authentication users can be displayed with the “**show radius count**” command.

Example:

1. Display the statistics for RADIUS authenticated users.

```
Switch#show radius authenticated-user count
```

The authenticated online user num is: 0

2. Display the statistics for RADIUS authenticated users and others.

```
Switch#show radius authenticating-user count
```

Chapter 47 Commands for SSL Configuration

47.1 ip http secure-server

Command:

```
ip http secure-server
no ip http secure-server
```

Function:

Enable/disable SSL function.

Parameter:

None.

Command Mode:

Global Mode.

Default:

Disabled.

Usage Guide:

This command is used for enable and disable SSL function. After enable SSL function, the users visit the switch through https client, switch and client use SSL connect, can form safety SSL connect channel. After that, all the data which transmit of the application layer will be encrypted, then ensure the privacy of the communication.

Example:

```
Enable SSL function.
Switch(config)#ip http secure-server
```

47.2 ip http secure-port

Command:

```
ip http secure-port <port-number>
no ip http secure-port
```

Function:

Configure/delete port number by SSL used.

Parameter:

<port-number> means configured port number, range between 1025 and 65535. 443 is for default.

Command Mode:

Global Mode.

Default:

Not configure.

Usage Guide:

If this command is used to configure the port number, then the configured port number is used to monitor. If the port number for https is changed, when users try to use https to connect, must use the changed one. For example: https://device:port_number. SSL function must reboot after every change.

Example:

Configure the port number is 1028.

```
Switch(config)#ip http secure-port 1028
```

47.3 ip http secure- ciphersuite

Command:

```
ip http secure-ciphersuite {des-cbc3-sha|rc4-128-sha| des-cbc-sha}  
no ip http secure-ciphersuite
```

Function:

Configure/delete secure cipher suite by SSL used.

Parameter:

des-cbc3-sha encrypted algorithm DES_CBC3, summary algorithm SHA.

rc4-128-sha encrypted algorithm RC4_128, summary algorithm SHA.

des-cbc-sha encrypted algorithm DES_CBC, summary algorithm SHA.

default use is **rc4-md5**.

Command Mode:

Global Mode.

Default:

Not configure.

Usage Guide:

If this command is used to configure the secure cipher suite, specified encryption method will be used. The SSL should be restarted to take effect after changes on configuration. When des-cbc-sha is configured, IE 7.0 or above is required.

Example:

Configure the secure cipher suite is rc4-128-sha.

```
Switch(config)# ip http secure- ciphersuite rc4-128-sha
```

47.4 show ip http secure-server status

Command:

```
show ip http secure-server status
```

Function:

Show the status for the configured SSL.

Parameter:

None.

Command Mode:

Admin and Configuration Mode.

Example:

```
Switch# show ip http secure-server status
```

```
HTTP secure server status: Enabled
```

```
HTTP secure server port: 1028
```

```
HTTP secure server ciphersuite: rc4-128-sha
```


47.5 debug ssl

Command:

debug ssl

no debug ssl

Function:

Show the configured SSL information, the no command closes the DEBUG.

Parameter:

None.

Command Mode:

Admin Mode.

Example:

```
Switch# debug ssl
```

```
%Jan 01 01:02:05 2006 ssl will to connect to web server 127.0.0.1:9998
```

```
%Jan 01 01:02:05 2006 connect to http security server success!
```

Chapter 48 Commands for IPv6 Security RA

48.1 ipv6 security-ra enable

Command:

```
ipv6 security-ra enable
no ipv6 security-ra enable
```

Function:

Globally enable IPv6 security RA function, all the RA advertisement messages will not be forwarded through hardware, but only sent to CPU to handle. The no operation of this command will globally disable IPv6 security RA function.

Parameters:

None.

Command Mode:

Global Configuration Mode.

Default:

The IPv6 security RA function is disabled by default.

Usage Guide:

Only after enabling the global security RA function, the security RA on a port can be enabled. Globally disabling security RA will clear all the configured security RA ports. The global security RA function and the global IPv6 SAVI function are mutually exclusive, so they can not be enabled at the same time.

Example:

```
Globally enable IPv6 security RA.
Switch(config)#ipv6 security-ra enable
```

48.2 ipv6 security-ra enable

Command:

```
ipv6 security-ra enable  
no ipv6 security-ra enable
```

Function:

Enable IPv6 security RA on a port, causing this port not to forward the received RA message. The **no ipv6 security-ra enable** will disable the IPv6 security RA on a port.

Parameters:

None.

Command Mode:

Port Configuration Mode.

Default:

IPv6 security RA function is disabled by default.

Usage Guide:

Only after globally enabling the security RA function, can the security RA on a port be enabled. Globally disabling security RA will clear all the configured security RA ports.

Example:

```
Enable IPv6 security RA on a port.  
Switch(Config-If-Ethernet1/2)#ipv6 security-ra enable
```

48.3 show ipv6 security-ra

Command:

```
show ipv6 security-ra [interface <interface-list>]
```

Function:

Display all the interfaces with IPv6 RA function enabled.

Parameters:

No parameter will display all distrust ports, entering a parameter will display the corresponding distrust port.

Command Mode:

Admin and Configuration Mode.

Example:

```
Switch# show ipv6 security-ra
IPv6 security ra config and state information in the switch
Global IPv6 Security RA State: Enable
Ethernet1/1
IPv6 Security RA State: Yes
Ethernet1/3
IPv6 Security RA State: Yes
```

48.4 debug ipv6 security-ra

Command:

```
debug ipv6 security-ra
no debug ipv6 security-ra
```

Function:

Enable the debug information of IPv6 security RA; the no operation of this command will disable the debug information of IPv6 security RA.

Command Mode:

Admin Mode.

Parameters:

None.

Usage Guide:

Users can check the proceeds of message handling of IPv6 security RA, which will help investigate the causes to problems if there is any.

Example:

```
Enable the debug information of IPv6 security RA.
Switch#debug ipv security-ra
```

Chapter 49 Commands for MAB

49.1 authentication mab

Command:

```
authentication mab {radius | none}
no authentication mab
```

Function:

Configure the authentication mode and priority of MAC address authentication, the no command restores the default authentication mode.

Parameters:

radius means RADIUS authentication mode, none means the authentication is needless.

Default:

Using RADIUS authentication mode.

Command Mode:

Global mode

Usage Guide:

none option is used to the fleeing function of MAC address authentication. If all configured RADIUS servers don't respond, switch will adopt none authentication mode to allow that MAC address authentication users access the network directly.

Example:

Configure the fleeing function of MAC address authentication.

```
Switch(config)#authentication mab radius none
```

49.2 clear mac-authentication-bypass binding

Command:

clear mac-authentication-bypass binding {mac WORD | interface (ethernet IFNAME | IFNAME) | all}

Function:

Clear MAB binding information.

Parameters:

MAC: Delete MAB binding of the specified MAC address

IFNAME: Delete MAB binding of the specified port

all: Delete all MAB binding

Command Mode:

Admin Mode

Default:

None.

Usage Guide:

None.

Example:

Delete all MAB binding.

Switch#clear mac-authentication-bypass binding all

49.3 debug mac-authentication-bypass

Command:

debug mac-authentication-bypass {packet | event | binding}

Function:

Enable the debugging of the packet information, event information or binding information for MAB authentication.

Parameters:

packet: Enable the debugging of the packet information for MAB authentication.

event: Enable the debugging of the event information for MAB authentication.

binding: Enable the debugging of the binding information for MAB authentication.

Command Mode:

Admin Mode

Default:

None.

Usage Guide:

None.

Example:

Enable the debugging of the packet information for MAB authentication.

```
Switch#debug mac-authentication-bypass packet
```

49.4 mac-authentication-bypass binding-limit

Command:

```
mac-authentication-bypass binding-limit <1-100>
```

```
no mac-authentication-bypass binding-limit
```

Function:

Set the max binding number of MAB. The no command will restore the default binding number as 3.

Parameters:

<1-100> the max binding number of MAB, ranging from 1 to 100.

Command Mode:

Port Mode

Default:

The max binding number of MAB is 3.

Usage Guide:

Set the max binding number of MAB. When the binding number reaches to the max value, the port will stop binding, if the max binding number is less than the current binding number of the port, the setting will be unsuccessful.

Example:

Configure the max binding number as 10.

```
Switch(Config)#interface ethernet 1/1
```

```
Switch(Config-If-Ethernet1/1)#mac-authentication-bypass binding-limit 10
```

49.5 mac-authentication-bypass enable

Command:

```
mac-authentication-bypass enable
```

```
no mac-authentication-bypass enable
```

Function:

Enable the global and port MAB function. The no command disables MAB function.

Parameters:

None.

Command Mode:

Global Mode and Port Mode

Default:

Disable the global and port MAB function.

Usage Guide:

To process MAB authentication of a port, enable the global MAB function first, and then, enable the MAB function of the corresponding port.

Example:

Enable the global and port Eth1/1 MAB function.

```
Switch(Config)#mac-authentication-bypass enable
```

```
Switch(Config)#interface ethernet 1/1
```

```
Switch(Config-If-Ethernet1/1)#mac-authentication-bypass enable
```


49.6 mac-authentication-bypass spoofing-garp-check

Command:

```
mac-authentication-bypass spoofing-garp-check enable
no mac-authentication-bypass spoofing-garp-check enable
```

Function:

Enable the spoofing-garp-check function, MAB function will not deal with spoofing-garp any more; the no command disables the function.

Parameters:

None.

Command Mode:

Global Mode

Default:

Disable spoofing-garp-check function.

Usage Guide:

When the terminal of Windows operating system detects the address conflict, it will send a gratuitous ARP to correct the error ARP entries generated by gratuitous ARP of the conflict detection. This command is used to detect the spoofing-garp when occurring the address conflict, MAB function is not deal with the packet any more. Notice: when enabling the check function, all ARP will be processed the software check, it will add switch's load.

Example:

```
Enable spoofing-garp-check function.
Switch(Config)#mac-authentication-bypass spoofing-garp-check enable
```

49.7 mac-authentication-bypass timeout offline-detect

Command:

```
mac-authentication-bypass timeout offline-detect (0 | <60-7200>)
no mac-authentication-bypass timeout offline-detect
```

Function:

Configure offline-detect time. The no command restores the default value.

Parameters:

(0 | <60-7200>): offline-detect time, the range is 0 or 60 to 7200s.

Command Mode:

Global Mode

Default:

offline-detect time is 180s.

Usage Guide:

When offline-detect time is 0, the switch does not detect MAB binding, when offline-detect time is 60s to 7200s, the switch timely detects the flow corresponding to the MAB binding. If there is no flow in the period of offline-detect time, it will delete this binding and forbid the flow to pass.

Example:

Configure offline-detect time as 200s.

```
Switch(Config)#mac-authentication-bypass timeout offline-detect 200
```

49.8 mac-authentication-bypass timeout quiet-period

Command:

```
mac-authentication-bypass timeout quiet-period <1-60>
```

```
no mac-authentication-bypass timeout quiet-period
```

Function:

Set quiet-period of MAB authentication. The no command restores quiet-period as the default value.

Parameters:

<1-60>: quiet-period, ranging from 1 to 60s.

Command Mode:

Global Mode

Default:

quiet-period is 30s.

Usage Guide:

If MAB authentication is failing, within the quiet-period the switch will not respond the authentication request of this MAC, after quiet-period, it will respond the request again.

Example:

Configure quiet-period of MAB authentication as 60s.

```
Switch(Config)#mac-authentication-bypass timeout quiet-period 60
```

49.9 mac-authentication-bypass timeout stale-period

Command:

```
mac-authentication-bypass timeout stale-period <0-60>
```

```
no mac-authentication-bypass timeout stale-period
```

Function:

Set the time that delete the binding user after MAB port is down. The no command restores the default value.

Parameters:

<1-60>: The time that delete the binding, ranging from 0 to 60s.

Command Mode:

Global Mode

Default:

30s.

Usage Guide:

If the time that delete the binding as 0, delete all user binding of this port as soon as the MAB port is down, if the time is bigger than 0, delete the user binding with a delay after the MAB port is down.

Example:

Configure the deletion time as 40s.

```
Switch(Config)#mac-authentication-bypass timeout stale-period 40
```

49.10 mac-authentication-bypass username-format

Command:

```
mac-authentication-bypass username-format {mac-address | {fixed username WORD  
password WORD}}
```

Function:

Set the authenticate method of MAB authentication.

Parameters:

mac-address: Use MAC address of MAB user as username and password to authenticate.

fixed username WORD password WORD: Use the specified username and password to authenticate, the length of username and password ranges between 1 and 32 characters.

Command Mode:

Global Mode

Default:

Use MAC address of MAB user as username and password to authenticate.

Usage Guide:

There are two methods for MAB authentication: use MAC address of MAB user as username and password to authenticate or use the specified username and password to authenticate. If there is no specified username and password, the device uses the first method to authenticate by default.

Example:

All MAB users use the same username and password to authenticate, the username is mab-user, the password is mab-pwd.

```
Switch(Config)#mac-authentication-bypass username-format fixed username mab-user password mab-pwd
```

49.11 show mac-authentication-bypass

Command:

```
show mac-authentication-bypass {interface {ethernet IFNAME | IFNAME} }
```

Function:

Show the binding information of MAB authentication.

Parameters:

interface {ethernet IFNAME|IFNAME}: The port name.

Command Mode:

Admin Mode

Default:

None.

Usage Guide:

None.

Example:

Show the binding information of all MAB users.

```
Switch#show mac-authentication-bypass
```

The Number of all binding is 5

MAC	Interface	Vlan ID	State
05-0a-eb-6a-7f-88	Ethernet1/1	1	MAB_QUIET
04-0a-eb-6a-7f-88	Ethernet1/1	1	MAB_QUIET
03-0a-eb-6a-7f-88	Ethernet1/1	1	MAB_QUIET
02-0a-eb-6a-7f-88	Ethernet1/1	1	MAB_AUTHENTICATED
00-0a-eb-6a-7f-8e	Ethernet1/1	1	MAB_AUTHENTICATED

Displayed information	Explanation
The Number of all binding	The binding number of all MAB users, include the successful authentication user and the failing authentication user at quiet-period state
MAC	MAC address
Interface	The binding port
Vlan	The VLAN that MAB user belongs
State	Authentication state

```
Switch(config)#show mac-authentication-bypass int e1/1
```

Interface Ethernet1/1 user config:

MAB enable: Enable

Binding info: 1

MAB Binding built at SUN JAN 01 01:14:48 2006

VID 1, Port: Ethernet1/1

Client MAC: 00-0a-eb-6a-7f-8e

Binding State: MAB_AUTHENTICATED

Binding State Lease: 164 seconds left

Displayed information	Explanation
MAB enable	MAB function enabled or not
Binding info	The MAB binding number of the specified port
MAB Binding built at	The time when the user binding was created
VID	The VLAN that MAB user belongs
Port	The binding port
Client MAC	MAC address
Binding State	Authentication state
Binding State Lease	Remain time before the binding release

Chapter 50 Commands for PPPoE Intermediate Agent

50.1 debug pppoe intermediate agent packet {receive | send} interface ethernet <interface-name>

Command:

```
debug pppoe intermediate agent packet (receive | send) interface ethernet <interface-name>  
no debug pppoe intermediate agent packet (receive | send) interface ethernet <interface-name>
```

Function:

Enable PPPoE packet debug for the specified port, the no command disables it.

Parameter:

receive: Enable the debug that receive PPPoE packet.

send: Enable the debug that send PPPoE packet.

ethernet: Physical port

interface-name: Port name

Command Mode:

Admin mode

Default:

Disable PPPoE packet debug for the specified port.

Usage Guide:

Enable PPPoE packet debug for the specified port to show PPPoE packet received and sent by this port.

Example:

Enable PPPoE intermediate debug for port ethernet1/2.

```
Switch#debug pppoe intermediate agent packet send interface ethernet 1/2
```

50.2 pppoe intermediate-agent

Command:

pppoe intermediate-agent
no pppoe intermediate-agent

Function:

Enable global PPPoE intermediate agent function. The no command disables global PPPoE intermediate agent function.

Parameter:

None.

Command Mode:

Global mode.

Default:

Disable global PPPoE intermediate agent function.

Usage Guide:

After enable global PPPoE IA function, process the packet of PPPoE discovery stage according to the related configuration.

Example:

Enable global PPPoE intermediate agent function.
Switch(config)#pppoe intermediate agent

50.3 pppoe intermediate-agent (Port)

Command:

pppoe intermediate-agent
no pppoe intermediate-agent

Function:

Enable PPPoE intermediate agent function of the port. The no command disables PPPoE intermediate agent function of the port.

Parameter:

None.

Command Mode:

Port mode

Default:

Disable PPPoE intermediate agent function of the port.

Usage Guide:

After enable PPPoE IA function of the port, add vendor tag for PPPoE packet of the port.

Note: 1. It must enable global pppoe intermediate-agent function.

2. At least one port is connected to PPPoE server, and the port mode is trust.

Example:

Enable PPPoE intermediate agent function of the port ethernet 1/2.

```
Switch(config-if-ethernet1/2)#pppoe intermediate agent
```

50.4 pppoe intermediate-agent circuit-id

Command:

```
pppoe intermediate-agent circuit-id <string>
```

```
no pppoe intermediate-agent circuit-id <string>
```

Function:

Configure circuit ID of the port, the no command cancels this configuration.

Parameter:

<string>: circuit-id, the max character number is 63 bytes.

Command Mode:

Port mode

Default:

This configuration is null.

Usage Guide:

This command configures circuit-id alone for each port, the priority is higher than pppoe intermediate-agent identifier-string command.

Example:

Configure circuit-id as abcd/efgh on port ethernet1/3 of vlan3.

```
Switch(config-if-ethernet1/3)#pppoe intermediate-agent circuit-id abcd/efgh
```

After port ethernet1/3 of vlan3 receives PPPoE packet, circuit-id value of the added vendor tag as "abcd/efgh".

50.5 pppoe intermediate-agent delimiter

Command:

```
pppoe intermediate-agent delimiter <WORD>
```

```
no pppoe intermediate-agent delimiter
```

Function:

Configure the delimiter among the fields in circuit-id and remote-id, the no command cancels the configuration.

Parameter:

<WORD>: the delimiter, its range is (#|.|.|:|/|space).

Command Mode:

Global mode

Default:

The fields is comparted with '\0'.

Usage Guide:

After configuring the delimiter, the added fields of circuit-id and remote-id use the configured delimiter to compart.

Notice: The global **pppoe intermediate-agent** function must be enabled.

Example:

Configure the delimiter.

```
Switch(config)#pppoe intermediate-agent delimiter space
```

50.6 pppoe intermediate-agent format

Command:

```
pppoe intermediate-agent format (circuit-id | remote-id) (hex | ascii)
no pppoe intermediate-agent format (circuit-id | remote-id)
```

Function:

Configure the format with hex or ASCII for circuit-id and remote-id, the no command cancels the configuration.

Parameter:

hex: hexadecimal
ascii: ASCII code

Command Mode:

Global mode

Default:

This configuration is null.

Usage Guide:

Encapsulation circuit-id and remote-id with hex ASCII format to vendor tag. Notice: The global **pppoe intermediate-agent** function must be enabled.

Example:

Configure the trust port 1/1 to enable vendor-tag strip function.
Switch(config)#pppoe intermediate-agent format remote-id ascii

50.7 pppoe intermediate-agent remote-id

Command:

```
pppoe intermediate-agent remote-id <string>
no pppoe intermediate-agent remote-id <string>
```

Function:

Configure remote-id of the port, the no command cancels this configuration.

Parameter:

<string>: remote-id, the max character number is 63 bytes.

Command Mode:

Port mode

Default:

This configuration is null.

Usage Guide:

Configure remote-id for each port, if there is no configuration, use switch's MAC as remote-id value.

Example:

Configure remote-id as abcd on port ethernet1/2.

```
Switch(config-if-ethernet1/2)# pppoe intermediate-agent remote-id abcd
```

50.8 pppoe intermediate-agent trust

Command:

```
pppoe intermediate-agent trust  
no pppoe intermediate-agent trust
```

Function:

Configure the port as trust port, the no command configures the port as untrust port.

Parameter:

None.

Command Mode:

Port mode

Default:

Untrust port.

Usage Guide:

The port which connect to server must be configured as trust port. Note: At least one trust port is connected to PPPoE server.

Example:

Configure port ethernet1/1 as trust port.

```
Switch(config-if-ethernet1/1)#pppoe intermediate-agent trust
```

50.9 pppoe intermediate-agent type self-defined circuit-id

Command:

```
pppoe intermediate-agent type self-defined circuit-id {vlan | port | id (switch-id (mac | hostname) | remote-mac) | string WORD}
```

```
no pppoe intermediate-agent type self-defined circuit-id
```

Function:

Configure the self-defined circuit-id, the no command cancels the configuration.

Parameter:

vlan: VLAN ID

port: Port ID

id switch-id mac: the local MAC address

id switch-id hostname: the local host name

id remote-mac: the remote MAC address

string WORD: the specified keyword

Command Mode:

Global mode

Default:

This configuration is null.

Usage Guide:

This configuration and type tr-101 circuit-id are mutually exclusive, it will clear the corresponding configuration of type tr-101 circuit-id.

Example:

Configure the self-defined circuit-id as vlan port id switch-id hostname.

```
Switch(config)#pppoe intermediate-agent type self-defined circuit-id vlan port id switch-id hostname
```

50.10 pppoe intermediate-agent type self-defined remote-id

Command:

```
pppoe intermediate-agent type self-defined remote-id {mac | hostname | string WORD}
no pppoe intermediate-agent type self-defined remote-id
```

Function:

Configure the self-defined remote-id, the no command cancels the configuration.

Parameter:

mac: the local MAC address
hostname: the local host name
string WORD: the specified keyword

Command Mode:

Global mode

Default:

This configuration is null.

Usage Guide:

Configuration order of this command according to the fields order in remote-id.

Example:

Configure the self-defined remote-id as string abcd mac hostname.
Switch(config)#pppoe intermediate-agent type self-defined remote-id string abcd mac hostname

50.11 pppoe intermediate-agent type tr-101 circuit-id access-node-id

Command:

```
pppoe intermediate-agent type tr-101 circuit-id access-node-id <string>
no pppoe intermediate-agent type tr-101 circuit-id access-node-id
```

Function:

Configure access-node-id field value of circuit ID in the added vendor tag with tr-101 standard.

Parameter:

<string>: access-node-id, the max character number is 47 bytes.

Command Mode:

Global mode

Default:

MAC address of the switch

Usage Guide:

Use this configuration to create access-node-id of circuit ID in vendor tag. circuit-id value is access-node-id + " eth "+ Slot ID + delimiter + Port Index + delimiter + Vlan ID, access-node-id occupies n bytes (n<48), " eth " is space + e + t + h + space, it occupies 5 bytes, Slot ID occupies 2 bytes, Port Index occupies 3 bytes, Vlan ID occupies 4 bytes, delimiter occupies 1 byte. In default state, access-node-id value of circuit-id is switch's MAC, it occupies 6 bytes. For example: MAC address is "0a0b0c0d0e0f", Slot ID is 12, Port Index is 34, Vlan ID is 567, the default circuit-id value is "0a0b0c0d0e0f eth 12/034:0567".

Example:

Configure access-node-id value of circuit ID as abcd in vendor tag.

```
Switch(config)#pppoe intermediate-agent access-node-id abcd
```

After port ethernet1/3 of vlan3 receives PPPoE packets, circuit-id value of the added vendor tag is "abcd eth 01/003:0003".

50.12 pppoe intermediate-agent type tr-101 circuit-id identifier-string option delimiter

Command:

```
pppoe intermediate-agent type tr-101 circuit-id identifier-string <string> option {sp | sv | pv | spv} delimiter  
<WORD> [delimiter <WORD>]  
no pppoe intermediate-agent type tr-101 circuit-id identifier-string option delimiter
```

Function:

Configure circuit-id of the added vendor tag with tr-101 standard, the no command deletes this configuration.

Parameter:

<string>: identifier-string, the max character number is 47 bytes.

{sp | sv | pv | spv}: This option can select the combination format for slot, port, vlan, sp means slot and port, sv means slot and vlan, pv means port and vlan, spv means slot, port and vlan.

<WORD>: The delimiter between slot, port and vlan, the range is (# | . | , | ; | : | / | space). Note: There are two delimiter WORDs in spv combo mode, the first between slot and port, the second between port and vlan.

Command Mode:

Global mode

Default:

This configuration is null.

Usage Guide:

This command is used to configure global circuit id, the priority is higher than pppoe intermediate-agent access-node-id command. circuit-id value is access-node-id + " eth "+ Slot ID + delimiter + Port Index + delimiter + Vlan ID, access-node-id occupies n bytes (n<48), " eth " is space + e + t + h + space, it occupies 5 bytes, Slot ID occupies 2 bytes, Port Index occupies 3 bytes, Vlan ID occupies 4 bytes, delimiter occupies 1 byte.

Example:

Configure access-node-id as xyz, use spv combination mode, delimiter with "#"between Slot ID and Port ID, delimiter with "/"between Port ID and Vlan ID.

```
Switch(config)#pppoe intermediate-agent identifier-string xyz option spv delimiter # delimiter /
```

```
Switch# show pppoe intermediate-agent identifier-string option delimiter
```

```
config identifier string is : xyz
```

```
config option is : slot , port and vlan
```

```
the first delimiter is : "# "
```

```
the second delimiter is : "/" "
```

After port ethernet1/3 of vlan3 receives PPPoE packets, circuit-id value of the added vendor tag is "xyz eth 01#003/0003".

50.13 pppoe intermediate-agent vendor-tag strip

Command:

```
pppoe intermediate-agent vendor-tag strip
```

```
no pppoe intermediate-agent vendor-tag strip
```


Function:

Enable vendor-tag strip function of the port, the no command cancels this function.

Parameter:

None.

Command Mode:

Port mode

Default:

Disable vendor-tag strip function of the port.

Usage Guide:

If the received packet includes vendor tag from server to client, strip this vendor tag.

Note: 1. Must enable global pppoe intermediate-agent function.

2. It must be configured on trust port.

Example:

Trust port ethernet1/1 enables vendor tag strip function.

```
Switch(config-if-ethernet1/1)#pppoe intermediate-agent trust
```

```
Switch(config-if-ethernet1/1)#pppoe intermediate-agent vendor-tag strip
```

50.14 show pppoe intermediate-agent access-node-id

Command:

```
show pppoe intermediate-agent access-node-id
```

Function:

Show the configured access node ID.

Parameter:

None.

Command Mode:

Admin mode

Default:

The configuration information is null.

Usage Guide:

This command is used to show access-node-id configured by user.

Example:

```
Show access-node-id configuration information.  
Switch#pppoe intermediate-agent access-node-id abcd  
Switch#show pppoe intermediate-agent access-node-id  
pppoe intermediate-agent access-node-id is : abcd
```

50.15 show pppoe intermediate-agent identifier-string option delimiter

Command:

```
show pppoe intermediate-agent identifier-string option delimiter
```

Function:

Show the configured identifier-string, the combination format and delimiter of slot, port and vlan.

Parameter:

None.

Command Mode:

Admin mode

Default:

The configuration information is null.

Usage Guide:

Show the configured identifier-string, the combo format and delimiter of slot, port and vlan.

Example:

```
Show the configuration information for pppoe intermediate-agent identifier-string.  
Switch#pppoe intermediate-agent identifier-string abcd option spv delimiter # delimiter /  
Switch# show pppoe intermediate-agent identifier-string option delimiter  
config identifier string is : abcd
```

config option is : slot , port and vlan

the first delimiter is : "# "

the second delimiter is : "/" "

50.16 show pppoe intermediate-agent info

Command:

```
show pppoe intermediate-agent info [interface ethernet <interface-name>]
```

Function:

Show the related PPPoE IA configuration information of all ports or the specified port.

Parameter:

ehernet: physical port

interface-name: port name

Command Mode:

Admin mode

Default:

The configuration information is null.

Usage Guide:

Check the configuration information of the corresponding port, show whether the port is trust port, strip function is enabled, rate limit is enabled, show the configured circuit ID and remote ID.

Example:

Show pppoe intermediate-agent configuration information of port ethernet1/2.

```
Switch# show pppoe intermediate-agent info interface ethernet 1/2
```

Interface	IA	Trusted	vendor	Strip	Rate limit	circuit id	remote id
Ethernet1/2	yes	no	no	no	no	test1/port1	host1

Chapter 51 Commands for Web Portal Configuration

51.1 clear webportal binding

Command:

```
clear webportal binding {mac WORD | interface <ethernet IFNAME | IFNAME> }
```

Function:

Clear the binding information of web portal authentication.

Parameter:

mac: Clear the binding of the specific MAC address.

IFNAME: Port ID list, divide the ports with “;”.

If the parameter is null, delete all web portal binding.

Command Mode:

Admin Mode.

Default:

None.

Usage Guide:

Clear the specified (the specific port or all ports) dynamic binding information of web portal.

Example:

Clear the binding information of web portal authentication.

```
switch#clear webportal binding ?
```

```
interface    Interface setting
```

```
mac          Configure mac address
```

```
<cr>
```

```
switch#clear webportal binding mac 00-00-00-00-00-01
```

```
switch#clear webportal binding interface ethernet 1/1
```

51.2 debug webportal binding

Command:

debug webportal binding
no debug webportal binding

Function:

Enable/ disable the binding debugging of web portal authentication.

Parameter:

None.

Command Mode:

Admin Mode.

Default:

There is no limitation.

Usage Guide:

Enable the binding debugging of web portal authentication, the no command disables the binding debugging.

Example:

Enable the binding debugging of web portal authentication.

```
switch#debug webportal binding
```

```
<NULL> 0 packet binding debug is on
```

51.3 debug webportal error

Command:

debug webportal error
no debug webportal error

Function:

Enable/ disable the error debugging of web portal authentication.

Parameter:

None.

Command Mode:

Admin Mode.

Default:

There is no limitation.

Usage Guide:

Enable the error debugging of web portal authentication, the no command disables the error debugging.

Example:

Enable the error debugging of web portal authentication.

```
switch#debug webportal error
```

```
<NULL> 0 error error debug is on
```

51.4 debug webportal event

Command:

```
debug webportal event
```

```
no debug webportal event
```

Function:

Enable/ disable the event debugging of web portal authentication.

Parameter:

None.

Command Mode:

Admin Mode.

Default:

There is no limitation.

Usage Guide:

Enable the event debugging of web portal authentication, the no command disables the event debugging.

Example:

Enable the event debugging of web portal authentication.

```
switch#debug webportal event
```

```
<NULL> 0 event event debug is on
```

51.5 debug webportal packet

Command:

```
debug webportal packet {all | receive | send} {interface <ethernet IFNAME | IFNAME> }
```

```
no debug webportal packet {all | receive | send} {interface <interface-name> }
```

Function:

Enable/ disable the debugging that show the synchronization information of the local clock.

Parameter:

send: Enable the debugging that web portal sends the packet.

receive: Enable the debugging that web portal receives the packet.

all: Enable the debugging that web portal receives and sends the packet.

<ethernet IFNAME | IFNAME>: The port name.

The port name is null that means to enable all ports.

Command Mode:

Admin Mode.

Default:

There is no limitation.

Usage Guide:

Enable the packet debugging of web portal authentication, the no command disables the packet debugging.

Example:

Enable the packet debugging of web portal authentication.

```
switch#debug webportal packet ?
```

```
all      Send and receive packet information
```

```
receive  Receive package information
```

```
send     Send package information
```

```
switch#debug webportal packet all interface ethernet 1/1
```

Ethernet1/1 0 packet rx debug is on

Ethernet1/1 0 packet tx debug is on

51.6 ip dhcp snooping binding webportal

Command:

ip dhcp snooping binding webportal

no ip dhcp snooping binding webportal

Function:

Enable/disable dhcp snooping binding web portal function.

Parameter:

None.

Command Mode:

Port Mode.

Default:

Disable the function.

Usage Guide:

Enable dhcp snooping binding web portal function, the no command disables the function.

Example:

Enable dhcp snooping binding web portal function.

```
switch(config)#ip dhcp snooping binding enable
```

```
switch(config)#interface ethernet 1/1
```

```
switch(config-if-ethernet1/1)#ip dhcp snooping binding webportal
```

51.7 show webportal

Command:

show webportal {interface <ethernet IFNAME | IFNAME> |}

Function:

Show the parameter and enable information of web portal authentication.

Parameter:

<ethernet IFNAME / IFNAME>: The port name, if the port name is null, show all port information.

Command Mode:

Admin Mode.

Default:

There is no limitation.

Usage Guide:

Show the parameter and enable information of web portal authentication according to the condition.

Example:

Show the parameter and enable information of web portal authentication.

```
switch#show webportal interface ethernet 1/1
```

```
webportal enable
```

```
webportal binding-limit 128
```

51.8 show webportal binding

Command:

```
show webportal binding {interface <ethernet IFNAME | IFNAME> }
```

Function:

Show the binding information of web portal authentication.

Parameter:

<ethernet IFNAME / IFNAME>: The port name, the name or ID of the port may be null.

Command Mode:

Admin Mode.

Default:

There is no limitation.

Usage Guide:

Collect the binding information according to the specified condition, such as the binding number, IP, MAC, interface, VLAN ID and state, etc.

Example:

Show the binding information of web portal authentication.

```
switch#show webportal binding ?
```

```
interface    Interface setting
```

```
|            Output modifiers
```

```
<cr>
```

```
switch#show webportal binding interface ethernet 1/1
```

```
Interface Ethernet1/1 user config:
```

```
webportal enable: Enable
```

```
Binding info: 0
```

```
-----
```

```
IP                MAC                Interface        Vlan ID
```

```
-----
```

51.9 webportal binding-limit

Command:

```
webportal binding-limit <1-256>
```

```
no webportal binding-limit
```

Function:

Configure the max webportal binding number allowed by the port.

Parameter:

<1-256>: the max binding number allowed by the port, the max webportal binding number is 24 by default, ranging from 1 to 256.

Command Mode:

Port Mode.

Default:

24.

Usage Guide:

Limit the max webportal binding number of the port. When the binding number reaches to the max binding number, the port can not process the binding any more. When the max binding number is less than the current binding number of the port, the setting will be unsuccessful. The no command restores the max default binding number of the port.

Example:

Set the max webportal binding number allowed by the port as 128.

```
switch(config)#interface ethernet 1/1
```

```
switch(config-if-ethernet1/1)#webportal binding-limit 128
```

51.10 webportal enable

Command:

webportal enable

no webportal enable

Function:

Enable/disable the global web portal authentication.

Parameter:

None.

Command Mode:

Global Mode.

Default:

Do not enable the global web portal authentication.

Usage Guide:

Enable the global web portal authentication. The no command disables the web portal authentication globally.

Example:

Enable/disable web portal authentication.

```
Switch(config)# webportal enable
```

show running-config shows the global webportal authentication which is enabled successfully.

51.11 webportal enable (Port)

Command:

```
webportal enable
```

```
no webportal enable
```

Function:

Enable/disable web portal authentication of the port.

Parameter:

None.

Command Mode:

Port Mode.

Default:

Do not enable web portal authentication of the port.

Usage Guide:

Enable web portal authentication of the port. The no command disables web portal authentication of the port, it is mutually exclusive with 802.1x on port.

Example:

Enable/disable web portal authentication on port.

```
switch(config)#interface ethernet 1/1
```

```
switch(config-if-ethernet1/1)#webportal enable
```

show running-config shows webportal authentication of the port enabled successfully.

51.12 webportal nas-ip

Command:

```
webportal nas-ip <ip-address>  
no webportal nas-ip
```

Function:

Configure IP source address for communicating between accessing device and portal server.

Parameter:

<ip-address>: IP source address for communicating between accessing device and portal server in dotted decimal notation, it must be the legal unicast address.

Command Mode:

Global Mode.

Default:

Do not configure the specific IP source address, the communication between accessing device and portal server uses the IP address of the sending interface.

Usage Guide:

The configured source address must be the local IP address, or else it maybe not process the packet communication with portal server. It is recommended to use the loopback interface address as the source address to avoid the return packet is unreachable when the physical interface is down, and nas-ip should be configured in web portal. The no command deletes IP source address for communicating between accessing device and portal server.

Example:

Configure IP source address as 10.1.1.1 for communicating between accessing device and portal server.

```
switch(config)#webportal nas-ip 10.1.1.1
```

51.13 webportal redirect

Command:

```
webportal redirect <ip>  
no webportal redirect
```

Function:

Configure HTTP redirection address of web portal authentication.

Parameter:

<ip> is IP address of portal server.

Command Mode:

Global Mode.

Default:

There is no redirection address.

Usage Guide:

Enable web portal authentication globally before configuring its HTTP redirection address. The no command cancels the configured redirection address.

Example:

Configure the redirection address of web portal authentication as 173.16.1.211.

```
switch(config)#webportal redirect 173.16.1.211
```

Chapter 52 Commands for VLAN-ACL

52.1 clear vacl statistic vlan

Command:

```
clear vacl [in | out] statistic vlan [<1-4094>]
```

Function:

This command can clear the statistic information of VACL.

Parameter:

in | out: Clear the traffic statistic of the ingress/egress.

vlan <1-4094>: The VLAN which needs to clear the VACL statistic information. If do not input VLAN ID, then clear all VLAN statistic information.

Command mode:

Admin Mode.

Default:

None.

Usage Guide:

Egress direction filtering is not supported by switch.

Example:

Clear VACL statistic information of Vlan1.

```
Switch#clear vacl statistic vlan 1
```

52.2 show vacl vlan

Command:

```
show vacl [in | out] vlan [<1-4094>] | [begin | include | exclude <regular-expression>]
```

Function:

This command shows the configuration and the statistic information of VACL.

Parameter:

in | out: Show ingress/egress configuration and statistic

vlan <1-4094>: The VLAN which needs to show the configuration and the statistic information of VACL. If do not input VLAN ID, then show VACL configuration and statistic information of all VLANs.

begin | include | exclude <regular-expression>: the regular expression

. match any characters except the line feed character

^ match the beginning of the row

\$ match the end of the row

| match the character string at the left or right of upright line

[0-9] match the number 0 to the number 9

[a-z] match the lowercase a to z

[aeiou] match any letter in "aeiou"

\ Escape Character is used to match the intervocalic character, for example, \\$ will match the \$ character, but it is not match the end of the character string

\w match the letter, the number or the underline

\b match the beginning or the end of the words

\W match any characters which are not alphabet letter, number and underline

\B match the locations which are not the begin or end of the word

[^x] match any characters except x

[^aeiou] match any characters except including aeiou letters

* repeat zero time or many times

+ repeat one time or many times

(n) repeat n times

(n,) repeat n or more times

(n, m) repeat n to m times

At present, the regular expression used does not support the following syntaxes:

\s match the blank character

\d match the number

\S match any characters except blank character

\D match non-number character

? repeat zero time or one time

Command mode:

Admin Mode.

Default:

None.

Usage Guide:

Egress direction filtering is not supported by switch.

Example:

```
Switch (config)#show vacl vlan 2
```

Vlan 2:

IP Ingress access-list used is 100, traffic-statistics Disable.

```
Switch (config)# show vacl vlan 3
```

Vlan 3:

IP Ingress access-list used is myacl, packet(s) number is 5.

Displayed Information	Explanation
Vlan 2	The name of VLAN
100, myacl	The name of VACL
traffic-statistics Disable	Disable VACL statistic function
packet(s) number is 5	The sum of out-profile data packets matching this VACL

52.3 vacl ip access-group

Command:

```
vacl ip access-group {<1-299> | WORD} {in | out} [traffic-statistic] vlan WORD
```

```
no vacl ip access-group {<1-299> | WORD} {in | out} vlan WORD
```

Function:

This command configure VACL of IP type on the specific VLAN.

Parameter:

<1-299> | WORD: Configure the numeric IP ACL (include: standard ACL rule <1-99>, extended ACL rule <100-299>) or the named ACL.

in | out: Filter the ingress/egress traffic.

traffic-statistic: Enable the statistic of matched packets number.

vlan WORD: The VLAN will be bound to VACL.

Command mode:

Global Mode.

Default:

None.

Usage Guide:

Use “;” or “-” to input the VLAN or multi-VLANs, but do not exceed 128, and CLI length can not exceed 80 characters.
Egress direction filtering is not supported by switch.

Example:

Configure the numeric IP ACL and enable the statistic function for Vlan 1-5, 6, 7-9.
Switch(config)#**vacl ip access-group 1 in traffic-statistic vlan 1-5; 6; 7-9**

52.4 vacl ipv6 access-group

Command:

```
vacl ipv6 access-group (<500-699> | WORD) {in } (traffic-statistic) vlan WORD  
no ipv6 access-group {<500-699> | WORD} {in } vlan WORD
```

Function:

This command configure VACL of IPv6 on the specific VLAN.

Parameter:

<500-599> | **WORD**: Configure the IPv6 digital standard access table rule or IPv6 command standard access table rule.

in : Filter the ingress traffic.

traffic-statistic: Enable the statistic of matched packets number.

vlan WORD: The VLAN will be bound to VACL.

Command mode:

Global Mode.

Default:

None.

Usage Guide:

Use “;” or “-” to input the VLAN or multi-VLANs, but do not exceed 128, and CLI length cannot exceed 80 characters. Egress direction filtering and extended IPv6 is not supported by switch.

Example:

Configure the numeric IPv6 ACL for Vlan 5.
Switch(config)#**vacl ipv6 access-group 600 in traffic-statistic vlan 5**

52.5 vACL mac access-group

Command:

```
vacl mac access-group {<700-1199> | WORD} {in } [traffic-statistic] vlan WORD  
no vACL mac access-group {<700-1199> | WORD} {in } vlan WORD
```

Function:

This command configures VACL of MAC type on the specific VLAN.

Parameter:

<700-1199> | WORD: Configure the numeric IP ACL (include: <700-799> MAC standard access list, <1100-1199> MAC extended access list) or the named ACL.

in : Filter the ingress traffic.

traffic-statistic: Enable the statistic of matched packets number.

vlan WORD: The VLAN will be bound to VACL.

Command mode:

Global Mode.

Default:

None.

Usage Guide:

Use “;” or “-” to input the VLAN or multi-VLANs, but do not exceed 128, and CLI length cannot exceed 80 characters.

Egress direction filtering is not supported by switch.

Example:

Configure the numeric MAC ACL for Vlan 1-5.

```
Switch(config)#vacl mac access-group 700 in traffic-statistic vlan 1-5
```

52.6 vACL mac-ip access-group

Command:

```
vacl mac-ip access-group {<3100-3299> | WORD} {in } [traffic-statistic] vlan WORD  
no vACL mac-ip access-group {<3100-3299> | WORD} {in } vlan WORD
```

Function:

This command configures VACL of MAC-IP type on the specific VLAN.

Parameter:

<3100-3299> | WORD: Configure the numeric MAC-IP ACL or the named ACL.

in : Filter the ingress traffic.

traffic-statistic: Enable the statistic of matched packets number.

vlan WORD: The VLAN will be bound to VACL.

Command mode:

Global Mode.

Default:

None.

Usage Guide:

Use “;” or “-” to input the VLAN or multi-VLANs, but do not exceed 128, and CLI length cannot exceed 80 characters.

Egress direction filtering is not supported by switch.

Example:

Configure the numeric MAC-IP ACL for Vlan 1, 2, 5.

```
Switch(config)#vACL mac-ip access-group 3100 in traffic-statistic vlan 1;2;5
```

Chapter 53 Commands for SAVI

53.1 Commands for SAVI

53.1.1 ipv6 cps prefix

Command:

```
ipv6 cps prefix <ipv6-address> vlan <vid>  
no ipv6 cps prefix<ipv6-address>
```

Function:

Configure IPv6 address prefix of the link manually, no command deletes IPv6 address prefix.

Parameter:

ipv6-address: the address prefix of link, like 2001::/64;
vid: vlan ID of the current link.

Command Mode:

Global Mode.

Default:

None.

Usage Guide:

Users should configure local address prefix: fe80::/64 of the link before enable the function of matching address prefix of the link, it accepts the packets of which source addresses are the local addresses of the link.

Example:

Configure the address prefix of the link to 2001::/64.
Switch(config)#ipv6 cps prefix 2001::/64

53.1.2 ipv6 cps prefix check enable

Command:

```
ipv6 cps prefix check enable
no ipv6 cps prefix check enable
```

Function:

Enable SAVI address prefix check function, no command will disable this function.

Parameter:

None.

Command Mode:

Global Mode.

Default:

Disable SAVI address prefix check function.

Usage Guide:

After enable the prefix check function, if the IPv6 address prefix of the packets does not accord with the link prefix, then do not establish the corresponding IPv6 address binding. If users enable the matched address prefix of the link, configure the local address prefix of fe80::/64 first to accept the packets with the source address as local link address. Disable address prefix check function by default.

Example:

```
Enable SAVI address prefix check function.
Switch(config)#ipv6 cps prefix check enable
```

53.1.3 ipv6 dhcp snooping trust

Command:

```
ipv6 dhcp snooping trust
no ipv6 dhcp snooping trust
```

Function:

Configure the port as dhcpv6 trust port, it does not establish dynamic DHCPv6 binding again and allows all DHCPv6 protocol packets to pass; no command deletes the port trust function.

Parameter:

None.

Command Mode:

Port Mode.

Default:

Disable.

Usage Guide:

Set the port as dhcpv6 trust attribute, enable uplink port of the switch with SAVI function for connecting dhcpv6 server or dhcpv6 relay generally.

Example:

Set ethernet1/1 to be DHCP trust port.

```
Switch(config)#interface ethernet1/1
```

```
Switch(config-if-ethernet1/1)#ipv6 dhcp snooping trust
```

53.1.4 ipv6 nd snooping trust

Command:

```
ipv6 nd snooping trust
```

```
no ipv6 nd snooping trust
```

Function:

Configure the port as slaac trust and RA trust port, this port will not establish dynamic slaac binding any more and forwards RA packets. The no command deletes the port trust function.

Parameter:

None.

Command Mode:

Port Mode.

Default:

Disable port trust function.

Usage Guide:

If the port disables ipv6 nd snooping trust function, it is considered to untrust RA packets port and discards all RA packets. Setting the port as trust attribute, enable the uplink port of the switch with SAVI or the conjoint port between switches with SAVI generally.

Example:

Set the port ethernet1/1 to be nd trust port.

```
Switch(config)#interface ethernet1/1
```

```
Switch(config-if-etherne1/1)#ipv6 nd snooping trust
```

53.1.5 savi check binding

Command:

```
savi check binding <simple / probe> mode
```

```
no savi check binding mode
```

Function:

Configure the check mode for conflict binding, the no command deletes the check mode.

Parameter:

simple mode: only check the port state for conflict binding, if the state is up, keep the conflict binding and do not set new binding. If the state is down, delete the conflict binding to set a new one

probe mode: besides checking the port state for conflict binding, it will send NS packets to probe the usability of the corresponding user when the port state is up. If receiving the responded NA packets from users, it will keep the current conflict binding and does not set new binding, otherwise delete the conflict binding to set new one.

Command Mode:

Global Mode.

Default:

Disable the conflict binding check mode by default. It will adopt the mode that delete the conflict binding directly to set new one.

Usage Guide:

It is recommended to configure probe mode to prevent the attack that the spurious address conflict binding deletes the legal user binding.

Example:

Configure the conflict binding check mode to probe mode.

```
Switch(config)#savi check binding probe mode
```

53.1.6 savi enable

Command:

savi enable

no savi enable

Function:

Enable the global SAVI function, the no command disables this global function.

Parameter:

None.

Command Mode:

Global Mode.

Default:

Disable the global SAVI function.

Usage Guide:

Command configuration can be processed for SAVI function after enabling the global SAVI function. Because SAVI function has already contained security RA function, global SAVI function and security RA function are mutually exclusive in the global mode.

Example:

Enable SAVI function.

```
Switch(config)#savi enable
```

53.1.7 savi ipv6 binding num

Command:

```
savi ipv6 binding num <limit-num>  
no savi ipv6 binding num
```

Function:

Configure the number of the corresponding binding with the port, no command restores the default value.

Parameter:

limit-num: set the range from 0 to 65535, the default value of the port binding number is 65535.

Command Mode:

Port Mode.

Default:

65535.

Usage Guide:

The configured binding number only include the dynamic binding type of slaac, dhcp. If the binding sum exceeds the configured number, this port does not create new dynamic binding any more, if the configured number is 0, this port does not create any dynamic binding.

Example:

Configure the binding number to be 100 for port ethernet1/1.

```
Switch(config)#interface ethernet1/1
```

```
Switch(config-if-ethernet1/1)# savi ipv6 binding num 100
```

53.1.8 savi ipv6 check source binding

Command:

```
savi ipv6 check source binding ip <ip-address> mac <mac-address> interface <if-name> {type [slaac | dhcp]  
lifetime <lifetime> | type static}  
no savi ipv6 check source binding ip <ip-address> interface <if-name>
```

Function:

Configure the static or dynamic binding function manually; the no command deletes the configured binding.

Parameter:

ip-address: is the unicast IPv6 address, including local link and global unicast address

mac-address: is the mac address of Ethernet

if-name: is the port name, like interface ethernet 1/1

slaac|dhcp: **slaac** means create the dynamic binding for slaac type, **dhcp** means create the dynamic binding for dhcp type

lifetime: configure the lifetime period for the dynamic binding, the unit is second.

static: create the binding of the static type.

Command Mode:

Global Mode.

Default:

None.

Usage Guide:

After the dynamic binding configured by handwork is overtime, the corresponding binding will be deleted but the configuration is still be kept, so the binding still be shown. If the binding needs to take effect again, it should delete it first and configure a new binding again.

When the binding type is static type, do not configure lifetime period, the lifetime period is infinite.

Example:

Configure the dynamic binding of slaac type for SAVI manually.

```
Switch(config)#savi ipv6 check source binding ip 2001::10 mac 00-25-64-BB-8F-04 Interface ethernet1/1 type slaac  
lifetime 2010
```

Configure the static binding for SAVI manually.

```
Switch(config)#savi ipv6 check source binding ip 2001::20 mac 00-25-64-BB-8F-04  
Interface ethernet1/1 type static
```

53.1.9 savi ipv6 check source ip-address mac-address

Command:

```
savi ipv6 check source [ip-address mac-address | ip-address | mac-address]
no savi ipv6 check source
```

Function:

Enable the control authentication function for the packets of the port, no command disables this function.

Parameter:

None.

Command Mode:

Port Mode.

Default:

Disable the control filtering function of the port.

Usage Guide:

The global SAVI function must be enabled before configuring this command.

Example:

```
Enable the control filtering function of the packets on port ethernet1/1.
Switch(config)#interface ethernet1/1
Switch(config-if-ethernet1/1)# savi ipv6 check source ip-address mac-address
```

53.1.10 savi ipv6 {dhcp-only | slaac-only | dhcp-slaac} enable

Command:

```
savi ipv6 {dhcp-only | slaac-only | dhcp-slaac} enable
no savi ipv6 {dhcp-only | slaac-only | dhcp-slaac} enable
```

Function:

Enable SAVI application scene function, no command disables the function.

Parameter:

dhcp-only: dhcp-only application scene

slaac-only: slaac-only application scene

dhcp-slaac: combination application scene of dhcp-only and slaac-only

Command Mode:

Global Mode.

Default:

Disable SAVI application scene.

Usage Guide:

dhcp-only application scene only detects DHCPv6 packets and DAD NS packets of link-local ipv6 address to be IPv6 address with target field, it does not detect DAD NS packets of non-link-local address. slaac-only application scene detects DAD NS packets of all types. dhcp-slaac combination application scene detects all DHCPv6 and DAD NS packets. Disable all kinds of application scene detection function for SAVI by default.

Example:

Enable the specified dhcp-only application scene for SAVI.

```
Switch(config)#savi ipv6 dhcp-only enable
```

53.1.11 savi ipv6 mac-binding-limit

Command:

```
savi ipv6 mac-binding-limit <limit-num>
```

```
no savi ipv6 mac-binding-limit
```

Function:

Configure the dynamic binding number of the same MAC address, no command restores the default value.

Parameter:

limit-num: set the ranging from 1 to 10, the default dynamic binding number is 32 for the same MAC address.

Command Mode:

Global Mode.

Default:

32.

Usage Guide:

This command is used to prevent the exhaust attack of the dynamic binding entry for SAVI.

Example:

Set the dynamic binding number to be 5 for the same MAC address.

```
Switch(config)#savi ipv6 mac-binding-limit 5
```

53.1.12 savi max-dad-dalay

Command:

```
savi max-dad-delay <max-dad-delay>
```

```
no savi max-dad-delay
```

Function:

Configure the dynamic binding at DETECTION state and send lifetime period of DAD NS packet detection, no command restores the default value.

Parameter:

max-dad-delay: set the ranging between 1 and 65535 seconds, its default value is 1 second.

Command Mode:

Port Mode.

Default:

1 second.

Usage Guide:

It is recommended to use the default value.

Example:

Set the detection lifetime as 2 seconds.

```
Switch(config)#savi max-dad-delay 2
```

53.1.13 savi max-dad-prepare-delay

Command:

```
savi max-dad-prepare-delay <max-dad-prepare-delay>  
no savi max-dad-prepare-delay
```

Function:

Configure lifetime period of redetection for the dynamic binding, no command restores the default value.

Parameter:

max-dad-prepare-delay: set the ranging between 1 and 65535 seconds, its default value is 1 second.

Command Mode:

Global Mode.

Default:

1 second.

Usage Guide:

It is recommended to user the default value.

Example:

```
Set the redetection lifetime as 2 seconds.  
Switch(config)#savi max-dad-prepare-delay 2
```

53.1.14 savi max-slaac-life

Command:

```
savi max-slaac-life <max-slaac-life>  
no savi max-slaac-life
```

Function:

Configure lifetime period of slaac dynamic binding at BOUND state, no command restores the default value.

Parameter:

max-slaac-life: set the ranging between 1 and 31536000 seconds, its default value is 4 hours.

Command Mode:

Global Mode.

Default:

4 hours.

Usage Guide:

None.

Example:

Configure lifetime period of slaac binding type as 2010 seconds at BOUND state.

```
Switch(config)#savi max-slaac-life 2010
```

53.1.15 savi timeout bind-protect

Command:

```
savi timeout bind-protect <protect-time>
```

```
no savi timeout bind-protect
```

Function:

Configure the bind-protect lifetime period for a port after its state from up to down, no command restores the default value.

Parameter:

protect-time: set the ranging between 1 and 300 seconds, its default value is 30 seconds.

Command Mode:

Global Mode.

Default:

30 seconds.

Usage Guide:

After the configured lifetime period is overtime, the port is still at down state, the binding of this port will be deleted. If the port state is changed from down to up state during the configured lifetime period, the binding of the port will reset it as lifetime period of BOUND state. If the configured parameter is 0 second, all binding of the port will be deleted immediately.

Example:

Set bind-protect lifetime period to be 20 seconds.

```
Switch(config)#savi timeout bind-protect 20
```

53.2 Commands for Monitor and Debug

53.2.1 debug ipv6 dhcp snooping binding

Command:

```
debug ipv6 dhcp snooping binding
```

```
no debug ipv6 dhcp snooping binding
```

Function:

Enable binding debug of dhcp type for SAVI, no command disables the debug.

Parameter:

None.

Command Mode:

Admin Mode.

Default:

None.

Usage Guide:

After enable this function, the relative binding of dhcp type or static type create the print information for misarranging.

The no command disables this function.

Example:

Enable the binding debug of dhcp type.

```
Switch#debug ipv6 dhcp snooping binding
```

53.2.2 debug ipv6 dhcp snooping event

Command:

```
debug ipv6 dhcp snooping event
no debug ipv6 dhcp snooping event
```

Function:

Enable event debug of dhcp type for SAVI, no command disables the debug.

Parameter:

None.

Command Mode:

Admin Mode.

Default:

None.

Usage Guide:

After enable event debug, the relative event information of dhcp type will be print for misarranging. The no command disables this function.

Example:

```
Enable binding event debug of dhcp type.
Switch#debug ipv6 dhcp snooping event
```

53.2.3 debug ipv6 dhcp snooping packet

Command:

```
debug ipv6 dhcp snooping packet
no debug ipv6 dhcp snooping packet
```

Function:

Enable the debug of DHCPv6 packets, no command disables the debug.

Parameter:

None.

Command Mode:

Admin Mode.

Default:

None.

Usage Guide:

After enable packets debug, the relative DHCPv6 packets will be print for misarranging. The no command disables this function.

Example:

Enable the debug of DHCPv6 packets.

```
Switch#debug ipv6 dhcp snooping packet
```

53.2.4 debug ipv6 nd snooping binding

Command:

```
debug ipv6 nd snooping binding
```

```
no debug ipv6 nd snooping binding
```

Function:

Enable the binding debug of slaac type for SAVI, no command disables the binding debug.

Parameter:

None.

Command Mode:

Admin Mode.

Default:

None.

Usage Guide:

After enable binding debug, the relative binding of slaac type will create the print information for misarranging. The no command disables this function.

Example:

Enable binding debug of slaac type.

```
Switch#debug ipv6 nd snooping binding
```

53.2.5 debug ipv6 nd snooping event

Command:

```
debug ipv6 nd snooping event
```

```
no debug ipv6 nd snooping event
```

Function:

Enable the event debug of slaac type for SAVI, no command disables the event debug.

Parameter:

None.

Command Mode:

Admin Mode.

Default:

None.

Usage Guide:

After enable event debug, the relative event information of slaac type will be print for misarranging. The no command disables this function.

Example:

Enable the event debug of slaac type.

```
Switch#debug ipv6 nd snooping event
```

53.2.6 debug ipv6 nd snooping packet

Command:

```
debug ipv6 nd snooping packet
```

```
no debug ipv6 nd snooping packet
```

Function:

Enable ND packets debug, no command disables ND packets debug.

Parameter:

None.

Command Mode:

Admin Mode.

Default:

None.

Usage Guide:

After enable packets debug, the relative ND packets will be print for misarranging. The no command disables this function.

Example:

Enable ND packets debug.

```
Switch#debug ipv6 nd snooping packet
```

53.2.7 show savi ipv6 check source binding

Command:

```
show savi ipv6 check source binding [interface<if-name>]
```

Function:

Show the global SAVI binding entry list.

Parameter:

if-name: port name such as interface ethernet 1/1.

Command Mode:

Admin Mode.

Default:

None.

Usage Guide:

Descriptions of each field are as below:

Field	Description
MAC	The bound MAC address
IP	The bound IP address
Vlan	The binding VLAN belongs to
Port	The binding port belongs to
Type	Binding type
State	Binding state
Expires	The bound lifetime period

Example:

Show the global binding state of SAVI.

```
Switch(config)#show savi ipv6 check source binding
```

Static binding count: 0

Dynamic binding count: 3

Binding count: 3

```

MAC          IP          VLAN  Port          Type  State  Expires
-----
00-25-64-bb-8f-04  fe80::225:64ff:febb:8f04  1 Ethernet1/5 slaac  BOUND  14370
00-25-64-bb-8f-04  2001::13  1 Ethernet1/5 slaac  BOUND  14370
00-25-64-bb-8f-04  2001::10  1 Ethernet1/5 slaac  BOUND  14370
-----

```

Chapter 54 Commands for MRPP

54.1 control-vlan

Command:

```
control-vlan <vid>  
no control-vlan
```

Function:

Configure control VLAN ID of MRPP ring; the “**no control-vlan**” command deletes control VLAN ID.

Parameter:

<vid> expresses control VLAN ID, the valid range is from 1 to 4094.

Command Mode:

MRPP ring mode

Default:

None

Usage Guide:

The command specifies Virtual VLAN ID of MRPP ring, currently it can be any value in 1-4094. To avoid confusion, it is recommended that the ID is non-configured VLAN ID, and the same to MRPP ring ID. In configuration of MRPP ring of the same MRPP loop switches, the control VLAN ID must be the same, otherwise the whole MRPP loop may not be able to work normally or form broadcast.

The mrpp enable command must be start before the control-vlan command be used. If primary port, secondary port, node-mode and enable commands all be configured after control-vlan, the mrpp-ring function is enabled.

Example:

Configure control VLAN of mrpp ring 4000 is 4000.

```
Switch(config)#mrpp ring 4000
```

```
Switch(mrpp-ring-4000)#control-vlan 4000
```

54.2 clear mrpp statistics

Command:

`clear mrpp statistics [<ring-id>]`

Function:

Clear statistic information of MRPP data packet of MRPP ring receiving and transferring.

Parameter:

<ring-id> is MRPP ring ID, the valid range is from 1 to 4096, if not specified ID, it clears all of MRPP ring statistic information.

Command Mode:

Admin Mode.

Default:

None.

Usage Guide:

None.

Example:

Clear statistic information of MRPP ring 4000 of switch.

```
Switch#clear mrpp statistics 4000
```

54.3 debug mrpp

Command:

`debug mrpp`
`no debug mrpp`

Function:

Open MRPP debug information; “**no description**” command disables MRPP debug information.

Command Mode:

Admin Mode

Parameter:

None.

Usage Guide:

Enable MRPP debug information, and check message process of MRPP protocol and receive data packet process, it is helpful to monitor debug.

Example:

Enable debug information of MRPP protocol.

```
Switch#debug mrpp
```

54.4 enable

Command:

enable

no enable

Function:

Enable configured MRPP ring, the “**no enable**” command disables this enabled MRPP ring.

Command Mode:

MRPP ring mode

Default:

Default disable MRPP ring.

Usage Guide:

Executing this command, it must enable MRPP protocol, and if other commands have configured, the MRPP ring is enabled.

Example:

Configure MRPP ring 4000 of switch to primary node, and enable the MRPP ring.

```
Switch(config)#mrpp enable
```

```
Switch(config)#mrpp ring 4000
```

```
Switch(mrpp-ring-4000)#control-vlan 4000
```

```
Switch(mrpp-ring-4000)# node-mode master
```

```
Switch(mrpp-ring-4000)#fail-timer 18
```

```
Switch(mrpp-ring-4000)#hello-timer 6
Switch(mrpp-ring-4000)#enable
Switch(mrpp-ring-4000)#exit
Switch(config)#in ethernet1/1
Switch(config-If-Ethernet1/1)#mrpp ring 4000 primary-port
Switch(config)#in ethernet 1/3
Switch(config-If-Ethernet1/3)#mrpp ring 4000 secondary-port
```

54.5 errp domain

Command:

```
errp domain <domain-id>
no errp domain <domain-id>
```

Function:

Create ERRP domain, the no command deletes the configured ERRP domain.

Parameter:

<domain-id> domain ID of ERRP, the range between 1 and 15.

Command Mode:

Global mode

Usage Guide:

If domain ID of ERRP needs to be configured, the compatible mode of ERRP should be enabled firstly. When executing this command, it should create a new ERRP domain if there is no ERRP domain. However, the no command is used to delete the corresponding domain ID of ERRP.

Example:

```
Configure domain ID for ERRP globally.
Switch(Config)#errp domain 1
```

54.6 fail-timer

Command:

```
fail-timer <timer>  
no fail-timer
```

Function:

Configure if the primary node of MRPP ring receive Timer interval of Hello packet or not, the “**no fail-timer**” command restores default timer interval.

Parameter:

<timer> valid range is from 1 to 300s.

Command Mode:

MRPP ring mode

Default:

Default configure timer interval 3s.

Usage Guide:

If primary node of MRPP ring doesn't receives Hello packet from primary port of primary node on configured fail timer, the whole loop is fail. Transfer node of MRPP doesn't need this timer and configure. To avoid time delay by transfer node forwards Hello packet, the value of fail timer must be more than or equal to 3 times of Hello timer. On time delay loop, it needs to modify the default and increase the value to avoid primary node doesn't receive Hello packet on fail timer due to time delay.

Example:

```
Configure fail timer of MRPP ring 4000 to 10s.  
Switch(config)# mrpp ring 4000  
Switch(mrpp-ring-4000)#fail-timer 10
```

54.7 hello-timer

Command:

```
hello-timer <timer>  
no hello-timer
```

Function:

Configure timer interval of Hello packet from primary node of MRPP ring, the “**no hello-timer**” command restores timer interval of default.

Parameter:

<timer> valid range is from 1 to 100s.

Command Mode:

MRPP ring mode

Default:

Default configuration timer interval is 1s.

Usage Guide:

The primary node of MRPP ring continuously sends Hello packet on configured Hello timer interval, if secondary port of primary node can receive this packet in configured period; the whole loop is normal, otherwise fail. Transfer node of MRPP ring doesn't need this timer and configure.

Example:

Configure hello-timer of MRPP ring 4000 to 3 seconds.

```
Switch(config)# mrpp ring 4000
```

```
Switch(mrpp-ring-4000)#hello-timer 3
```

54.8 mrpp eaps compatible

Command:

mrpp eaps compatible

no mrpp eaps compatible

Function:

Enable the compatible mode for EAPS, the no command disables the compatible mode.

Parameter:

None.

Command Mode:

Global mode

Default:

Disable the compatible function of EAPS.

Usage Guide:

If the compatible function of EAPS needs to be configured, MRPP protocol should be enabled firstly. When executing **no mrpp eaps compatible** command, it should ensure that the switch has enabled MRPP protocol.

Example:

Enable the compatible function of EAPS globally.

```
Switch(Config)#mrpp enable
```

```
Switch(Config)#mrpp eaps compatible
```

54.9 mrpp enable

Command:

```
mrpp enable
```

```
no mrpp enable
```

Function:

Enable MRPP protocol module, the “**no mrpp enable**” command disables MRPP protocol.

Parameter:

None.

Command Mode:

Global Mode.

Default:

The system doesn't enable MRPP protocol module.

Usage Guide:

If it needs to configure MRPP ring, it enables MRPP protocol. Executing “**no mrpp enable**” command, it ensures to disable the switch enabled MRPP ring.

Example:

Globally enable MRPP.

```
Switch(config)#mrpp enable
```

54.10 mrpp errp compatible

Command:

mrpp errp compatible
no mrpp errp compatible

Function:

Enable the compatible mode for ERRP, the no command disables the compatible mode.

Parameter:

None.

Command Mode:

Global mode

Default:

Disable the compatible function of ERRP.

Usage Guide:

If the compatible function of ERRP needs to be configured, MRPP protocol should be enabled firstly. Furthermore, the port with ERRP compatible mode should be configured as hybrid or trunk mode and allow the packets with Control Vlan information.

Example:

Enable the compatible function of ERRP globally.

```
Switch(Config)#mrpp enable
```

```
Switch(Config)#mrpp errp compatible
```

```
Switch(Config)#mrpp ring 2
```

```
Switch(mrpp-ring-2)#control-vlan 4000
```

```
Switch(config-if-ethernet1/51)#switchport mode hybrid
```

```
Switch(config-if-ethernet1/51)#switchport hybrid allowed vlan 4000 tag
```

```
Switch(config-if-ethernet1/52)#switchport mode hybrid
```

```
Switch(config-if-ethernet1/52)#switchport hybrid allowed vlan 4000 tag
```

54.11 mrpp poll-time

Command:

```
mrpp poll-time <20-2000>
```

Function:

Configure the query interval of MRPP.

Command mode:

Global mode.

Usage Guide:

Configure the query time to adjust the query interval of MRPP, the default interval is 100ms.

Example:

Set the query time as 200ms.

```
Switch(Config)# mrpp poll-time 200
```

54.12 mrpp ring

Command:

```
mrpp ring <ring-id>  
no mrpp ring <ring-id>
```

Function:

Create MRPP ring, and access MRPP ring mode, the “**no mrpp ring<ring-id>**” command deletes configured MRPP ring.

Parameter:

<ring-id> is MRPP ring ID, the valid range is from 1 to 4096.

Command Mode:

Global Mode

Usage Guide:

If this MRPP ring doesn't exist it create new MRPP ring when executing the command, and then it enter MRPP ring mode. It needs to ensure disable this MRPP ring when executing the “**no mrpp ring**” command.

Example:

```
Switch(config)#mrpp ring 100
```

54.13 mrpp ring primary-port

Command:

```
mrpp ring <ring-id> primary-port  
no mrpp ring <ring-id> primary-port
```

Function:

Specify MRPP ring primary-port.

Parameter:

<ring-id> is the ID of MRPP ring; range is <1-4096>.

Command Mode:

Port mode

Default:

None

Usage Guide:

The command specifies MRPP ring primary port. Primary node uses primary port to send Hello packet, secondary port is used to receive Hello packet from primary node. There are no difference on function between primary port and secondary of secondary node.

The mrpp enable command must be enabled before the control-vlan command be used. If primary port, secondary port, node-mode and enable commands all be configured after control-vlan, then the mrpp-ring function is enabled.

Example:

Configure the primary of MRPP ring 4000 to Ethernet 1/1.

```
Switch(Config)#interface ethernet 1/1
```

```
Switch(config-If-Ethernet1/1)#mrpp ring 4000 primary-port
```


54.14 mrpp ring secondary-port

Command:

```
mrpp ring < ring-id > secondary-port  
no mrpp ring < ring-id > secondary-port
```

Function:

Specify secondary of MRPP ring.

Parameter:

<*ring-id*> is the ID of MRPP ring; range is <1-4096>.

Command Mode:

Port mode

Default:

None

Usage Guide:

The command specifies secondary port of MRPP ring. The primary node uses secondary port to receive Hello packet from primary node. There are no difference on function between primary port and secondary of secondary node.

The mrpp enable command must be enabled before the control-vlan command be used. If primary port, secondary port, node-mode and enable commands all be configured after control-vlan, then the mrpp-ring function is enabled.

Example:

```
Configure secondary port of MRPP ring to 1/3.  
Switch(config)#interface ethernet1/3  
Switch(Config-If-Ethernet1/3)#mrpp ring 4000 secondary-port
```

54.15 node-mode

Command:

```
node-mode {maser | transit}
```

Function:

Configure the type of the node to primary node or secondary node.

Parameter:

None.

Command Mode:

MRPP ring mode.

Default:

Default the node mode is secondary node.

Usage Guide:

None.

Example:

Configure the switch to primary node. MRPP ring 4000.

```
Switch(config)# mrpp ring 4000
```

```
Switch(mrpp-ring-4000)#node-mode master
```

54.16 show mrpp

Command:

```
show mrpp [<ring-id>]
```

Function:

Display MRPP ring configuration.

Parameter:

<ring-id> is MRPP ring ID, the valid range is from 1 to 4096, if not specified ID, it display all of MRPP ring configuration.

Command Mode:

Admin and Configuration Mode.

Default:

None

Usage Guide:

None

Example:

Display configuration of MRPP ring 4000 of switch

```
Switch# show mrpp 4000
```

54.17 show mrpp statistics

Command:

```
show mrpp statistics [<ring-id>]
```

Function:

Display statistic information of data packet of MRPP ring receiving and transferring.

Parameter:

<ring-id> is MRPP ring ID, the valid range is from 1 to 4096, if not specified ID, it displays all of MRPP ring statistic information.

Command Mode:

Admin and Configuration Mode.

Default:

None

Usage Guide:

None

Example:

Display statistic information of MRPP ring 4000 of switch.

```
Switch# show mrpp statistic 4000
```

Chapter 55 Commands for ULPP

55.1 clear ulpp flush counter interface

Command:

```
clear ulpp flush counter interface <name>
```

Function:

Clear the statistic information of the flush packets.

Parameter:

<name> is the name of the port.

Default:

None.

Command mode:

Admin mode.

Usage Guide:

None.

Example:

Clear the statistic information of the flush packets for the port1/1.

```
Switch#clear ulpp flush counter interface e1/1
```

ULPP flush counter has been reset.

55.2 control vlan

Command:

```
control vlan <integer>
```

```
no control vlan
```

Function:

Configure the control VLAN of ULPP group; the no command restores the default value.

Parameter:

<integer> is the control VLAN ID that sends the flush packets, range from 1 to 4094.

Default:

The default is VLAN 1.

Command mode:

ULPP group configuration mode.

Usage Guide:

Configure the control VLAN of ULPP group. This VLAN must correspond the existent VLAN, after it is configured, this VLAN can't be deleted. It must belong to the VLAN protected by ULPP group to avoid flush packets loopback.

Example:

Configure the sending control VLAN of ULPP group as 10.

```
Switch(config)# ulpp group 20
```

```
Switch(ulpp-group-20)# control vlan 10
```

55.3 debug ulpp error

Command:

```
debug ulpp error
```

```
no debug ulpp error
```

Function:

Show the error information of ULPP. The no operation disables showing the error information of ULPP.

Parameter:

None.

Default:

Do not display.

Command mode:

Admin mode.

Usage Guide:

None.

Example:

Show the error information of ULPP.

```
Switch# debug ulpp error
```

```
Unrecognized Flush packet received.
```

55.4 debug ulpp event

Command:

```
debug ulpp event
```

```
no debug ulpp event
```

Function:

Show the event information of ULPP. The no operation disables showing the event information of ULPP.

Parameter:

None.

Default:

Do not display.

Command mode:

Admin mode.

Usage Guide:

None.

Example:

Show the event information of ULPP.

```
Switch# debug ulpp event
```

```
ULPP group 1 state changes:
```

```
Master port ethernet 1/1 in ULPP group 1 changed state to Forwarding.
```

```
Slave port ethernet 1/2 in ULPP group 1 changed state to Standby.
```

55.5 debug ulpp flush content interface

Command:

```
debug ulpp flush content interface <name>  
no debug ulpp flush content interface <name>
```

Function:

Show the contents of the receiving flush packets. The no operation disables the shown contents.

Parameter:

<name> is the name of the port.

Default:

Do not display.

Command mode:

Admin mode.

Usage Guide:

None.

Example:

Show the contents of the receiving flush packets for the port1/1.

```
Switch# debug ulpp flush content interface e1/1
```

Flush packet content:

Destination MAC: 01-03-0f-cc-cc-cc

Source MAC: 00-a0-cc-d7-5c-ea

Type: 8100

Vlan ID: 1

Length: 518

Control Type: 2

Control Vlan: 10

MAC number:0

Vlan Bitmap:

55.6 debug ulpp flush {send | receive} interface

Command:

```
debug ulpp flush {send | receive} interface <name>  
no debug ulpp flush {send | receive} interface <name>
```

Function:

Show the information of the receiving/sending flush packets, it only shows the receiving packets, but do not show the detailed contents of the packets. The no operation disables the shown information.

Parameter:

<name> is the name of the port.

Default:

Do not display.

Command mode:

Admin mode.

Usage Guide:

None.

Example:

Show the information that send the flush packets for the port1/1.

```
Switch# debug ulpp flush send interface e1/1
```

```
Flush packet send on port Ethernet 1/1.
```

55.7 description

Command:

```
description <string>  
no description
```

Function:

Configure the description character string of ULPP group. The no command deletes the description.

Parameter:

<*string*> is the name of ULPP group, the max number of the characters is 128.

Default:

Do not configure ULPP name by default.

Command mode:

ULPP group configuration mode.

Usage Guide:

None.

Example:

Configure the description of ULPP group as switch.

```
Switch(config)# ulpp group 20
```

```
Switch(ulpp-group-20)# description switch
```

55.8 flush disable arp

Command:

```
flush disable arp
```

Function:

Disable sending the flush packets of deleting ARP.

Parameter:

None.

Default:

By default, enable the sending function of the flush packets which are deleted by ARP.

Command mode:

ULPP group configuration mode.

Usage Guide:

If configure this command, when the link is switched, it will not actively send the flush packets to notify the upstream device to delete the entries of ARP.

Example:

Disable sending the flush packets of deleting ARP.

```
Switch(config)# ulpp group 20
```

```
Switch(ulpp-group-20)# flush disable arp
```

55.9 flush disable mac

Command:

```
flush disable mac
```

Function:

Disable sending the flush packets of updating MAC address.

Parameter:

None.

Default:

By default, enable sending the flush packets of updating MAC address.

Command mode:

ULPP group configuration mode.

Usage Guide:

If configure this command, when the link is switched, it will not actively send the flush packets to notify the upstream device to update the MAC address table.

Example:

Disable sending the flush packets of updating MAC address.

```
Switch(config)# ulpp group 20
```

```
Switch(ulpp-group-20)# flush disable mac
```

55.10 flush disable mac-vlan

Command:

flush disable mac-vlan

Function:

Disable sending the flush packets of deleting the dynamic unicast mac according to vlan.

Parameter:

None.

Default:

Disable.

Command mode:

ULPP group configuration mode.

Usage Guide:

If configure this command, when the link is switched, it will not actively send the flush packets to notify the upstream device to delete the dynamic unicast mac according to vlan.

Example:

Disable sending the flush packets deleted by mac-vlan.

```
Switch(config)#ulpp group 1
```

```
Switch(ulpp-group-1)#flush disable mac-vlan
```

55.11 flush enable arp

Command:

flush enable arp

Function:

Enable sending the flush packets of deleting ARP.

Parameter:

None.

Default:

By default, enable sending the flush packets of deleting ARP.

Command mode:

ULPP group configuration mode.

Usage Guide:

If enable this function, when the link is switched, it will actively send the flush packets to notify the upstream device, so as to delete the list entries of ARP.

Example:

Enable sending the flush packets of deleting ARP.

```
Switch(config)# ulpp group 20
```

```
Switch(ulpp-group-20)# flush enable arp
```

55.12 flush enable mac

Command:

```
flush enable mac
```

Function:

Enable sending the flush packets of updating MAC address.

Parameter:

None.

Default:

By default, enable sending the flush packets of updating MAC address.

Command mode:

ULPP group configuration mode.

Usage Guide:

If enable this function, when the link is switched, it will actively send the flush packets to notify the upstream device, so as to update the MAC address table.

Example:

Enable sending the flush packets of updating MAC address.

```
Switch(config)# ulpp group 20
```

```
Switch(ulpp-group-20)# flush enable mac
```

55.13 flush enable mac-vlan

Command:

```
flush enable mac-vlan
```

Function:

Enable sending the flush packets of deleting the dynamic unicast mac according to vlan.

Parameter:

None.

Default:

Disable.

Command mode:

ULPP group configuration mode.

Usage Guide:

If configure this command, when the link is switched, it will actively send the flush packets to notify the upstream device to delete the dynamic unicast mac according to vlan.

Example:

Enable sending the flush packets deleted by mac-vlan.

```
Switch(config)#ulpp group 1
```

```
Switch(ulpp-group-1)#flush enable mac-vlan
```

55.14 preemption delay

Command:

```
preemption delay <integer>  
no preemption delay
```

Function:

Configure the preemption delay, the no command configures the preemption delay as the default value.

Parameter:

<integer>: the preemption delay, range from 1 to 600, in second.

Default:

The default preemption delay is 30.

Command mode:

ULPP group configuration mode.

Usage Guide:

The preemption delay is the delay time before the master port is preempted as the forwarding state, for avoiding the link oscillation in a short time. After the preemption mode is enabled, the preemption delay takes effect.

Example:

Configure the preemption delay as 50s for ULPP group.

```
Switch(config)# ulpp group 20
```

```
Switch(ulpp-group-20)# preemption delay 50
```

55.15 preemption mode

Command:

```
preemption mode  
no preemption mode
```

Function:

Enable/disable the preemption mode of ULPP group.

Parameter:

None.

Default:

Do not preempt.

Command mode:

ULPP group configuration mode.

Usage Guide:

If the preemption mode configured by ULPP group, and the slave port is in forwarding state, and the master port is in the standby state, the master port will turn into the forwarding state and the slave port turn into the standby state after the preemption delay.

Example:

Configure the preemption mode of ULPP group.

```
Switch(config)# ulpp group 20
```

```
Switch(ulpp-group-20)# preempt mode
```

55.16 protect vlan-reference-instance

Command:

```
protect vlan-reference-instance <instance-list>
```

```
no protect vlan-reference-instance <instance-list>
```

Function:

Configure the protective VLANs of ULPP group, the no command cancels the protective VLANs.

Parameter:

<instance-list> is MSTP instance list, such as: i; j-k. The number of the instances is not limited in the list.

Default:

Do not protect any VLANs by default that means any instances are not quoted.

Command mode:

ULPP group configuration mode.

Usage Guide:

Quote the instances of MSTP to protect the VLANs. The VLAN corresponds to this instance is at the forwarding state on one port of this group, and at the blocked state on another port of this group. Each ULPP group can quotes all instances of MSTP. And it can quotes the inexistent MSTP instances that means any VLANs are not protected, the different ULPP groups can't quote the same instance.

Example:

Configure the protective VLAN quoted from instance 1 for ULPP group.

```
Switch(config)# ulpp group 20
```

```
Switch(ulpp-group-20)# protect vlan-reference-instance 1
```

55.17 show ulpp flush counter interface

Command:

```
show ulpp flush counter interface {ethernet <IFNAME> | <IFNAME>}
```

Function:

Show the statistic information of the flush packets.

Parameter:

<IFNAME> is the name of the ports.

Default:

None.

Command mode:

Admin mode.

Usage Guide:

Show the statistic information of the flush packets, such as: the information of the flush packets number which has been received, the time information that receive the flush packets finally.

Example:

Show the statistic information of the flush packets for ULPP group1.

```
Switch# show ulpp flush counter interface e1/1
```

```
Received flush packets: 10
```


55.18 show ulpp flush-receive-port

Command:

show ulpp flush-receive-port

Function:

Show the port which receive flush packet, flush type and control VLAN.

Parameter:

None.

Default:

None.

Command mode:

Admin mode.

Usage Guide:

None.

Example:

Show the information that the port receives flush packets.

```
Switch# show ulpp flush-receive-port
```

```
ULPP flush-receive portlist:
```

```
Portname      Type  Control Vlan
```

```
-----
```

```
Ethernet1/1   ARP   1
```

```
Ethernet1/3   MAC   1;3;5-10
```

55.19 show ulpp group

Command:

show ulpp group [group-id]

Function:

Show the configuration information of the ULPP groups which have been configured.

Parameter:

[group-id]: Show the information of the specific ULPP group.

Default:

By default, show the information of all ULPP groups which have been configured.

Command mode:

Admin mode.

Usage Guide:

Show the configuration information of ULPP groups which have been configured, such as: the state of the master port and the slave port, the preemption mode, the preemption delay, etc.

Example:

Show the configuration information of ULPP group1.

```
Switch# show ulpp group 1
```

```
ULPP group 1 information:
```

```
Description: abc
```

```
Preemption mode: on
```

```
Preemption delay: 30s
```

```
Control VLAN:1
```

```
Protected VLAN: Reference Instance 1
```

Member	Role	State

Ethernet1/1	MASTER	FORWARDING
Ethernet1/2	SLAVE	STANDBY

55.20 ulpp control vlan

Command:

```
ulpp control vlan <vlan-list>
```

```
no ulpp control vlan <vlan-list>
```

Function:

Configure the receiving control VLANs of the port, the no command restores the default value.

Parameter:

<vlan-list> specify the control VLAN list that receives the flush packets, such as: i; j-k. The number of VLANs in Each character string can not exceed 100. The receiving control VLAN of the port can be added.

Default:

The default is VLAN 1.

Command mode:

Port mode.

Usage Guide:

Configure the receiving control VLAN for the port. This VLAN must correspond the existent VLAN, after it is configured, this VLAN can't be deleted.

Example:

```
Configure the receiving control VLAN as 10.  
Switch(config)# interface ethernet 1/1  
Switch(config-If-Ethernet1/1)# ulpp control vlan 10
```

55.21 ulpp flush disable arp

Command:

```
ulpp flush disable arp
```

Function:

Disable receiving the flush packets of deleting ARP.

Parameter:

None.

Default:

By default, disable receiving the flush packets of deleting ARP.

Command mode:

Port mode.

Usage Guide:

If this command is configured, then it will not receive the flush packets of deleting ARP.

Example:

Disable receiving the flush packets of deleting ARP.

```
Switch(config)# interface ethernet 1/1
```

```
Switch(config-If-Ethernet1/1)# ulpp flush disable arp
```

55.22 ulpp flush disable mac

Command:

```
ulpp flush disable mac
```

Function:

Disable receiving the flush packets of updating MAC address.

Parameter:

None.

Default:

By default, disable receiving the flush packets of updating MAC address.

Command mode:

Port mode.

Usage Guide:

If this command is configured, then it will not receive the flush packets of updating MAC address.

Example:

Disable receiving the flush packets of updating MAC address.

```
Switch(config)# interface ethernet 1/1
```

```
Switch(config-If-Ethernet1/1)# ulpp flush disable mac
```

55.23 ulpp flush disable mac-vlan

Command:

ulpp flush disable mac-vlan

Function:

Disable receiving the flush packets of mac-vlan type.

Parameter:

None.

Default:

Disable.

Command mode:

Port mode.

Usage Guide:

If enabling this function, forward the hardware of the flush packets with mac-vlan type received in port. It will not be analyzed.

Example:

Disable receiving the flush packets deleted by mac-vlan of port.

```
Switch(config)#interface e1/2
```

```
Switch(config-if-ethernet1/2)#ulpp flush disable mac-vlan
```

55.24 ulpp flush enable arp

Command:

ulpp flush enable arp

Function:

Enable receiving the flush packets of deleting ARP.

Parameter:

None.

Default:

By default, disable receiving the flush packets of deleting ARP.

Command mode:

Port mode.

Usage Guide:

Enable this function to receive the flush packets which delete ARP.

Example:

Enable receiving of the flush packets of deleting ARP.

```
Switch(config)# interface ethernet 1/1
```

```
Switch(config-If-Ethernet1/1)# ulpp flush enable arp
```

55.25 ulpp flush enable mac

Command:

```
ulpp flush enable mac
```

Function:

Enable receiving the flush packets of updating MAC address.

Parameter:

None.

Default:

By default, disable receiving the flush packets of updating MAC address.

Command mode:

Port mode.

Usage Guide:

Enable receiving the flush packets of updating MAC address table.

Example:

Enable receiving the flush packets of updating the MAC address.

```
Switch(config)# interface ethernet 1/1
```

```
Switch(config-If-Ethernet1/1)# ulpp flush enable mac
```

55.26 ulpp flush enable mac-vlan

Command:

```
ulpp flush enable mac-vlan
```

Function:

Enable receiving the flush packets of mac-vlan type.

Parameter:

None.

Default:

Disable.

Command mode:

Port mode.

Usage Guide:

If enabling this function, configure the interface to receive the flush packets handled mac-vlan type and delete the dynamic unicast mac according to vlan information in the packets.

Example:

Enable receiving the flush packets deleted by mac-vlan of port.

```
Switch(config)#interface e1/2
```

```
Switch(config-if-ethernet1/2)#ulpp flush enable mac-vlan
```

55.27 ulpp group

Command:

```
ulpp group <integer>
```

```
no ulpp group <integer>
```

Function:

Create a ULPP group. If this group exists, then enter the configuration mode of ULPP group. The no command deletes a ULPP group.

Parameter:

<integer> is the ID of ULPP group, range from 1 to 48.

Command mode:

Global Mode.

Default:

Any ULPP groups are not configured.

Usage Guide:

None.

Example:

Configure ulpp group 20 or enter the mode of ulpp group 20.

```
Switch(config)# ulpp group 20
```

```
Switch(ulpp-group-20)#
```

55.28 ulpp group master

Command:

```
ulpp group <integer> master
```

```
no ulpp group <integer> master
```

Function:

Configure the master port of ULPP group, the no command deletes the master port.

Parameter:

<integer> is the ID of ULPP group, range from 1 to 48.

Default:

There is no master port configured by default.

Command mode:

Port mode.

Usage Guide:

There is no sequence requirement for the master and slave port configuration in a group, but the protective VLANs must be configured before the member ports. Each group has only one master port, if the master port exists, then the configuration fail.

Example:

Configure the master port of ULPP group.

```
Switch(config)# interface ethernet 1/1
```

```
Switch(config-If-Ethernet1/1)# ulpp group 20 master
```

55.29 ulpp group slave

Command:

```
ulpp group <integer> slave
```

```
no ulpp group <integer> slave
```

Function:

Configure the slave port of ULPP group, the no command deletes the slave port.

Parameter:

<integer> is the ID of ULPP group, the range from 1 to 48.

Default:

There is no slave port configured by default.

Command mode:

Port mode.

Usage Guide:

There is no sequence requirement for the master and slave port configuration in a group, but the protective VLANs must be configured before the member ports. Each group has only one slave port, if the slave port exists, then the configuration is fail.

Example:

Configure the slave port of ULPP group.

```
Switch(config)# interface ethernet 1/2
```

```
Switch(config-If-Ethernet1/2)# ulpp group 20 slave
```

Chapter 56 IPv4 Multicast Protocol

56.1 debug ulsm event

Command:

debug ulsm event
no debug ulsm event

Function:

Show the event information of ULSM. The no operation disables showing ULSM events.

Parameter:

None.

Default:

None.

Command mode:

Admin Mode.

Usage Guide:

None.

Example:

Show the event information of ULSM.
Switch# debug ulsm event
Downlink synchronized with ULSM group, change state to Down.

56.2 show ulsm group

Command:

show ulsm group [group-id]

Function:

Show the configuration information of ULSM group.

Parameter:

[**group-id**]: the ID of ULSM group.

Default:

By default, show the information of all ULSM groups which have been configured.

Command mode:

Admin Mode.

Usage Guide:

None.

Example:

Show the configuration information of ULSM group1.

```
Switch# show ulsm group 1
```

```
ULSM group 1 information:
```

```
ULSM group state: Down
```

Member	Role	State	Down by ULSM
--------	------	-------	--------------

ethernet1/1	UpLINK	Down	
ethernet1/2	DownLINK	Down	Yes

56.3 ulsm group

Command:

```
ulsm group <group-id>
```

```
no ulsm group <group-id>
```

Function:

Create a ULSM group. The no command deletes the ULSM group.

Parameter:

<**group-id**> is the ID of ULSM group, range from 1 to 32.

Default:

There is no ULSM group configured by default.

Command mode:

Global Mode.

Usage Guide:

None.

Example:

Create ULSM group 10.

```
Switch(config)# ulsm group 10
```

56.4 ulsm group {uplink | downlink}

Command:

```
ulsm group <group-id> {uplink | downlink}
```

```
no ulsm group <group-id>
```

Function:

Configure the uplink/downlink ports of ULSM group. The no command deletes the uplink/downlink ports.

Parameter:

<group-id>: The ID of ULSM group, the range from 1 to 32.

uplink: Configure the port as the uplink port.

downlink: Configure the port as the downlink port.

Default:

The port does not belong to any ULSM group.

Command mode:

Port Mode.

Usage Guide:

Configure the uplink/downlink ports of ULSM group. Each ULSM group can configure 8 uplink ports and 16 downlink ports at most.

Example:

Configure port1/3 as the uplink port of ULSM group10.

```
Switch(config)# interface ethernet 1/3
```

```
Switch(config-If-Ethernet1/3)# ulsm group 10 uplink
```

Chapter 57 Commands for Mirroring Configuration

57.1 monitor session source interface

Command:

```
monitor session <session> source {interface <interface-list> / cpu} {rx| tx| both}
no monitor session <session> source {interface <interface-list> / cpu}
```

Function:

Specify the source interface for the mirror. The no form command will disable this configuration.

Parameters:

<session> is the session number for the mirror. Currently only 1 is supported. **<interface-list>** is the list of source interfaces of the mirror which can be separated by "-" and ";". **cpu** means the CPU on the board to be the source of the mirror for debugging. Datagram received by or sent by the CPU. **rx** means to filter the datagram received by the interface, while **tx** for the datagram sent out, and **both** means both of income and outcome datagram.

Command mode:

Global mode

Usage Guide:

This command is used to configure the source interfaces for the mirror. It is not restricted the source interface of the mirror on the switch. The source can be one interface, or can be multiple interfaces. Both of the income and outcome datagram can be mirrored, or they can be mirrored selectively. If no [rx | tx | both] is specified, both are made to be the default. When multiple interfaces are mirrored, the direction of the mirror can be different, but they should be configured separately.

Example:

```
Configure to mirror the datagram sent out by interface 1/1-4 and to mirror the datagram received by interface 1/5
Switch(config)#monitor session 1 source interface ethernet 1/1-4 tx
Switch(config)#monitor session 1 source interface ethernet1/5 rx
```

57.2 monitor session source interface access-list

Command:

```
monitor session <session> source {interface <interface-list>} access-list <num> {rx|tx|both}
no monitor session <session> source {interface <interface-list>} access-list <num>
```

Function:

Specify the access control for the source of the mirror. The no form command will disable this configuration.

Parameters:

<session> is the session number for the mirror. Currently only 1 is supported. **<interface-list>** is the list of source interfaces of the mirror which can be separated by '-' and ';'. **<num>** is the number of the access list. **rx** means to filter the datagram received by the interface. **tx** for the datagram sent out, and both means both of income and outcome datagram.

Command Mode:

Global Mode.

Usage Guide:

This command is used to configure the source interfaces for the mirror. It is not restricted the source interface of the mirror on the switch. The source can be one interface, or can be multiple interfaces. For flow mirror, only datagram received can be mirrored. The parameters can be **rx**, **tx**, **both**. The related access list should be prepared before this command is issued. For how to configure the access list, please refer to ACL configuration. The mirror can only be created after the destination interface of the corresponding session has been configured. This command supports the IP ACL and MAC ACL only currently.

Example:

```
Configure the mirror interface 1/6 to filter with access list 120 in session 1.
Switch(config)#monitor session 1 source interface 1/6 access-list 120 rx
```

57.3 monitor session destination interface

Command:

```
monitor session <session> destination interface <interface-number>
no monitor session <session> destination interface <interface-number>
```

Function:

Specify the destination interface of the mirror. The no form command will disable this configuration.

Parameters:

<session> is the session number of the mirror, which is currently support only one. **<interface-number>** is the destination interface of the mirror.

Default:

None.

Command Mode:

Global mode

Usage Guide:

Four destination mirror interface are supported on the switch. To be mentioned. The interface which is configured as the destination of the mirror should not be configured as the member of the interface trunk. And the maximum throughput of the interface is recommended to be larger than the total throughput of the interfaces to be mirrored. If the destination is removed, the mirror path configured will be removed at the same time. And if the destination interface is reconfigured, the interface, CPU mirror path will be recovered. To be mentioned, the flow mirror can only be recovered after the destination of the interface is re-configured.

Example:

Configure interface 1/7 as the destination of the mirror.
Switch(config)#monitor session 1 destination interface ethernet 1/7

57.4 show monitor

Command:

show monitor

Function:

To display information about the source and destination ports of all the mirror sessions.

Command Mode:

Admin Mode

Usage Guide:

This command is used to display the source and destination ports for the configured mirror sessions. For port mirroring, CPU mirroring, and flow mirroring, the mirror mode of the source can be displayed.

Example:

```
Switch#show monitor
```


Chapter 58 Commands for sFlow

58.1 sflow agent-address

Command:

```
sflow agent-address <agent-address>  
no sflow agent-address
```

Function:

Configure the sFlow sample proxy address. The “no” form of this command deletes the proxy address.

Parameter:

<agent-address > is the sample proxy IP address which is shown in dotted decimal notation.

Command Mode:

Global Mode.

Default:

None default value.

Usage Guide:

The proxy address is used to mark the sample proxy which is similar to OSPF or the Router ID in the BGP. However it is not necessary to make the sFlow sample proxy work properly.

Example:

```
Sample the proxy address at global mode.  
switch (config)#sflow agent-address 192.168.1.200
```

58.2 sflow analyzer

Command:

```
sflow analyzer sflowtrend  
no sflow analyzer sflowtrend
```

Function:

Configure the analyzer used by sFlow, the no command deletes the analyzer.

Parameter:

sflowtrend is the analyzer of Inmon.

Command Mode:

Global Mode

Default:

Do not configure

Usage Guide:

Configure this command when using sFlowTrend.

Example:

```
Switch(config)#sflow analyzer sflowtrend
```

58.3 sflow counter-interval

Command:

```
sflow counter-interval <interval-value>
```

```
no sflow counter-interval
```

Function:

Configure the max interval of the sFlow statistic sampling; the “no” form of this command deletes the statistic sampling interval value.

Parameter:

<interval-value> is the value of the interval with a valid range of 20~120 and shown in second.

Command Mode:

Port Mode

Default:

No default value

Usage Guide:

If no statistic sampling interval is configured, there will not be any statistic sampling on the interface.

Example:

Set the statistic sampling interval on the interface e1/1 to 20 seconds.

```
Switch(Config-If-Ethernet1/1)#sflow counter-interval 20
```

58.4 sflow data-len

Command:

```
sflow data-len <length-value>
```

```
no sflow data-len
```

Function:

Configure the max length of the sFlow packet data; the “**no sflow data-len**” command restores the default value.

Parameter:

<length-value> is the value of the length with a value range of 500-1470.

Command Mode:

Port Mode.

Default:

The value is 1400 by default.

Usage Guide:

When combining several samples to a sFlow group to be sent, the length of the group excluding the MAC head and IP head parts should not exceed the configured value.

Example:

Configure the max length of the sFlow packet data to 1000.

```
switch (Config-If-Ethernet1/2)#sflow data-len 1000
```

58.5 sflow destination

Command:

```
sflow destination <collector-address> [<collector-port>]  
no sflow destination
```

Function:

Configure the IP address and port number of the host on which the sFlow analysis software is installed. If the port has been configured with IP address, the port configuration will be applied, or else the global configuration will be applied. The “no” form of this command restores the port to default and deletes the IP address.

Parameter:

<collector-address> is the IP address of the analyzer, shown in dotted decimal notation. **<collector-port>** is the destination port of the sent sFlow packets.

Command Mode:

Global Mode and Port Mode.

Default:

The destination port of the sFlow packet is defaulted at 6343, and the analyzer has no default address.

Usage Guide:

If the analyzer address is configured at Port Mode, this IP address and port configured at Port Mode will be applied when sending the sample packet. Or else the address and port configured at global mode will be applied. The analyzer address should be configured to let the sFlow sample proxy work properly.

Example:

Configure the analyzer address and port at global mode.
switch (config)#sflow destination 192.168.1.200 1025

58.6 sflow header-len

Command:

```
sflow header-len <length-value>  
no sflow header-len
```

Function:

Configure the length of the head data packet copied in the sFlow data sampling. The "no" form of this command restores the default value.

Parameter:

<length-value> is the value of the length with a valid range of 32-256.

Command Mode:

Port Mode.

Default:

128 by default.

Usage Guide:

If the packet sample can not be identified whether it is IPv4 or IPv6 when sent to the CPU, certain length of the head of the group has to be copied to the sFlow packet and sent out. The length of the copied content is configured by this command.

Example:

Configure the length of the packet data head copied in the sFlow data sampling to 50.

```
Switch(Config-If-Ethernet1/2)#sflow header-len 50
```

58.7 sflow priority

Command:

```
sflow priority <priority-value>
```

```
no sflow priority
```

Function:

Configure the priority when sFlow receives packet from the hardware. The "no" form of the command restores the default.

Parameter:

<priority-value> is the priority value with a valid range of 0-3.

Command Mode:

Global Mode.

Default:

The default value is 0.

Usage Guide:

When sample packet is sent to the CPU, it is recommended not to assign high priority for the packet so that regular receiving and sending of other protocol packet will not be interfered. The higher the priority value is set, the higher its priority will be.

Example:

Configure the priority when sFlow receives packet from the hardware at global mode.

```
switch (config)#sflow priority 1
```

58.8 sflow rate

Command:

```
sflow rate { input <input-rate> | output <output-rate >}  
no sflow rate [input | output]
```

Function:

Configure the sample rate of the sFlow hardware sampling. The “no” form of this command deletes the sampling rate value.

Parameter:

<input-rate> is the rate of ingress group sampling, the valid range is 1000~16383500.

<output-rate> is the rate of egress group sampling, the valid range is 1000~16383500.

Command Mode:

Port Mode.

Default:

No default value.

Usage Guide:

The traffic sampling will not be performed if the sampling rate is not configured on the port. And if the ingress group sampling rate is set to 10000, this indicates there will be one group be sampled every 10000 ingress groups.

Example:

Configure the ingress sample rate on port e1/1 to 10000 and the egress sample rate to 20000.

Switch(Config-If-Ethernet1/1)#sflow rate input 10000

Switch(Config-If-Ethernet1/1)#sflow rate output 20000

58.9 show sflow

Command:

show sflow

Function:

Display the sFlow configuration state.

Parameter:

None.

Command Mode:

All Modes.

Usage Guide:

This command is used to acknowledge the operation state of sFlow.

Switch#show sflow

Sflow version 1.2

Agent address is 172.16.1.100

Collector address have not configured

Collector port is 6343

Sampler priority is 2

Sflow DataSource: type 2, index 194(Ethernet1/2)

Collector address is 192.168.1.200

Collector port is 6343

Counter interval is 0

Sample rate is input 0, output 0

Sample packet max len is 1400

Sample header max len is 50

Sample version is 4

Displayed Information	Explanation
Sflow version 1.2	Indicates the sFlow version is 1.2
Agent address is 172.16.1.100	Address of the sFlow sample proxy is 172.16.1.100
Collector address have not	the sFlow global analyzer address is not configured

configured	
Collector port is 6343	the sFlow global destination port is the defaulted 6343
Sampler priority is 2	The priority of sFlow when receiving packets from the hardware is 2.
Sflow DataSource: type 2, index 194(Ethernet1/1)	One sample proxy data source of the sFlow is the interface e1/1 and its type is 2 (Ethernet), the interface index is 194.
Collector address is 192.168.1.200	The analyzer address of the sampling address of the E1/1 interface is 192.168.1.200
Collector port is 6343	Default value of the port on E1/1 interface sampling proxy is 6343.
Counter interval is 20	The statistic sampling interval on e1/1 interface is 20 seconds
Sample rate is input 10000, output 0	The ingress traffic rate of e1/1 interface sampling proxy is 10000 and no egress traffic sampling will be performed
Sample packet max len is 1400	The length of the sFlow group data sent by the e1/1 interface should not exceed 1400 bytes.
Sample header max len is 50	The length of the packet data head copied in the data sampling of the e1/1 interface sampling proxy is 50
Sample version is 4	The datagram version of the sFlow group sent by the E1/1 interface sampling proxy is 4.

Chapter 59 Commands for RSPAN Configuration

59.1 remote-span

Command:

remote-span
no remote-span

Function:

To configure VLAN to RSPAN VLAN. The no form of this command will delete the RSPAN VLAN.

Parameter:

None.

Command Mode:

VLAN Configuration Mode.

Default:

Not configured.

Usage Guide:

This command is used to configure the existing VLAN as RSPAN VLAN. Dedicated RSPAN VLAN should be configured before RSPAN can function. When configuring RSPAN VLAN, it should be made sure that specialized VLAN, such as the default VLAN, dynamic VLAN, private VLAN, multicast VLAN, and layer 3 interface enabled VLAN, should not be configured as RSPAN VLAN. If any existing sessions are still working when RSPAN is disabled, these sessions will be still working regardless the configuration change. However, if any layer 3 interface is configured in the VLAN after RSPAN is disabled, the existing RSPAN session will be stopped.

Example:

```
Switch(Config-Vlan5)#remote-span
```

59.2 monitor session remote vlan

Command:

```
monitor session <session> remote vlan <vid>  
no monitor session <session> remote vlan
```

Function:

To configure local mirror session to RSPAN. The no form of this command will restore the RSPAN to local mirror.

Parameter:

<session>: session ID, range between 1~4. <vid>: The id of RSPAN VLAN.

Command Mode:

Global Mode.

Default:

Not configured.

Usage Guide:

To configure local mirror session to RSPAN. The VLAN id is the RSPAN VLAN. The mirrored data grams will be attached with RSPAN tags.

Example:

```
Switch(config)#monitor session 1 remote vlan 5
```

59.3 monitor session reflector-port

Command:

```
monitor session <session> reflector-port <interface-number>  
no monitor session <session> reflector-port <interface-number>
```

Function:

To configure reflector port, the no form of this command will delete the reflector port.

Parameter:

<session>: Session ID, range between 1~4, <interface-number>: Interface number.

Command Mode:

Global Mode.

Default:

Not configured.

Usage Guide:

This command configures the reflector port for the destination of mirror data grams, and disables the MAC learning function of the specified port. The configuration of reflector port is to change the mode of the local port from the destination port mode to be the reflector mode. Hence, the configuration of reflector port and the destination port are exclusive. The no command is used to restore the reflector port to normal port. The source port, in access or trunk mode, should not be added to RSPAN VLAN. When the reflector port is configured as springboard of CPU TX direction mirroring, it must be configured as TRUNK port and allows the RSPAN VLAN data passing, the Native VLAN should not be configured as RSPAN VLAN.

Example:

```
Switch(config)#monitor session 1 reflector-port ethernet1/3
```

Chapter 60 Commands for ERSPAN

60.1 monitor session

Command:

```
monitor session <session> destination tunnel interface <interface-number> desmac < MAC address > desIP  
< Dest IP address > scrIP < Source IP address  
no monitor session <session> destination tunnel interface <interface-number>
```

Function:

Appoint the mirror destination, and the destination can be the physical port or the tunnel; the no command deletes it.

Parameters:

<session> is the value of session, it supports 1 to 4 currently;
<interface-number> is the mirror destination port;
<MAC address > is the MAC address of the equipment which is connected to the mirror destination port;
<Dest IP address > is the IP address of the tunnel that the tunnel destination is in;
<Source IP address > is the IP address of the tunnel that this equipment is in.

Command Mode:

Global Mode.

Default:

None.

Usage Guide:

The switch supports 4 mirror destination. It should be noted that the destination only can be the physical port or the tunnel; it should not be the members of the port aggregation and the port throughput should greater than or equal to the sum of the throughput of all source ports which is monitored by it. Cancel the mirror destination of one session, the port and CPU mirror access will restore. It should be noted that flow mirror can restore after configuring the destination port and configuring it anew. If the mirror destination is tunnel, this tunnel must be GRE tunnel. This tunnel can be no configuration, then users should configure the information of tunnel as GRE packet header.

Example:

```
Switch(config)#monitor session 1 destination interface Ethernet1/2 tunnel destination-mac 00-00-00-00-01-01  
destination-IP 1.0.0.2 source-IP 1.1.1.1
```

60.2 monitor session destination tunnel

Command:

```
monitor session <session> destination tunnel <tunnel-number>  
no monitor session <session> destination tunnel <tunnel-number>
```

Function:

Specify the destination port of the mirror as the tunnel. The no command deletes this configuration.

Parameters:

<session> is the session number of the mirror, which is currently limited from 1 to 4; <tunnel-number> is the tunnel number.

Default:

No configuration

Command Mode:

Global mode

Usage Guide:

4 destination tunnels are supported on the switch. To be mentioned, the destination tunnel which is configured as the physical ports or tunnel, it should not be configured as the member of the port aggregation group. And the maximum throughput of the port is recommended to be larger than the total throughput of the source ports to be mirrored. If the destination tunnel of a session is removed, the mirror path configured in the session will be removed at the same time. And if the destination tunnel is reconfigured, the port mirror path will be recovered. To be mentioned, the flow mirror can only be recovered after the destination port is reconfigured. If the destination tunnel is configured as the tunnel which must completed the configuration, and it must be configured as GRE tunnel.

Example:

```
Switch(config)#monitor session 4 destination tunnel 1
```

Chapter 61 Commands for SNTP

61.1 clock timezone

Command:

```
clock timezone WORD {add | subtract} <0-23> [<0-59>]
no clock timezone WORD
```

Function:

This command configures timezone in global mode, the no command deletes the configured timezone.

Parameters:

WORD: timezone name, the length should not exceed 16
add | subtract: the action of timezone
<0-23>: the hour value
<0-59>: the minute value

Command Mode:

Global mode

Default:

None.

Usage Guide:

The timezone name is invalid with the blank, the hour and minute value must be in the specific range.

Example:

Configure the action as add for the eighth timezone globally.
Switch(config)#clock timezone aaa add 8

61.2 debug sntp

Command:

```
debug sntp {adjust | packet | select }
no debug sntp {adjust | packet | select}
```

Function:

Displays or disables SNTP debug information.

Parameters:

adjust stands for SNTP clock adjustment information; **packet** for SNTP packets, **select** for SNTP clock selection.

Command mode:

Admin Mode

Example:

Displaying debugging information for SNTP packet.

```
Switch#debug sntp packet
```

61.3 sntp polltime

Command:

```
sntp polltime <interval>
```

```
no sntp polltime
```

Function:

Sets the interval for SNTP clients to send requests to NTP/SNTP; the “**no sntp polltime**” command cancels the polltime sets and restores the default setting.

Parameters:

<interval> is the interval value from 16 to 16284.

Default:

The default polltime is 64 seconds.

Command Mode:

Global Mode

Example:

Setting the client to send request to the server every 128 seconds.

```
Switch#config
```

```
Switch(config)#sntp polltime128
```

61.4 sntp server

Command:

```
sntp server {<ip-address> | <ipv6-address>} [source {vlan <vlan no> | loopback <loopback no>}] [version <version_no>]
```

```
no sntp server {<ip-address> | <ipv6-address>} [source {vlan <vlan no> | loopback <loopback no>}] [version <version_no>]
```

Function:

Enable the specified time server as clock source, the no command deletes the specified time server.

Parameters:

ip-address: IPv4 address of time server

ipv6-address: IPv6 address of time server

source: Specify the interface of the source address

vlan: Configure the virtual LAN

vlan no: Virtual LAN number, ranging from 1 to 4094

loopback: Configure loopback interface

loopback no: Loopback identifier, ranging from 1 to 1024

version: Configure the version for the server

version_no: Version number, ranging from 1 to 4, the default is 4

Default:

Do not configure the time server.

Command Mode:

Global mode

Usage Guide:

None.

Example:

Configure the time server address as 1.1.1.1, specify the interface of the source address as vlan1:

```
Switch(config)#sntp server 1.1.1.1 source vlan 1
```

Delete the time server that the address is 1.1.1.1, the interface of the specified source address is vlan1:

```
Switch(config)#no sntp server 1.1.1.1 source vlan 1
```


61.5 show sntp

Command:

`show sntp`

Function:

Displays current SNTP client configuration and server status.

Parameters:

N/A.

Command Mode:

Admin and Configuration Mode.

Example:

Displaying current SNTP configuration.

```
Switch#show sntp
```

SNTP server	Version	Last Receive
2.1.0.2	1	6

Chapter 62 Commands for NTP

62.1 clock timezone

Command:

```
clock timezone WORD {add | subtract} <0-23> [<0-59>]  
no clock timezone WORD
```

Function:

This command configures timezone in global mode, the no command deletes the configured timezone.

Parameters:

WORD: timezone name, the length should not exceed 16
add | subtract: the action of timezone
<0-23>: the hour value
<0-59>: the minute value

Command Mode:

Global mode

Default:

None.

Usage Guide:

The timezone name is invalid with the blank, the hour and minute value must be in the specific range.

Example:

Configure the action as add for the eighth timezone globally.
Switch(config)#clock timezone aaa add 8

62.2 debug ntp adjust

Command:

```
debug ntp adjust  
no debug ntp adjust
```

Function:

To enable/disable the debug switch of displaying local time adjust information.

Parameter:

None.

Default:

Disabled.

Command Mode:

Admin Mode.

Usage Guide:

None.

Example:

To enable the debug switch of displaying local time adjust information.

```
Switch# debug ntp adjust
```

62.3 debug ntp authentication

Command:

```
debug ntp authentication
```

```
no debug ntp authentication
```

Function:

To display NTP authentication information, the no form command disabled the switch of displaying NTP authentication information.

Parameter:

None.

Default:

Disabled.

Command Mode:

Admin Mode.

Usage Guide:

To display NTP authentication information, if the switch is enabled, and if the packets schlepped authentication information when the packet in sending or receiving process, then the key identifier will be printed out.

Example:

To enable the switch of displaying NTP authentication information.

```
Switch# debug ntp authentication
```

62.4 debug ntp events

Command:

```
debug ntp events
```

```
no debug ntp events
```

Function:

To enable/disable debug switch of displaying NTP event.

Parameter:

None.

Default:

Disable the debug switch of displaying NTP event.

Command Mode:

Admin Mode.

Usage Guide:

To enable debug switch of displaying NTP event, after that, if some server changed from available to unavailable or from unavailable to available, the received illegal packet events will be printed.

Example:

To enable debug switch of displaying NTP event information.

```
Switch# debug ntp events
```

62.5 debug ntp packet

Command:

```
debug ntp packet [send | receive]
no debug ntp packet [send | receive]
```

Function:

To enable/disable the debug switch of displaying NTP packet information.

Parameter:

send: The debug switch of sending NTP packet.

receive: The debug switch of receiving NTP packet.

If there is no parameter, that means should enable the sending and receiving switch of NTP packet in the same time.

Default:

Disabled.

Command Mode:

Admin Mode.

Usage Guide:

None.

Example:

To enable the debug switch of displaying NTP packet information.

```
Switch# debug ntp packet
```

62.6 debug ntp sync

Command:

```
debug ntp sync
no debug ntp sync
```

Function:

To enable/disable debug switch of displaying local time synchronization information.

Parameter:

None.

Default:

Disabled.

Command Mode:

Admin Mode.

Usage Guide:

None.

Example:

To enable debug switch of displaying local time synchronization information.

```
Switch# debug ntp sync
```

62.7 ntp access-group

Command:

```
ntp access-group server <acl>  
no ntp access-group server <acl>
```

Function:

To configure/cancel the access control list of NTP Server.

Parameter:

<acl>: ACL number, range is from 1 to 99.

Default:

Not configure the access control of NTP Server.

Command Mode:

Global Mode.

Usage Guide:

None.

Example:

To configure access control list 2 on the switch.

```
Switch(config)#ntp access-group server 2
```

62.8 ntp authenticate

Command:

```
ntp authenticate
```

```
no ntp authenticate
```

Function:

To enable/cancel NTP authentication function.

Parameter:

None.

Default:

Disabled.

Command Mode:

Global Mode.

Usage Guide:

None.

Example:

To enable NTP authentication function.

```
Switch(config)#ntp authenticate
```

62.9 ntp authentication-key

Command:

```
ntp authentication-key <key-id> md5 <value>
```

```
no ntp authentication-key <key-id>
```

Function:

To enable/cancel NTP authentication function, and defined NTP authentication key.

Parameter:

key-id: The id of key, range is from 1 to 4294967295.

value: The value of key, range between 1 to 16 of ascii code.

Default:

The authentication key of NTP authentication is not configured by default.

Command Mode:

Global Mode.

Usage Guide:

None.

Example:

To define the authentication key of NTP authentication, the key-id is 20, the md5 is abc.

```
Switch(config)# ntp authentication-key 20 md5 abc
```

62.10 ntp broadcast server count

Command:

```
ntp broadcast server count <number>
```

```
no ntp broadcast server count
```

Function:

Set the max number of broadcast or multicast servers supported by the NTP client. The no operation will cancel the configuration and restore the default value.

Parameters:

number : 1-100, the max number of broadcast servers.

Default:

The default max number of broadcast servers is 50.

Command Mode:

Global Mode.

Examples:

Configure the max number of broadcast servers is 70 on the switch.

```
Switch(config)#ntp broadcast server count 70
```

62.11 ntp disable

Command:

```
ntp disable
```

```
no ntp disable
```

Function:

To disable/enable the NTP function on port.

Parameter:

None.

Default:

To enable NTP function on all ports.

Command Mode:

vlan Configuration Mode.

Usage Guide:

None.

Example:

To disable the NTP function on vlan1 interface.

```
Switch(config)# interface vlan 1
```

```
Switch(Config-if-Vlan1)#ntp disable
```

62.12 ntp enable

Command:

ntp enable
ntp disable

Function:

To enable/disable NTP function globally.

Parameter:

None.

Default:

Disabled.

Command Mode:

Global Mode.

Usage Guide:

None.

Example:

To enable NTP function.
Switch(config)#ntp enable

62.13 ntp ipv6 multicast client

Command:

ntp ipv6 multicast client
no ntp ipv6 multicast client

Function:

Configure the specified interface to receive IPv6 NTP multicast packets, the no command will cancel the specified interface to receive IPv6 NTP multicast packets.

Parameter:

None.

Command mode:

vlan mode

Default:

Interface does not receive IPv6 NTP multicast packets.

Usage guide:

None.

Example:

Enable the function for receiving IPv6 NTP multicast packets on vlan1 interface.

```
Switch(Config)# interface vlan 1
```

```
Switch(Config-if-Vlan1)#ntp ipv6 multicast client
```

62.14 ntp multicast client

Command:

```
ntp multicast client
```

```
no ntp multicast client
```

Function:

Configure the specified interface to receive NTP multicast packets, the no command will cancel the specified interface to receive NTP multicast packets.

Parameter:

None.

Command mode:

vlan mode

Default:

Interface does not receive NTP multicast packets.

Usage guide:

None.

Example:

Enable the function for receiving NTP multicast packets on vlan1 interface.

```
Switch(Config)# interface vlan 1
```

```
Switch(Config-if-Vlan1)#ntp multicast client
```

62.15 ntp server

Command:

```
ntp server {<ip-address> / <ipv6-address>} [version <version_no>] [key <key-id>]
```

```
no ntp server {<ip-address>|<ipv6-address>}
```

Function:

To enable specified time server of time source, the no form of this command cancels the specified time server of time source.

Parameter:

ip-address: IPv4 address of time server.

ipv6-address: IPv6 address of time server.

version: The version information configured for server.

version_no: The version number of server, range is from 1 to 4, default is 4.

key: To configure key for server.

key-id: The key id.

Default:

Disabled.

Command Mode:

Global Mode.

Usage Guide:

None.

Example:

To configure time server address as 1.1.1.1 on switch.

```
Switch(config)#ntp server 1.1.1.1
```

62.16 ntp trusted-key

Command:

ntp trusted-key <key-id>
no ntp trusted-key <key-id>

Function:

To configure the trusted key. The no command cancels the trusted key.

Parameter:

key-id: The id of key, range is from 1 to 4294967295.

Default:

Trusted key is not configured by default.

Command Mode:

Global Mode.

Usage Guide:

None.

Example:

To configure the specified key 20 to trusted key.
Switch(config)# ntp trusted-key 20

62.17 show ntp status

Command:

show ntp status

Function:

To display time synchronization status, include synchronized or not, layers, address of time source and so on.

Parameter:

None.

Default:

None.

Command Mode:

Admin and Configuration Mode.

Usage Guide:

None.

Example:

```
Switch# show ntp status
Clock status: synchronized
Clock stratum: 3
Reference clock server: 1.1.1.2
Clock offset: 0.010 s
Root delay: 0.012 ms
Root dispersion: 0.000 ms
Reference time: TUE JAN 03 01:27:24 2006
```

62.18 show ntp session

Command:

```
show ntp session [<ip-address> / <ipv6-address>]
```

Function:

To display the information of all NTP session or one specific session, include server ID, server layer, and the local offset according to server. (The symbol * means this server is the selected local time source)

Parameter:

ip-address: The IPv4 address of some specifics configured time server.

ipv6-address: The IPv6 address of some specifics configured time server.

If no parameter, the session relative information of all servers will be displayed (Include broadcast and multicast servers)

Default:

None.

Command Mode:

Admin and Configuration Mode.

Usage Guide:

None.

Example:

(Switch)# show ntp session

	server	stream	type	rootdelay	rootdispersion	trustlevel
*	1.1.1.2	2	unicast	0.010s	0.002s	10
	2.2.2.2	3	unicast	0.005s	0.000s	10

Chapter 63 Commands for Summer Time

63.1 clock summer-time absolute

Command:

```
clock summer-time <word> absolute <HH:MM> <YYYY.MM.DD> <HH:MM> <YYYY.MM.DD> [<offset>]  
no clock summer-time
```

Function:

Configure summer time range, the time in this range is summer time. The no command deletes the configuration.

Parameter:

<word> is the time zone name of summer time; <HH:MM> is the start time, the format is hour (from 0 to 23):minute (from 0 to 59); <YYYY.MM.DD> is the start date, the format is year (from 1970 to 2038).month (from 1 to 12).date (from 1 to 31); <HH:MM> is the end time, the format is hour (from 0 to 23):minute (from 0 to 59); <YYYY.MM.DD> is the end date, the format is year (from 1970 to 2038).month (from 1 to 12).date (from 1 to 31); <offset> is the time offset, the range from 1 to 1440, unit is minute, default value is 60 minutes.

Default:

There is no summer time range.

Command Mode:

Global Mode

Usage Guide:

This command sets the absolute start and end time for summer time. When the system time reaches to the start time point of summer time, the clock is changed and increase <offset> value, the system enters summer time. When the system time reaches to the end time point of summer time, the clock is changed again, subtract <offset> value from system time, the system finishes summer time. Note: the end time should be bigger than the start time for configuring summer time.

Example:

Configure the time range of summer time at 12:10 from april 6th to august 6th in 2010, offset value as 70 minutes, summer time is named as aaa.

```
Switch(config)#clock summer-time aaa absolute 12:10 2010.4.6 12:10 2010.8.6 70
```


63.2 clock summer-time recurring

Command:

```
clock summer-time <word> recurring <HH:MM> <MM.DD> <HH:MM> <MM.DD> [<offset>]  
no clock summer-time
```

Function:

Configure the recurrent summer time range, the time in this range is summer time.

Parameter:

<word> is the time zone name of summer time; <HH:MM> is the start time, the format is hour (from 0 to 23):minute (from 0 to 59); <MM.DD> is the start date, the format is month(from 1 to 12).date(from 1 to 31); <HH:MM> is the end time, the format is hour(from 0 to 23):minute(from 0 to 59); <MM.DD> is the end date, the format is month(from 1 to 12).date(from 1 to 31); <offset> is the time offset, the range from 1 to 1440, unit is minute, default value is 60 minutes.

Default:

There is no summer time range.

Command Mode:

Global Mode

Usage Guide:

This command sets the start and the end time for the recurrent summer time. When the system time reaches to the start time point of summer time, the clock is changed and increase <offset> value, the system enters summer time. When the system time reaches to the end time point of summer time, the clock is changed again, subtract <offset> value from system time, the system finishes summer time. There is no relation between the recurrent summer time to the year, the system clock will be changed when it reaches to the start and the end time point of summer time year after year. This command supports the summer time of southern hemisphere.

Example:

Configure the time range of summer time at 12:10 from april 6th to august 6th year after year, offset value as 70 minutes, summer time is named as aaa.

```
Switch(config)# clock summer-time aaa recurring 12:10 4.6 12:10 8.6 70
```

63.3 clock summer-time recurring

Command:

```
clock summer-time <word> recurring <HH:MM> <week> <day> <month> < HH:MM > <week> <day> <month>
[<offset>]
no clock summer-time
```

Function:

Configure the recurrent summer time range, the time in this range is summer time.

Parameter:

<word> is the time zone name of summer time; <HH:MM> is the start time, the format is hour(from 0 to 23):minute(from 0 to 59); <week> is the week from 1 to 4, first or last; <day> is the week value, the value as "Sun", "Mon", "Tue", "Wed", "Thu", "Fri", "Sat"; <month> is the month, the value as "Jan", "Feb", "Mar", "Apr", "May", "Jun", "Jul", "Aug", "Sep", "Oct", "Nov", "Dec"; <HH:MM> is the end time, the format is hour(from 0 to 23):minute(from 0 to 59); <week> is the week from 1 to 4, first or last; <day> is the week value, the value as "Sun", "Mon", "Tue", "Wed", "Thu", "Fri", "Sat"; <month> is the month, the value as "Jan", "Feb", "Mar", "Apr", "May", "Jun", "Jul", "Aug", "Sep", "Oct", "Nov", "Dec" <offset> is the time offset, the range from 1 to 1440, unit is minute, default value is 60 minutes.

Default:

There is no summer time range.

Command Mode:

Global Mode

Usage Guide:

This command sets the start and end time for the recurrent summer time flexibly. When the system time reaches to the start time point of summer time, the clock is changed and increase <offset> value, the system enters summer time. When the system time reaches to the end time point of summer time, the clock is changed again, subtract <offset> value from system time, the system finishes summer time. There is no relation between the recurrent summer time to the year, the system clock will be changed when it reaches to the start and the end time point of summer time year after year. This command supports summer time of southern hemisphere.

Example:

Configure summer time at 12:10 from the first Monday of april to the last Saturday of august year after year, offset value as 70 minutes, summer time is named as aaa.

```
Switch(config)#clock summer-time aaa recurring 12:10 1 mon apr 12:10 last sat aug 70
```

Chapter 64 Commands for DNSv4/v6

64.1 clear dynamic-host

Command:

```
clear dynamic-host {<ip-address> / <ipv6-address> | all}
```

Function:

To delete the domain entry of specified address or all address in dynamic cache.

Parameter:

<ip-address> is the IP address, in dotted decimal notation;

<ipv6-address> is the IPv6 address; **all** is to delete the domain entry of all address in dynamic cache.

Command Mode:

Admin Mode.

Default:

Disabled.

Usage Guide:

This command is used to manually delete the domain name and address entry in dynamic cache, this command is much useful when domain name have lived long time in cache.

Example:

To delete the address of 202.108.22.5 of domain entry.

```
Switch# clear dynamic-host 202.108.22.5
```

64.2 debug dns

Command:

```
debug dns {all | packet [send | rcv] | events | relay}
```

```
no debug dns {all | packet [send | rcv] | events | relay}
```

Function:

To display the application debug information of DNS domain name resolution, the no form of this command disables the debug display.

Parameter:

None.

Command Mode:

Admin Mode.

Example:

```
Switch# debug dns all
Switch# ping host www.sina.com.cn

%Jan 01 00:03:13 2006 domain name www.sina.com.cn is to be parsed!
%Jan 01 00:03:13 2006 Dns query type is A!
  %Jan 01 00:03:13 2006 Connect dns server 10.1.120.241 .....
ping www.sina.com.cn [202.108.33.32]
Type ^c to abort.
Sending 5 56-byte ICMP Echos to 202.108.33.32, timeout is 2 seconds.
%Jan 01 00:03:15 2006 Host:www.sina.com.cn   Address:202.108.33.32
.....
Success rate is 0 percent (0/5), round-trip min/avg/max = 0/0/0 ms
```

64.3 dns-server

Command:

```
dns-server {<ip-address>|<ipv6-address>} [priority <value>]
no dns-server {<ip-address>|<ipv6-address>}
```

Function:

To configure/delete DNS server.

Parameter:

<ip-address> is the IP address, in dotted decimal notation,
<ipv6-address> is the IPv6 address,
<value> is the priority of DNS server, range between 0~255, 0 by default.

Command Mode:

Global Mode.

Default:

Not configuration.

Usage Guide:

This command is used for configure or delete DNS server, when need to enable dynamic domain name mapping, the switch will sending a domain name search request packet to configured DNS server, the DNS server can be configured no more than 6. The priority is the optional parameter, if priority is configured, the DNS server must be organized according to the order of priority, from high to low. That is the switch sending domain name search request to the server which have the biggest priority, so some DNS server with quick search speed and used frequently can be configured to highest priority. If priority is not configured, to search DNS server must according to the configuration order. When the switch serves as a DNS SERVER, the queries to the DNS SERVER won't follow the above privilege rule; instead, the requests will be sent to all configured servers at the same time

Example:

To configure the priority of DNS server as 200, the server's address is 10.1.120.241.

```
Switch(config)# dns-server 10.1.120.241 priority 200
```

64.4 dns lookup

Command:

```
dns lookup {ipv4 | ipv6} <hostname>
```

Function:

To enable DNS dynamic domain name resolution.

Parameter:

{**ipv4** | **ipv6**} means the IPv4 or IPv6 address look up,

<**hostname**> is the resolute dynamic host name, less than 63 characters.

Command Mode:

Global Mode.

Default:

Disabled.

Usage Guide:

This command is used to look up correspond address based on entered client name, it can look up both IPv4 and IPv6 address. This command only used for domain name mapping, it have no other application function. When command is running, interrupt is forbidding. If configured many servers and domain name suffix, longer time will be required for domain name mapping.

Example:

To look up the IPv4 address of www.sina.com.
Switch(config)# dns lookup ipv4 www.sina.com

64.5 show dns name-server

Command:

```
show dns name-server
```

Function:

To display the information of configured DNS server.

Parameter:

None.

Command Mode:

Admin and Configuration Mode.

Example:

```
Switch# show dns name-server
DNS NAME SERVER:
Address                Priority
10.1.120.231           100
10.1.180.85            80
2001::1                20
```

64.6 show dns domain-list

Command:

`show dns domain-list`

Function:

To display the suffix information of configured DNS domain name.

Parameter:

None.

Command Mode:

Admin and Configuration Mode.

Example:

```
Switch# show dns domain-list
```

```
DNS DOMAIN LIST:
```

```
com.cn
```

```
edu.cn
```

64.7 show dns hosts

Command:

`show dns hosts`

Function:

To display the dynamic domain name information of resolute by switch.

Parameter:

None.

Command Mode:

Admin and Configuration Mode.

Example:

```
Switch# show dns hosts
```

```
Total number of dynamic host is 2
```

```
DNS HOST LIST :
```

Hostname	Address	Time to live	Type
www.sina.com.cn	202.108.33.32	168000	dynamic
www.ipv6.org	2001:6b0:1:	168060	dynamic

64.8 show dns config

Command:

```
show dns config
```

Function:

Display the configured global DNS information on the switch.

Parameter:

None.

Command Mode:

Admin and Configuration Mode.

Example:

```
Switch(config)#show dns config
```

```
ip dns server enable
```

```
ip domain-lookup enable
```

```
the maximum of dns client in cache is 3000, timeout is 5
```

```
dns client number in cache is 0
```

```
dns dynamic host in cache is 0
```

```
dns name server number is 1
```

```
dns domain-list number is 0
```


64.9 show dns client

Command:

show dns client

Function:

Display the DNS Client information maintained by the switch.

Parameter:

None.

Command Mode:

Admin and Configuration Mode.

Example:

Switch(config)#show dns client

DNS REQUEST LIST:

Total number of dns request is 2

Address	Request Id
192.168.11.141	1
192.168.11.138	2

64.10 ip domain-lookup

Command:

ip domain-lookup
no ip domain-lookup

Function:

To enable/disable DNS function, whether the switch will send dynamic DNS domain queries to the real DNS server or not.

Parameter:

None.

Command Mode:

Global Mode.

Default:

Disabled.

Usage Guide:

This command is used to enable or disable the switch DNS dynamic query function. If DNS dynamic query function is enabled, the DNS server will resolve the host name and domain name to the IPv4 or IPv6 address for requests from the clients. If DNS is disabled, client applications will not be able to send any DNS requests to the DNS server. In this situation, only the static address resolution is available. For the address mapping in the resolve cache, which is learnt through DNS before, will be invalid after aging.

Example:

To enable DNS function, can resolve the domain name dynamic.

```
Switch(config)# ip domain-lookup
```

64.11 ip domain-list

Command:

```
ip domain-list <WORD>
```

```
no ip domain-list <WORD>
```

Function:

To configure/delete domain name suffix.

Parameter:

<WORD> is the character string of domain name suffix, less than 63 characters.

Command Mode:

Global Mode.

Default:

Disabled.

Usage Guide:

This command is used to configure or delete suffix of domain name, when the entered domain name is not integrity (such as sina), the switch can add suffix automatically, after that, address mapping can run, the domain name suffix can be configured no more than 6. The first configured domain name suffix will be added first.

Example:

To configure domain name suffix of com.

```
Switch(config)# ip domain-list com
```

64.12 ip dns server

Command:

```
ip dns server
```

```
no ip dns server
```

Function:

Enable/disable DNS SERVER function.

Parameter:

None.

Command Mode:

Global Mode.

Default:

Disabled by default.

Usage Guide:

After the DNS SERVER function is enabled, the switch will be able to receive and handle DNS Requests from the clients by looking up locally or forward the request to the real DNS server.

Example:

Configure to enable the dns server function of the switch.

```
Switch(config)#ip dns server
```

64.13 ip dns server queue maximum

Command:

```
ip dns server queue maximum <1-5000>  
no ip dns server queue maximum
```

Function:

Configure the max number of client information in the switch queue.

Parameter:

<1-5000> the value can be 1 – 5000.

Command Mode:

Global Mode.

Default:

The default client number is 3000.

Usage Guide:

When receiving a DNS Request from a client, the switch will cache the client's information. But the number of client information in the queue should not exceed the configured maximum number; otherwise the client's request won't be handled.

Example:

Set the max number of client information in the switch queue as 2000.
Switch(config)#ip dns server queue maximum 2000

64.14 ip dns server queue timeout

Command:

```
ip dns server queue timeout <1-100>  
no ip dns server queue timeout
```

Function:

Configure the timeout value of caching the client information on the switch.

Parameters:

<1-100> the value can be 1 – 100s.

Command Mode:

Global Mode.

Default:

The default timeout value is 5s.

Usage Guide:

When receiving a DNS Request from a client, the switch will cache the client's information. But the time of maintaining the client information should not exceed the configured maximum timeout value; otherwise the client's information will be cleared out.

Example:

Configure the maximum timeout value of caching the client information on the switch as 10s.

```
Switch(config)#ip dns server queue timeout 10
```

Chapter 65 Commands for Show

65.1 clear history all-users

Command:

`clear history all-users`

Function:

Clear the command history of all users saved by the switch.

Command Mode:

Admin mode

Usage Guide:

Using this command can clear the command history of all users.

Example:

Switch#clear history all-users

65.2 clear logging

Command:

`clear logging sdram`

Function:

This command is used to clear all the information in the log buffer zone.

Command Mode:

Admin Mode

Usage Guide:

When the old information in the log buffer zone is no longer concerned, we can use this command to clear all the information.

Example:

Clear all information in the log buffer zone sdram.

```
Switch#clear logging sdram
```

Related Command: show logging buffered

65.3 history all-users max-length

Command:

```
history all-users max-length <count>
```

Function:

Set the max command history of all users saved by the switch.

Parameter:

<count>: the command history number can be saved, ranging from 100 to 1000

Command Mode:

Global mode

Usage Guide:

The system can save 100 recent command history of all users at best by default, using this command can set the max command history number.

Example:

```
Switch(config)#history all-users max-length 500
```

65.4 logging

Command:

```
logging { <ipv4-addr> | <ipv6-addr> } [facility <local-number>] [level <severity>]  
no logging { <ipv4-addr> | <ipv6-addr> } [facility <local-number>]
```

Function:

The command is used to configure the output channel of the log host. The “no” form of this command will disable the output at the log host output channel.

Parameter:

<ipv4-addr> is the IPv4 address of the host, **<ipv6-addr>** is the IPv6 address of the host; **<local-number>** is the recording equipment of the host with a valid range of local0~local7, which is in accordance with the facility defined in the RFC3164; **<severity>** is the severity threshold of the log information severity level. The rule of the log information output is explained as follows: only those with a level equal to or higher than the threshold will be outputted. For detailed description on the severity please refer to the operation manual.

Command Mode:

Global Mode

Default:

No log information output to the log host by default. The default recorder of the log host is the local0; the default severity level is warnings.

Usage Guide:

Only when the log host is configured by the logging command, this command will be available. We can configure many IPv4 and IPv6 log hosts.

Example 1:

Send the log information with a severity level equal to or higher than warning to the log server with an IPv4 address of 100.100.100.5, and save to the log recording equipment local1.

```
Switch(config)# logging 100.100.100.5 facility local1 level warnings
```

Example 2:

Send the log information with a severity level equal to or higher than informational to the log server with an IPv6 address of 3ffe:506:1:2::3, and save to the log recording equipment local5.

```
Switch(config)# logging 3ffe:506:1:2::3 facility local1 level informational
```

65.5 logging executed-commands

Command:

```
logging executed-commands {enable | disable}
```

Function:

Enable or disable the logging executed-commands.

Parameter:

None.

Command Mode:

Global mode.

Default:

Disable state.

Usage Guide:

After enable this command, the commands executed by user at the console, telnet or ssh terminal will record the log, so it should be used with the logging LOGHOST command.

Example:

Enable the command and send the commands executed by user into log host (10.1.1.1)

```
Switch(Config)#logging 10.1.1.1
```

```
Switch(Config)#logging executed-commands enable
```

65.6 logging loghost sequence-number

Command:

```
logging loghost sequence-number
```

```
no logging loghost sequence-number
```

Function:

Add the loghost sequence-number for the log; the no command does not include the loghost sequence-number.

Command Mode:

Port mode

Default:

Do not include the sequence-number.

Usage Guide:

Use logging command to configure the loghost before this command is set.

Example:

Open the loghost sequence-number.

```
Switch(config)# logging loghost sequence-number
```

65.7 ping

Command:

```
ping [[src <source-address> ] { <destination-address> /host <hostname> }]
```

Function:

Issue ICMP request to remote devices, check whether the remote device can be reached by the switch.

Parameters:

<source-address> is the source IP address where the ping command is issued, with IP address in dotted decimal format. **<destination-address>** is the target IP address of the ping command, with IP address in dotted decimal format. **<hostname>** is the target host name of the ping command, which should not exceed 64 characters.

Default:

5 ICMP echo requests will be sent. The default packet size and time out is 56 bytes and 2 seconds.

Command Mode:

Admin mode

Usage Guide:

When the ping command is entered without any parameters, interactive configuration mode will be invoked. And ping parameters can be entered interactively.

Example:

Example 1: To ping with default parameters.

```
Switch#ping 10.1.128.160
```

Type ^c to abort.

```
Sending 5 56-byte ICMP Echos to 10.1.128.160, timeout is 2 seconds.
```

```
...!!
```

```
Success rate is 40 percent (2/5), round-trip min/avg/max = 0/0/0 ms
```

In the example above, the switch is made to ping the device at 10.1.128.160. The command did not receive ICMP reply packets for the first three ICMP echo requests within default 2 seconds timeout. The ping failed for the first three tries. However, the last two ping succeeded. So the success rate is 40%. It is denoted on the switch "." for ping failure which means unreachable link, while "!" for ping success, which means reachable link.

Example 2: Use ping command with source address configuration, and leave other fields to default.

```
Switch#ping src 10.1.128.161 10.1.128.160
```

Type ^c to abort.

```
Sending 5 56-byte ICMP Echos to 10.1.128.160, using source address 10.1.128.161, timeout is 2 seconds.
```

!!!!

Success rate is 100 percent (5/5), round-trip min/avg/max = 0/0/0 ms

In the example above, 10.1.128.161 is configured as the source address of the ICMP echo requests, while the destination device is configured to be at 10.1.128.160. The command receives all the ICMP reply packets for all of the five ICMP echo requests. The success rate is 100%. It is denoted on the switch “.” for ping failure which means unreachable link, while “!” for ping success, which means reachable link.

Example 3: Ping with parameters entered interactively.

Switch#ping

VRF name :

Target IP address : 10.1.128.160

Use source address option[n]: y

Source IP address: 10.1.128.161

Repeat count [5]: 100

Datagram size in byte [56] : 1000

Timeout in milli-seconds [2000]: 500

Extended commands [n]: n

Display Information	Explanation
VRF name	VRM name. If MPLS is not enabled, this field will be left empty.
Target IP address :	The IP address of the target device.
Use source address option[n]	Whether or not to use ping with source address.
Source IP address	To specify the source IP address for ping.
Repeat count [5]	Number of ping requests to be sent. The default value is 5.
Datagram size in byte [56]	The size of the ICMP echo requests, with default as 56 bytes.
Timeout in milli-seconds [2000]:	Timeout in milli-seconds, with default as 2 seconds.
Extended commands [n]:	Whether or to use other extended options.

65.8 ping6

Command:

```
ping6 [<dst-ipv6-address> | host <hostname> / src <src-ipv6-address> {<dst-ipv6-address > | host <hostname>}]
```

Function:

To check whether the destination network can be reached.

Parameters:

<dst-ipv6-address> is the target IPv6 address of the ping command. **<src-ipv6-address>** is the source IPv6 address where the ping command is issued. **<hostname>** is the target host name of the ping command, which should not exceed 64 characters.

Default:

Five ICMP6 echo request will be sent by default, with default size as 56 bytes, and default timeout to be 2 seconds.

Command Mode:

Normal user mode

Usage Guide:

When the ping6 command is issued with only one IPv6 address, other parameters will be default. And when the ipv6 address is a local data link address, the name of VLAN interface should be specified. When the source IPv6 address is specified, the command will fill the icmp6 echo requests with the specified source address for ping.

Example:

(1) To issue ping6 command with default parameters.

```
Switch>ping6 2001:1:2::4
```

Type ^c to abort.

Sending 5 56-byte ICMP Echos to 2001:1:2::4, timeout is 2 seconds.

!!!!

Success rate is 100 percent (5/5), round-trip min/avg/max = 1/320/1600 ms

(2) To issue the ping6 command with source IPv6 address specified.

```
switch>ping6 src 2001:1:2::3 2001:1:2::4
```

Type ^c to abort.

Sending 5 56-byte ICMP Echos to 2001:1:2::4, using src address 2001:1:2::3, timeout is 2 seconds.

!!!!

Success rate is 100 percent (5/5), round-trip min/avg/max = 1/1/1 ms

(3) To issue the ping6 command with parameters input interactively.

```
switch>ping6
```

Target IPv6 address:fe80::2d0:59ff:feb8:3b27

Output Interface: vlan1

Use source address option[n]:y

Source IPv6 address: fe80::203:fff:fe0b:16e3

Repeat count [5]:

Datagram size in byte [56]:

Timeout in milli-seconds [2000]:

Extended commands [n]:

Type ^c to abort.

Sending 5 56-byte ICMP Echos to fe80::2d0:59ff:feb8:3b27, using src address fe80::203:fff:fe0b:16e3, timeout is 2 seconds.

!!!!

Success rate is 100 percent (5/5), round-trip min/avg/max = 1/4/16 ms

Display Information	Explanation
ping6	The ping6 command
Target IPv6 address	The target IPv6 address of the command.
Output Interface	The name of the VLAN interface, which should be specified when the target address is a local data link address.
Use source IPv6 address [n]:	Whether or not use source IPv6 address. Disabled by default.
Source IPv6 address	Source IPv6 address.
Repeat count[5]	Number of the ping packets.
Datagram size in byte[56]	Packet size of the ping command. 56 byte by default.
Timeout in milli-seconds[2000]	Timeout for ping command. 2 seconds by default.
Extended commands[n]	Extended configuration. Disabled by default.
!	The network is reachable.
.	The network is unreachable.
Success rate is 100 percent(8/8), round-trip min/avg/max = 1/1/1ms	Statistic information, success rate is 100 percent of ping packet.

65.9 show boot-files

Command:

show boot-files

Function:

Display the first and second IMG files and the CFG file enabled by switch.

Command Mode:

Admin and Configuration Mode.

Usage Guide:

After implementing this command, the booting sequence of IMG files in the corresponding storage device, which IMG file is currently used in booting, the configuration information of the CFG file in the storage device and the CFG file currently booted.

Example:

Display the first and second IMG files and the CFG file enabled by switch.

```
Switch#show boot-files
```

Booted files on switch

The primary img file at the next boot time: flash:/nos.img

The backup img file at the next boot time: flash:/nos.img

Current booted img file: flash:/nos.img

The startup-config file at the next boot time: flash:/startup.cfg

Current booted startup-config file: flash:/startup.cfg

If the CFG file of the next booting is set as NULL, the CFG part mentioned above will be displayed as follows:

The startup-config file at the next boot time: NULL

Current booted startup-config file: flash:/startup.cfg

65.10 show debugging

Command:

```
show debugging {l4 | l4drv | lldp | nsm | other | spanning-tree}
```

Function:

Display the debug switch status.

Usage Guide:

If the user needs to check what debug switches have been enabled, **show debugging** command can be executed.

Command mode:

Admin Mode

Example:

Check for currently nsm debug switch state.

```
Switch#show debugging nsm
```

```
NSM debugging status
```

Relative command: debug

65.11 show flash

Command:

```
show flash
```

Function:

Show the size of the files which are reserved in the system flash memory.

Command Mode:

Admin Mode and Configuration Mode.

Example:

To list the files and their size in the flash.

```
Switch#show flash
```

```
boot.rom 329, 828 1900-01-01 00:00:00 --SH
```

```
boot.conf 94 1900-01-01 00:00:00 --SH
```

```
nos.img 2, 449, 496 1980-01-01 00:01:06 ----
```

```
startup-config 2, 064 1980-01-01 00:30:12 ----
```

65.12 show history

Command:

```
show history
```

Function:

Display the recent user command history.

Command mode:

Admin Mode

Usage Guide:

The system holds up to 20 commands the user entered, the user can use the UP/DOWN key or their equivalent (ctrl+p and ctrl+n) to access the command history.

Example:

```
Switch#show history
enable
config
interface ethernet 1/3
enable
dir
show ftp
```

65.13 show history all-users

Command:

```
show history all-users [detail]
```

Function:

Show the recent command history of all users.

Parameter:

[detail] shows user name of the executing command. IP address of the user will be shown when logging in the executing command through Telnet or SSH.

Command Mode:

Admin and configuration mode

Usage Guide:

This command is used to show the recent command history of all users, including time, logging type, executing command, etc.

Notice: The user can only check the command history of other users whose purview should not be higher than oneself.

Example:

```
Switch(config)#show history all-users detail
```


Time	Type	User	Command
0w 0d 0h 2m	Telnet/SSH	admin	show history all-users detail 192.168.1.2:1419
0w 0d 0h 1m	Telnet/SSH	admin	show history all-users 192.168.1.2:1419
0w 0d 0h 1m	Console	Null	show history all-users
0w 0d 0h 1m	Console	Null	end
0w 0d 0h 1m	Console	Null	ip address 192.168.1.1 255.255.255.0
0w 0d 0h 0m	Console	Null	in v 1
0w 0d 0h 0m	Console	Null	telnet-server enable

65.14 show logging buffered

Command:

show logging buffered [level {critical | warnings} | range <begin-index> <end-index>]

Function:

This command displays the detailed information in the log buffer channel. This command is not supported on low end switches.

Parameter:

level {critical | warnings} means the level of critical information. **<begin-index>** is the index start value of the log message, the valid range is 1-65535, **<end-index>** is the index end value of the log message, and the valid range is 1-65535. When only display logging buffered information of the line card must be added range parameter, but the main control has not the request.

Command Mode:

Admin and Configuration Mode.

Default:

No parameter specified indicates all the critical log information will be displayed.

Usage Guide:

Warning and critical log information is saved in the buffer zone. When displayed to the terminal, their display format should be: index ID time <level> module ID [mission name] log information.

Example 1:

Display the critical log information in the log buffer zone channel and related to the main control with index ID between 940 and 946.

```
Switch#show logging buffered level critical range 940 946
```

Example 2:

Display all the information which level is warning and above in the log buffer zone channel.

```
Switch#show logging buffered level warning
```

65.15 show logging executed-commands state

Command:

```
show logging executed-commands state
```

Function:

Show the state of logging executed-commands.

Parameter:

None.

Command Mode:

Admin mode.

Default:

None.

Usage Guide:

Use this command to display the state (enable or disable).

Example:

```
Switch#show logging executed-commands state
```

```
Logging executed command state is enable
```

65.16 show logging source

Command:

show logging source mstp

Function:

Show the log information source of MSTP module.

Parameters:

None.

Default:

None.

Command mode:

Admin and configuration mode.

Usage Guide:

Check the log information source (include information channel, the information severity level) by **show logging mstp** command.

Example:

Show the log information source of MSTP.

```
Switch#show logging source mstp
```

```
system module log switch status:
```

Channel	Onoff	Severity
logbuff	on	warning
loghost	on	warning
terminal	on	warning

65.17 show memory

Command:

show memory [usage]

Function:

Display the contents in the memory.

Parameter:

usage means memory use information.

Command mode:

Admin Mode

Usage Guide:

This command is used for switch debug purposes. The command will interactively prompt the user to enter start address of the desired information in the memory and output word number. The displayed information consists of three parts: address, Hex view of the information and character view.

Example:

```
Switch#show memory
start address : 0x2100
number of words[64]:
```

```
002100: 0000 0000 0000 0000 0000 0000 0000 0000 *.....*
002110: 0000 0000 0000 0000 0000 0000 0000 0000 *.....*
002120: 0000 0000 0000 0000 0000 0000 0000 0000 *.....*
002130: 0000 0000 0000 0000 0000 0000 0000 0000 *.....*
002140: 0000 0000 0000 0000 0000 0000 0000 0000 *.....*
002150: 0000 0000 0000 0000 0000 0000 0000 0000 *.....*
002160: 0000 0000 0000 0000 0000 0000 0000 0000 *.....*
002170: 0000 0000 0000 0000 0000 0000 0000 0000 *.....*
```

65.18 show running-config

Command:

show running-config

Function:

Display the current active configuration parameters for the switch.

Default:

If the active configuration parameters are the same as the default operating parameters, nothing will be displayed.

Command mode:

Admin Mode

Usage Guide:

When the user finishes a set of configuration and needs to verify the configuration, show running-config command can be used to display the current active parameters.

Example:

```
Switch#show running-config
```

65.19 show running-config current-mode

Command:

```
show running-config current-mode
```

Function:

Show the configuration under the current mode.

Command mode:

All configuration modes.

Default:

None.

Usage Guide:

Enter into any configuration mode and input this command under this mode, it can show all the configurations under the current mode.

Example:

```
Switch(config-if-ethernet1/1)#show run c
!  
Interface Ethernet1/1  
switchport access vlan 2  
!
```

65.20 show startup-config

Command:

```
show startup-config
```

Function:

Display the switch parameter configurations written into the Flash memory at the current operation; those are usually also the configuration files used for the next power-up.

Default:

If the configuration parameters read from the Flash are the same as the default operating parameter, nothing will be displayed.

Command mode:

Admin Mode

Usage Guide:

The **show running-config** command differs from **show startup-config** in that when the user finishes a set of configurations, **show running-config** displays the added-on configurations whilst **show startup-config** won't display any configurations. However, if **write** command is executed to save the active configuration to the Flash memory, the displays of **show running-config** and **show startup-config** will be the same.

65.21 show switchport interface

Command:

```
show switchport interface [ethernet <IFNAME>]
```

Function:

Show the VLAN port mode, VLAN number and Trunk port messages of the VLAN port mode on the switch.

Parameter:

<IFNAME> is the port number.

Command mode:

Admin mode

Example:

```

Show VLAN messages of port ethernet 1/1.
Switch#show switchport interface ethernet 1/1
Ethernet1/1
Type :Universal
Mac addr num : No limit
Mode :Trunk
Port VID :1
Trunk allowed Vlan :ALL

```

Displayed Information	Description
Ethernet1/1	Corresponding interface number of the Ethernet.
Type	Current interface type.
Mac addr num	Numbers of interfaces with MAC address learning ability.
Mode: Trunk	Current interface VLAN mode.
Port VID :1	Current VLAN number the interface belongs.
Trunk allowed Vlan :ALL	VLAN permitted by Trunk.

65.22 show tcp

Command:

show tcp

Function:

Display the current TCP connection status established to the switch.

Command mode:

Admin Mode

Example:

```

Switch#show tcp
LocalAddress  LocalPort  ForeignAddress  ForeignPort  State
0.0.0.0       23         0.0.0.0         0            LISTEN
0.0.0.0       80         0.0.0.0         0            LISTEN

```

Displayed information	Description
LocalAddress	Local address of the TCP connection.

LocalPort	Local port number of the TCP connection.
ForeignAddress	Remote address of the TCP connection.
ForeignPort	Remote port number of the TCP connection.
State	Current status of the TCP connection.

65.23 show tcp ipv6

Command:

show tcp ipv6

Function:

Show the current TCP connection.

Command mode:

Admin and configuration mode.

Example:

Switch#show tcp ipv6

LocalAddress	LocalPort	RemoteAddress	RemotePort	State	IF	VRF
::	80	::	0	LISTEN	0	0
::	23	::	0	LISTEN	0	0

Displayed Information	Explanation
LocalAddress	Local IPv6 address of TCP connection
LocalPort	Local port of TCP connection
RemoteAddress	Remote IPv6 address of TCP connection
RemotePort	Remote Port of TCP connection
State	The current state of TCP connection
IF	Local port index of TCP connection
VRF	Virtual route forward instance

65.24 show telnet login

Command:

show telnet login

Function:

List information of currently available telnet clients which are connected to the switch.

Command Mode:

Admin Mode and Configuration Mode.

Usage Guide:

This command used to list the information of currently available telnet clients which are connected to the switch.

Example:

```
Switch#show telnet login
Authenticate login by local.
Login user:
aa
```

65.25 show tech-support

Command:

show tech-support

Function:

Display various information about the switch and the running tasks. This command is used to diagnose the switch by the technical support specialist.

Command Mode:

Admin mode and configuration mode

Usage Guide:

When failure occurred on the switch, this command can be used to get related information, in order to diagnose the problems.

Example:

```
Switch#show tech-support
```

65.26 show udp

Command:

`show udp`

Function:

Display the current UDP connection status established to the switch.

Command mode:

Admin Mode

Example:

Switch#show udp

LocalAddress	LocalPort	ForeignAddress	ForeignPort	State
0.0.0.0	161	0.0.0.0	0	CLOSED
0.0.0.0	123	0.0.0.0	0	CLOSED
0.0.0.0	1985	0.0.0.0	0	CLOSED

Displayed information	Description
LocalAddress	Local address of the UDP connection.
LocalPort	Local port number of the UDP connection.
ForeignAddress	Remote address of the UDP connection.
ForeignPort	Remote port number of the UDP connection.
State	Current status of the UDP connection.

65.27 show udp ipv6

Command:

`show udp ipv6`

Function:

Show the current UDP connection.

Command mode:

Admin and configuration mode.

Example:

LocalAddress	LocalPort	RemoteAddress	RemotePort	State
::	69	::	0	CLOSED
::	1208	::	0	CLOSED

Displayed Information	Explanation
LocalAddress	Local IPv6 address of UDP connection
LocalPort	Local port of UDP connection
RemoteAddress	Remote IPv6 address of UDP connection
RemotePort	Remote Port of UDP connection
State	The current state of UDP connection

65.28 show version

Command:

show version

Function:

Display the switch version.

Command mode:

Admin Mode

Usage Guide:

Use this command to view the version information for the switch, including hardware version and software version.

Example:

Switch#show version

65.29 traceroute

Command:

traceroute [source <ipv4-addr>] { <ip-addr> / host <hostname> } [hops <hops>] [timeout <timeout>]

Function:

This command is tests the gateway passed in the route of a packet from the source device to the target device. This can be used to test connectivity and locate a failed sector.

Parameter:

<ipv4-addr> is the assigned source host IPv4 address in dot decimal format. **<ip-addr>** is the target host IP address in dot decimal format. **<hostname>** is the hostname for the remote host. **<hops>** is the maximum gateway number allowed by Traceroute command. **<timeout>** is the timeout value for test packets in milliseconds, between 100-10000.

Default:

The default maximum gateway number is 30, timeout in 2000 ms.

Command mode:

Admin Mode

Usage Guide:

Traceroute is usually used to locate the problem for unreachable network nodes.

65.30 traceroute6

Command:

```
traceroute6 [source <addr>] {<ipv6-addr> | host <hostname>} [hops <hops>] [timeout <timeout>]
```

Function:

This command is for testing the gateways passed by the data packets from the source device to the destination device, so to check the accessibility of the network and further locating the network failure.

Parameter:

<addr> is the assigned source host IPv6 address in colonned hex notation. **<ipv6-addr>** is the IPv6 address of the destination host, shown in colonned hex notation; **<hostname>** is the name of the remote host; **<hops>** is the max number of the gateways the traceroute6 passed through, ranging between 1-255; **<timeout>** is the timeout period of the data packets, shown in millisecond and ranging between 100~10000.

Default:

Default number of the gateways passes by the data packets is 30, and timeout period is defaulted at 2000ms.

Command Mode:

Admin Mode

Usage Guide:

Traceroute6 is normally used to locate destination network inaccessible failures.

Example:

```
Switch# traceroute6 2004:1:2:3::4
```

Relevant Command: ipv6 host

Chapter 66 Commands for Reload Switch after Specified Time

66.1 reload after

Command:

`reload after {[<HH:MM:SS>] [days <days>]}`

Function:

Reload the switch after a specified period of time.

Parameters:

<HH:MM:SS> the specified time, HH (hours) ranges from 0 to 23, MM (minutes) and SS (seconds) range from 0 to 59.

<days> the specified days, unit is day, range from 1 to 30.

time and day may be configured at the same time or configured solely.

Command Mode:

Admin mode

Usage Guide:

With this command, users can reboot the switch without shutdown its power after a specified period of time, usually when updating the switch version. The switch can be rebooted after a period of time instead of immediately after its version being updated successfully. This command will not be reserved, which means that it only has one-time effect. After this command is configured, it will prompt the reboot information when user logging in the switch by telnet.

Example:

Set the switch to automatically reload after 2 days, 10 hours and 1 second.

```
Switch#reload after 10:00:01 days 2
```

```
Process with reboot after? [Y/N] y
```

Related Commands: `reload`, `reload cancel`, `show reload`

66.2 reload cancel

Command:

reload cancel

Function:

Cancel the specified time period to reload the switch.

Parameters:

None

Command Mode:

Admin mode.

Usage Guide:

With this command, users can cancel the specified time period to reload the switch, that is, to cancel the configuration of command “reload after”. This command will not be reserved.

Example:

Prevent the switch to automatically reboot after the specified time.

Switch#reload cancel

Reload cancel successful.

Related Commands: reload, reload after, show reload

66.3 show reload

Command:

show reload

Function:

Display the user's configuration of command “reload after”.

Parameters:

None.

Command Mode:

Admin and configuration mode

Usage Guide:

With this command, users can view the configuration of command “reload after” and check how long a time is left before rebooting the switch.

Example:

View the configuration of command “reload after”. In the following case, the user set the switch to be rebooted in 10 hours and 1 second, and there are still 9 hours 59 minutes and 48 seconds left before rebooting it.

Switch#show reload

The original reload after configuration is 10:00:01.

System will be rebooted after 09:59:48 from now.

Related Commands: reload, reload after, reload cancel

Chapter 67 Commands for Debugging and Diagnosis for Packets Received and Sent by CPU

67.1 clear cpu-rx-stat protocol

Command:

```
clear cpu-rx-stat protocol[ <protocol-type> ]
```

Function:

Clear the statistics of the CPU received packets of the protocol type.

Parameter:

<protocol-type> is the type of the protocol of the packet, including dot1x, stp, snmp, arp, telnet, http, dhcp, igmp, ssh

Command Mode:

Global Mode

Usage Guide:

This command clear the statistics of the CPU received packets of the protocol type, it is supposed to be used with the help of the technical support.

Example:

Clear the statistics of the CPU receives ARP packets.

```
Switch(config)#clear cpu-rx-stat protocol arp
```

67.2 cpu-rx-ratelimit protocol

Command:

```
cpu-rx-ratelimit protocol <protocol-type> <packets>  
no cpu-rx-ratelimit protocol <protocol-type>
```

Function:

Set the max rate of the CPU receiving packets of the protocol type, the no command set the max rate to default.

Parameter:

<protocol-type> is the type of the protocol, including dot1x, stp, snmp, arp, telnet, http, dhcp, igmp, ssh; **<packets>** is the max rate of CPU receiving packets of the protocol type, **its range** is 1-2000 pps.

Command Mode:

Global Mode

Default:

A different default rate is set for the different type of protocol.

Usage Guide:

The rate limit set by this command have an effect on CPU receiving packets, so it is supposed to be used with the help of the technical support.

Example:

Set the rate of the ARP packets to 500pps.

```
Switch(config)#cpu-rx-ratelimit protocol arp 500
```

67.3 cpu-rx-ratelimit total

Command:

```
cpu-rx-ratelimit total <packets>
```

```
no cpu-rx-ratelimit total
```

Function:

Set the total rate of the CPU receiving packets, the no command sets the total rate of the CPU receiving packets to default.

Parameter:

<packets> is the max number of CPU receiving packets per second.

Command Mode:

Global Mode

Default:

1200pps.

Usage Guide:

The total rate set by the command have an effect on CPU receiving packets, so it is supposed to be used with the help of the technical support.

Example:

Set the total rate of the CPU receive packets to 1500pps.

```
Switch(config)#cpu-rx-ratelimit total 1500
```

67.4 debug driver

Command:

```
debug driver {receive | send} [interface {<interface-name> | all}] [protocol {<protocol-type> | discard | all}]  
[detail]  
no debug driver {receive | send}
```

Function:

Turn on the on-off of showing the information of the CPU receiving or sending packets, the “**no debug driver {receive | send}**” command turns off the on-off.

Parameter:

receive | send show the information of receiving or sending packets;

interface {<interface-list>| all}: **interface-list** is the Ethernet port number, **all** indicate all the Ethernet ports.

protocol {<protocol-type> | discard | all}: **protocol-type** is the type of the protocol of the packet, including snmp, telnet, http, dhcp, igmp, arp, ssh, icmpv6, dot1x, gvrp, stp, lACP, cluster, eapou **all** means all of the protocol types,

discard means all the discarded packets. **Detail** show detail information.

Command Mode:

Admin Mode

Usage Guide:

This command is used to debug, it is supposed to be used with the help of the technical support.

Example:

Turn on the on-off for showing the receiving packets.

```
Switch#debug driver receive
```

67.5 show cpu-rx protocol

Command:

`show cpu-rx protocol [<protocol-type>]`

Function:

Show the statistics of the CPU received packets of the specified protocol type.

Parameter:

<protocol-type> is the protocol type of the packets, if do not input parameters, show all statistic packets.

Command Mode:

Admin and configuration mode

Default:

None.

Usage Guide:

This command is used to debug, it is supposed to be used with the help of the technical support.

Example:

Show the statistics of CPU receiving ARP packets.

Switch#show cpu-rx protocol arp

Type	Rate-limit	TotPkts	CurState
arp	500	3	allowed

Chapter 68 Commands for PoE

68.1 Commands for PoE Configuration

68.1.1 power inline dynamic detect enable

Command:

power inline dynamic detect enable
no power inline dynamic detect enable

Function:

Enable/disable the dynamic detection function of POE power.

Parameters:

None.

Default:

Disable.

Command Mode:

Port Configuration Mode.

Usage Guide:

Enable/disable the dynamic detection function of POE power through this command.

Example 1:

Enable the dynamic detection function of POE power of port 1/0/1-10.

```
Switch(config)#interface ethernet 1/0/1-10
```

```
Switch(config-if-port-range)# power inline dynamic detect enable
```

Example 2:

Disable the dynamic detection function of POE power of port 1/0/1-10.

```
Switch(config)#interface ethernet 1/0/1-10
```

```
Switch(config-if-port-range)#no power inline dynamic detect enable
```

68.1.2 power inline dynamic detect interval <30-300>

Command:

```
power inline dynamic detect interval <30-300>  
no power inline dynamic detect interval
```

Function:

Configure the dynamic detection interval of POE power of the port.

Parameters:

interval <30-300>, detection interval, range is from 30 to 300 and the unit is second.

Default:

120s.

Command Mode:

Port Configuration Mode.

Usage Guide:

Configure the dynamic detection interval of POE power of the port through this command.

Example:

Configure the dynamic detection interval of POE power of the port 1/0/1-10 as 100s.

```
Switch(config)#interface ethernet 1/0/1-10
```

```
Switch(config-if-port-range)#power inline dynamic detect interval 100
```

68.1.3 power inline enable (Global)

Command:

```
power inline enable  
no power inline enable
```

Function:

Enable /disable global PoE.

Parameters:

None.

Command Mode:

Global Mode.

Default:

Disable.

Usage Guide:

With PoE globally disabled, there would be no power output no matter what the power state of a specified port is.

Example:

Globally disable PoE.

Switch(Config)#no power inline enable

68.1.4 power inline enable (Port)

Command:

power inline enable

no power inline enable

Function:

Enable/disable PoE power supply.

Parameters:

None.

Command Mode:

Port Mode.

Default:

Enable.

Usage Guide:

Enabled: Automatically detect PD. In such a state, PSE will automatically detect and classify a PD, and provide power supply for it according to the classification. If a PD connection is detected, its specified output power will be satisfied as long as there is enough available power, after which the corresponding LED indicator will be updated. Otherwise, the power distribution rules will decide whether or not to implement this power supply. During a normal power supply process, if PD requires for an extra power which exceeds the max threshold value, the supply will be

cut off and the corresponding LED indicator will be updated. When the PD is disconnected from the PSE normally, PSE will stop outputting power supply and update the corresponding LED indicator.

Disabled: Disable power supply. With the PSE power supply disabled, no power will be output regardless of the existence of PD connections, which means the port will act as a regular Ethernet data port without affecting data transmission.

When it is globally disabled, no power supply will be output regardless of the power supply is enabled or disabled on ports.

Examples:

Disable power supply on ports1, 3, 4, 5, 6.

```
Switch(Config)# interface ethernet 1/0/1;3-6
```

```
Switch(Config-Port-Range)#no power inline enable
```

68.1.5 power inline high-inrush

Command:

power inline high-inrush enable

no power inline high-inrush enable

Function:

Enable the allowed high-inrush current when nonstandard PD is powered instantaneously, disable the allowed high-inrush current.

Parameter:

None.

Command Mode:

Global mode

Default:

The allowed high-inrush current is not enabled.

Usage Guide:

high-inrush current will be brought when nonstandard PD is powered instantaneously, it will result PSE self-protection to make PD power failure. Here, if this nonstandard PD must be powered, it needs to allow the high-inrush current.

Example:

Enable the allowed high-inrush current when nonstandard PD is powered instantaneously.

```
Switch(config)#power inline high-inrush enable
```

68.1.6 power inline legacy

Command:

```
power inline legacy enable  
no power inline legacy enable
```

Function:

Set whether or not to provide power supply for non-standard IEEE PD.

Parameters:

None.

Command Mode:

Global Mode.

Default:

Do not provide power supply for non-standard IEEE PD.

Usage Guide:

With this function enabled, the switch will be compatible with and provide power supply for non-standard IEEE PD.

Examples:

Set the switch to provide power supply for non-standard IEEE PD.

```
Switch(Config)#power inline legacy enable
```

68.1.7 power inline max (Global)

Command:

```
power inline max <max-wattage>  
no power inline max
```

Function:

Set the global max output power of PoE.

Parameters:

max-wattage: value of the max output power, in W. Any integer from 37 to 370 is valid.

Command:

Global Mode.

Default:

The global max output power is 370W. The **no power inline max** will resume the default configuration.

Usage Guide:

Setting a global max output power can guarantee a secure power supply and an effective method to control the power consumed by connected subordinate devices.

Example:

Set the global max output power to 50W.

```
Switch(Config)#power inline max 50
```

68.1.8 power inline max (Port)

Command:

```
power inline max <max-wattage>
```

```
no power inline max
```

Function:

Set the max output power of a specified port.

Parameters:

max-wattage: the value of the max output power, in mW, ranging from 1 to 15400mW (802.3af)/1 to 3000mW (802.3at), with a granularity of 100mW. Any value less than 100mW will be taken as 100mW, that is, 1~100 equals 100, 15301~15400 equals 15400. But the value set by users will be maintained without being rounded up.

Command Mode:

Port Mode.

Default:

The max output power of a port is 15400mW (802.3af)/3000mW (802.3at).

Usage Guide:

This configuration will effectively control the output power of each port in cooperation with the global max power.

Example:

Set the max output power of Port 1 to 0.8W.

```
Switch(Config)#interface ethernet 1/0/1
```

```
Switch(Config-Ethernet1/0/1)#power inline max 800
```

68.1.9 power inline police

Command:

```
power inline police enable
```

```
no power inline police enable
```

Function:

Enable/disable the power priority management policy mode.

Parameters:

None.

Command Mode:

Global Mode.

Default:

The power priority management policy mode is disabled.

Usage Guide:

Decide whether to use priority policy in power management policy. The “enable” command will make priority policy in effect, while “no” command will recover the first-come-first-served policy. With priority policy enabled, port priority can be configured individually.

In priority mode, when not enough PSE power is available, ports with low priority will be closed to satisfy the power supply for ports with high priority, no matter how long the access time of a PD is. If two ports have same priority, the one with smaller sequence number is higher privileged.

In first-come-first-served mode, new PDs will not get power supply if available PSE power is not enough.

Example:

Enable the power priority policy mode.

```
Switch(Config)#power inline police enable
```

68.1.10 power inline priority

Command:

```
power inline priority {critical | high | low}
```

Function:

Set power supply priority of a port.

Parameters:

critical: the highest-level priority.

high: high-level priority.

low: low-level priority.

Command Mode:

Port Mode.

Default:

Port priority is low.

Usage Guide:

This command will take effect in the mode of “power inline police enable”. Without enough available power for newly connected PD, ports with higher priority will get power supply first.

Examples:

Set the priority of Port 1 to high and that of Port 2 to critical.

```
Switch(Config)#interface ethernet 1/0/1
```

```
Switch(Config-Ethernet1/0/1)#power inline priority high
```

```
Switch(Config)#interface ethernet 1/0/2
```

```
Switch(Config-Ethernet1/0/2)#power inline priority critical
```

68.2 Commands for PoE Monitoring and Debugging

68.2.1 Monitoring and Debugging Information

68.2.1.1 show power inline

Command:

show power inline

Function:

Display global PoE configurations and status.

Parameters:

None.

Command Mode:

Admin Mode.

Default:

None.

Usage Guide:

The meanings of each field are listed in the following table:

Field	Description
Power Inline Status	The global PoE status: enabled or disabled
Power Available	The global max value of available power
Power Used	The global value of used power
Power Remaining	The global value of remaining power
Min Voltage	The global threshold of under-voltage
Max Voltage	The global threshold of over-voltage
Police	The power priority policy status: enabled or disabled
Legacy	The non-standard PD detection status: enabled or disabled
Disconnect	The PD disconnection mode
HW Version	The hardware version of the PoE module
SW Version	The software version of the PoE module
Mode	Power supply mode Signal: power supply over signal cables (Alternative A) spare: power supply over spare cables (sAlternative B)

Examples:

Display the current global PoE status

```
Switch#show power inline
```

Power Inline Status: On

Power Available: 370 W

Power Used: 0 W

Power Remaining: 370 W

Min Voltage: 44 V

Max Voltage: 57 V

Police: Off

Legacy: Off

Disconnect: Ac

Mode: Signal

HW Version: 30

SW Version: 05.0.5

68.2.1.2 show power inline interface ethernet

Command:

```
show power inline interface [ethernet <interface-number> | <interface-name>]
```

Function:

Display the PoE configuration and status on specified ports.

Parameters:

interface-list: a list of specified ports, specifying all ports by default.

Command Mode:

Admin Mode.

Default:

None.

Usage Guide:

The meaning of each field is listed in the following table.

Field	Description																		
Interface	Ethernet port number																		
Status	Power supply status Enable: Power supply enabled Disable: Power supply disabled																		
Oper	Working status On: PD is normally connected and powered Off: PD is not connected faulty: PD detection failed deny: not enough available power or the required power is over the limit																		
Power	The power used by the port currently																		
Max	The max power allowed to be distributed to the port																		
Current	The present current of the port																		
Volt	The present voltage of the port																		
Priority	The Power supply priority Critical: the highest-level priority High: the high-level priority Low: the low-level priority																		
Class	<table border="1"> <thead> <tr> <th>Class</th> <th>Usage</th> <th>PD Input Power (W)</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Default</td> <td>0.44~12.95</td> </tr> <tr> <td>1</td> <td>Optional</td> <td>0.44~3.84</td> </tr> <tr> <td>2</td> <td>Optional</td> <td>3.84~6.49</td> </tr> <tr> <td>3</td> <td>Optional</td> <td>6.49~12.95</td> </tr> <tr> <td>4</td> <td>Reserved</td> <td>treated as class 0 and reserved for future use</td> </tr> </tbody> </table> <p>It is impossible for a compatible PD to provide a class 4 signal</p>	Class	Usage	PD Input Power (W)	0	Default	0.44~12.95	1	Optional	0.44~3.84	2	Optional	3.84~6.49	3	Optional	6.49~12.95	4	Reserved	treated as class 0 and reserved for future use
Class	Usage	PD Input Power (W)																	
0	Default	0.44~12.95																	
1	Optional	0.44~3.84																	
2	Optional	3.84~6.49																	
3	Optional	6.49~12.95																	
4	Reserved	treated as class 0 and reserved for future use																	

Examples:

Display the current PoE status on port 1 to port 6.

```
Switch# show power inline interface ethernet 1/0/1-6
```

Interface	Status	Oper	Power(mW)	Max(mW)	Current(mA)	Volt(V)	Priority	Class
Ethernet1/0/1	enable	off	0	15400	0	0	high	0
Ethernet1/0/2	enable	off	0	15400	0	0	low	0
Ethernet1/0/3	enable	off	0	15400	0	0	low	0
Ethernet1/0/4	enable	off	0	15400	0	0	low	0
Ethernet1/0/5	enable	off	0	15400	0	0	low	0
Ethernet1/0/6	enable	off	0	15400	0	0	low	0

68.2.1.3 debug power inline

Command:

debug power inline
no debug power inline

Function:

Enable or disable the PoE debugging.

Parameters:

None.

Command Mode:

Admin Mode.

Default:

None.

Usage Guide:

With debugging enabled, relative information will be printed in the key processes while implementing commands, for further debugging reference whenever an error occurs. The “no” command will disable the debugging.

Examples:

Enable PoE debugging.
Switch#debug power inline