


Q&A_ How to Hardware Reset DVR-860?


Step 1: Turn off the power and dismount the cover from the unit.



Step 2: Find the Reset Point (Near rare board).

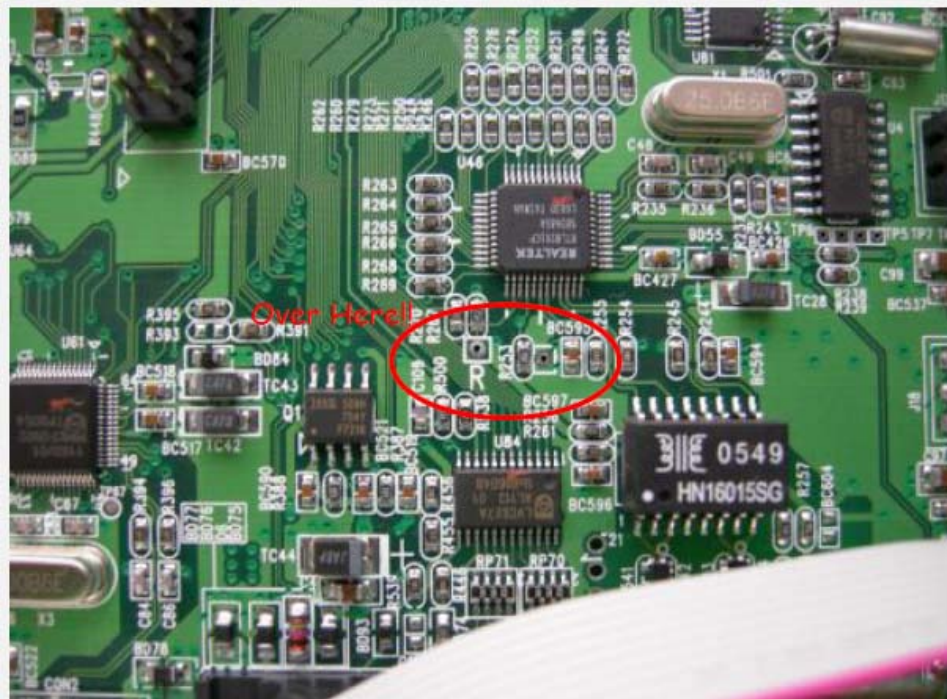

Step 3: Take a close look at Reset Point (The 2 pinholes with a "R")

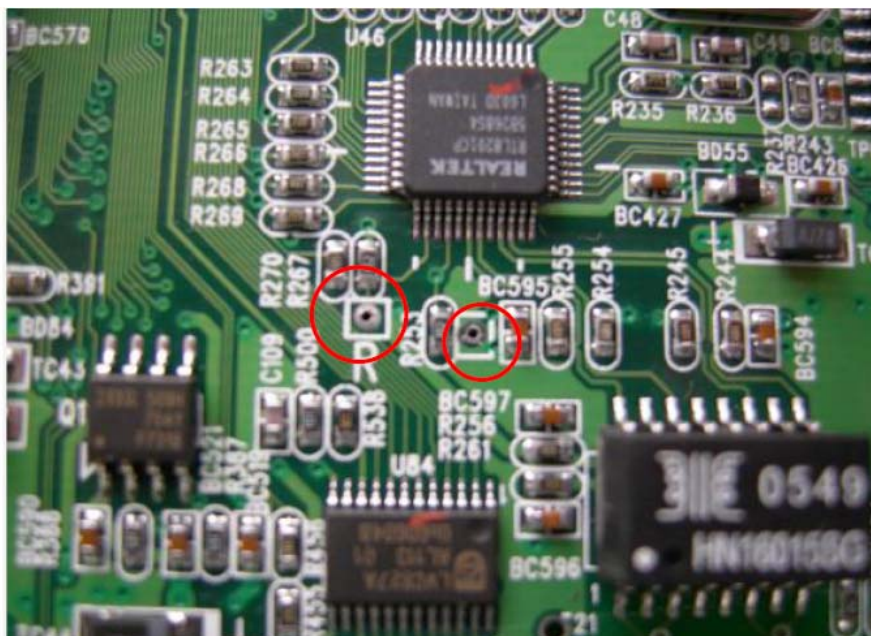

PLANET Technology Corporation

11F, No. 96, Min Chuan Road, Hsin Tien, Taipei, Taiwan, R.O.C.
Tel: 886-2-2219-9518 Fax: 886-2-2219-9528

Email: sales@planet.com.tw Web site: <http://www.planet.com.tw>
VoIP Gateway: vip.planet.com.tw

*Planet reserves the right to change specifications without prior notice.
All brand names and trademarks are property of their respective owners.
Copyright (c) 2010 PLANET Technology Corp. All rights reserved*

Step 4: Connect the two jumps (pinholes) to form a short circuit. Then plug in the power and hold the short circuit for more than 10 seconds.

