

FAQ_How to change NVR-400 battery.



*** FW & Utility version List:

NVR-400 : v1.0.0b32

Step1. Turn off your NVR-400 power.

Step2. Turnover NVR-400, and you will see the four screw, use screw driver to loose the four screw on NVR-400 bottom plate.



Step3. Move the NVR-400 plate, and you will see the each two screw on NVR-400 right and left panel, use the screw driver to loose the four screen.


Right Panel



Left Panel



Step4. Take off the battery and replace the new battery.

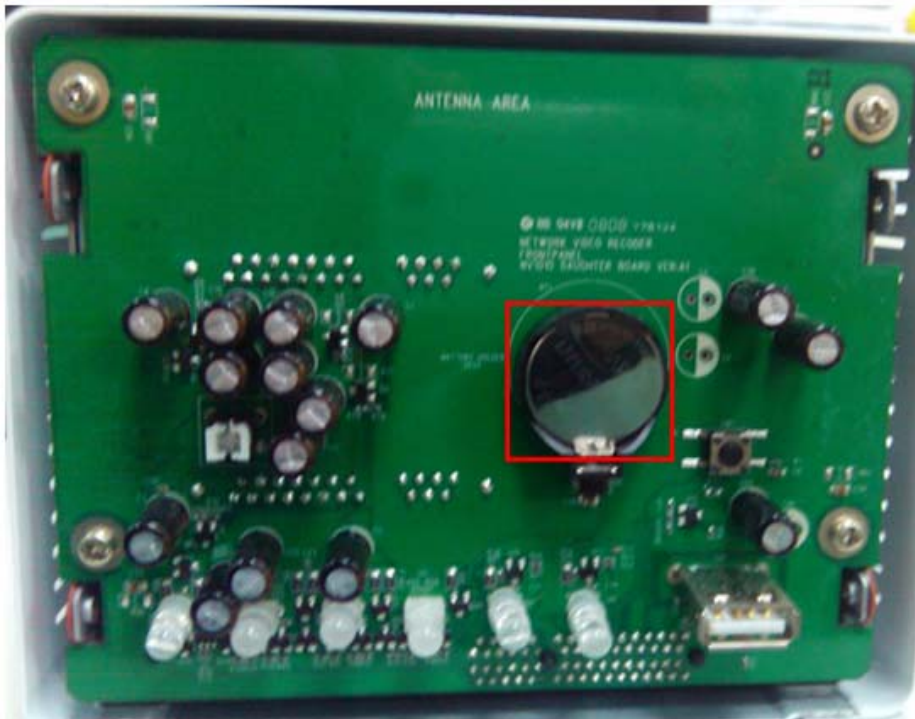

PLANET Technology Corporation

11F, No. 96, Min Chuan Road, Hsin Tien, Taipei, Taiwan, R.O.C.

Tel: 886-2-2219-9518 Fax: 886-2-2219-9528

Email: support@planet.com.tw

Web site: <http://www.planet.com.tw>

*Planet reserves the right to change specifications without prior notice.
All brand names and trademarks are property of their respective owners.
Copyright (c) 2010 PLANET Technology Corp. All rights reserved*