

# Hybrid DVR

HDVR-430 / HDVR-830 / HDVR-1630

## Hybrid Digital Video Recorder



# Contents



Quick Installation Guide x 1



Power Adapter x 1



USB Mouse x 1



CD Disk x 1



SATA Cable x 1



Foot Pad x 4



RS485 Connector x 1



SATA Power Cable x 1



Screw Kit x 1

\* SATA cable and SATA power cable are included in the HDVR


## Hard Disk Installation




Caution

Before installing the HDD, please make sure there is no pre-configured partition in this HDD. If yes, please delete all the partitions before the installation.

**Step 1:** Remove the upper case.

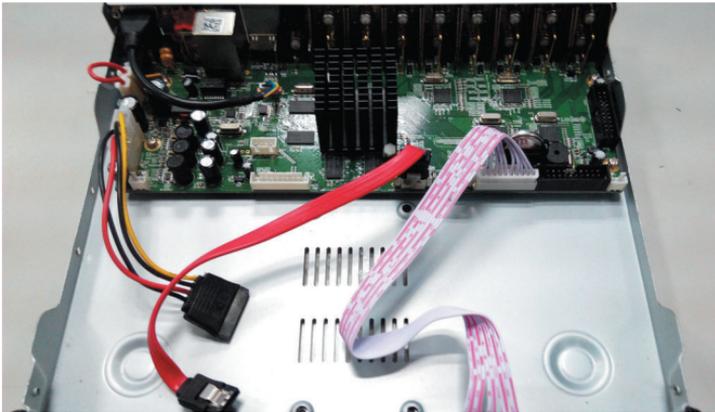


**Step 2:** Plug the HDD power cable and SATA cable into the slot of the PCBA board and the HDD, respectively, making sure the connections are well done.

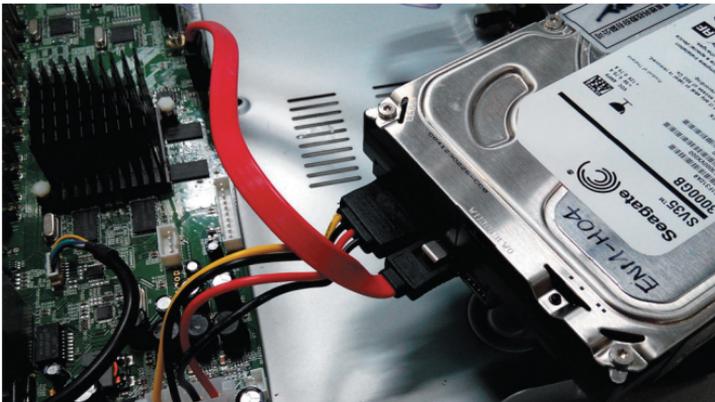

**Step 3:** Please align the screw holes on the HDD with those on the HDVR case and secure them with the given screws.



**Step 4:** After the HDD is secured, it should look like the one in the pictures (front and back) below:

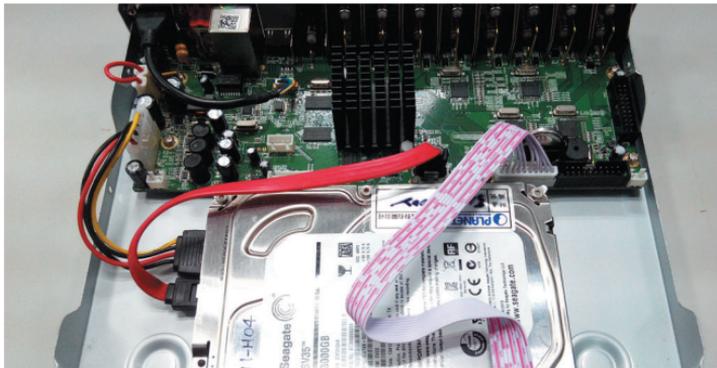

## Hardware Connection




Name	Description
V1-V16	Composite video broadcast signal (CVBS) input interface.
A1-A4	The input interface of the audio signal.
A-OUT	The output interface of the audio signal.
LAN	The network interface of RJ45.
HDMI	The output interface of the HDMI video signal.
VGA	The output interface of the VGA video signal.
Power	12V DC, 2A
485+/485-	The interface of the alarm input, the alarm output and RS485.

## Searching and Login

Please install the utility from the CD and launch it to search the HDVR. After clicking the IP Search, you can see the HDVR online. The HDVR should be located and its IP address should be displayed.

If the HDVR is not displayed after the search, you could try to click the Add Device button to enter the IP address to search it.

Finally, you could double-click the IP address or click the WebBrowse button to enter the Web UI of the HDVR.

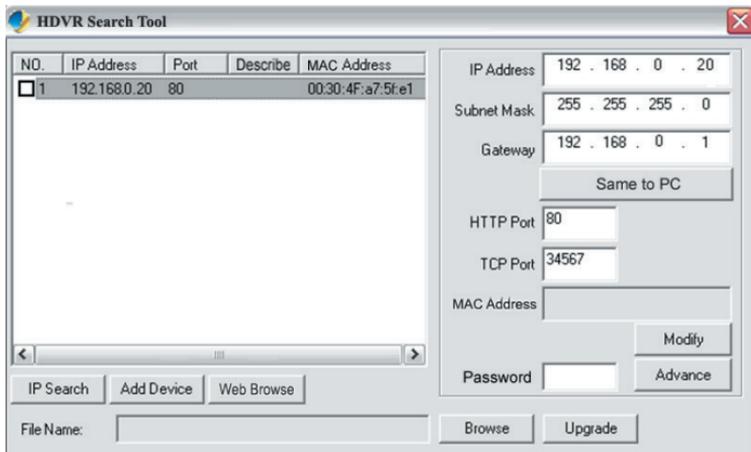

## System Login Window



## Web UI Login Window



PLANET  
Networking & Communication

User Name

Password

Login

To enter the main menu and set up the HDVR, the default IP address is 192.168.0.20. And both the default User Name and Password are "**admin**".



Note

For more detailed information, please refer to the user's manual on the CD.

[www.PLANET.com.tw](http://www.PLANET.com.tw)