

# **Internet Telephony Gateway**

**VGW-804 / VGW-800FS / VGW-800FO**

Quick Installation Guide

# Table of Contents

1. Package Contents .....	3
2. Hardware Installation .....	4
2.1 Safety Instructions .....	4
2.2 Physical Introduction.....	4
2.3 LED & Button Definitions.....	5
2.4 Placement.....	6
2.5 Physical Connection .....	6
3. Basic System Configuration .....	7
3.1 Web Login .....	7
3.2 Configuring the Network Setting .....	8
3.3 Changing IP Address or Forgotten Admin Password .....	9
4. Further Configuration .....	10

---

## **1. Package Contents**

Thank you for purchasing PLANET Internet Telephony Gateway, VGW-800 Series. This Quick Installation Guide will introduce how to finish the basic setting of connecting the web management interface and the Internet. Open the box of the Internet Telephony Gateway and carefully unpack it. The box should contain the following items:

- VGW-800 Series x 1
- Quick Installation Guide x 1
- Power Adapter x 1 (DC 12V)
- Rack Ear with Screws x 1

If any of the above items are damaged or missing, please contact your dealer immediately.

## 2. Hardware Installation

The following are instructions for setting up PLANET VGW-800 Series. Refer to the illustration and follow the simple steps below to quickly install your Internet Telephony Gateway.

### 2.1 Safety Instructions

- The following are the safety instructions for Internet Telephony Gateway system before installing.
- The maximum operating temperature of the VGW-800 Series is 0~45°C. Care must be taken to allow sufficient air circulation.
- The connections and equipment that supply power to the VGW-800 Series should be capable of operating safely with the maximum power requirements of the VGW-800 Series. In the event of a power overload, the supply circuits and supply wiring should become hazardous.
- The power adapter must plug into the right supply voltage. Make sure that the supplied power voltage is correct and stable. If the input power voltage is over 10% lower than the standard, it may cause the VGW-800 Series to malfunction.
- Generally, when installed after the final configuration, the product must comply with the applicable safety standards and regulatory requirements of the country in which it is installed. If necessary, consult your technical support.

### 2.2 Physical Introduction



Front Panel of the VGW-800 Series



Rear Panel of the VGW-804



Rear Panel of the VGW-800FS



Rear Panel of the VGW-800FO

## 2.3 LED & Button Definitions

LED	Function Description
Power	When the power adapter is connected, the LED will light up green.
Proxy	When the gateway is registered successfully to a SIP Proxy, this will light up green.
WAN	This LED will light up green when the gateway's WAN port is physically connected to the public internet. When data is transmitted through this port, it will flash green.
LAN	This LED will light up green when the gateway's LAN port is physically connected to a local network. When data is transmitted through this port, it will flash green.
Port 1 - 8	The status LEDs for FXO and FXS ports will light up amber orange when connected phone is engaged in the conversation mode (FXO). It will flash amber orange when there is an incoming call (FXS).

Port	Function Description
Reset	Press and hold over 5 seconds to reload factory default setting. This action will erase all existing settings configured on this gateway.
FXS Ports	The status LED for FXS port will light up amber orange when the connected phone's handset is lifted, or when the connected phone is engaged in a conversation. It will flash amber orange when there is an incoming call.
FXO Ports	The status LED for FXO port will blink to remind you that there is no PSTN line connected. When PSTN line is connected but not in the talking mode, the LED is OFF. When a line is using, the LED will light up steadily.




LAN	10/100BASE-TX RJ45 socket for LAN port, connecting to PC for management purpose.
WAN	10/100BASE-TX RJ45 socket for WAN port, connecting to wide area network.
12V DC	The power socket -- input AC 100V~240V; output 12V DC, 3.33A.

## 2.4 Placement

Make sure the device is placed in a safe environment to avoid equipment failure.

- DO NOT place anything on top of the device. Excessive weight could damage it.
- DO NOT obstruct ventilation slots on each side of the VGW-800 Series or expose it to direct sunlight or other heat source. Be sure that there is adequate air flow around the VGW-800 Series.
- Place the VGW-800 Series on a flat surface to avoid any damage.

## 2.5 Physical Connection

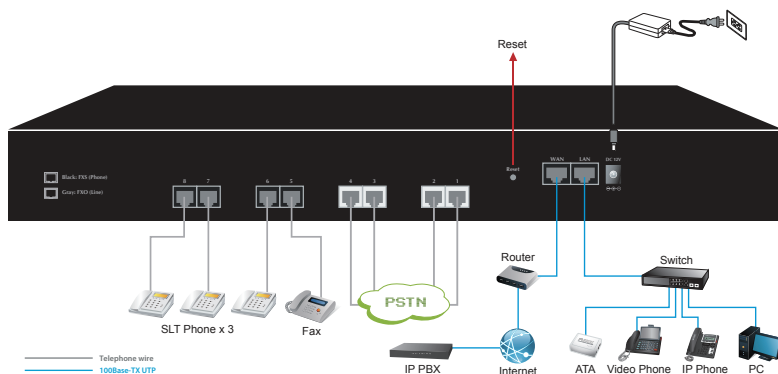

Physical Connection Topology of the VGW-800 Series

### 3. Basic System Configuration

#### 3.1 Web Login

- Step 1** Connect a computer to a **LAN port** on the VGW-800 Series. Your PC must be set to 192.168.0.X, the same domain as that of the VGW-800 Series.
- Step 2** Start a web browser. To use the user interface, you need a PC with Internet Explorer (version 8 and higher), Firefox, or Safari (for Mac).
- Step 3** Enter the default IP address of the VGW-800 Series: 192.168.0.1 into the URL address box.
- Step 4** Enter the default user name **admin** and the default password **admin**, and then click Login to enter Web-based user interface.

#### (Default IP)

Default WAN IP	172.16.0.1
Default Subnet Mask	255.255.0.0
Default Gateway	172.16.0.254
Default LAN IP	192.168.0.1
Default Login User Name	admin
Default Login Password	admin



Login Page of the VGW-800 Series



#### Note

For security reason, please change and memorize the new password after this first setup.

## 3.2 Configuring the Network Setting

**Step 1** Go to Device Setting ➔ Network

Setting	Value
IP Support	IPv4 Only
WAN Setting	
Network Type	Fixed IP
IP Address	192.168.1.158
Netmask	255.255.255.0
Default Gateway	192.168.1.254
DNS Server1	168.95.1.1
DNS Server2	168.192.1.12
VOIP VLAN	<input type="radio"/> Enable <input checked="" type="radio"/> Disable

Network Setting Page

**Step 2** Edit your WAN port IP information.

There are three types of IP Support -- IPv4 only, IPv4/IPv6 and IPv6 only. There are also three types of WAN port connection -- **Static IP**, **PPPoE** (Point-to-Point Protocol over Ethernet) and DHCP. You can find detailed setting process in the user manual.

Setting	Value
IP Support	IPv4 Only
WAN Setting	
Network Type	


Setting	Value
IP Support	IPv4 Only
WAN Setting	
Network Type	Fixed IP
IP Address	
Netmask	255.255.255.0
Default Gateway	192.168.1.254
DNS Server1	168.95.1.1

Selection of IP Support / Network Connection Type



### 3.3 Changing IP Address or Forgotten Admin Password

To reset the IP address to the default IP address "192.168.0.1" (LAN) or reset the login password to default value, press the reset button on the front panel for **more than 5 seconds**. After the device is rebooted, you can login the management Web interface within the same subnet of 192.168.0.xx.

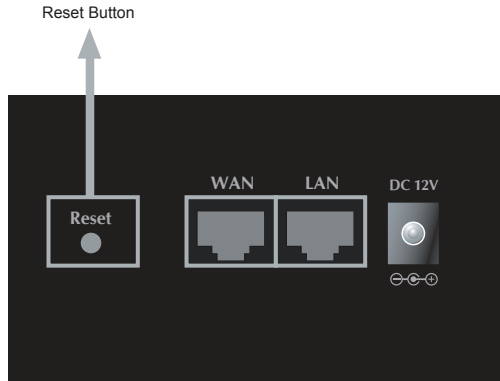

#### Note

After pressing the "Reset" button, all the system data will be reset to default; if possible, back up the config file before resetting.

## 4. Further Configuration

Thank you for purchasing PLANET products. The above steps introduce the simple configuration of the VGW-800 Series. For detailed configuration, please check user's manual which you can download from the website.



<http://www.planet.com.tw/en/support/download.php?type1=372&model=48698&type=3>

You also can browse our online FAQ resource on the PLANET Web site first to check if it could solve your issue. If you need more support information, please contact PLANET support team.

PLANET online FAQ :

<http://www.planet.com.tw/en/support/faq.php?key=VGW-800><http://www.planet.com.tw/en/support/faq.php>



Support team mail address :  
[support\\_voip@planet.com.tw](mailto:support_voip@planet.com.tw)

If you have other questions, please contact the **local dealer** or **distributor** where you purchased this product.

Copyright © PLANET Technology Corp. 2015.

Contents are subject to revision without prior notice.

PLANET is a registered trademark of PLANET Technology Corp. All other trademarks belong to their respective owners.



