

User's Manual

▶ VGW-804 / VGW-800FO / VGW-800FS



8-Port SIP Internet Telephony Gateway



Copyright

Copyright © 2015 by PLANET Technology Corp. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of PLANET.

PLANET makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Any software described in this manual is sold or licensed "as is". Should the programs prove defective following their purchase, the buyer (and not PLANET, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software. Further, PLANET reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.

All brand and product names mentioned in this manual are trademarks and/or registered trademarks of their respective holders.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio technician for help.

FCC Caution

To assure continued compliance, use only shielded interface cables when connecting to computer or peripheral devices. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Federal Communication Commission (FCC) Radiation Exposure Statement

This equipment complies with FCC radiation exposure set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 20 cm (8 inches) during normal operation.

Safety

This equipment is designed with the utmost care for the safety of those who install and use it. However, special attention must be paid to the dangers of electric shock and static electricity when working with electrical equipment. All guidelines of this and of the computer manufacture must therefore be allowed at all times to ensure the safe use of the equipment.

CE Mark Warning

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

WEEE Regulation



To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

Revision

User's Manual of PLANET Internet Telephony Gateway

Model: VGW-800 Series

Rev: 1.0 (June, 2015)

TABLE OF CONTENTS

Chapter 1 Introduction	7
1.1 Features	9
1.2 Package Contents	11
1.3 Physical Specifications.....	11
1.4 Specifications	13
Chapter 2 Installation Procedure	19
2.1 Web Login	19
2.2 Configuring the Network Setting	20
2.3 Changing IP Address or Forgotten Admin Password	21
Chapter 3 Device Setting	22
3.1 Network Configuration	22
3.2 Device Time Setting	24
3.3 Device Advance Setting	26
3.4 User Login Setting	26
3.5 Debug Setting	27
3.6 Event Notice.....	28
3.7 Auto Provisioning.....	28
3.8 SNMP.....	29
Chapter 4 NAT Setting	32
4.1 DHCP Srv. (DHCP Server).....	32
4.2 UPNP (Universal Plug and Play Server)	32
4.3 Bandwidth (Bandwidth Control)	33
4.4 URL Filter	37
4.5 IP Filter.....	37
4.6 MAC Filter	37
4.7 APP Filter	38
4.8 Port Filter	38
4.9 Port Fwd	38
Chapter 5 VoIP Setting	39
5.1 SIP	39
5.2 Audio	40
5.3 Tone.....	41
5.4 NAT Traversal	42
Chapter 6 VoIP Advance	43
6.1 SIP	43

6.2 Audio	46
6.3 Ring	48
Chapter 7 Dialing Plan	49
7.1 General	49
7.2 Dialing Rule	49
7.3 Digit Manipulation	51
7.4 Phone Book	52
Chapter 8 FXS Setting	53
8.1 FXS Line	53
8.2 SIP Proxy	56
8.3 Caller ID	57
8.4 Others	58
Chapter 9 FXO Setting	59
9.1 FXO line	59
Chapter 10 SIP Trunk	62
10.1 Create SIP Trunk	62
Chapter 11 Route Plan	67
Chapter 12 Status	72
12.1 Device Status	72
12.2 Line Status	72
12.3 SIP Trunk Status	73
Chapter 13 Maintenance	74
13.1 Firmware Update	74
Appendix A – Default Setting	75
Appendix B - Changing IP Address or Forgotten Admin Password	76

Chapter 1 Introduction

Cost-effective, High-performance PoE VoIP Phone

To build high-performance VoIP communications at a low cost, PLANET now introduces the latest member of its gateway family, the VGW-800 series enterprise-class 8-port SIP VoIP Gateway. The VGW-800 series provides added flexibility during migration to Unified Communications by supporting the traditional analog devices. For example, the remote workers can dial in through a Unified VoIP Communication System just like an extension call but no long-distance call charge would occur. The VGW-800 series also allows call to be transferred to anyone at any location within the voice system, which enables the enterprises to communicate more effectively and is helpful to streamline business processes.



SIP Standard Compliance

The VGW-800 series supports Session Initiation Protocol 2.0 (RFC 3261) for easy integration with general voice over IP system. The VGW-800 series is able to broadly interoperate with equipment provided by VoIP infrastructure providers, thus enabling them to provide their customers with better multi-media exchange services.


Compliant with standard SIP RFC 3261



Enhanced, Full-Featured Business Gateway


The VGW-800 series is a full-featured enhanced business SIP Gateway that addresses the communication needs of the enterprises. It provides the FXO and FXS gateway with SIP protocol IP device which allows connection with PSTN telephone line and with analog telephone set to make or receive VoIP call over Internet or VPN network. This device is suitable for office PABX to enable to have VoIP call without changing cabling, dial plan and extension number.

The VGW-800 series supports all kinds of SIP-based gateway features and multiple contact filter functions, such as 24 SIP trunk accounts, both IPv6 and IPv4 protocols, flexible dial plan and route plan features, and switch of analog and VoIP signal to help both protocols to communicate efficiently.

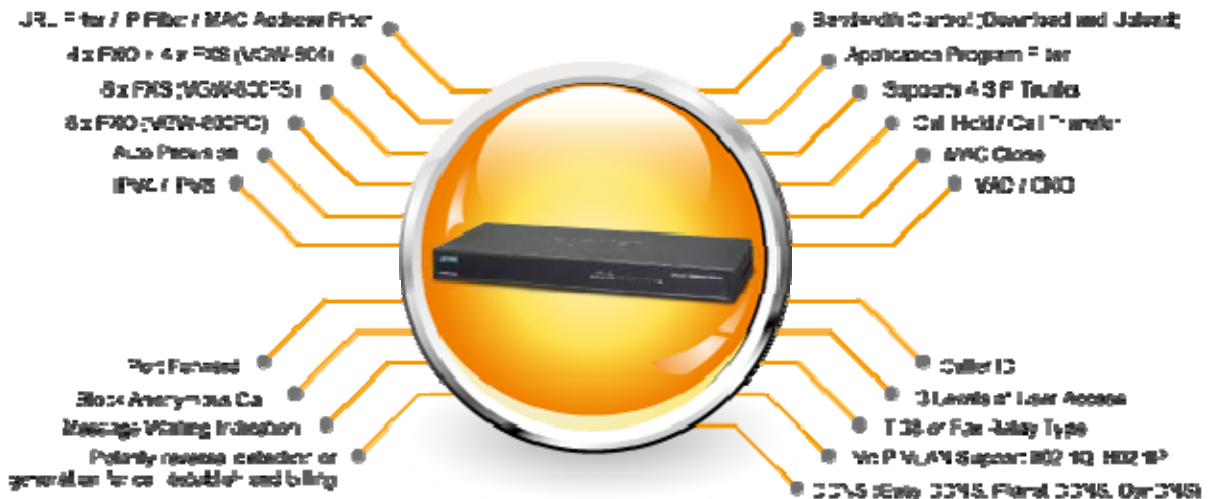

Secure, High-Quality VoIP Communication

The VGW-800 series can effortlessly deliver secure toll voice quality by utilizing cutting-edge 802.1p QoS (Quality of Service), 802.1Q VLAN tagging, and IP TOS (Type of Service) technology. Using voice and data VLAN can easily separate the data and voice, thus maintaining the best quality.

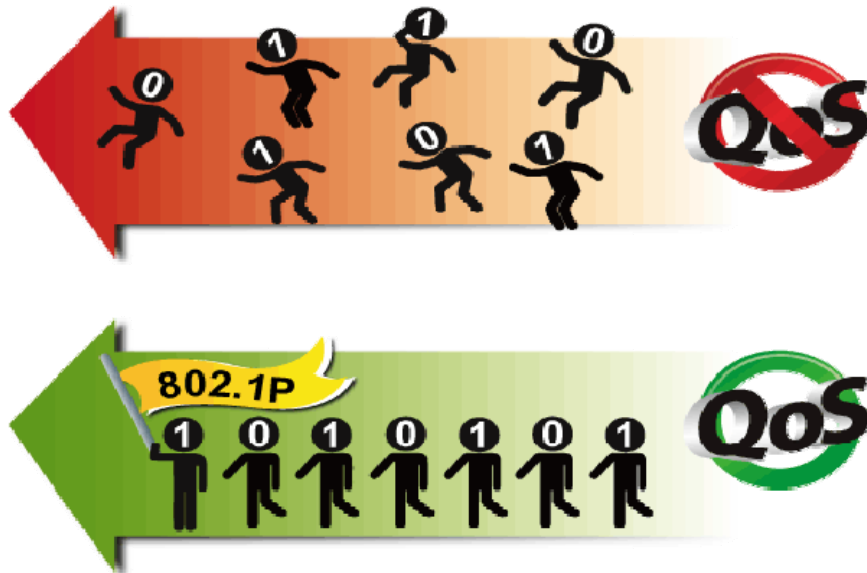

Supporting Caller ID

The VGW-800 series supports caller ID function, helping users identify calling number easily and verify number. It also helps to block anonymous call by filtering strange calls. In the figure below, the VGW-800 series includes the VGW-800FS and VGW-800FO. The FXS port of the VGW-800FS transmits Caller ID, while the FXO port of the VGW-800FO receives Caller ID. The Caller ID interoperates with analog phones, public switched telephone networks (PSTN) and private branch exchanges (PBXs).

1.1 Features

➤ Highlights

- Supports SIP 2.0 (RFC3261)
- Supports IPv6 and IPv4 simultaneously
- Up to 24 SIP service domains and Caller ID
- Supports auto HTTP provision and fax feature
- Flexible Routes Plan, Dial Plan and SIP Trunk
- Life-line for emergency calls (VGW-804 only)

➤ Internet Features

- IPv4 (RFC 791) and IPv6

- IPv6 auto configuration (RFC 4862)
 - IPv6 only, IPv4 only or dual stack
 - MAC clone setting
 - Vendor Class ID
 - DDNS (Planet DDNS, Easy DDNS, DynDNS)
 - DNS client
 - Firewall
 - URL / IP / MAC / Port Filter
 - Port forwarding (TCP, UDP or both)
 - Bandwidth control (download and upload), maximum bandwidth priority setting
- **SIP Applications**
- SIP Session Timer (RFC 4028)
 - SIP Session Refresher: UAC or UAS
 - SIP Encryption
 - Supports Outbound Proxy / STUN NAT Traversal
 - Supports Primary and Backup SIP Server
- **Call Features**
- Supports peer to peer dialing
 - 8-line FXO connects to PSTN line (VGW-800FO only)
 - 8-line FXS connects to analog phone set or PABX (VGW-800FS only)
 - Caller ID recognition DTMF (before/after 1st ring) and FSK (before 1st ring), ETSI and Bellcore
 - DTMF Caller ID start and stop BIT configurable
 - T.38 fax volume configuration
- **FXO/FXS Line Configuration**
- Line ID / Line Phone number
 - Polarity Reversal detection or generation for call establish and billing
 - VoIP dial to FXO/PSTN Line: 1 stage dialing and 2 stage dialing
 - Outgoing SIP Caller ID selection
 - Caller ID detection mode by country selection
- **Routing Plan**
- Prefix match and length
 - Priority / Cyclic / Simultaneous Ring
 - Programmable Hunting Cycle

1.2 Package Contents

Thank you for purchasing PLANET Internet Telephony Gateway system, the VGW-800 series. This Quick Installation Guide will introduce how to finish the basic setting of connecting the web management interface and the Internet. Open the box of the Internet Telephony Gateway system and carefully unpack it. The box should contain the following items:


- VGW-800 Series x 1
- Quick Installation Guide x 1
- Rack mount kit x 1
- Power Adapter x 1 (12V)

If any of the above items are damaged or missing, please contact your dealer immediately.

1.3 Physical Specifications

➤ Dimensions

Dimensions (W x D x H)	440 x 110 x 45 mm
Weight	1421g

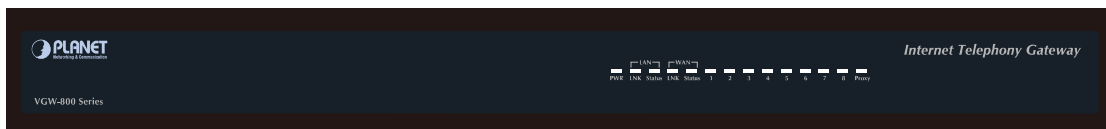

Front Panel of the VGW-800 Series



Rear Panel of the VGW-800 Series (VGW-804)



Rear Panel of the VGW-800 Series (VGW-800FS)



Rear Panel of the VGW-800 Series (VGW-800FO)


LED Definitions

LED	Function Description
Power	When the power adapter is connected, the LED will light up green.
Proxy	When the gateway is registered successfully to a SIP Proxy, this will light up green.
WAN	This LED will light up green when the gateway's WAN port is physically connected to the public internet. When data is transmitted through this port, it will flash green.
LAN	This LED will light up green when the gateway's LAN port is physically connected to a local network (Refer to Rear Panel section). When data is transmitted through this port, it will flash green.
Port 1 - 8	The status LED for FXO and FXS ports will light up amber orange when connected phone is engaged in a conversation mode (FXO). It will flash amber orange when there is an incoming call (FXS).

Port	Function Description
Reset	Press and hold over 5 seconds to reload factory default setting, which will erase all existing settings configured on this gateway.
FXS Ports	The status LED for FXS port will light up amber orange when the connected phone's handset is lifted, or when the connected phone is engaged in a conversation. It will flash amber orange when there is an incoming call.
FXO Ports	The status LED for FXO port will remind you that there is no PSTN line connected. When PSTN line is connected and there is no talking, the LED is OFF. When a line is using, the LED will steadily light up.
LAN	10/100BASE-TX RJ45 socket for LAN port connects to PC for management purposes.
WAN	10/100BASE-TX RJ45 socket for WAN port connects to wide area

	network.
DC 12V	The power socket, input AC 100V~240V; output DC12V, 3.33A

Button	Action	Description
Reset	Press less than 5 secs	System reboot
	Press over 5 secs	Reset to factory default

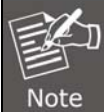

Please be reminded to reset to factory default. Uploaded music setting (on hold music) and backup file will not be removed.

1.4 Specifications

Product	VGW-800 Series
Hardware	
WAN	1 x 10/100BASE-TX RJ45 port
LAN	1 x 10/100BASE-TX RJ45 port
Voice	8 x RJ11 connection (VGW-804: 4 x FXS, 4 x FXO) (VGW-800FS: 8 x FXS) (VGW-800FO: 8 x FXO)
Protocols and Standard	
Data Networking	IPv4 (RFC 791) and IPv6 IPv6 auto configuration (RFC 4862) IPv6 only, IPv4 only or dual stack MAC address (IEEE 802.3) MAC clone setting Vendor Class ID IP / ICMP / ARP / RARP / SNTP Static IP DHCP Client (RFC 2131), WAN port DHCP Server, LAN port NAT Server (RFC 1631) PPPoE Client / DNS Client / TFTP Client DDNS (Planet DDNS, Easy DDNS, DynDNS) Firewall

	<p>URL / IP / MAC / Port Filter</p> <p>Application Program Filter</p> <p>Port Forwarding (TCP, UDP or both)</p> <p>Bandwidth control (download and upload), maximum bandwidth priority setting</p> <p>UPnP Server at LAN port</p> <p>Behind NAT, use DMZ for NAT traversal</p> <p>SNTP with time zone and Daylight Saving</p> <p>TCP/UDP (RFC 793/768), RTP/RTCP (RFC 1889/1890), IPV4 ICMP (RFC 792)</p> <p>VoIP VLAN Support 802.1Q, 802.1P</p> <p>VLAN ID Range: 2 to 4094</p> <p>VLAN Priority: 0 to 7 (Highest Priority)</p> <p>QoS: DiffServ (RFC 2475), TOS (RFC791, 1394)</p>
<p>Voice Gateway</p>	<p>RFC3261 compliance</p> <p>Supports up to 24 SIP Trunks to Register</p> <p>SIP UDP Protocol</p> <p>Supports SIP compact Form</p> <p>Supports SIP HOLD Type: Send Only, 0.0.0.0 or inactive</p> <p>SIP Session Timer (RFC 4028)</p> <p>SIP Session Refresher: UAC or UAS</p> <p>SIP Encryption</p> <p>MD5 Digest Authentication (RFC2069/RFC2617)</p> <p>Reliability of provision response PRACK (RFC3262)</p> <p>Early/Delay Media support</p> <p>Offer/Answer (RFC3264)</p> <p>Message Waiting Indication (RFC3842)</p> <p>Event Notification (RFC3265)</p> <p>REFER (RFC3515)</p> <p>Supports Outbound Proxy</p> <p>Supports Primary and Backup SIP Server</p> <p>Supports STUN NAT Traversal</p> <p>Supports "rport" parameter (RFC 3581)</p> <p>Configure SIP local Port</p> <p>SIP QoS Type: DiffServ or QoS</p> <p>Accept Proxy Only : Yes or No</p>

<p>Audio Codec</p>	<p>G.711 A-law/μ-law, G.729A, G.723.1 (6.3K, 5.3K) Select voice codec priority : Local or Remote Voice Payload size (ms) configuration Silence Suppression VAD/CNG LEC : Line Echo Canceller Max Echo Tail Length (G.168): 32, 64 and 128ms Packet Loss Compensation Automatic Gain Control In-band/out of band DTMF (RFC4733, RFC2833 / SIP INFO) Adaptive/Configurable Jitter Buffer G.168 Acoustic Echo Cancellation Configure RTP basic Port RTP QoS Type : DiffServ or TOS Phone Book (50 records) for peer to peer calls Dialing Plan with drop, replace, Insert dialing digits Selects first digit and inter digit timeout duration (Sec) Selectable Call Progress Tone Support Specified Line Calling</p>
<p>Functions</p>	
<p>Call Functions</p>	<p>Supports Peer to Peer dialing FXO connects to PSTN Line FXS connects to analog phone set or PABX. Caller ID recognition DTMF (before/after 1st ring) and FSK (before 1st ring), ETSI and Bellcore DTMF Caller ID start and stop bit configurable Current Drop Detection to release FXO port Disconnect tone recognition to release FXO port Tone Generation: Ring Back, Dial, Busy, Call Waiting, ROH, Warning, Holding, Stutter Dial Tone and Disconnect Tone Configure Tone Frequency, Cadence, Level and Cycle Select Tone specification by Country name List Global Country based Tone Specification NAT Traversal supports STUN, UPNP and Behind NAT Out-of-Band DTMF with RFC2833 and SIP Info RFC2833 Payload type: 101 or 96 DTMF send out ON and OFF Time configure</p>

	<p>DTMF incoming recognition Minimum ON and OFF time</p> <p>DTMF Relay Volume Configuration</p> <p>T.38 Fax Volume Configuration</p> <p>Flash Time transmit via SIP Info (Enable or Disable)</p> <p>Message Waiting Indication (Stutter Tone Notice)</p> <p>Blocks Anonymous Call</p> <p>Call Hold , Call Transfer</p>
<p>FXO/FXS Line Configuration</p>	<p>Activates or deactivates : Line ID, Line Phone number</p> <p>Polarity Reversal detection or generation for call establish and billing</p> <p>Hot Line to desired phone number</p> <p>Plays voice file to incoming call</p> <p>Repeats playing voice file counts</p> <p>Self-recorded voice files to upload</p> <p>Generates FLASH TIME to PSTN network</p> <p>T.38 or Fax Relay Type</p> <p>Incoming and outgoing dB value configurable</p> <p>Dialing Answer Delay time to establish call path</p> <p>Answers PSTN incoming call after how many ring cycles</p> <p>Caller ID detection mode by Country selection</p> <p>VoIP dial to FXO/PSTN Line: 1 stage dialing and 2 stage dialing</p> <p>Outgoing SIP Caller ID Selection</p> <p>Supports 24 SIP Trunk</p> <p>Accepts desired SIP Proxy incoming calls Only</p>
<p>Flexible Routing Plan</p>	<p>Prefix Match and Length</p> <p>Priority Ring</p> <p>Cyclic Ring</p> <p>Simultaneous Ring</p> <p>Programmable Hunting Cycle</p> <p>Backup Routes with Digit Manipulation</p> <p>Default Routes</p>
<p>Flexible Dial Plans</p>	<p>Retrieves transfer call from 3rd party by dial code (default: *#)</p> <p>Inter digit time out setting</p> <p>First digit dial out delay time setting</p> <p>End of dial keypad number</p> <p>Dial Rule : Match dial prefix and maximum digits length (1-15)</p> <p>Phone Book can be exported or imported</p>

<p>FXS Analog 2-wire Interface</p>	<p>Flash Time Detection: ranging from 80 to 800 ms On-Hook Voltage -48VDC Configure Ring Cadence, Frequency and Voltage Supports Polarity reversal for Billing Service Up to 1 kilometer distance to analog telephone set Generate Current Drop Time (Open Loop Disconnect time)</p>
<p>FXO Analog 2-wire Interface</p>	<p>Incoming Ring frequency recognition range: 10 to 70 Hz Incoming Ring ON time recognition range: 0 to 8000ms Incoming Ring OFF time recognition range: 0 to 8000ms Incoming Ring Level recognition range: 10 to 95Vrms Flash Time Detection: range from 80 to 800 ms Configure Ring Cadence, Frequency and Voltage</p>
<p>Management</p>	<p>Administrative Telnet CLI and HTTP, HTTPS HTTP provision through MAC address Multilingual Web User Interface 3 Levels of User Access Right with Password protection with different Web Languages (Administrator, Supervisor and User) HTTP/HTTPS Service Access limitation from WAN port Configure Service ports at HTTP, HTTPS and Telnet Services Phone Debug Module: Device Control, Call Control, DB, Verbose SIP Debug Module: Register, Call, SIP Message, Others SNTP Debug Module Device Debug Module DSP Debug Provides System Status Logs Connect to external SYSLOG Server Status display: Network, Line, SIP Trunk status Diagnostics (debug through Syslog Event Notice) Debug in real time by Telnet Auto Provision via HTTP Server SNMP V2 / Trap Configuration Backup/Restore Dual Firmware Image Backup Reset to Factory Default</p>
<p>Environments</p>	
<p>Power Requirements</p>	<p>12V DC, 3.33 A</p>

Operating Temperature	0 ~ 45 degrees C
Operating Humidity	10%~90% relative humidity, non-condensing
Weight	1421g
Dimensions (W x D x H)	440×110×45 mm
Emission	CE, FCC, RoHS
Connectors	Two 10/100BASE-TX RJ45 Ethernet ports Eight RJ11 ports DC power jack

Chapter 2 Installation Procedure

2.1 Web Login

Step 1. Connect a computer to an **LAN port** on the VGW-800 series. Your PC must be set up to the same domain of 192.168.0.X as that of the VGW-800 series

Step 2. Start a web browser. To use the user interface, you need a PC with Internet Explorer (version 6 and higher), Firefox, or Safari (for Mac).

Step 3. Enter the default IP address of the VGW-800 series: 192.168.0.1 into the URL address box.


Step 4. Enter the default user name **admin** and the default password **admin**, and then click Login to enter Web-based user interface.

(Default IP)

Default WAN IP	172.16.0.1
Default Subnet Mask	255.255.255.0
Default Gateway	172.16.0.254
Default LAN IP	192.168.0.1
Default Login User Name	admin
Default Login Password	admin



Login page of the VGW-800 series



For security reason, please change and memorize the new password after this first setup.

2.2 Configuring the Network Setting



Step 1. Go to Device Setting → Network



Network setting page

Step 2. Edit your WAN port IP information.



There are three types of IP Support -- IPV4 only, IPV4 / IPV6, IPV6 only. There are also three types of WAN port connection -- **Static IP**, **PPPoE** (Point-to-Point Protocol over Ethernet) and **DHCP**. You can find detailed setting process in the user manual.

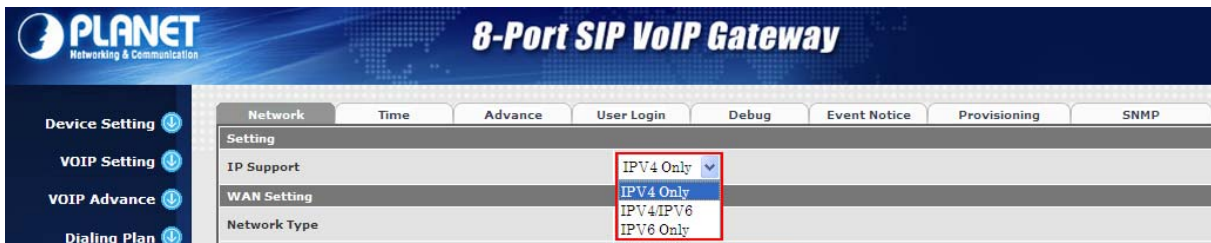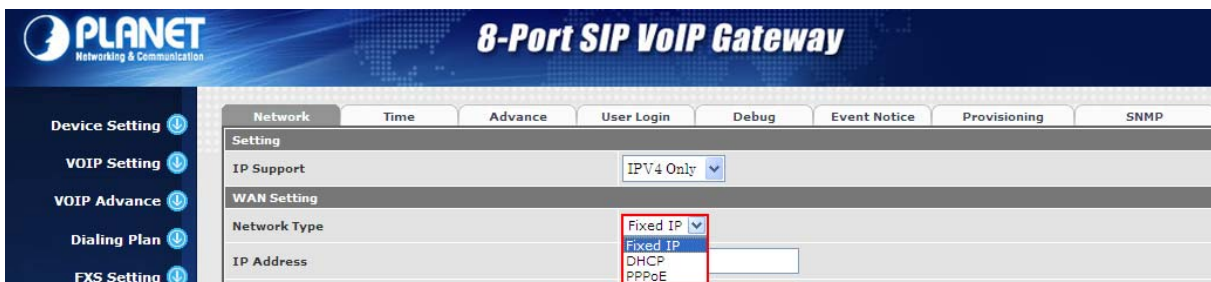Selection of IP Support / Network Connection Type

2.3 Changing IP Address or Forgotten Admin Password

To reset the IP address to the default IP Address “192.168.0.1” (LAN) or reset the login password to default value, press the reset button on the front panel for **more than 5 seconds**. After the device is rebooted, you can login the management Web interface within the same subnet of 192.168.0.x.

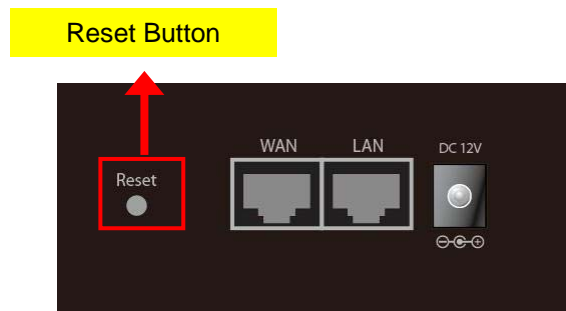


After pressing the “Reset” button, all the system data will be reset to default; if possible, back up the config file before resetting.

Chapter 3 Device Setting

From this setting category, all devices related to parameters can be found here.

3.1 Network Configuration

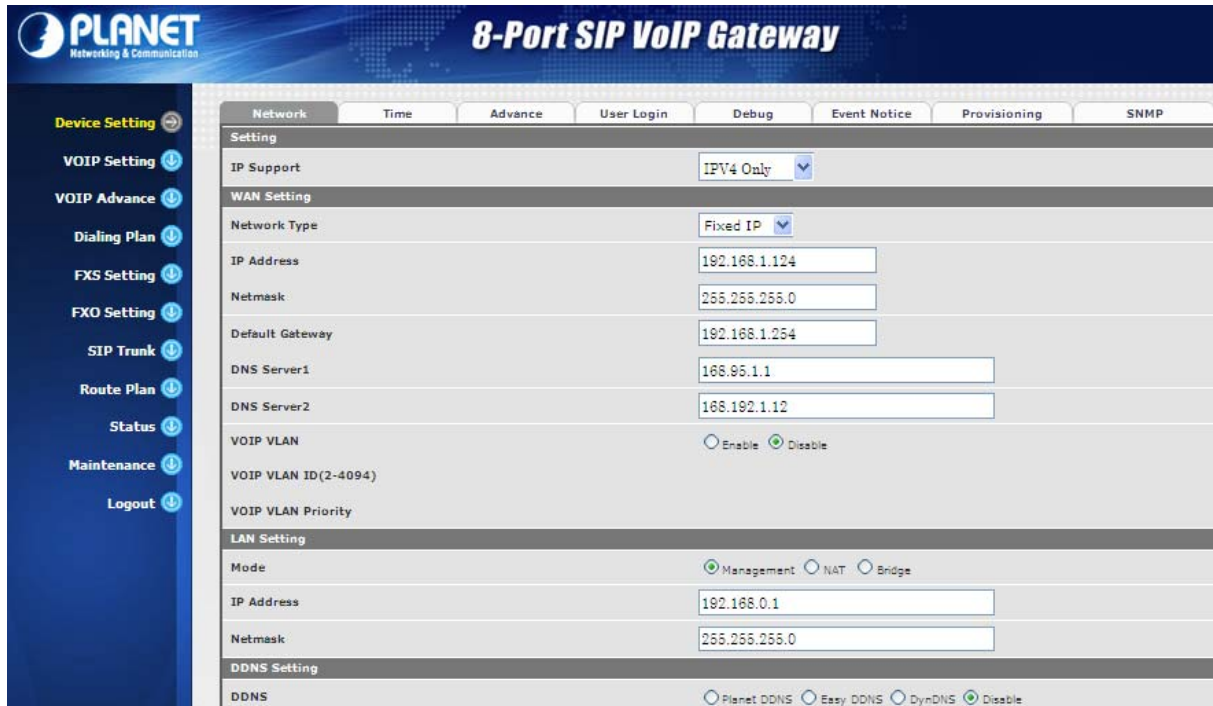

The screenshot shows the web interface for the PLANET 8-Port SIP VoIP Gateway. The left sidebar contains a menu with 'Device Setting' selected. The main content area is titled '8-Port SIP VoIP Gateway' and has several tabs: Network, Time, Advance, User Login, Debug, Event Notice, Provisioning, and SNMP. The 'Network' tab is active, showing various configuration sections:

- Setting:** IP Support is set to 'IPV4 Only'.
- WAN Setting:** Network Type is 'Fixed IP'. IP Address is '192.168.1.124', Netmask is '255.255.255.0', and Default Gateway is '192.168.1.254'. DNS Server1 is '168.95.1.1' and DNS Server2 is '168.192.1.12'. VOIP VLAN is set to 'Disable'.
- LAN Setting:** Mode is 'Management'. IP Address is '192.168.0.1' and Netmask is '255.255.255.0'.
- DDNS Setting:** DDNS is set to 'Disable'.

Parameter Description:

Setting:

- **IP Support:** IP stack to be supported (IPV6 and IPV4, or IPV6 or IPV4 only)

WAN Setting:

1	Network Type	Support "Fixed IP", "DHCP", "PPPoE"
2	IP Address	IPV4 address
3	Net Mask	IPV4 network subnet mask
4	Default Gateway	IPV4 default gateway
5	DHCP Tag (60 is optional)	Input vendor class identifier or not.
6	DHCP Tag (61 is optional)	Input client identifier or not.

7	IPV6 Network Type	Auto configuration or manual configuration
8	IPV6 IP Address	IPV6 address
9	IPV6 IP Gateway	IPV6 default Gateway
10	IPV6 IP Prefix Length	IPV6 prefix length
11	DNS Server 1	Primary DNS Server IP network
12	DNS Server 2	Secondary DNS Server IP network
13	VoIP VLAN	Enable VoIP VLAN or not. When enabling VoIP VLAN, the WAN port can be only accessed via VLAN. If it is required to manage the VGW Gateway series, administrator can use LAN port to access this gateway instead.
14	VoIP VLAN ID (2-4096)	VLAN ID range to be used

LAN Setting:

1	Management Mode	This LAN port is used for management purposes, not used for registering to SIP Server or data/voice routing.
2	NAT Mode	DHCP function on the LAN port. The LAN port functions as a DHCP server. Network devices connected to them will be assigned one IP address according to DHCP server IP range. (Please refer to the command of "NAT setting" on the left side for how to define DHCP IP address.)
3	IP Address	IPV4 address
4	Net Mask	IPV4 network subnet mask
5	Bridge Mode	In this mode, both WAN and LAN ports are configured to Switch/Hub features. LAN port has access to WAN port directly.


DNS Setting:

1	DDNS	It supports Planet DDNS, Easy DDNS and DynDNS or disables the DDNS feature.
2	Domain Name	Input your domain name
3	User Name	Input your user name
4	Password	Input your password

3.2 Device Time Setting

The VGW-800 series supports SNTP with time zone and daylight saving.

Device Setting > Time

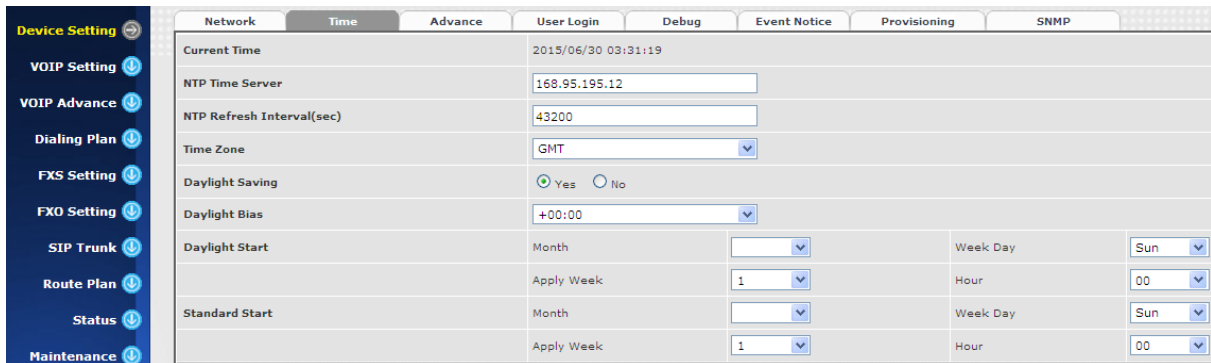

Network	Time	Advance	User Login	Debug	Event Notice	Provisioning	SNMP
Current Time		2015/06/30 03:31:19					
NTP Time Server		168.95.195.12					
NTP Refresh Interval(sec)		43200					
Time Zone		GMT					
Daylight Saving		<input checked="" type="radio"/> Yes <input type="radio"/> No					
Daylight Bias		+00:00					
Daylight Start		Month		Week Day	Sun		
		Apply Week	1	Hour	00		
Standard Start		Month		Week Day	Sun		
		Apply Week	1	Hour	00		


Configure Time Setting

Parameter Description:

1	Current Time	Current time, date and year display.
2	NTP Time Server	SNTP time server IP address
3	NTP Refresh Interval(sec)	The interval time to sync NTP server in seconds
4	Time Zone	The time-zone where VGW Series Gateway is located. <ul style="list-style-type: none"> - Standard: Use a predefined standard time zone - Customized: Use a user defined time zone
5	Daylight Saving	Auto adjust daylight saving time or not
6	Daylight Bias	The offset added to the Bias when the time zone is in daylight saving time
7	Daylight Start	The date that a time zone enters daylight time <ul style="list-style-type: none"> - Month: 01 to 12 - Week Day: Sunday to Saturday - Apply Week (Day:01 to 05, Specifies the occurrence of day in the month; 01 = First occurrence of day, 02 = Second occurrence of day, ...and 05 = Last occurrence of day) - Hour: 00 to 23
8	Standard Start	The date that a time zone enters daylight time <ul style="list-style-type: none"> - Month: 01 to 12

		<ul style="list-style-type: none">- Week Day: Sunday to Saturday- Apply Week (Day:01 to 05, Specifies the occurrence of day in the month; 01 = First occurrence of day, 02 = Second occurrence of day, ...and 05 = Last occurrence of day)- Hour: 00 to 23
--	--	--

3.3 Device Advance Setting

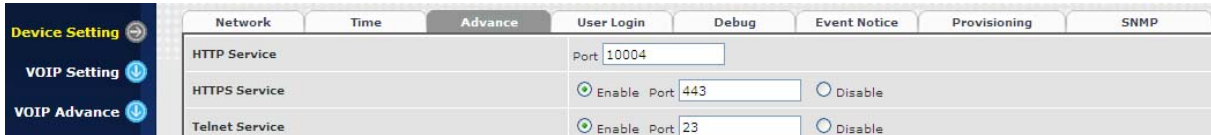


Parameter Description:

1	HTTP Service	The Administrator Web service port (the default is 80)
2	HTTPS Service	The https web service port (the default is 443)
3	Telnet Service	The telnet service port (the default is 23)
4	HTTP/HTTPS Service Access on WAN	When clicking the disable option, the Web service will be rejected on WAN port. So, please be careful with this function. If you want to enable WAN port again, you need to access this device from its LAN port to connect to Web pages and enable WAN port.

3.4 User Login Setting

Three levels of users can be used -- administrator, supervisor and user. Each level of users has a different predefined access level.

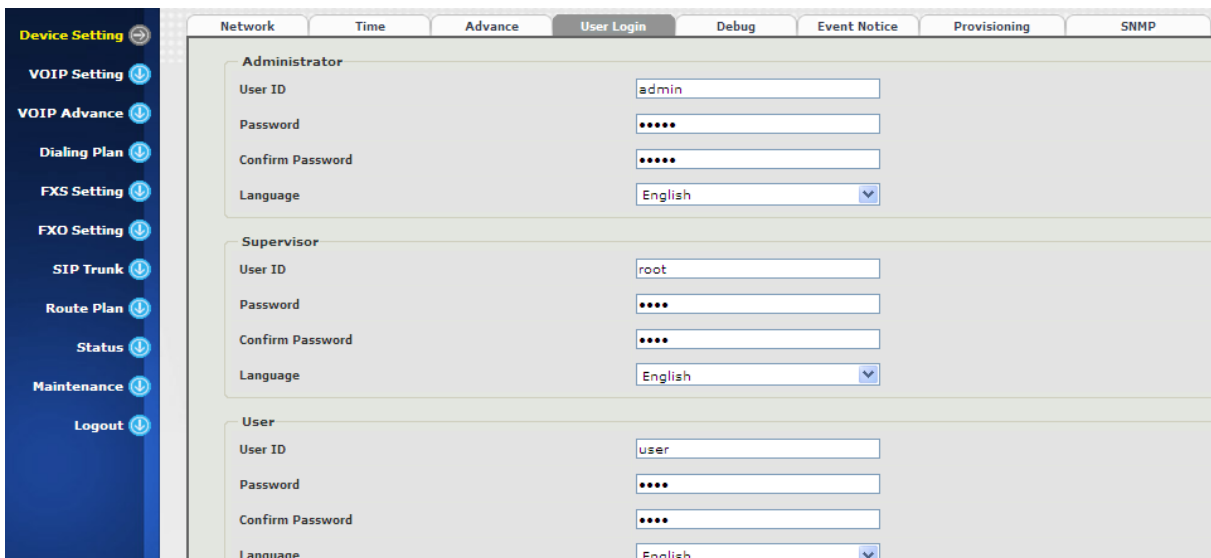


Extension Settings

Item	Explanation
Administrator	The administrator level user who has full access authority to VGW-Gateway series.

Supervisor	The supervisor level user who has limited administrative access right.
User	The user access right which only allows setting some user related features.
User ID	Login User ID
Password	Login Password
Confirm Password	Confirm new password again
Language	The desired web page language used when the account is login.

3.5 Debug Setting

The VGW-800 series provides the real-time debug to syslog or through Telnet interface. It generates the debug information based on debug level and modules. Since the generating debug will consume system resources, it is recommended to turn on only when necessary and under Planet FAE's instruction.

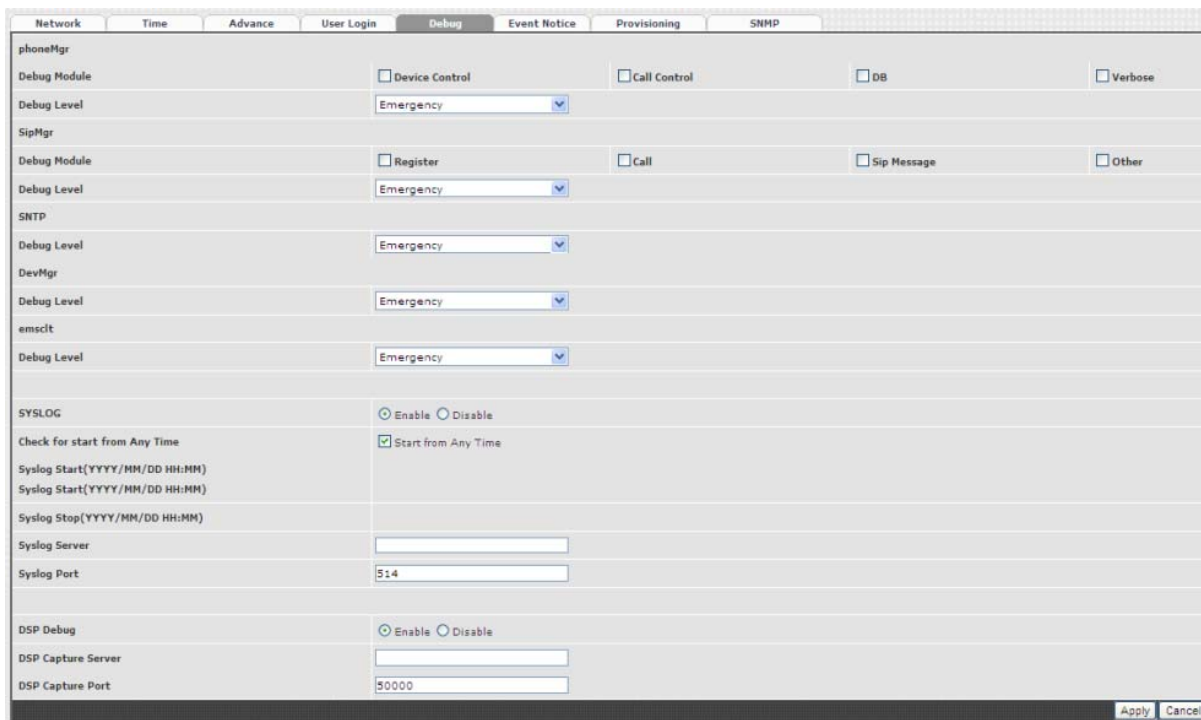

Item	Explanation
Syslog	Enable or disable to send system information to syslog server or not
Check for Start anytime	Always send syslog or only during a specified time range.
Syslog Start (YYYY/MM/DD)	Always send syslog or only during a specified time range.

HH:MM)	
Syslog Stop (YYYY / MM / DD HH:MM)	Syslog stops sending time
Syslog Server	Syslog server IP address
Syslog Port	Syslog server service port (default is 514)
DSP Debug	Enable or disable to send DSP information to capture log
DSP Capture Server	Syslog captures server IP address
DSP Capture Port	Syslog captures server service port (default is 50000)

3.6 Event Notice

VGW Gateway series can send Syslog Event Notice when it has the following cases:

1. Registration failed or re-registered
2. FXO RJ11 cable is plugged or unplugged
3. Ethernet reconnected
4. System started

Network	Time	Advance	User Login	Debug	Event Notice	Provisioning	SNMP
Syslog Notice		<input checked="" type="radio"/> Enable <input type="radio"/> Disable					
Syslog Server		<input type="text"/>					
Syslog Port		<input type="text" value="514"/>					

Item	Explanation
Syslog Notice	Enable or disable to send system events to syslog server or not
Syslog Server	Syslog server IP address
Syslog Port	syslog server service port (default is 514)

3.7 Auto Provisioning

The VGW-800 series can be provisioned by HTTP Server for large deployment. Please contact Planet for availabilities.

Network	Time	Advance	User Login	Debug	Event Notice	Provisioning	SNMP
Provisioning Type			<input type="text" value="HTTP"/>				
HTTP Config URL			<input type="text" value="Disable"/>				
Refresh Interval (minute)			<input type="text"/>				
User ID			<input type="text"/>				
Password			<input type="text"/>				

Select HTTP:

Item	Explanation
Http Config URL	Internal use only
Refresh Interval (minute)	Interval to check whether there is a new configuration/firmware or not in minutes
User ID	Specify the Login ID for http authentication
Password	Specify the password for http authentication

3.8 SNMP

Network	Time	Advance	User Login	Debug	Event Notice	Provisioning	SNMP
SNMP Agent							
SNMP Agent			<input checked="" type="radio"/> Enable <input type="radio"/> Disable				
Read Only Community Name			<input type="text" value="public"/>				
Read Write Community Name			<input type="text" value="write"/>				
Trusted Peer							
Type			<input type="text" value="Any Address"/>				
IP Address			<input type="text"/>				
Subnet Mask			<input type="text"/>				
SNMP Trap							
SNMP Trap			<input checked="" type="radio"/> Enable <input type="radio"/> Disable				
Destination			<input type="text" value="192.168.1.47"/>				
Community			<input type="text" value="1234"/>				

SNMP Agent:

Item	Explanation
SNMP Agent	Enable SNMP or not
Read Only Community Name	The community name to read through SNMP protocol
Read Write Community Name	The community name to read and write through SNMP protocol
SNMP Agent Access on WAN	Enable SNMP to be accessed through WAN port or not

Trusted Peer:

Item	Explanation
Type	<p>Any Address: Any address can retrieve the SNMP information.</p> <p>Specify an IP Address: Only the IP address listed can retrieve the SNMP information. Normally, it will be the SNMP manager's IP address.</p> <p>Specify a Subnet: Only the network specified can retrieve the SNMP information.</p>
IP Address	The IP address for a trusted peer
Subnet Mask	The network mask for a trusted peer

SNMP Trap:

Item	Explanation
SNMP Trap	Enable SNMP trap or not
Destination	The IP address for SNMP manager to receive the SNMP trap
Community	The communication name for sending the SNMP trap

Chapter 4 NAT Setting

The VGW-800 series can support NAT 2 Ethernet ports (management mode) or bridge mode. Here is the setting for NAT related service.

4.1 DHCP Srv. (DHCP Server)

DHCP Srv.	UPnP	Bandwidth	URL Filter	IP Filter	MAC Filter	App Filter	Port Filter	Port Fwd.
DHCP Server		<input checked="" type="radio"/> Enable <input type="radio"/> Disable						
Client Range Start IP	<input type="text" value="192.168.0.2"/>							
Client Range End IP	<input type="text" value="192.168.0.100"/>							
Default Gateway	<input type="text" value="192.168.0.1"/>							
Submask	<input type="text" value="255.255.255.0"/>							
DNS Server 1	<input type="text" value="168.95.1.1"/>							
DNS Server 2	<input type="text" value="168.95.192.1"/>							

Item	Explanation
DHCP Server	Enable DHCP server or not
Client Range Start IP	Specify DHCP client lease start IP
Client Range End IP	Specify DHCP client lease end IP
Default Gateway	Specify the default gateway
Submask	Specify the subnet mask
DNS Server 1	Specify the DNS server 1 address
DNS Server 2	Specify the DNS server 2 address

4.2 UPNP (Universal Plug and Play Server)

DHCP Srv.	UPnP	Bandwidth	URL Filter	IP Filter	MAC Filter	App Filter	Port Filter	Port Fwd.
UPnP Server		<input checked="" type="radio"/> Enable <input type="radio"/> Disable						

Item	Explanation
UPNP Server	Enable UPNP server or not

4.3 Bandwidth (Bandwidth Control)

By using bandwidth control feature, the user can manage the traffic based on their needs.

DHCP Srv.	UPnP	Bandwidth	URL Filter	IP Filter	MAC Filter	App Filter	Port Filter	Port Fwd.
Bandwidth Control								
Bandwidth Control			<input type="radio"/> Enable <input checked="" type="radio"/> Disable					
Download Bandwidth			0 Kbps					
Upload Bandwidth			0 Kbps					
Maximum Bandwidth and Reserved Bandwidth								
Setup Method			<input type="radio"/> Percentage <input checked="" type="radio"/> Specific					
Priority 1 - Download			Maximum 0 Kbps, Reserved 0 Kbps					
Priority 2 - Download			Maximum 0 Kbps, Reserved 0 Kbps					
Priority 3 - Download			Maximum 0 Kbps, Reserved 0 Kbps					
Priority 1 - Upload			Maximum 0 Kbps, Reserved 0 Kbps					
Priority 2 - Upload			Maximum 0 Kbps, Reserved 0 Kbps					
Priority 3 - Upload			Maximum 0 Kbps, Reserved 0 Kbps					
Edit Control List			<input type="button" value="Edit"/>					

Bandwidth Control:

Item	Explanation
Bandwidth Control	Enable bandwidth control or not
Download Bandwidth	Specify total bandwidth for download (unit: kbps). 0 indicates no limitation
Upload Bandwidth	Specify total bandwidth for upload (unit: kbps). 0 indicates no limitation

Maximum Bandwidth and Reserved Bandwidth:

Setup Method: bandwidth control method, percentage or specify the required bandwidth

Percentage: total bandwidth

Item	Explanation
Priority 1	highest priority percentage
Priority 2	normal priority percentage
Priority 3	low priority percentage

Specifics

Item	Explanation
Priority 1 – Download	highest priority download bandwidth
Priority 2 – Download	normal priority download bandwidth
Priority 3 – Download	low priority download bandwidth
Priority 1 – Upload	highest priority upload bandwidth
Priority 2 – Upload	normal priority upload bandwidth
Priority 3 – Upload	low priority upload bandwidth



In order to set which target belongs to which priority, the following are the setting methods for target's priority.

IP Target

Create Control List

Priority	1
Type	IP
Configure Type	<input checked="" type="radio"/> Unique <input type="radio"/> IP Range
IP Address	none

Create Control List

Priority	1
Type	IP
Configure Type	<input type="radio"/> Unique <input checked="" type="radio"/> IP Range
Start IP	none
End IP	none

Item	Explanation
Priority	Priority value for the target
Type	The target type is set to IP
Configure Type	Unique IP or a range of IP addresses <ul style="list-style-type: none"> ➤ Unique: <ul style="list-style-type: none"> ◆ IP Address: the IP address to be set ➤ IP Range: <ul style="list-style-type: none"> ◆ Start IP: The starting IP for a range ◆ End IP: The stopping IP for a range

Port Target

Create Control List


Priority	1 ▾
Type	Port ▾
Configure Type	<input checked="" type="radio"/> Unique <input type="radio"/> Port Range
Port	none
Protocol	TCP ▾

Create Control List

Priority	1 ▾
Type	Port ▾
Configure Type	<input type="radio"/> Unique <input checked="" type="radio"/> Port Range
Start Port	none
End Port	none
Protocol	TCP ▾


Item	Explanation
Priority	Priority value for the target
Type	The target type is set to port number
Configure Type	Unique port number or a range of port number <ul style="list-style-type: none"> ➤ Unique: <ul style="list-style-type: none"> ◆ Port: the port number to be added ◆ Protocol: protocol for the port ➤ Port Range: <ul style="list-style-type: none"> ◆ Start port: the starting port number ◆ End port: the stop port number ◆ Protocol: protocol for the port range

Application Target

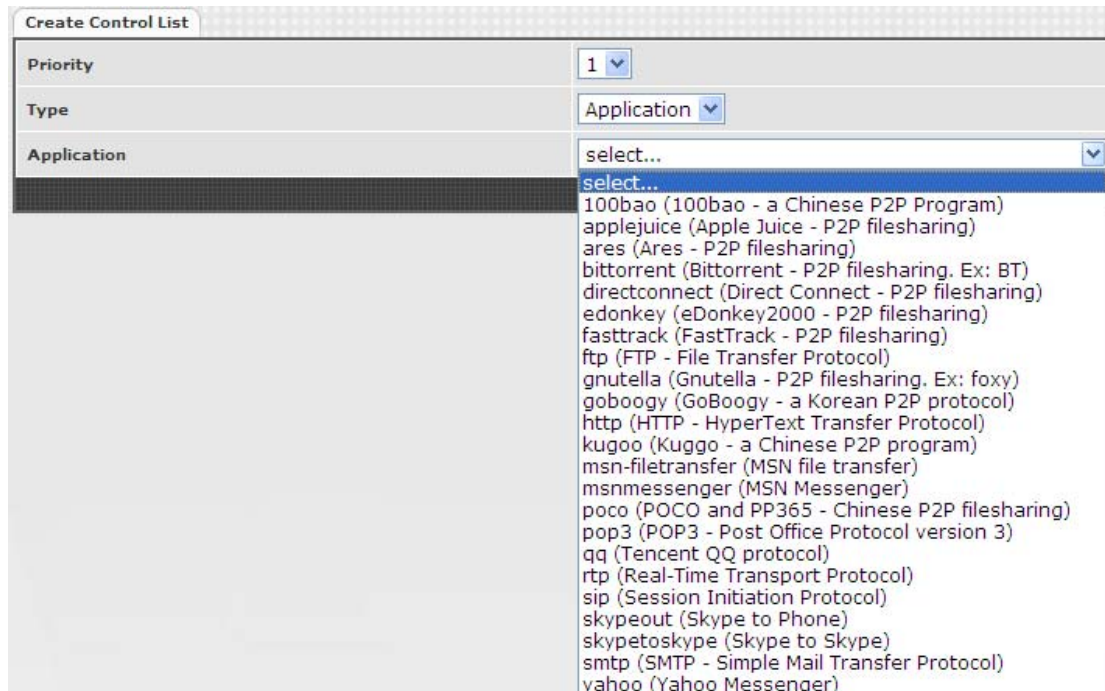

Item	Explanation
Priority	Priority value for the target
Type	Application
Application	The list for the application


DSCP target

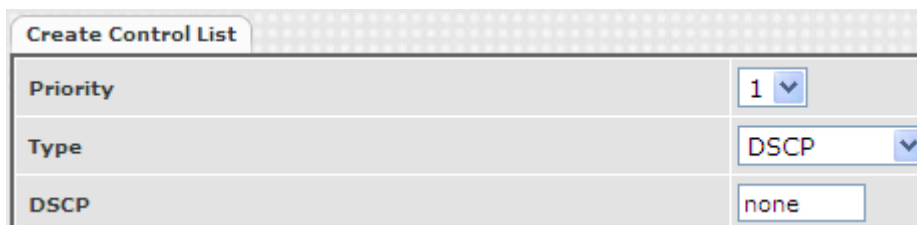

Item	Explanation
Priority	Priority value for the target
Type	DSCP value
DSCP	The DSCP will be mapped to the priority


The VGW-800 series supports the firewall features below.

4.4 URL Filter

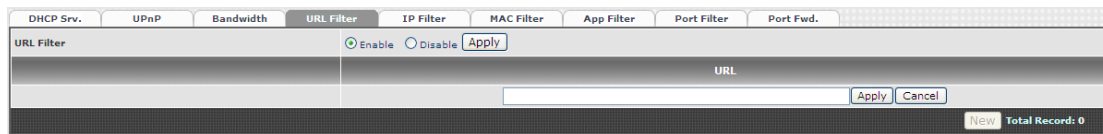


Item	Explanation
URL Filter	The specified URL will be blocked

4.5 IP Filter

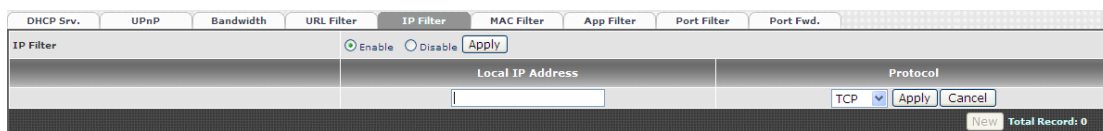


Item	Explanation
IP Filter	The specified IP address to be blocked
Local IP address	The LAN side IP address to be forwarded
Protocol	TCP, UDP or both are used for port forward

4.6 MAC Filter

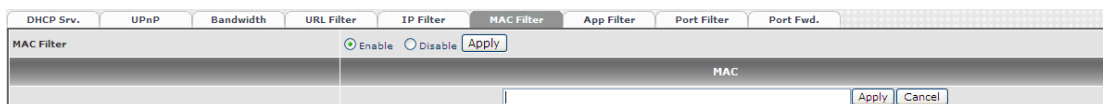


Item	Explanation
MAC Filter	For the MAC address to be blocked, please follow these formats.

4.7 APP Filter

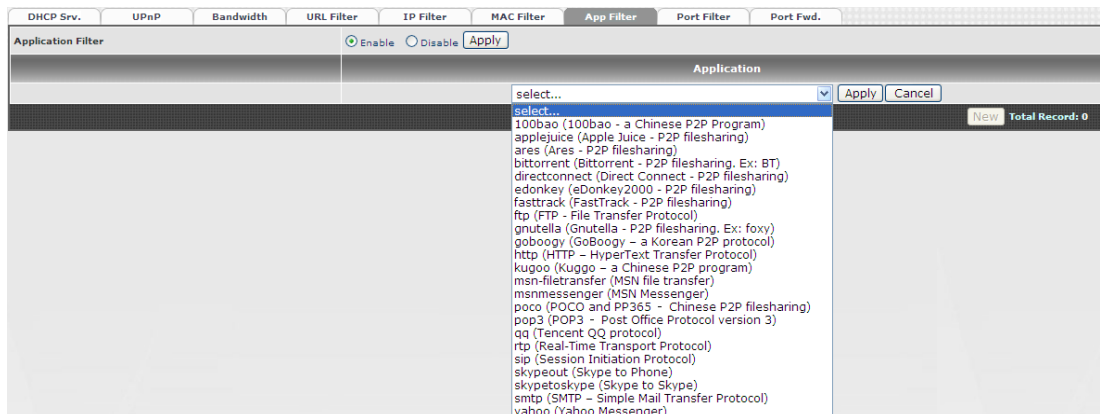


Item	Explanation
APP Filter	Application to be blocked

4.8 Port Filter

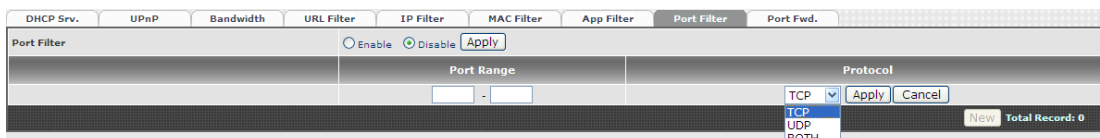

Item	Explanation
Port Filter	Enable port filter or not
Port Range	Starting and stopping port to be forwarded. If you are using only 1 port, please set the starting equal to stopping port
Protocol	TCP, UDP or both are used for port block

4.9 Port Fwd

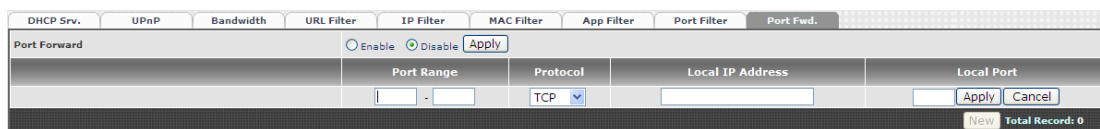

Item	Explanation
Port Fwd	Enable port forward feature or not
Port Range	Starting and stopping port to be forwarded. If you are using only 1 port, please set the starting port equal to stopping port
Protocol	TCP, UDP or both are used for port forward
Local IP address	The LAN side IP address to be forwarded
Local Port	The LAN side port to be forwarded. If you are using the port range, this port indicates the starting port

Chapter 5 VoIP Setting

5.1 SIP

SIP	Audio	Tone	NAT Traversal
Session Timer	<input type="radio"/> Enable <input checked="" type="radio"/> Disable		
Session Expires(sec)			
Min SE(sec)			
PRACK	None <input type="button" value="v"/>		
SIP Local Port	5060		
SIP QoS Type	None <input type="button" value="v"/>		
Accept Proxy Only	<input checked="" type="radio"/> Yes <input type="radio"/> No		
P2P Call Alive Detection:	<input type="radio"/> Yes <input checked="" type="radio"/> No		

Item	Explanation
Session Timer	Enable session timer or not (RFC 4028)
Session Expiry (sec)	This is the setting of initial session timer expires time according to RFC4028 - Session Timers in the Session Initiation Protocol
Min SE	The minimum session timer allowed when receiving a call with session timer value according to RFC 4028
Session Timer Refresh Method	The session timer refresh method
PRACK	Enable provision ACK or not (RFC 3262) <ul style="list-style-type: none"> - None: Disable PRACK - Supported: When selecting this mode, 100rel will be added to the support list. It indicates the VGW-800 series can support the PRACK but not mandatory. - Require: PRACK is mandatory required.
SIP Local Port	The SIP local service port (default is 8080)
SIP QoS Type	Quality of Service Type for SIP signaling <ul style="list-style-type: none"> - None: Not using QOS Tag and not enables QOS. - DiffServ: Differentiated Services Value. Input DSCP value 0-63 for DSCP - TOS: Type of Service which include IP precedence value and TOS.
Accept Proxy Only	Only accept the call coming from the SIP proxy. Does not accept peer to peer call in this mode
P2P Call Alive Detection	Check whether info communication exists; if not, FXO will automatically terminate the link. This function is only for P2P on FXS and FXO.

5.2 Audio

SIP	Audio	Tone	NAT Traversal
Codec 1	G.729A		
Codec 2	G.723.1		
Codec 3	G.711 a		
Codec 4	G.711 u		
Codec 5	N/A		
G.711u Payload Size	20ms		
G.723 Payload Size	30ms		Bit Rate <input type="radio"/> 5.3K <input checked="" type="radio"/> 6.3K
G.711a Payload Size	20ms		
G.729 Payload Size	20ms		
Codec Priority	<input type="radio"/> Local <input checked="" type="radio"/> Remote		
DTMF Relay	RFC 2833/Fall Back to Inband		
Silence Suppression	<input type="radio"/> Enable <input checked="" type="radio"/> Disable		
RTP Basic Port	16384		
RTP QoS Type	None		

Item	Explanation
Codec 1~5	The preference codec priority
G.711u Payload Size	G.711 u-Law payload size
G.711a Payload Size	G.711 A-law payload size
G.729 Payload Size	G.729A payload size
G.723.1 Payload Size:	G.723.1 payload size
Bit Rate	G.723.1 bit rate used 5.3K bit rate is used 6.3K bit rate is used
Codec Priority	Selection order to match the remotely SDP for codec selection. <ul style="list-style-type: none"> ◆ Local SDP Order: Use local SDP order to match codec ◆ Remote SDP Order: Use Remote SDP order to match codec
DTMF Relay	In-Band DTMF: Use inband DTMF instead of out of band. RFC 2833(fall back to SIP-INFO): Use RFC 2833 if the SDP negotiation could be done. Or use SIP INFO for DTMF relay. SIP INFO: Use SIP-INFO DTMF relay RFC 2833 (fall back to Inband): Use RFC 2833 if the SDP negotiation could be done. Or use inband DTMF transmission.
Silence Suppression	Enable: Start the voice activity (silence) detection when detecting silence for 60 seconds. It will hang up the call (For FXO use)


	Disable: Send silence packets as normal voice packet (no silence detection)
RTP Basic Port	The RTP starting port. Each channel will be added additional 10. For example, the RTP basic port is 16384 and thus call 1 will use 16384 while call 2 will use 16394, etc.
RTP QoS Type	IP QoS tag for RTP stream <ul style="list-style-type: none"> ◆ DiffServ: The differentiated service QoS tag will be used. Input DSCP value 0-63 for DSCP. ◆ TOS: Type of Service which includes IP precedence value and TOS.

5.3 Tone

The setting page is used to set up the tone to be generated (FXS) or detected (FXO). The detected tone is the Disconnect 1 & 2 (**for FXO use**) and the others are for generating (**when FXS receives the “bye” from IP side or waits time out by analog phone which keeps picking up the handset, it will send busy tone to analog phone**). To recognize the correct disconnect tone is very important for PSTN status supervision to release FXO port after call is dropped.

Country Template		-Select Country-		Use						
Tone \ Setting	Signal Type	Freq 1 (0-300~1980Hz)	Freq 2 (0-300~1980Hz)	Level 1 (0~63db)	Level 2 (0~63db)	On 1 (0~10230ms)	Off 1 (0~10230ms)	On 2 (0~10230ms)	Off 2 (0~10230ms)	Deviation (0~30)
Dial	Continuous	350	440	13	13	500	0	0	0	10
Stutter Dial	Cadence	350	440	13	13	1000	100	0	0	10
Ring Back	Cadence	440	480	13	13	1000	2000	0	0	10
Busy	Cadence	480	520	13	13	500	500	0	0	10
Call Waiting	Cadence	350	440	13	13	250	250	250	0	10
ROH	Continuous	1400	1750	13	13	10000	0	0	0	10
Warning	Cadence	900	0	13	13	500	0	0	0	10
Holding	Cadence	900	0	13	13	500	500	0	0	10
Disconnect 1	Cadence	480	520	13	13	500	500	0	0	10
Disconnect 2	Cadence	480	520	13	13	250	250	0	0	10


Please use Country Template to select your local country profile which will be applied. Click to load those country tone parameters to system and change if it is necessary.



For those countries which are not shown in the list, please select a closed country and edit tone parameters to match your country. You can send an email with the tone definition to Planet if you would like to put your country tone in the list.

5.4 NAT Traversal

The VGW-800 series supports the following NAT traversal methods when it is placed behind the router.



NAT Traversal:

Item	Explanation
Disable	Disable NAT traversal features
STUN (Type 1,2)	Enable STUN for NAT traversal. Since STUN can be used only for type 1 and type 2 NAT servers, it is recommended to use this option. When STUN client detects the current NAT is type 3, it stops the STUN feature operation. ✧ STUN Server: STUN Server IP address
STUN (All)	No matter which NAT type server is used, STUN is always used for NAT traversal. ✧ STUN Server: STUN Server IP address
UPNP	Enable UPnP client for NAT traversal. Please note that the IP sharing box (or router) needs to support uPnP feature.
Behind NAT	Use DMZ for NAT traversal IP Sharing Address: public IP sharing address. You need to specify the port mapping or DMZ for all required ports

Chapter 6 VoIP Advance

6.1 SIP

SIP	Audio	Ring
SIP Hold Type	Send only <input type="button" value="v"/>	
SIP Compact Form	<input type="radio"/> Yes <input checked="" type="radio"/> No	
Session Refresher	UAC <input type="button" value="v"/>	
SIP T1(msec)	500	
SIP T2(msec)	4000	
SIP T4(msec)	5000	
Invite Linger Timer(msec)	32000	
General Linger Timer(msec)	32000	
Cancel General No Response Timer(msec)	5000	
General Request Timeout Timer(msec)	5000	
Cancel Invite No Response Timer(msec)	10000	
Provisional Timer(msec)	180000	
First Response Timer(sec)	5	
MWI Subscript Expires(sec)	600	
Line Congestion Code	600	
SIP-Info Flash Mode	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	
Encrypt	<input type="button" value="v"/> <ul style="list-style-type: none"> Disable <li style="background-color: #e0e0e0;">Disable VGCP APP VGCP APP (XOR) 	

Item	Explanation
SIP Hold Type	<p>SIP on hold message sending method.</p> <p>Send Only: Set the SDP media to send only when sending an on-hold SIP message.</p> <p>0.0.0.0: Set the SDP connection to 0.0.0.0 when sending an on-hold SIP message.</p> <p>Inactive: Set the SDP media to inactive when sending an on-hold SIP message.</p>
SIP Compact Form	Enable SIP compact form or not. When enabling this feature,

	the connected SIP proxy is required to support compact form.
Session Refresher	Who will send dialog to keep message alive (re-invite or update). UAC: User Agent Client will do the refresh (default setting) UAS: User Agent Server will do the refresh
SIP T1 (msec)	T1 determines several timers as defined in RFC3261. For example, when an unreliable transport protocol is used, a Client Invite transaction retransmits requests at an interval that start at T1 seconds and doubles after every retransmission. A Client General transaction retransmits requests at an interval that starts at T1 and doubles until it reaches T2. (Default Value: 500ms) **
SIP T2 (msec)	Determines the maximum retransmission interval as defined in RFC3261. For example, when an unreliable transport protocol is used, general requests are retransmitted at an interval which starts at T1 and doubles until reaches T2. If a provisional response is received, retransmission continue but at an interval of T2. (Default Value: 4000ms) **
SIP T4 (msec)	T4 represents the amount of time the network takes to clear message between client and server transactions as defined in RFC3261. For example, when it works with an unreliable transport protocol, T4 determines the time that UAS waits after receiving an ACK message and before terminating the transaction. (Default Value: 5000ms) **
Invite Linger Timer	After sending an ACK for an INVITE final response, a client cannot be sure that the server has received the ACK message. The client should be able to retransmit the ACK upon receiving retransmissions of the final response for this timer. This timer is also used when a 222 response is sent for an incoming Invite. In this case, the ACK is not part of the Invite transaction.
General Linger Timer	After a UAS sends a final response, the UAS cannot be sure that the client has received the response message. The UAS should be able to retransmit the response upon receiving retransmissions of the request based on this timer.
Cancel General No Response Time (msec)	When sending a CANCEL request on a General transaction, the User Agent waits for cancel General No Response Timer milliseconds before timeout termination if there is no response

	for the cancelled transaction(Default Value: 10,000 ms).**
General Request Timeout Timer (msec)	After sending a General request, the User Agent waits for a final response general Request Timeout Timer milliseconds before timeout termination (in this time the User Agent retransmits the request every T1, 2*T1,...T2,...milliseconds)**
Cancel Invite No Response Timer (msec)	When sending a CANCEL request on an Invite request, the User Agent waits for this timer before timeout termination if there is no response for the cancelled transaction.
Provisional Timer (msec)	The provisional Timer is set when receiving a provisional response on an INVITE transaction. The transaction will stop retransmissions of the INVITE request and will wait for a final response until the provision Timer was expired. If you set the provision Timer to 0, no timer is set. The INVITE transaction will wait indefinitely for the final response.
First Response Timer (msec)	When sending a request out, the User Agent waits this timer for any response received from UAS. If timer is expired and no any SIP message is received, the User Agent will think the request is failed. The default is 5 seconds.
MWI Subscription Expiry (sec)	You can Enable or Disable the MWI subscription. The default is 600 sec. If a new voice mail arrives, the stutter tone will be used instead of regular dial tone. This feature is dedicated to FXS only .
Line Congestion Code	When receiver's end was contacted successfully from originated site but the receiver site is busy and does not wish to answer the call at this time, the system will response the code, default is 600. (FXO only)
SIP-Info Flash Mode	When you enable the feature, system will make flash key to send SIP message by sip-info.
Encrypt	Disable: disable encryption function. VGCP is a proprietary layer 2 link protocol working at between IP stack and NIC driver for VoIP anti-blocking. The core patent-pending VGCP is industry's most state-of-art voice service provider class security protocol whose scalability and flexibility results in not to compromise voice quality and overhead. VGCP controls and monitors full voice signaling and media flow intelligently; meanwhile disguise sip and RTP packets into normal allowed data packets such as DNS and

	TFTP, and makes two-way encryption and decryption driven by user-customized policy. VGCP is fully transparent to upper SIP proxy or UA which means Voice Guard@ can work with any 3rd party soft phone / ATA / Gateway / IP Phone / IADs and SIP Proxy or Server not like some competitors which take effect on their own device and soft switch.
--	---

6.2 Audio

The setting page includes the device related to audio settings.

SIP	Audio	Ring
RFC 2833 Payload Type	101	▼
DTMF Send On Time(msec)	70	
DTMF Send Off Time(msec)	70	
DTMF Detect Min On Time(msec)	60	
DTMF Detect Min Off Time(msec)	60	
DTMF Relay Volume	0 dBm	▼
T.38 Fax Volume	-12 dBm	▼
T.38 Redundant Depth	2	▼
T.38 ECM	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	
Min Jitter Buffer(msec)	60	
Max Jitter Buffer(msec)	150	
Max Echo Tail Length(G.168)	128ms	▼
Jitter Opt. Factor	7	▼
Impedance	Global	▼

Item	Explanation
RFC 2833 Payload Type	96 or 101. It is recommended to use 101.
DTMF Send On Time (msec)	When generating DTMF, the DTMF ON time will be sent (default value is 70 ms)
DTMF Send Off Time (msec)	When generating DTMF, the DTMF OFF time will be sent (default value is 70 ms)
DTMF Detect Min on Time (msec)	The minimum DTMF ON time period will be processed as a regular DTMF event. A smaller ON time less than this will be

	ignored. The default value is 60ms.
DTMF Detect Min Off Time (msec)	The minimum DTMF OFF time for the same DTMF value. A smaller OFF time less than this and the new DTMF digit is the same as previous one will be handled as 1 digit only (the same digit but not a new digit).
DTMF Relay Volume	The DTMF relay volume
T.38 Fax Volume	The T.38 fax relay volume
T.38 Redundant Depth	The T.38 redundant packet depth. It could be 0 (no redundant), 1 or 2. It is recommended to set to 2.
T.38 ECM	The T.38 error correction mode. Default value is ON.
Min Jitter Buffer (msec)	The minimum delay time of Jitter buffer.
Max Jitter Buffer (msec)	The maximum delay time of Jitter buffer.
Max Echo Tail Length (G.168)	Enable the echo cancellation feature. The default setting is "128ms".
Jitter Opt. Factor	Jitter buffer dynamic factor for optimize. Please set to 7 unless under Planet's instruction to change.
Impedance	Selected analog phone's impedance. (for FXS port use)

6.3 Ring

The ring cadence, voltage and frequency were configured to the phone.

SIP	Audio	Ring
Ring Setting		
Frequency (10~70Hz):	<input type="text" value="20"/>	
Ring On (0~8000ms):	<input type="text" value="1000"/>	
Ring Off (0~8000ms):	<input type="text" value="2000"/>	
Ring Level (10~95volt):	<input type="text" value="94"/>	

Item	Explanation
Frequency (10~70HZ)	Specify the ringing frequency value (default is 20HZ)
Ring on (0~8000ms)	Specify the ringing on value (default is 1000msec)
Ring off (0~8000ms)	Specify the ringing off value (default is 2000msec)
Ring level (10~95volt)	Specify the ringing level (default is 94 volt RMS value)

Chapter 7 Dialing Plan

7.1 General

General	Dialing Rule	Digit Manipulation	Phone Book
First Digit Time Out(sec)	<input type="text" value="20"/>		
Inter Digit Time Out(sec)	<input type="text" value="5"/>		
End of Digit	<input type="text" value="#"/> <input type="button" value="v"/>		
Retrieve Number	<input type="text" value="*#"/>		

Item	Explanation
First Digit Time Out	Specify the duration of the first digit to be dialed when the FXO port was OFF Hook. The range is 1~60 sec.
Inter Digit Time Out	Specify the interval of entering between two digits. If the interval setting time is expired, the gateway sends out the DTMF digits immediately. The time range is 1~10 sec.
End of Digit	The assigned key was treated as end of dial and dial out immediately.
Retrieve Number	It forces the line to retrieve back if VIP-800 series makes a transfer call to 3rd party but it DOES NOT answer and put this call go into voice mail service. You can press the preprogram code to retrieve back this call from transferred 3 rd party. Default code is “*#”.

7.2 Dialing Rule

General	Dialing Rule	Digit Manipulation	Phone Book
Dialing Rule		Max Digits	
<input type="text" value=""/>		<input type="text" value="1"/> <input type="button" value="Apply"/> <input type="button" value="Cancel"/>	
		<input type="button" value="New"/> Total Record: 0 Total Page: 0	
		<input type="text" value="1"/> <input type="text" value="2"/> <input type="text" value="3"/> <input type="text" value="4"/> <input type="text" value="5"/> <input type="text" value="6"/> <input type="text" value="7"/> <input type="text" value="8"/> <input type="text" value="9"/> <input type="text" value="10"/> <input type="text" value="11"/> <input type="text" value="12"/> <input type="text" value="13"/> <input type="text" value="14"/> <input type="text" value="15"/>	

Dialing rule is used to speed up the dialing procedure. Some users don't like to use the end of dialing digit such as "#", the administrator can use dialing rule instead. The longest prefix will be matched first.

Item	Explanation
Dialed Prefix	The prefix to be matched
Max Digits	The digits will be received based on the Dialed Prefix.

The following is an example for dialing rule:

Mobile call is starting with 09 and it is 10 digits

Long distance call is starting with 0 and it is 10 digits

International call is starting with 00 and its max digit should be less than 32

The others are local call and 8 digits

Emergency call is starting with digit "1" and length is 3 digits

The Dialing rule can be set as follows:

Prefix	Max. Digits
09	10
0	10
00	15
1	3
2	8
3	8
4	8
5	8
6	8
7	8
8	8
9	8

7.3 Digit Manipulation

The Digit Manipulation (DM) will be processed based on prefix and DM group after the DNIS (Called Party) is determined.



Item	Explanation
DM Group	<p>Different DM groups have different applications as follows.</p> <ul style="list-style-type: none"> ◆ FXO: This DM group is used for FXO port with 2-stage dialing. After the DNIS (Called party messages) is collected, this DM group will be processed before entering the routing procedure. ◆ FXS: This DM group is used for FXS dial out. ◆ VOIP: This DM group is used for VOIP incoming call. After the DNIS is collected in 2-stage dialing or 1-stage dialing, this DM group will be processed before entering the routing procedure. ◆ 1-4: These DM groups are used for backup routing purpose. When a backup routing is used, the administrator can select a DM group to be processed before starting the backup routes.
Matched Prefix	The prefix to be matched for DM. The longest prefix will be matched first
Matched Length	Set to 0 to ignore the length. The other 1-32 are the digit length to be matched as a condition
Start POS	The start digit position to be replaced
Stop POS	The stop digit position to be replaced
Replace Value	The value to be replaced

Example of Digit Manipulation Settings:

Prefix	Len	Start POS	Stop POS	Replace Value	Test DNIS (called number)	Result DNIS (dial-out called number)
886	0	0	0	002	8862123456	0028862123456
886	12	0	0	002	8862123456	8862123456
886	0	2	5	002	8862123456	8800223456
886	0	30	30	002	8862123456	8862123456002
886	0	1	6		8862123456	83456

7.4 Phone Book

Phone Book is used for peer to peer call.

Item	Explanation
Name	This field supports called number only. If you enter words or text here, it will route to proxy server automatically
Tel No	Enter called number and IP address. Please follow this sample of picture, as the format of "number@uri:port". (default port is 5060)
Export	To back up the phone book records
Import	To reload setting of phone book

Chapter 8 FXS Setting

The FXS line setting includes each number and SIP proxy settings.

8.1 FXS Line

FXS Line	SIP Proxy	Caller ID	Others				
				Line ID	State	TEL No	Hot Line TEL
				5	Active	1001	
				6	Active	1002	
				7	Active	1003	
				8	Active	1004	

Item	Explanation
Line ID	FXS line
State	The line is active or not
Tel. No	The telephone number of each FXS port
Hotline Tel.	If hot line is enabled, this field shows the hot line number

Modify Line Setting	
Line ID :	5
Line Type :	FXS
Line State :	<input checked="" type="radio"/> Active <input type="radio"/> Inactive
Forward Reason :	<input type="checkbox"/> Unconditional <input type="checkbox"/> Busy <input type="checkbox"/> No Answer
Forward TEL:	<input type="text"/>
No Answer Timeout(sec):	120
Call Waiting :	Disable ▾
Reject Anonymous Call:	<input type="radio"/> Yes <input checked="" type="radio"/> No
Hot Line:	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Hot Line TEL :	<input type="text"/>
Polarity Reversal Generation :	<input type="radio"/> Yes <input checked="" type="radio"/> No
Current Drop Generation :	<input type="radio"/> Yes <input checked="" type="radio"/> No
Input(Encode) Gain:	0db ▾
Output(Decode) Gain:	0db ▾
FAX Relay :	T.38 ▾
Voice Mail Subscription:	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Caller ID Mode :	Transparent ▾
SIP Caller ID Mode :	Transparent ▾
Register Type :	Register ▾
TEL No:	1001
User ID:	1001
User Password:	••••
Display Name:	1001

Item	Explanation
Line ID	FXS Line number
Line Type	FXS or FXO (depending on device model).
Line State	Set to active if you would like to use this line. Otherwise, set to inactive.
Forward reasons:	<ul style="list-style-type: none"> ◆ Unconditional forward: forward this call without any condition. ◆ Busy forward: Forward the call when phone is busy. ◆ No answer forward: forward the call when the call is not answered after any answer timeout. ◆ Forward Tel.: The telephone number will be forwarded once Forward mode is activated.

No Answer Timeout (seconds)	The no answer timeout will be used (default is 120 sec)
Call Waiting	Enable call waiting or not. When call waiting mode is disabled, the second incoming call will be rejected.
Reject Anonymous Call	Reject the anonymous incoming call or not
Hot Line	Enable to disable hot line feature
Hotline Tel	The number will dial automatically after the user picks up the phone.
Polarity Reversal Generation	Enable Polarity Reversal of tip/ring of RJ-11 phone line for FXS as billing signal or not. When an FXS calls to VOIP and answered by the remote party, VGW-800 Series generates reverse signal to FXS as a billing start. When VoIP side disconnects call, VGW-800 Series reverses back as a billing stop signal.
Current Drop Generation	Enable current drop (0 voltage) when VoIP is disconnected (Remote party drops the call).
Input (Encode) Gain	Adjust the volume from FXS/FXO to IP side (default is 0 dB)
Output(Decode)Gain	Adjust the volume from IP side to FXS/FXO (default is 0 dB)
Fax Relay	Enable T.38 Fax Relay or T.30 Fax Bypass or not. (T.30 Fax Bypass only supports G711a law)
Voice Mail Subscription	Enable voice mail subscription (MWI) or not.
Caller ID Mode	<ul style="list-style-type: none"> ◆ Inhibit: don't send caller ID to analog phone. ◆ Transparent: send caller ID to analog phone.
SIP Caller ID Mode	<ul style="list-style-type: none"> ◆ Inhibit: don't send caller ID to IP SIP side ◆ Transparent: send caller ID to IP SIP side
Register Type	<ul style="list-style-type: none"> ◆ Register: register to proxy. If it is not registered to SIP proxy, the FXS line still can use SIP trunk for VoIP call. ◆ Predefine: When it is set to predefine, VGW-800 Series does not send registered message out. ◆ Internal: When it is set to internal, VGW-800 Series does not send registered message out. The FXS line still can use SIP trunk for VoIP call or call locally.
Tel No	The registrar telephone number
User ID	The SIP user ID for register and call making
User Password	The SIP password for register and call making
Display Name	The SIP display name

8.2 SIP Proxy

The SIP proxy server defined here is dedicated to FXS lines.

FXS Line	SIP Proxy	Caller ID	Others
Domain	<input type="text"/>		
Primary Proxy Server	<input type="text" value="172.16.0.3"/>		
Primary Proxy Server Port	<input type="text" value="5060"/>		
Outbound Proxy Server	<input type="text"/>		
Outbound Proxy Server Port	<input type="text" value="5060"/>		
Primary Proxy Server Keep Alive	<input checked="" type="radio"/> Enable <input type="radio"/> Disable		
Keep Alive Time (sec)	<input type="text" value="0"/>		
Secondary Proxy	<input checked="" type="radio"/> Enable <input type="radio"/> Disable		
Secondary Proxy Server	<input type="text"/>		
Secondary Proxy Server Port	<input type="text" value="5060"/>		
Secondary Outbound Proxy Server	<input type="text"/>		
Secondary Outbound Proxy Server Port	<input type="text" value="5060"/>		
Register Expires	<input type="text" value="120"/>		
Secondary Proxy Server Keep Alive	<input checked="" type="radio"/> Enable <input type="radio"/> Disable		
Keep Alive Time (sec)	<input type="text" value="0"/>		

Item	Explanation
Domain	The SIP domain for register or call making
Primary Proxy Server	Primary SIP registrar server address
Primary Proxy Server Port	Primary SIP registrar server port number
Outbound Proxy Server	Primary outbound proxy server address
Outbound Proxy Server Port	Primary outbound proxy server port number
Primary Proxy Server Keeps Alive	Using NAT to keep the port alive
Keep Alive Time(sec)	Specify time to send SIP registered message to proxy server.
Secondary Proxy	Enable secondary proxy or not. When enabling it, the primary and secondary proxies will be registered at the same time.
Secondary Proxy Server	Secondary SIP registrar server address

Secondary Proxy Port	Secondary SIP registrar server port number
Secondary Outbound Proxy Server	Secondary outbound proxy server address Secondary
Outbound Proxy Server Port	Secondary outbound proxy server port number
Register Expiry:	SIP register time to leave
Secondary Proxy server keep Alive	Using NAT to keep the port alive
Keep Alive Time(sec)	Specify time to send SIP register message to proxy server.

8.3 Caller ID

The call ID sends to FXS port of the analog phone set to display caller name or phone number.

FXS Line	SIP Proxy	Caller ID	Others
Caller ID Mode		DTMF	
Polarity Reverse Before Caller ID		<input type="radio"/> Yes <input checked="" type="radio"/> No	
Dual Tone Before Caller ID			
Caller ID Present		Before First Ring	
DTMF Caller ID Start Digit		D	
DTMF Caller ID Stop Digit		C	

Item	Explanation
Caller ID Mode	Caller ID mode to be used for phone (FSK Bellcore, FSK ETSI, DTMF)
Polarity Reverse before Caller ID	Start polarity reverse to FXS port before sending the caller ID
Dual Tone before Caller ID	Send Dual Tone before caller ID (for FSK ETSI use only)
Caller ID present	The timing to send the caller ID (Before the first ring, after the first ring, after the first short ring)
DTMF Caller ID Start Digit	Specify the DTMF caller ID start digit (default is D, the range is A to D or #)
DTMF Caller ID Stop Digit	Specify the DTMF caller ID stop digit (default is C, the range is A to D or #)

8.4 Others

Flash time and current drop generation/detection time

FXS Line	SIP Proxy	Caller ID	Others
Min Flash Time(80~800msec)			<input type="text" value="400"/>
Max Flash Time(80~800msec)			<input type="text" value="800"/>
Current Drop Time(msec)			<input type="text" value="300"/>

Chapter 9 FXO Setting

The FXO setting contains the FXO related parameters.

FXO Line				
	Line ID	State	TEL No	Hot Line TEL
	1	Active		
	2	Active		
	3	Active		
	4	Active		

Item	Explanation
Line ID	FXO line
State	The line is active or not
Tel No	The reference telephone number (e.g. PSTN Tel line)
Hotline Tel	If hot line is set, this field shows the hotline number

9.1 FXO line


Modify Line Setting	
Line ID :	1
Line Type :	FXO
Line State :	<input checked="" type="radio"/> Active <input type="radio"/> Inactive
TEL No :	<input type="text"/>
Polarity Reversal Detection :	<input type="radio"/> Yes <input checked="" type="radio"/> No
Current Drop for Disconnect :	<input type="radio"/> Yes <input checked="" type="radio"/> No
Incoming Call Handling :	2 Stage Dialing <input type="button" value="v"/>
Hot Line TEL :	
Playback Voice File:	<input checked="" type="radio"/> Yes <input type="radio"/> No
Repeat Count:	<input type="text" value="0"/>
Voice File Name(MuLaw-mono 8K):	<input type="text"/> <input type="button" value="Upload Voice File"/>
Flash Time(msec):	<input type="text" value="300"/>
FAX Relay :	Disable <input type="button" value="v"/>
Input(Encode) Gain:	0db <input type="button" value="v"/>
Output(Decode) Gain:	0db <input type="button" value="v"/>
Dialing Answer Delay Time(sec):	<input type="text" value="3"/>
PSTN Answer Ring Count:	<input type="text" value="2"/>
Caller ID Mode :	ETSI DTMF <input type="button" value="v"/>

Item	Explanation
User ID	FXO Line number
User Type	The line type is FXO
Line State	Set to active if this Line is activated. Otherwise, set to inactive.
Tel No	This field can be used as a reference remark for this line. Normally, you can put the connected PSTN line's phone number here for reference.
Polarity Reversal Detection	When enabling the Polarity Reversal Detection feature, VGW-800 Series uses the polarity reversal signal once call is established for FXO outgoing call and start to count talking time for billing purpose. When disabling the polarity Reversal Detection, VGW-800 Series uses " Dialing Answer Delay Time " command to set time (seconds) to start billing time once SIP call is established.
Current Drop for Disconnection	Use Line current drop as a disconnecting supervision to release FXO port. When remote PSTN side user drops call, the local PSTN switch sends Current drop signal to FXO port to recognize this situation.
Incoming Call Handling	The call handling policy for an FXO incoming call. <ul style="list-style-type: none"> ◆ Hotline Tel: When a PSTN Line incoming call is detected and after the FXO answers this call based on the Ring Count Configuration, the VGW-800 series sends SIP call to the specified hotline tel number through the Route Plan. ◆ 2 Stage Dialing: When a PSTN Line incoming call is detected and after the FXO answers this call based on the Ring Count Configuration, VGW-800 Series answers this call and plays either Dial Tone or Voice Greeting file to PSTN side. And wait for the PSTN side user to dial number to send to IP SIP Trunk or FXS ports.
Playback Voice File	To enable playing voice greeting file or not. (Used for FXO port Only)
Repeat Count	Repeat how many counts to play voice greeting file. (Used for FXO port with 2-Stage Dialing Only)
Voice File Name (MuLaw-mono 8K)	Specify the file path and file name to upload. Please make sure that the file format needs to be G.711U, 8K, 8 bits raw file. (Used for FXO port Only)
Flash Time	Flash Time will be sent to PSTN line.

Fax Relay	To enable T.38 Fax Relay or T.30 Fax Bypass or not. (T.30 Fax Bypass only supports G711a law)
Input (Encode) Gain	Adjust the volume from PSTN to IP side (default is 0 dB)
Output (Decode) Gain	Adjust the volume from IP side to PSTN (default is 0 dB)
Dialing Answer Delay Time (sec)	When the polarity reversal detection is disabled, VGW-800 Series answers the call (establish call between VoIP and FXO) after time out to start billing count purpose. After the DTMF digits dialing, VGW-800 Series sends 183 with SDP to SIP Trunk to enable the voice path for VoIP side.
PSTN Answer Ring Count	<p>This ring count is used for called ID detection and 2-stage dialing.</p> <ul style="list-style-type: none"> ● If the caller ID is sent between the first ring and the second ring, this parameter should be set to greater than or equal to 2. ● If the caller ID is sent before the first ring, this parameter can be set to greater or equal to 1. <p>After the ring count is reached, VGW-800 Series answers the call and plays voice greeting file if 2-stage dialing is selected. Or, make the VOIP call out directly if hotline mode and number is selected.</p>
Caller ID Mode	The detected Caller ID specification from the PSTN line based on selected country list or FSK or DTMF.

Chapter 10 SIP Trunk

The SIP trunk for VoIP outgoing call and incoming call can be configured by administrator authority. There are up to 4 SIP trunks that can be used.



Please don't delete SIP trunk, even it is useless because it has to be used with route plan.

SIP Trunk							
	Trunk ID	Register Type	TEL No	Proxy Server	Proxy Server Port	Outbound Proxy	Outbound Server Port
	1	Register	1009	172.16.0.3	5060		5060

[New](#) [Export](#) [Import](#) Total Record: 1 Total Page: 1 Page 1

10.1 Create SIP Trunk

Modify SIP Trunk	
Trunk ID	1
Register Type	<input checked="" type="radio"/> Register <input type="radio"/> Predefine
Domain	<input type="text"/>
Proxy Server	172.16.0.3
Proxy Server Port	5060
Outbound Proxy Server	<input type="text"/>
Outbound Proxy Server Port	5060
Register Expires	120
TEL No	1009
User ID	1009
User Password	••••
Display Name	1009
Reject Anonymous Call	<input type="radio"/> Yes <input checked="" type="radio"/> No
Outgoing Caller ID	
- Display Name	PSTN Caller ID
- User ID	SIP User ID
For DNIS is Register TEL	<input checked="" type="radio"/> 1 Stage Dialing <input type="radio"/> 2 Stage Dialing
Keep Alive	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Keep Alive Time (sec)	

Item	Explanation
Trunk ID	SIP trunk ID 1 to 24
Register Type	Register type is predefined or registered
Tel No	The tel no for the SIP account
Proxy Server	The SIP proxy server address
Proxy Server Port	The SIP proxy server port number
Outbound Proxy	The SIP outbound proxy server address
Outbound Server Port:	The SIP outbound proxy server port


Create SIP Trunk	
Trunk ID	2 ▾
Register Type	<input checked="" type="radio"/> Register <input type="radio"/> Predefine
Domain	<input type="text"/>
Proxy Server	<input type="text"/>
Proxy Server Port	<input type="text"/>
Outbound Proxy Server	<input type="text"/>
Outbound Proxy Server Port	<input type="text"/>
Register Expires	<input type="text"/>
TEL No	<input type="text"/>
User ID	<input type="text"/>
User Password	<input type="text"/>
Display Name	<input type="text"/>
Reject Anonymous Call	<input type="radio"/> Yes <input checked="" type="radio"/> No
Outgoing Caller ID	
- Display Name	None ▾
- User ID	SIP User ID ▾
For DNIS is Register TEL	<input type="radio"/> 1 Stage Dialing <input checked="" type="radio"/> 2 Stage Dialing
Keep Alive	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Keep Alive Time (sec)	

Item	Explanation
Trunk ID	SIP trunk ID 1-24
Register Type	<p>Whether this account needs to register or not</p> <ul style="list-style-type: none"> ◆ Register: When it is set to register, VGW-800 Series sends REGISTER message to SIP proxy server for registration. ◆ Predefine: When it is set to predefine, VGW-800 Series DOES NOT send REGISTERED message out.
Domain	The SIP domain for register or call making
Proxy Server	SIP registrar server address
Proxy Server Port	SIP registrar server port number
Outbound Proxy Server	Outbound proxy server address
Outbound Proxy Server Port	Outbound proxy server port number
Register Expiry	The default register expired for negotiation
Tel No	The registrar telephone number
User ID	The SIP user ID for register and call making
User Password	The SIP password for register and call making
Display Name	The SIP display name
Reject Anonymous Call	Reject the anonymous call
Outgoing Caller ID	<p>The outgoing SIP caller ID mode.</p> <p>-Display Name: The display name will be set as follows:</p> <ul style="list-style-type: none"> None: No display name will be used PSTN caller ID: The display name will be the collected PSTN caller ID SIP display name: The display name will be the Display Name set in this SIP trunk. FXO Tel No: The display name will be the incoming FXO's Tel No. set on FXO lines. User ID: The SIP caller ID will be used as follows: <ul style="list-style-type: none"> ● SIP user ID: If the SIP user ID is set, the SIP user ID set in this SIP trunk will be used and the domain/SIP proxy will be the host part. The SIP from header's URL will be the SIP_User_ID@Domain or SIP_User_ID@SIP_Proxy_Server. ● PSTN caller ID: If the PSTN caller ID will be used in SIP URL, the SIP from header's URL will be

	<p>PSTN_Caller_ID@local_IP_address.</p> <ul style="list-style-type: none"> ● FXO Tel No: If the FXO Tel No will be used in SIP URL, the SIP FROM header's URL will be FXO_Tel_NO@local_IP_address. <p>The following guidelines could be used for most cases:</p> <ol style="list-style-type: none"> 1. If the VGW-800 series in SIP proxy is handled as a gateway, please set both the display name and User ID to "PSTN caller ID". 2. If the VGW-800 series in SIP proxy is handled as a subscriber, please set the display name to "PSTN caller ID" and User ID to "SIP User ID".
For DNIS is Registered Tel	<p>When you have a call from VoIP to FXO to call out to PSTN network, there are two methods that can be used. (FXO port dialing out only)</p> <ul style="list-style-type: none"> ◆ 1-stage dialing: When there is an SIP trunk incoming call to the VGW-800 series, it selects a free FXO port and dial-out digits directly without doing DM and route plan directly. ◆ 2-stage dialing: When there is an SIP trunk incoming call to the VGW-800 series, it answers this call and plays dial tone to SIP trunk to wait for SIP trunk user to dial digits and send these digits to FXO/PSTN network one by one.
Keep Alive	Enable or Disable it.
Keep Alive Time (sec)	Specify interval time to send SIP registered message to proxy server.

Chapter 11 Route Plan

The routing policy is the core feature of the VGW-800 series. The policy is based on incoming call type, destination, length and prefix code to determine the outgoing call routes and process. There are three routes to go for each incoming call port as shown below.



The following rules do not apply to PABX mode. (For VGW-402 only)

1. VoIP incoming call to the VGW-800 series -- It routes to either FXO or FXS interface and vice versa.
2. FXO incoming call to the VGW-800 series -- It routes to either VoIP or FXS interface and vice versa.
3. FXS incoming call (it means FXS off hook and dialing out) to the VGW-800 series -- It routes to either FXO or VoIP interface and vice versa.



Incoming Call Type	Matched Prefix	Matched Incoming List	Matched Length	Outgoing Type
FXO Default Route		Line 1,2,3,4	0	VOIP
FXS Default Route		TEL 1,2,3,4	0	VOIP
VOIP Default Route		1,2,3,4,5,6,7,8,9,10,11,12,13,14,15,16,17,18,19,20,21,22,23,24	0	FXO

Item	Explanation
Incoming Call Type	The incoming call port is FXS or VOIP.
Matched Prefix	Matched DNIS (called number) prefix
Matched Incoming List	Matched DNIS incoming interface target
Matched Length	Matched DNIS (called number) length. The zero (0) means no limitation of length.
Outgoing Type	The outgoing call from FXS port can only go to either FXO or VoIP.

Create Route Plan>

Click "Route Plan" and then create a new routing policy.

Create Route Plan	
Incoming Call Type	VOIP <input type="button" value="v"/>
Matched Prefix	<input type="text"/>
Matched Incoming List	
Matched Length	<input type="text"/>
No Answer Timeout	<input type="text"/>
Primary Route	
Outgoing Type	FXO <input type="button" value="v"/>
Hunting Type	Cyclic Ring <input type="button" value="v"/>
Routing List	01. <input type="button" value="Line1 v"/> 02. <input type="button" value="Line2 v"/> 03. <input type="button" value="Line3 v"/> 04. <input type="button" value="Line4 v"/>
DM Group	None <input type="button" value="v"/>
Backup Route	
Backup Route Active	<input checked="" type="radio"/> Active <input type="radio"/> Inactive
Outgoing Type	FXO <input type="button" value="v"/>
Hunting Type	Cyclic Ring <input type="button" value="v"/>
Routing List	01. <input type="button" value="Line1 v"/> 02. <input type="button" value="Line2 v"/> 03. <input type="button" value="Line3 v"/> 04. <input type="button" value="Line4 v"/>
Reroute DM Group	None <input type="button" value="v"/>

Create Route Plan	
Incoming Call Type	FXO
Matched Prefix	
Matched Incoming List	<input type="checkbox"/> Line01 <input type="checkbox"/> Line02 <input type="checkbox"/> Line03 <input type="checkbox"/> Line04 Select All Unselect All
Matched Length	
No Answer Timeout	
Primary Route	
Outgoing Type	VOIP
Hunting Type	Priority Ring
Routing List	01. Trunk1
Hunting Cycle	1
DM Group	None
Backup Route	
Backup Route Active	<input checked="" type="radio"/> Active <input type="radio"/> Inactive
Outgoing Type	VOIP
Hunting Type	Priority Ring
Routing List	01. Trunk1
Hunting Cycle	1
Reroute DM Group	None

Create Route Plan	
Incoming Call Type	FXS
Matched Prefix	
Matched Incoming List	<input type="checkbox"/> TEL01 <input type="checkbox"/> TEL02 <input type="checkbox"/> TEL03 <input type="checkbox"/> TEL04 Select All Unselect All
Matched Length	
No Answer Timeout	
Primary Route	
Outgoing Type	VOIP
Hunting Type	Priority Ring
Routing List	01. Trunk1
Hunting Cycle	1
DM Group	None
Backup Route	
Backup Route Active	<input checked="" type="radio"/> Active <input type="radio"/> Inactive
Outgoing Type	VOIP
Hunting Type	Priority Ring
Routing List	01. Trunk1
Hunting Cycle	1
Reroute DM Group	None

Item	Explanation
Incoming Call Type	Incoming call type <ul style="list-style-type: none"> ● VoIP: The incoming SIP call type ● FXO: The incoming call comes from local PSTN line. ● FXS: The FXS extensions incoming call type
Matched Prefix	Matched DNIS (called number) prefix
Matched Incoming List	Matched DNIS incoming interface target For FXS incoming call type, the incoming target will be the line ID. Only the call from the selected line will be accepted for this route.
Matched Length	Matched DNIS (called number) length. To ignore the length, please set to 0.
No Answer Timeout	How long does the hunting continue to next when the called target doesn't answer?

Create Route Plan>Primary Route

Item	Explanation
Outgoing Type	Outgoing call type (FXO or VOIP or FXS)
Hunting Type	<p>The hunting method can be used for this route.</p> <ul style="list-style-type: none"> ● Priority Ring: The call was hunted based on the routing list order one by one. ● Cyclic Ring: The call was hunted based on the cyclic basis. This is the recommended method. ● Routing List: The routing target list is used for this route.
DM Group	Select DM group 1 to 4 in case it requires a DM route (for example, remove the prefix) before making the call.

Create Route Plan>Backup Route


Item	Explanation
Backup Route	Activate the backup route or not.
Outgoing Type	Define backup route outgoing call type.
Hunting Type	The hunting method is used for this route. Please refer to the Primary Route.
Routing List	The backup routing target list is used for this route
Route DM Group:	<p>Select DM group 1 to 4 in case the backup requires the DM before making the call. The DNIS is unchanged by the primary route DM and the same as the DNIS before routing. For example, the DNIS is 886282265699 and primary DM group removes 886 and use it (DNIS = 282265699) to make call.</p> <p>When backup route is started, the DNIS is still unchanged as 886282265699. This makes the DM easy to predict and implement.</p>

2 special default routes, “VoIP Default Route” and “FXS Default Route”, are used as the default routing when there is no other matched routing. It is not recommended to disable these 2 default routes. The FXS default route is used as FXS outgoing call’s default route. VoIP default route is used as VoIP incoming call’s default routing.

 Note	<p>In this mode all of the VoIP and FXO incoming calls are forced to route to FXS port. The VoIP incoming call can’t route to FXO port to dial out.</p>
---	--

Chapter 12 Status

12.1 Device Status

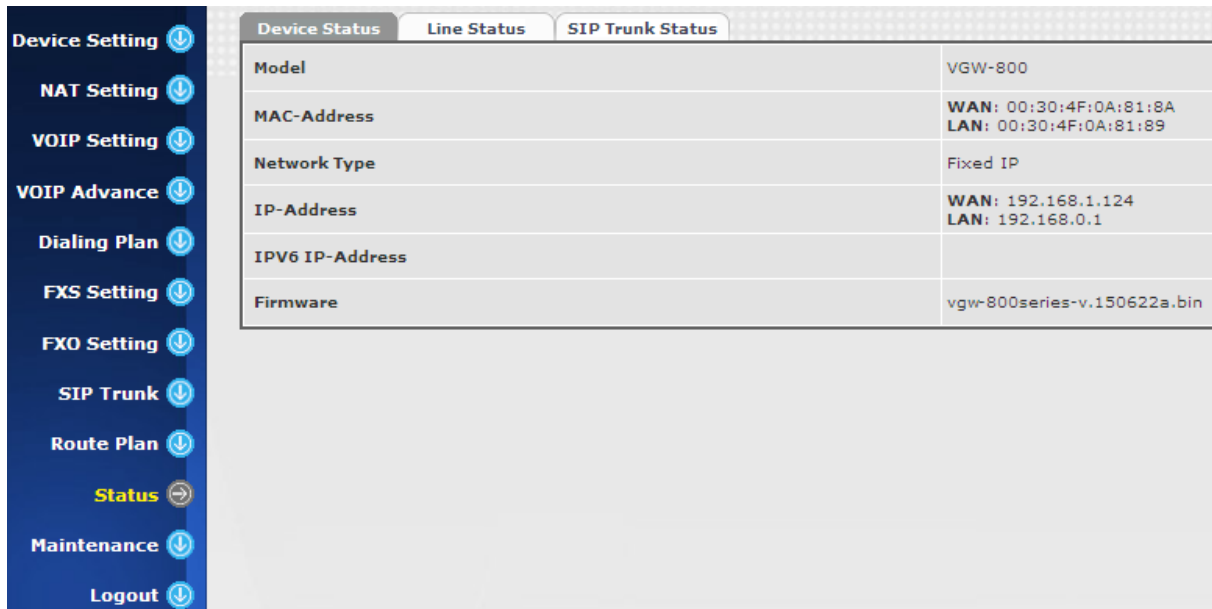

Item	Explanation
Model	The model number
MAC Address	The MAC address of the VGW-800 series
Network Type	The Network Interface Type settings
IP Address	IP address is used
IPV6 IP Address	Display IPV6 address
Firmware	The firmware version

Item	Explanation
Model	The model number
MAC Address	The MAC address of the VGW-800 series
Network Type	The Network Interface Type settings
IP Address	IP address is used
IPV6 IP Address	Display IPV6 address
Firmware	The firmware version

12.2 Line Status



Line	Account	Registered	Call State
1	N/A	N/A	Not Connected
2	N/A	N/A	Not Connected
3	N/A	N/A	Not Connected
4	N/A	N/A	Not Connected
5	1001	Not Register	Idle
6	1002	Not Register	Idle
7	1003	Not Register	Idle
8	1004	Not Register	Idle

Item	Explanation
Line	L1 to L8
Call Status	The status of this line
Refresh Interval (second)	The time to refresh the status

12.3 SIP Trunk Status

Account	Registered	Concurrent Call
1009	Not Register	0

Refresh Interval (second) 5

Item	Explanation
Account	SIP trunk account
Registered	The SIP trunk register status
Concurrent Call	The concurrent calls are used for this SIP trunk
Refresh Interval (second)	The time to refresh the status

Chapter 13 Maintenance


The VGW-800 series can be managed by this management page to upgrade firmware or reset this device.



Item	Explanation
Backup	Back up the system settings for restoring purpose
Restore	Restoring the backup setting to this device
Reset to Default	Reset system setting to factory default value.
Quick Reset	Warm reset without rebooting this device.
Reboot	Reboot this device

13.1 Firmware Update

This maintenance page provides the firmware upgrade features.

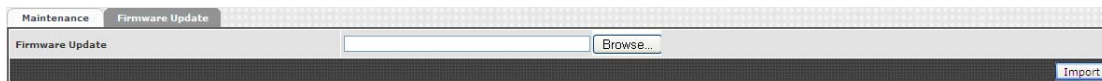



Appendix A – Default Setting

Default WAN IP	172.16.0.1
Default Subnet Mask	255.255.0.0
Default Gateway	172.16.0.254
Default PC IP	192.168.0.1
Default Login User Name	admin
Default Login Password	admin

Appendix B - Changing IP Address or Forgotten Admin Password

To reset the IP address to the default IP address “**192.168.0.1**” (LAN) or reset the login password to default value, press the reset button on the front panel for **more than 5 seconds**. After the device is rebooted, you can login the management Web interface within the same subnet of 192.168.0.x.

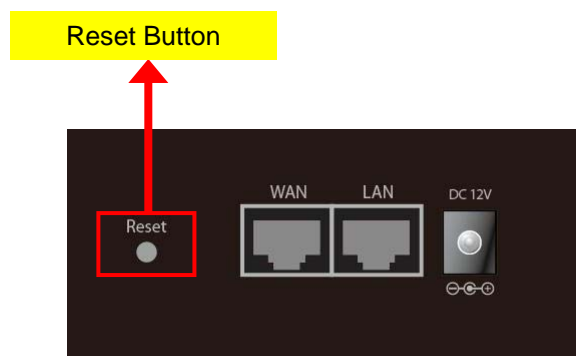

 **Note** After pressing the “Reset” button, all the system data will be reset to default; if possible, back up the config file before resetting.