Industrial 1-Port 802.3bt PoE++ to 4-Port 802.3af/at Gigabit PoE Extender

IPOE-E174 User's Manual


Table of Contents

1.	Packet Contents	3
2.	Hardware Introduction	4
	2.1 Front Panel	4
	2.2 LED Indicators	5
	2.3 Grounding the Device	6
3.	Installation	7
	3.1 DIN-rail Mounting Installation	7
	3.2 Wall-mount Plate Mounting	7
	3.3 Connecting IPOE-E174 to PSE	8
	3.4 Connecting IPOE-E174 to PD	9
4.	Power over Ethernet Budget	11
5.	Technical Specifications	12
6.	Physical Dimensions	14

1. Packet Contents

Thank you for purchasing PLANET Industrial 1-Port 802.3bt PoE++ to 4-Port 802.3af/at Gigabit PoE Extender, IPOE-E174. In the following sections, the term **"Industrial PoE Extender"** means the IPOE-E174.

Open the box of the IPOE-E174 and carefully unpack it. The box should contain the following items:

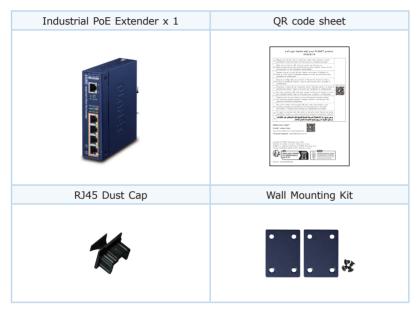

If any of these are missing or damaged, please contact your dealer immediately; if possible, retain the carton including the original packing material, and use them again to repack the product in case there is a need to return it to us for repair.

3 ⊪

2. Hardware Introduction

This section describes the functionalities of the Industrial PoE Extender's components.

2.1 Front Panel

Figure 2-1 shows the front panel of **Industrial PoE Extender**.



Figure 2-1: IPOE-E174 Front Panel

2.2 LED Indicators

System

LED	Color	Function
30W IN	Green	Lights to indicate the IPOE-E174 is working in 2-pair mode and offers up to 30-watt power.
60W IN	Green	Lights to indicate the IPOE-E174 is working in 4-pair mode and offers more than 60-watt power.
90W+ IN	Green	Lights to indicate the IPOE-E174 is working in 4-pair mode and offers more than 90-watt power.

PoE Input Port

LED	Color	Function
	Green	Lights to indicate the port is linked up.
LNK/ACT		Blinks to indicate that the IPOE-E174 is actively sending or receiving data over that port.
Def in Hee	Amber	Lights to indicate the port is obtaining PoE power from PSE devices.
PoE-in-Use		OFF to indicate the port is not obtaining PoE power from PSE devices.

PoE Power Usages


LED	Color	Function
2011	Amber	Blinks to indicate the system is providing $10W \sim 20W$ PoE power.
20W		Lights to indicate the system is providing 20W ~ 30W PoE power.
40W	Amber	Blinks to indicate the system is providing 30W ~ 40W PoE power.
40W		Lights to indicate the system is providing 40W ~ 50W PoE power.
60W	Amber	Blinks to indicate the system is providing 50W ~ 60W PoE power.
		Lights to indicate the system is providing 60W+ PoE power.

Per PoE Output Ports (Ports 1 to 4)

LED	Color	Function
	Green	Lights to indicate the port is linked up.
LNK/ACT		Blinks to indicate that the IPOE-E174 is actively sending or receiving data over that port.
PoF-in-Use	Amber	Lights to indicate the port is providing PoE power.
PUE-III-USE		OFF to indicate the connected device is not a PoE PD.

2.3 Grounding the Device

Users **MUST** complete grounding wired with the device; otherwise, a sudden lightning could cause fatal damage to the device.

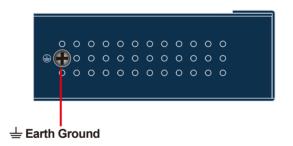



EMD (Lightning) DAMAGE IS NOT COVERED UNDER WARRANTY.

3. Installation

This section describes the functionalities of the Industrial PoE Extender's components and guides you to installing it on the DIN rail and wall. Please read this chapter completely before continuing.



This following pictures show how to install the device. However, the device in the picture is not the IPOE-E174.

3.1 DIN-rail Mounting Installation









3.2 Wall-mount Plate Mounting






3.3 Connecting IPOE-E174 to PSE

The Industrial PoE Extender has five RJ45 ports of which one is the **PoE++ In** port connected to the PSE and the other four are **PoE+ Out** ports connected to the PDs.

Step 1: Connect a standard Cat5e/6 UTP cable from a remote **PSE**, such as PoE switch, to the "**PoE++ In**" port of the IPOE-E174.

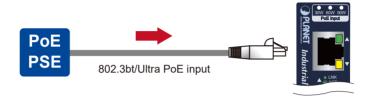

Step 2: The PSE delivers both Ethernet Data and PoE power over UTP cable to the IPOE-E174 and the "PoE IN" LED will be lit steadily.




- 1. When the LED turns steady green, it means the IPOE-E174 is being powered successfully with PoE.
- 2. If the LED is not lit, please check whether the remote PSE or the cable is connected to a PC or a network device, or the use of cable is correct or not. If not, check whether the power injection going to a PD is correct or not.
- Never connect any non-standard PoE PSE to the IPOE-E174; it will damage the device permanently.
- 4. Refer to Chapter 2.2 for more information about LED function.


3.4 Connecting IPOE-E174 to PD

Step 1: Connect the additional Cat5e/6 cable from the **PoE+ Out** of the IPOE-E174 to a remote **PD**.



- **Step 2:** The **PoE+ Out** port is also the power injector, which transmits DC voltage to the Cat5e/6 cable and transfers data and power simultaneously between the PSE and PD.
- **Step 3:** Once the IPOE-E174 detects the existence of an IEEE 802.3at/af device, the **PoE-in-Use** LED indicator will be lit steadily, showing it is providing power.

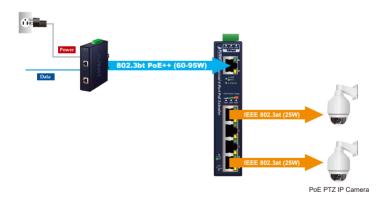

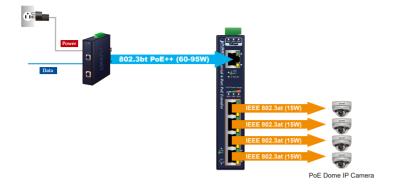

1. If the connected device is not fully complying with IEEE 802.3af/at standard or in-line power device, the PoE-in-Use LED indicator of the IPOE-E174 will not be lit steadily.



 According to IEEE 802.3af/at standard, the IPOE-E174 will not inject power to the cable if not connecting to a standard IEEE 802.3af/at device.

3. **DO NOT** connect any PSE to ports 1 to 4 of the IPOE-E174; it may damage the device permanently.

4. Power over Ethernet Budget

The following table lists how many PoE devices can be powered by the IPOE-E174 under 1m in distance:

Power Source	PoE Output Budget*	Max. Number of PDs supported	
	75 watts max.	Class 4 PD@25 watts	3 units
95W PoH PSE		Class 3 PD@12.9 watts	4 units
		Class 2 PD@7 watts	4 units
	75 watts max.	Class 4 PD@25 watts	3 units
90W 802.3bt PoE++ Type 4 PSE		Class 3 PD@12.9 watts	4 units
Type TTSE		Class 2 PD@7 watts	4 units
	50 watts max.	Class 4 PD@25 watts	2 units
60W 802.3bt PoE++ Type 3 PSE		Class 3 PD@12.9 watts	3 units
1,700 3 1 32		Class 2 PD@7 watts	4 units
30W 802.3at PoE+	25 watts max.	Class 3 PD@12.9 watts	1 unit
PSE		Class 2 PD@7 watts	3 units

Remarks:

- 1 The PoE output budget means the aggregated power output of the 4 PSE ports.
- The aggregated power consumption will be below 60 watts if with PoE+ PSE.
- 3. Please check the **power input LED** for optimal power output.


5. Technical Specifications

Model	IPOE-E174			
Hardware Specificati	lardware Specifications			
Network Connector	PoE In Port - 1 x 10/100/1000BASE-T Ethernet with 802.3bt PoE++ "Data + DC" in - Auto MDI/MDI-X, auto-negotiation RJ45 connector PoE Out Port - 4 x 10/100/1000BASE-T Ethernet with IEEE 802.3af/at PoE "Data + DC" out - Auto MDI/MDI-X, auto-negotiation RJ45 connector			
Switch Architecture	Store-and-Forward switch architecture			
MAC Address Table	2K MAC address table with auto learning function			
Switch Fabric	10Gbps			
Switch Throughput	7.44Mpps @ 64Bytes			
Flow Control	IEEE 802.3x pause frame for full duplex Back pressure for half duplex			
Jumbo Frame	9Kbytes			
ESD Protection	Air 8KV DC Contact 6KV DC			
Surge Protection	6KV			
Enclosure	IP30 metal case			
Installation	DIN-rail kit and wall-mount ear			
Dimensions (W x D x H)	32 x 87.8 x 135 mm			
Weignt	447g			
Power Consumption	5.6 watts/19.11 BTU (Power On) 6.5 watts/22.18 BTU (Full loading without PoE function) 82.3 watts/280.82 BTU (Full loading with PoE function)			
Power over Ethernet				
PoE Standard	PoE in Port - IEEE 802.3bt PoE++ Type 4 standard PD - PoH (Power over HDBASE-T) - IEEE 802.3at PoE+ end-span/mid-span PD			

PoE Standard	Per PoE Out Port - IEEE 802.3at Power over Ethernet Plus end-span PSE		
PoE Power	PoE in Port 50~57V DC, max. 95 watts Per PoE Out Port 44~55V DC, max. 30.8 watts		
Power Pin Assignment	PoE in Port 1/2(-), 3/6(+), 4/5(+), 7/8(-) or 1/2(+), 3/6(-), 4/5(+), 7/8(-) Per PoE out Port 1/2(+), 3/6(-)		
PoE Power Budget	75 watts (max.) @ 802.3bt PoE++ Type 4 input 60 watts (max.) @ 802.3bt PoE++ Type 3 input 75 watts (max.) @ PoH input 25 watts (max.) @ 802.3at PoE+ input		
Standards Conforma	Standards Conformance		
Regulatory Compliance	FCC Part 15 Class A, CE		
Stability Testing	IEC60068-2-32 free fall IEC60068-2-27 shock IEC60068-2-6 vibration		
Standards Compliance	IEEE 802.3 Ethernet IEEE 802.3u Fast Ethernet IEEE 802.3ab Gigabit Ethernet IEEE 802.3x Flow Control IEEE 802.3af Power over Ethernet IEEE 802.3at Power over Ethernet Plus IEEE 802.3bt Power over Ethernet Plus Plus		
Environment			
Operating	Temperature: $-40 \sim 75$ degrees C Relative Humidity: $5 \sim 95\%$ (non-condensing)		
Storage	Temperature: -40 \sim 85 degrees C Relative Humidity: 5 \sim 95% (non-condensing)		

6. Physical Dimensions

The IPOE-E174's dimensions (W \times D \times H) are 32 \times 87.8 \times 135 mm.

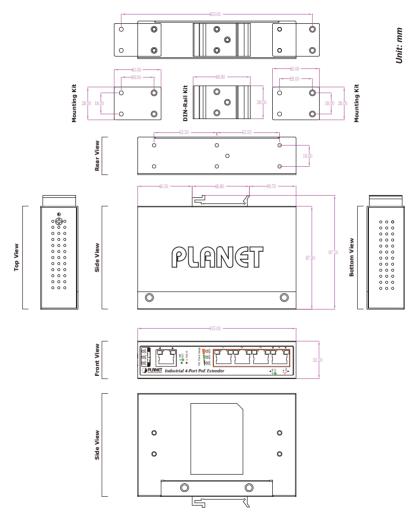

Customer Support

Thank you for purchasing PLANET products. You can browse our online FAQ resource and user's manual on PLANET Web site first to check if it could solve your issue. If you need more support information, please contact PLANET switch support team.

PLANET online FAQs:

https://www.planet.com.tw/en/support/faq

Switch support team mail address: support@planet.com.tw

Copyright © PLANET Technology Corp. 2023. Contents are subject to revision without prior notice. PLANET is a registered trademark of PLANET Technology Corp. All other trademarks belong to their respective owners.

Trademarks

Copyright © PLANET Technology Corp. 2023.

Contents are subject to revision without prior notice.

PLANET is a registered trademark of PLANET Technology Corp.

All other trademarks belong to their respective owners.

Disclaimer

PLANET Technology does not warrant that the hardware will work properly in all environments and applications, and makes no warranty and representation, either implied or expressed, with respect to the quality, performance, merchantability, or fitness for a particular purpose. PLANET has made every effort to ensure that this User's Manual is accurate; PLANET disclaims liability for any inaccuracies or omissions that may have occurred.

Information in this User's Manual is subject to change without notice and does not represent a commitment on the part of PLANET. PLANET assumes no responsibility for any inaccuracies that may be contained in this User's Manual. PLANET makes no commitment to update or keep current the information in this User's Manual, and reserves the right to make improvements to this User's Manual and/or to the products described in this User's Manual, at any time without notice.

If you find information in this manual that is incorrect, misleading, or incomplete, we would appreciate your comments and suggestions.

FCC Warning

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the Instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

CE Mark Warning

This is a Class A product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

WEEE Warning



To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out

wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.